


2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **Safety and Security**
2. **Supplemental Restraints**
3. **Repair Instructions**
- 4.

Steering Wheel Airbag Replacement

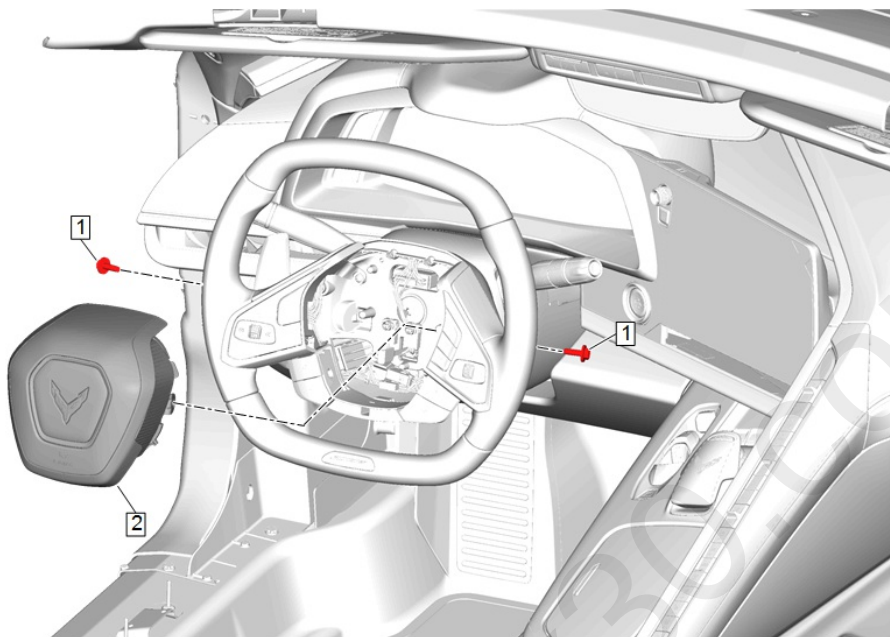

Click here for full size
SIR Warning

Warning:

Refer to

SIR Inflator Module Handling and Storage Warning.

Warning:

After installation of the steering wheel airbag module to the steering wheel, slightly pull the module outward. If there is no give on the airbag module then it is secured correctly. If the airbag module is not fully attached personal injury could result.

Preliminary Procedures

1. Disable the SIR system.

SIR Disabling and Enabling

- Remove left and right side steering wheel airbag access hole cover.

Steering Wheel Airbag Access Hole Cover Replacement

Fastener Caution.

Tighten

9 N-m (80 lb in)

Inflatable Restraint Module Handling and Scrapping

- Enable the SIR System.

SIR Disabling and Enabling

Callout	Component Name
Warning:	
Refer to	
1	Steering Wheel Airbag Bolt [2x] Caution: Refer to
2	Steering Wheel Airbag Procedure 1. Release the connector position assurance (CPA) retainer. 2. Disconnect the electrical connectors. 3.