

2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **Seats**
2. **Seat Hardware, Trim, and Upholstery**
3. **Repair Instructions**
- 4.


Front Seat Back Cover and Pad Replacement (AE4, AH2)

Removal Procedure

1. Warning:
Refer to SIR Warning.
2. Disable the SIR system. SIR Disabling and Enabling




3.
Click here for full size
4. Front Seat (2) >>> Remove - Front Seat Removal and Installation

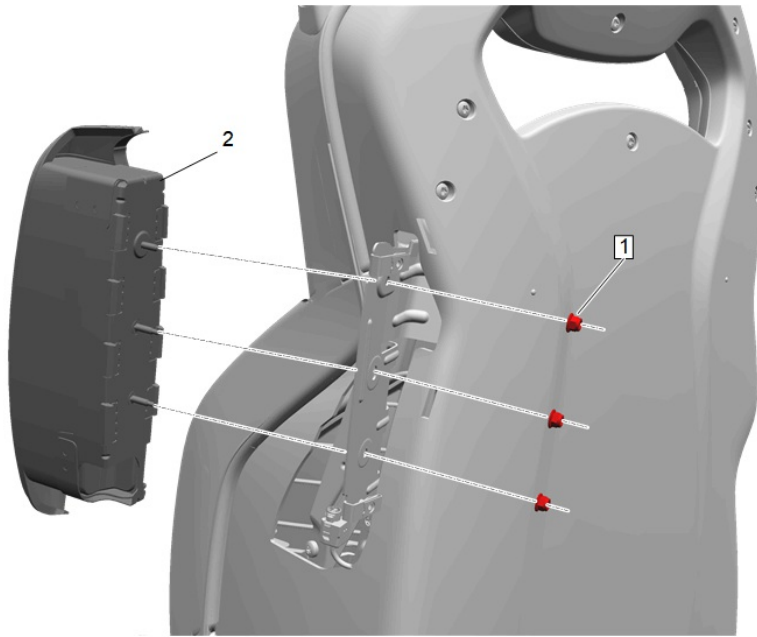

5. [Click here for full size](#)

6. Front Seat Outboard Seat Back Airbag (2) >> Remove - Front Seat Outboard Seat Back Airbag Replacement

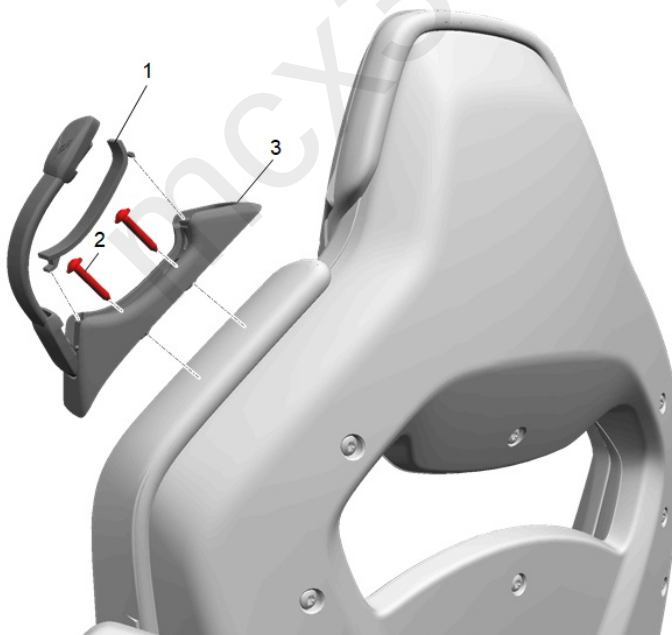

7. [Click here for full size](#)

8. Front Seat Belt Guide (3) >> Remove - Front Seat Belt Guide Replacement


9. Apply two layers of masking tape around the seat side surface to prevent paint damage.

10. [Click here for full size](#)

11. Front Seat Back Pad Support Screw (1) >> Remove [4x]



12.
[Click here for full size](#)
[Extra Itemr video](#)

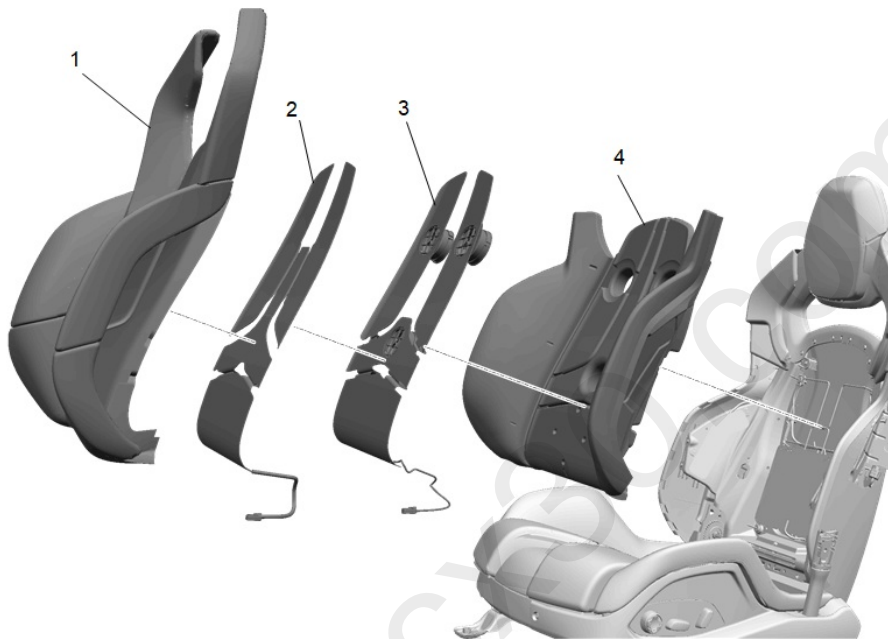

13.
[Click here for full size](#)


14. Starting at the top, release the J-channel retainer along both sides of the cover (1).
15. Release the hook and loop retainers on the rear of the front seat cushion cover.
16. Release the J-channel retainer along the bottom rear of the cover (1).
17. Apply two layers of masking tape around the top seat surface to prevent paint damage.



18.
[Click here for full size](#)
[Extra Itemr video](#)

19. Release the push in retainers along the top of the cover (1) near the seat back opening.
20. Disconnect the electrical connectors.
21. Remove the front seat back cover (1) and front seat back pad (3) as an assembly.
22. Use an appropriate tool to release the plastic retainers that hold the cover (1) to the pad (3).
23. Front Seat Back Cover (1) >> Remove
24. { If equipped } Front Seat Back Ventilation Blower (2) >> Remove - Front Seat Back Ventilation Blower Replacement
25. Front Seat Back Pad (3) >> Remove
26. Transfer components as necessary.

Installation Procedure

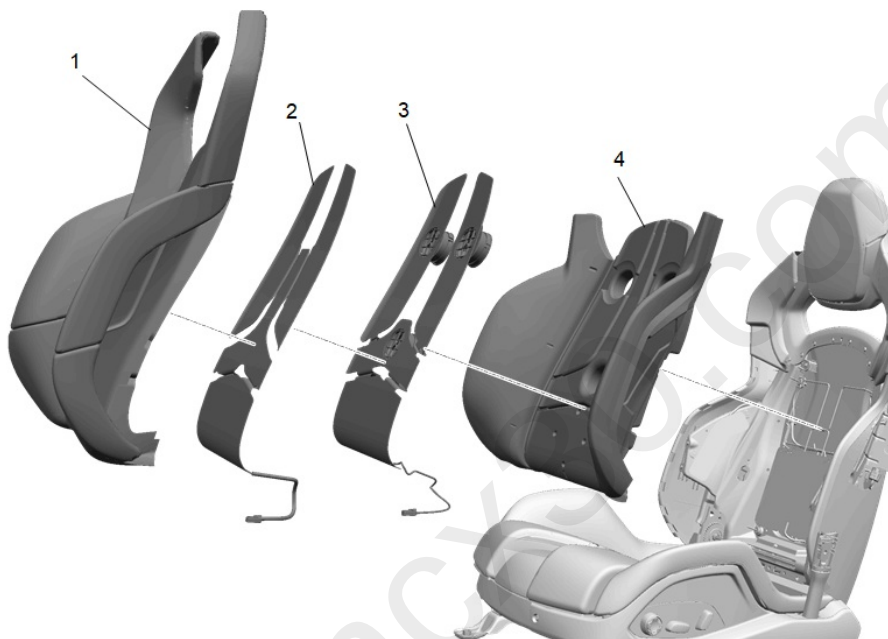


1.
[Click here for full size](#)
2. Front Seat Back Pad (3) >> Install
3. { If equipped } Front Seat Back Ventilation Blower (2) >> Install - Front Seat Back Ventilation Blower Replacement
4. Front Seat Back Cover (1) >> Install
5. Connect the retainers that hold the cover (1) to the pad (3).
6. Install the front seat back cover (1) and front seat back pad (3) as an assembly.
7. Connect the electrical connectors.
8. Install the push in retainers along the top of the cover (1) near the seat back opening.
9. Install the J-channel retainer along the bottom rear of the cover (1).
10. Install the hook and loop retainers on the rear of the front seat cushion cover.
11. Starting at the top, install the J-channel retainer along both sides of the cover (1).
12. Remove the two layers of masking tape around the top seat surface.

13. [Click here for full size](#)

14. Caution:

Refer to Fastener Caution.

15. Front Seat Back Pad Support Screw (1) >> Install and tighten [4x]2 N-m (18 lb in)

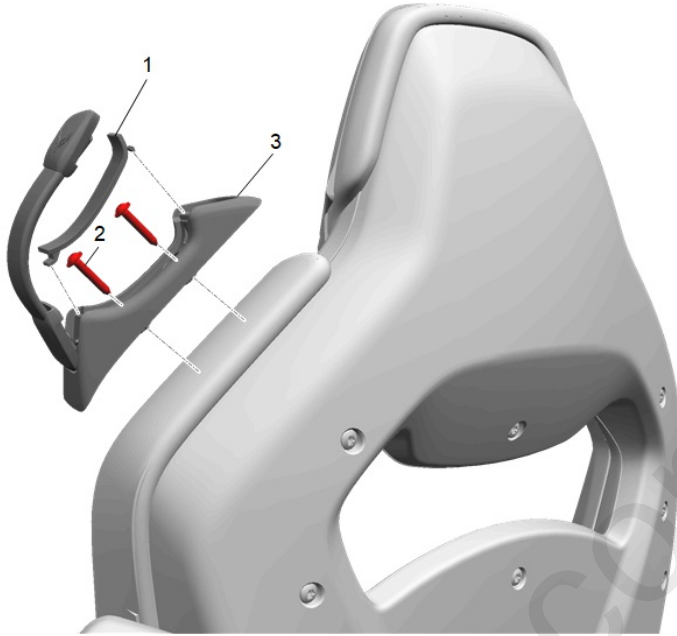


16.

[Click here for full size](#)

17. Front Seat Belt Guide (3) >> Install - Front Seat Belt Guide Replacement

18. Remove the two layers of masking tape around the seat side surface.

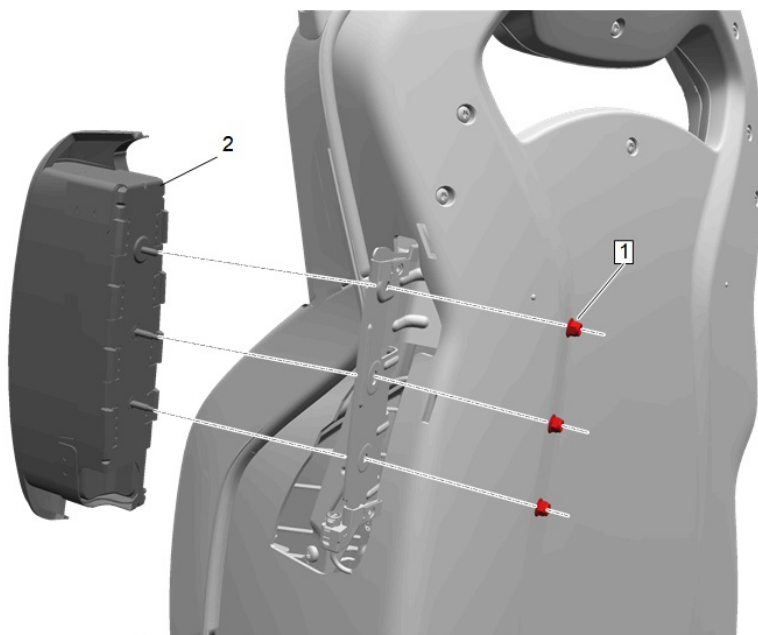

19.
[Click here for full size](#)

20. Front Seat Outboard Seat Back Airbag (2) >> Install - Front Seat Outboard Seat Back Airbag Replacement



21.
[Click here for full size](#)

22. Front Seat (2) >> Install - Front Seat Removal and Installation

23. Enable the SIR System. SIR Disabling and Enabling