

2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **Seats**

2. **Seat Hardware, Trim, and Upholstery**

3. **Repair Instructions**

- 4.

Front Seat Cushion Cover and Pad Replacement

Warning:

Refer to SIR Warning.

Warning:

To avoid personal injury, perform a passenger presence sensor rezeroing/ learn on the passenger presence system whenever you remove or replace the seat cushion trim. Failure to do so may cause the system to malfunction.

Warning:


The passenger seat cushion assembly is serviced in a kit with the airbag front passenger presence module, cushion pad (and if equipped, heat mat, vent mat, vent mat support, comfort pads). All components in the service kit are assembled and calibrated as a unit and must be replaced as a complete assembly to prevent possible injury to the occupant. Using only some of the components in the service kit will cause the passenger presence system to operate improperly.

Removal Procedure

1. Disable the SIR system. SIR Disabling and Enabling




2.
[Click here for full size](#)
3. Front Seat (2) >> Remove - Front Seat Removal and Installation

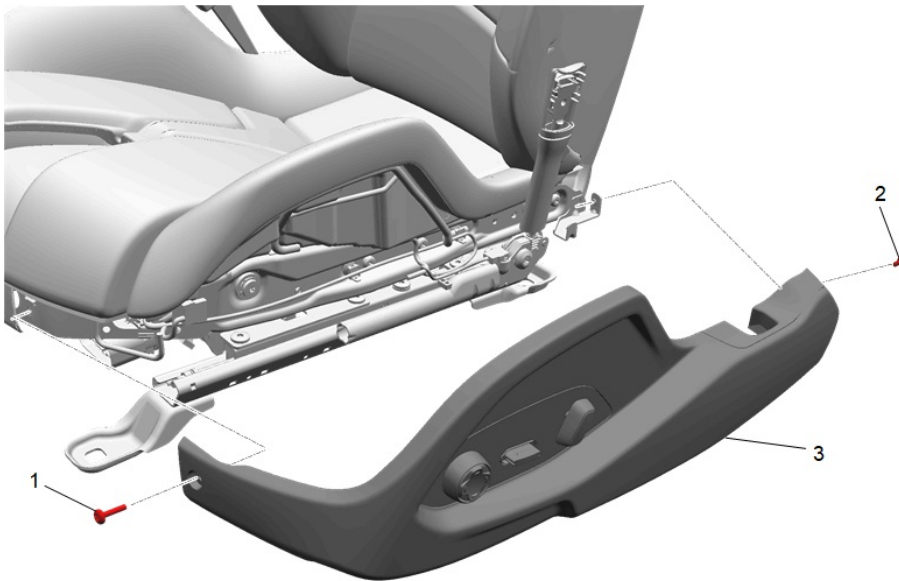

4.
[Click here for full size](#)

5. Front Seat Cushion Front Finish Cover (3) >> Remove - Front Seat Cushion Front Finish Cover Replacement

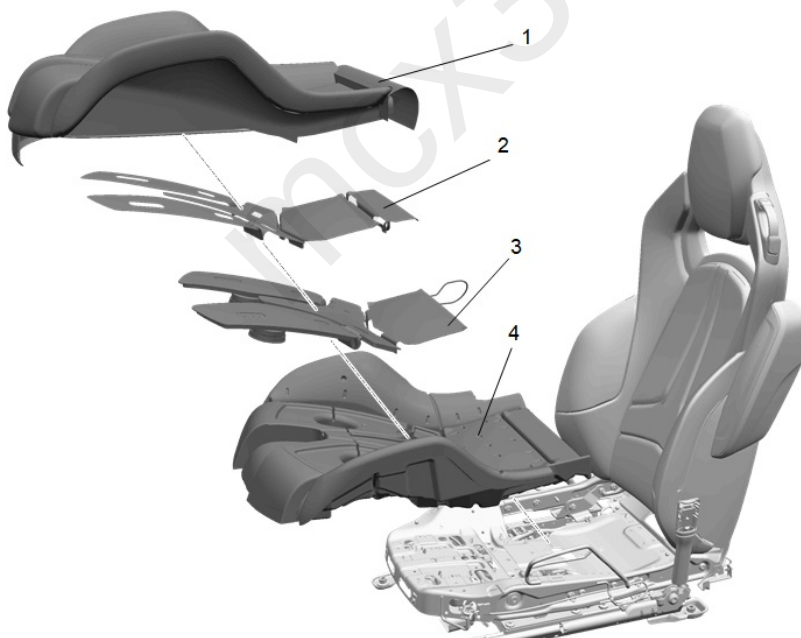

6.
[Click here for full size](#)

7. Loosen and disengage the draw string and hook and loop fasteners from the under side and back of the seat cushion cover (1).


8. Disengage the J-channel retainers from the seat cushion frame.

9. Disconnect the electrical connectors.

10. Remove the seat cushion cover (1) and pad (3) from the seat cushion frame as an assembly.


Extra Item: video

11. Use an appropriate tool to release the plastic retainers that hold the cover (1) to the pad (3).
12. { If equipped } Front Seat Cushion Ventilation Blower (2) >> Remove - Front Seat Cushion Ventilation Blower Replacement
13. Front Seat Cushion Pad (3) >> Remove

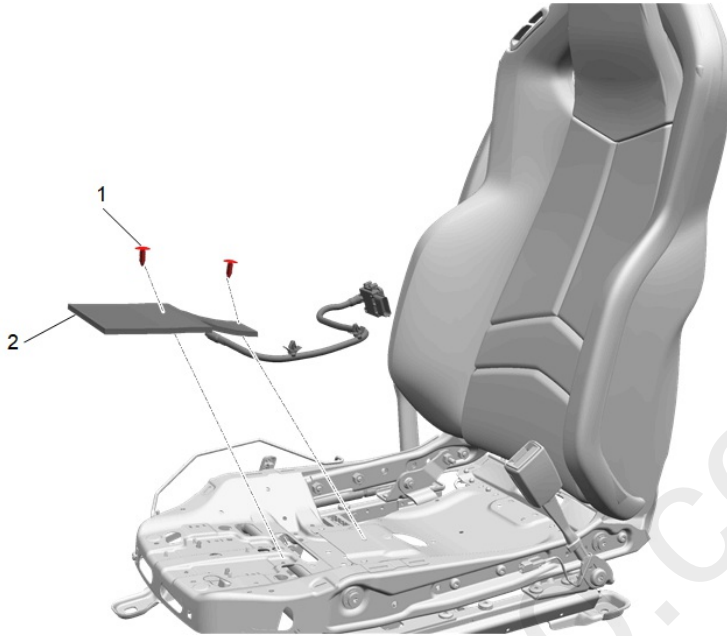


14. [Click here for full size](#)
15. { If equipped } Airbag Front Passenger Presence Module (2) >> Remove - Airbag Front Passenger Presence Module Replacement
16. Transfer components as necessary.

Installation Procedure

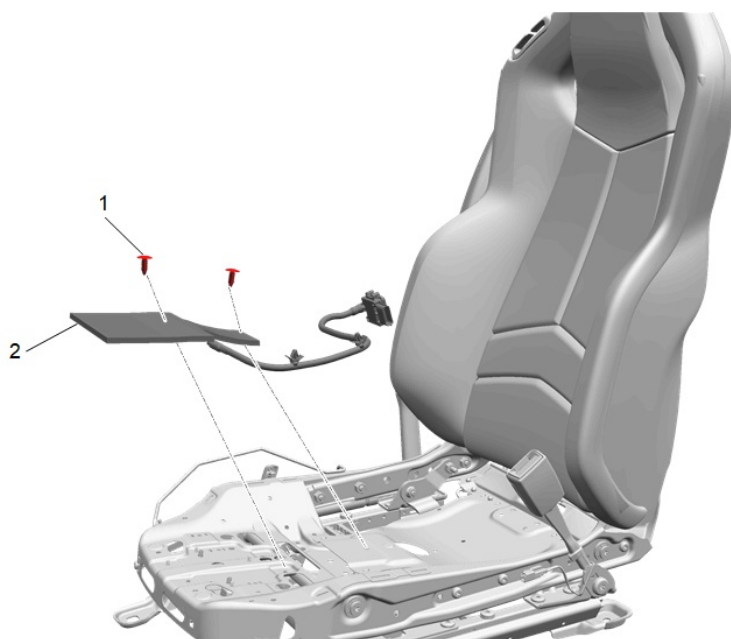


1. [Click here for full size](#)
2. { If equipped } Airbag Front Passenger Presence Module (2) >> Install - Airbag Front Passenger Presence Module Replacement

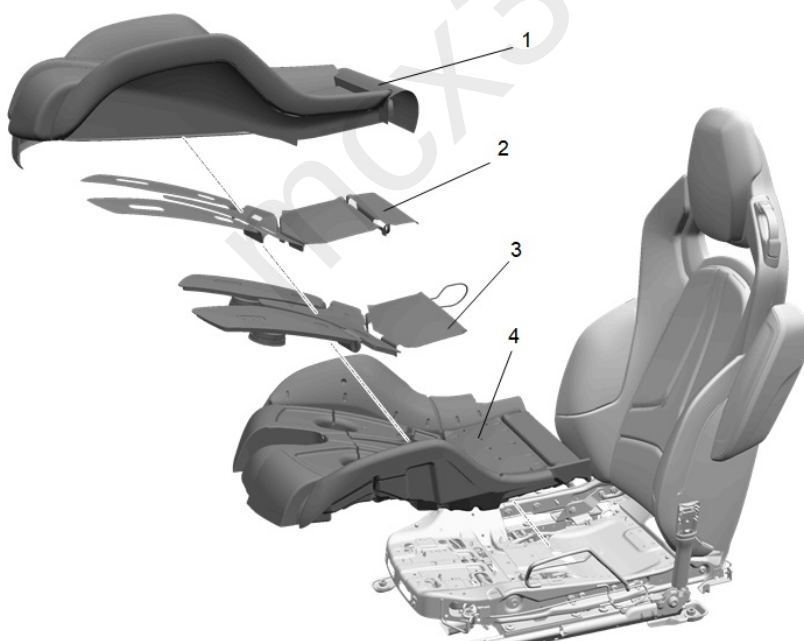

3. [Click here for full size](#)
4. Front Seat Cushion Pad (3) >> Install
5. { If equipped } Front Seat Cushion Ventilation Blower (2) >> Install - Front Seat Cushion Ventilation Blower Replacement
6. Front Seat Cushion Cover (1) >> Install

7. Install the seat cushion cover (1) and pad (3) on to the seat cushion frame as an assembly.
8. Connect the electrical connectors.
9. Connect the J-channel retainers.
10. Pull the draw string on the cover tightly in all corners to ensure that no creasing occurs
11. Install the hook and loop fasteners on the under side and back of the seat cushion cover (1).

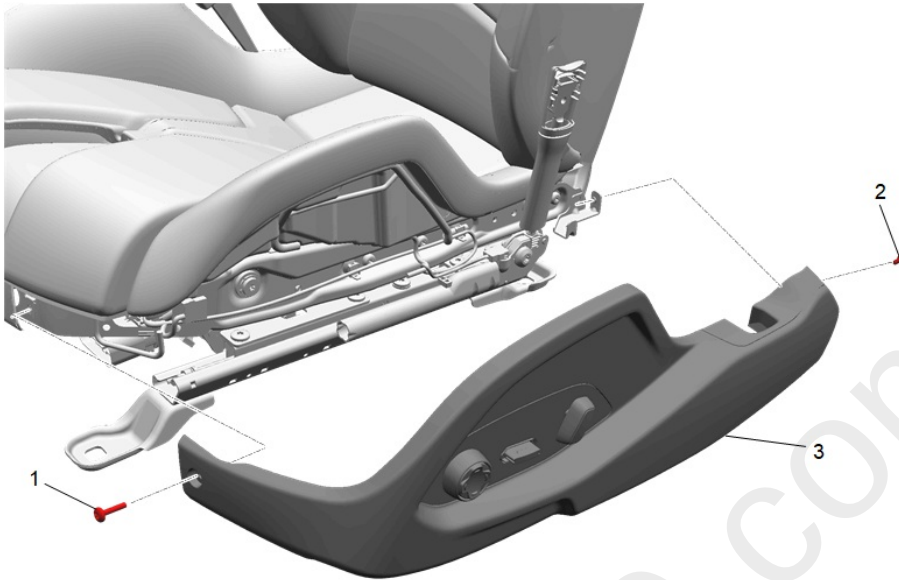

12. [Click here for full size](#)
13. Front Seat Cushion Front Finish Cover (3) >> Install - Front Seat Cushion Front Finish Cover Replacement



14. [Click here for full size](#)
15. Front Seat (2) >>> Install - Front Seat Removal and Installation
16. Enable the SIR System. SIR Disabling and Enabling
17. Note:
The Regulatory Name for this component because of SAE J1930 is Restraints Occupant Classification System Module.
18. If servicing the passenger seat, perform the necessary programming and setup procedure: Control Module References