


2022 CHEVROLET CORVETTE SERVICE MANUAL

- [SEARCH](#)


1. [Steering](#)
2. [Power Steering](#)
3. [Repair Instructions](#)
- 4.

Steering Linkage Inner Tie Rod Replacement

Removal Procedure

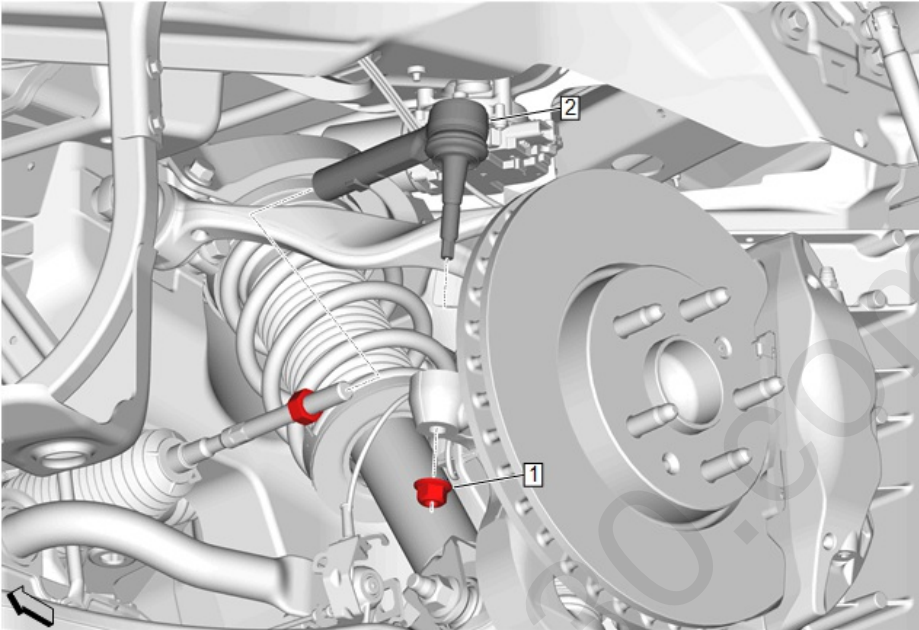

1. [Click here for full size](#)
2. [Steering Linkage Outer Tie Rod \(2\) >>> Remove - Steering Linkage Outer Tie Rod Replacement](#)

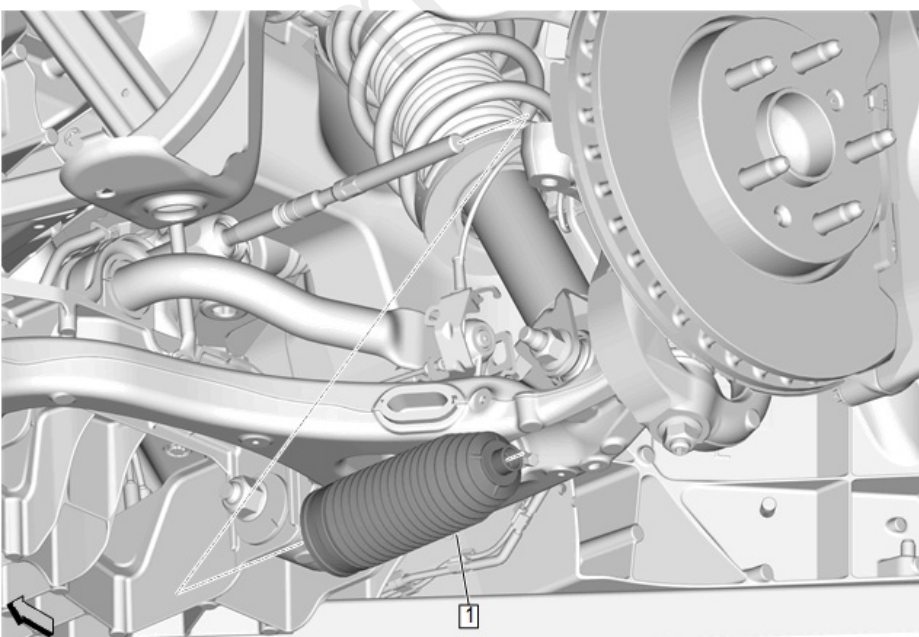

3. [Click here for full size](#)
4. [Steering Gear Boot \(1\) >>> Remove - Steering Gear Boot Replacement](#)

5. [Click here for full size](#)
6. Note:

There are flats on the electric belt drive rack and pinion steering gear to hold it from rotating.

7. Use a suitable wrench to remove the steering linkage inner tie rod (1).

Installation Procedure

1. [Click here for full size](#)
2. Note:


There are flats on the electric belt drive rack and pinion steering gear to hold it from rotating.

3. Use a suitable wrench to install the steering linkage inner tie rod (1).


4. Caution:

Refer to Fastener Caution.

5. Steering Linkage Inner Tie Rod (1) >> Tighten 105 N-m (77 lb ft)

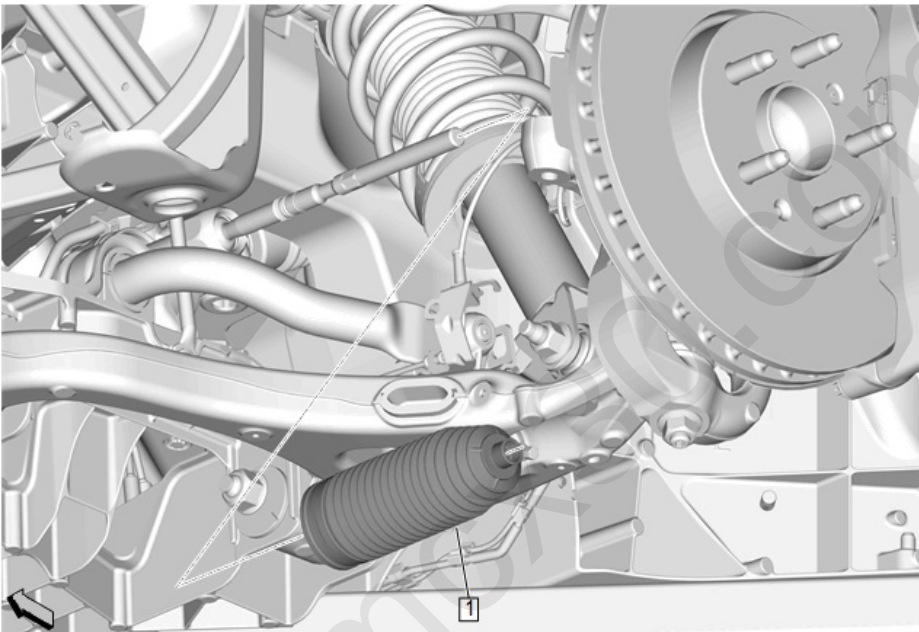

6. [Click here for full size](#)
7. Steering Gear Boot (1) >> Install - Steering Gear Boot Replacement

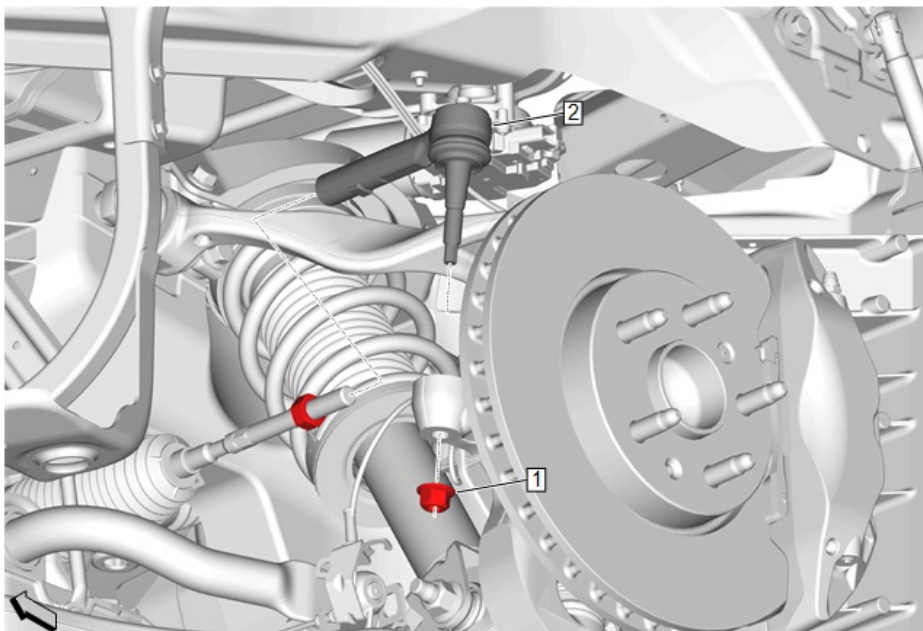

8.

[Click here for full size](#)

9. Steering Linkage Outer Tie Rod (2) >>> Install - Steering Linkage Outer Tie Rod Replacement

10. Measure and adjust the wheel alignment. Wheel Alignment Measurement

mcx30.com