

2022 CHEVROLET CORVETTE SERVICE MANUAL


- **SEARCH**

1. [Suspension](#)
2. [Front Suspension](#)
3. [Repair Instructions](#)
- 4.

Front Stabilizer Shaft Link Replacement - Right Side (with J55)

Removal Procedure

1. Raise and support the vehicle. Lifting and Jacking the Vehicle
2. Remove the front tire and wheel assembly. Tire and Wheel Removal and Installation
3. Front Brake Rotor Cooling Duct Deflector >> Remove - Front Brake Rotor Cooling Duct Deflector Replacement
4. [Click here for full size](#)
5. Front Stabilizer Shaft Link Nut (1) @ Front Lower Control Arm>> Remove

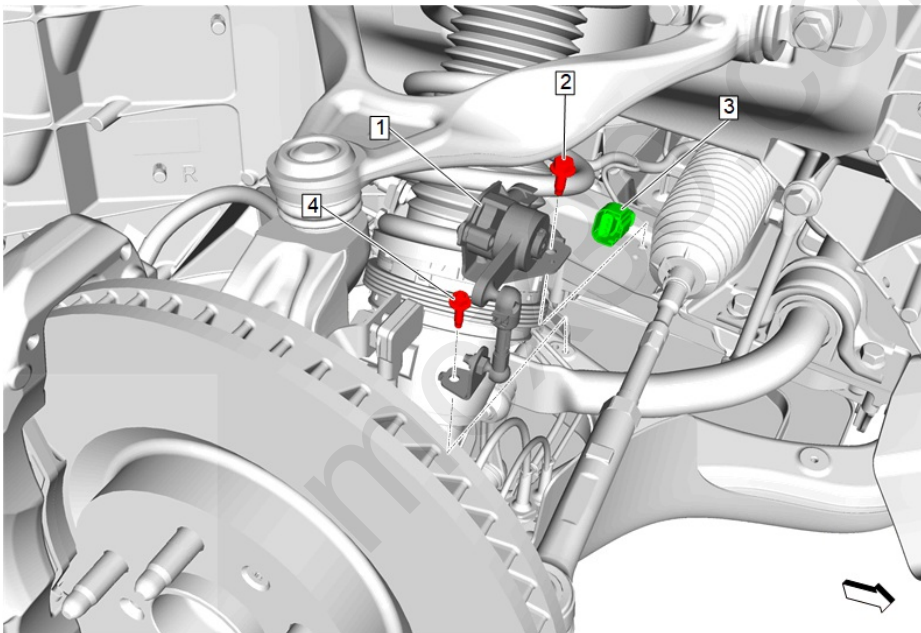

6. [Click here for full size](#)
7. Headlamp Leveling Front Suspension Height Sensor Bolt (4) @ Front Lower Control Arm>> Remove
8. [Click here for full size](#)
9. Front Stabilizer Shaft Link Nut (2) @ Front Stabilizer Shaft >> Remove
10. [Click here for full size](#)
11. Front Stabilizer Shaft Link (1) >> Remove

Installation Procedure

1. [Click here for full size](#)

2. Front Stabilizer Shaft Link (1) >> Install

3. [Click here for full size](#)

4. Caution:


Refer to Fastener Caution.

5. Front Stabilizer Shaft Link Nut (2) @ Front Stabilizer Shaft >> Install and tighten

6.

1. First Pass: 100 N-m (74 lb ft)

2. Final Pass: 30 - 45 degrees

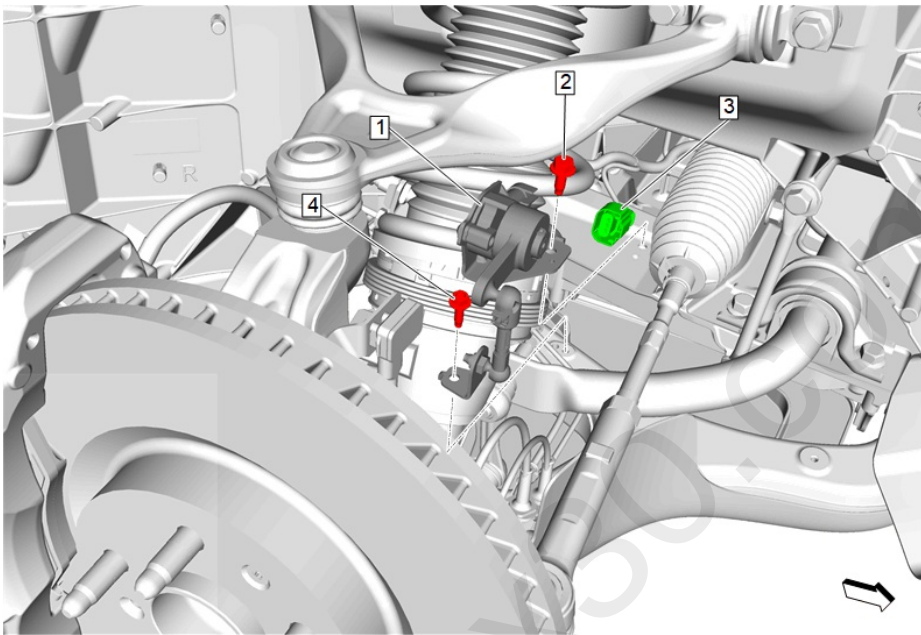

7.

[Click here for full size](#)

8. Headlamp Leveling Front Suspension Height Sensor Bolt (4) @ Front Lower Control Arm >> Install and tighten - Front Suspension 4 Corner Leveling System Position Sensor Replacement

9. [Click here for full size](#)

10. Front Stabilizer Shaft Link Nut (1) @ Front Lower Control Arm >> Install and tighten

11.

1. First Pass: 100 N-m (74 lb ft)

2. Final Pass: 30 - 45 degrees

12. Front Brake Rotor Cooling Duct Deflector >> Install - Front Brake Rotor Cooling Duct Deflector Replacement

13. Install the front tire and wheel assembly. Tire and Wheel Removal and Installation

14. Remove the support and lower the vehicle.