

2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **Suspension**
2. **Wheel Alignment**
3. **Description and Operation**
- 4.

Lead/Pull Description

At a constant highway speed on a typical straight road, lead/pull is the amount of effort required at the steering wheel to maintain the vehicle's straight path.

Important:

Vehicles will tend to lead/pull in the direction of the road slope as part of normal operation.

Lead/pull is usually caused by the following factors:

- Road slope
- Variability in tire construction
- Wheel alignment (front cross caster and camber)
- Unbalanced steering gear
- Improperly calibrated Electronic Power Steering (EPS) steering position and torque sensors