

2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH

1. Body Systems

2. Fixed and Moveable Windows

3. Repair Instructions

- 4.

Intermediate Window Replacement

Removal Procedure

Warning:

When working with any type of glass or sheet metal with exposed or rough edges, wear approved safety glasses and gloves in order to reduce the chance of personal injury.

Warning:

If a window is cracked but still intact, crisscross the window with masking tape in order to reduce the risk of damage or personal injury.

Note:

Use a urethane adhesive systems which meet GM Specification GMW 15672.

1. Open the rear compartment lid.

2. Warning:

If broken glass falls into the defroster outlets, it can be blown into the passenger compartment and cause personal injury.

3. Cover to protect the following parts from broken glass:

- 4.


- The defroster outlets and A/C outlets

- The seats and carpeting

5. Apply a double layer of masking tape around the perimeter of the painted surfaces.


6. [Click here for full size](#)

7. Using a suitable tool, carefully cut the lace and urethane adhesive bead around the intermediate window (1).

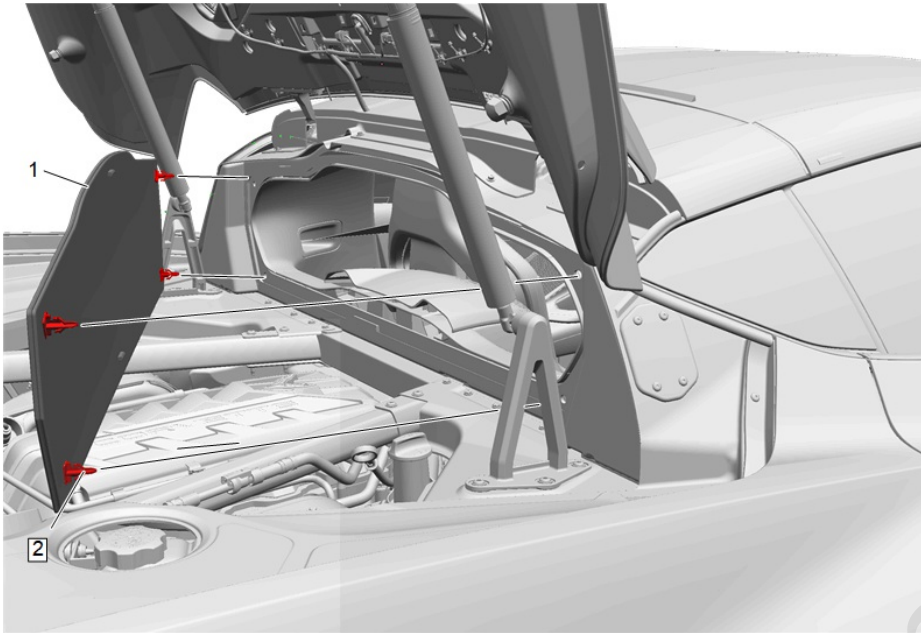

8.
Click here for full size
9. Remove the intermediate windshield (1) and locating pins (2) from the vehicle.
10.
 - Leave a base of urethane on the pinchweld flange.
 - The only suitable lubrication is clear water.
11. Transfer components as necessary.

Installation Procedure

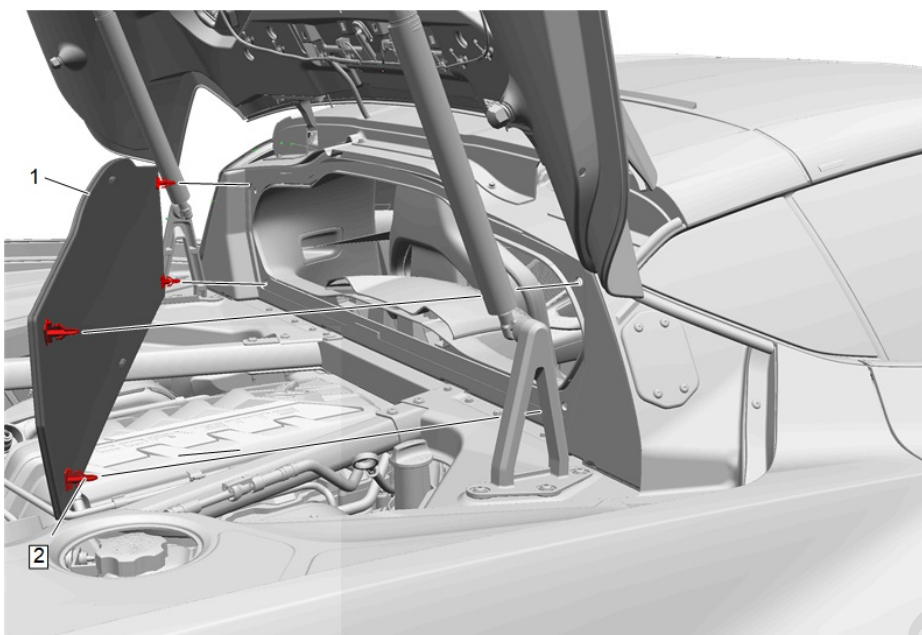

1.
Click here for full size
2. Install the intermediate window (1). Adhesive Installation of Encapsulated Stationary Windows
3. Remove the double layer of masking tape around the perimeter of the painted surfaces.
4. Remove any remaining adhesive residue with a 50/50 mixture by volume of isopropyl alcohol and clean drinkable water. Wipe the surface dry with a clean lint-free towel.
5. Close the rear compartment lid.