

2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH

1. Body Systems

2. Fixed and Moveable Windows

3. Repair Instructions

- 4.

Window Motor Programming - Express Function

A window motor that has not been normalized may no longer perform the express up functions or may not index up when the door is closed, this may occur during the following conditions:

- When a window motor has been disconnected or replaced
- When a door harness has been disconnected

When the battery has been disconnected or replaced, all window motors may no longer perform the express up functions

Note:

When DTC B1956 55, B1957 55 are set, the following warnings will be displayed on the driver information center:

- Open, then Close Driver Window
- Open, then Close Passenger Window

These warnings will clear once the windows have been "Normalized" and the respective DTC will clear.

Single Window Motor Normalization Procedure

1. Note:

The doors must be completely closed prior to normalizing the windows, a door that is open or ajar may cause the power window to function abnormally or to become inoperative while performing the normalizing procedure. If this occurs, verify that the door is completely closed then repeat the normalizing procedure.

2. Note:

For vehicles equipped with a folding convertible top, the top must be closed and firmly latched prior to normalizing the windows.

3. Ignition ON.

4. Starting with the window completely UP, press and hold the power window switch until the window is fully open and continue holding the switch down for approximately 5 seconds after the window is completely open.

5. Pull the power window switch up until the window is fully closed and continue holding the switch up for approximately 5 seconds after the window is completely closed.

The window should now be normalized and the window should perform the express up and express down functions and should index normally when the door is opened and closed.

All Window Motors Normalization Procedure

1. Note:

The doors must be completely closed prior to normalizing the windows, a door that is open or ajar may cause the power window to function abnormally or to become inoperative while performing the normalizing procedure. If this occurs, verify that the door is completely closed then repeat the normalizing procedure.

2. Note:

For vehicles equipped with a folding convertible top, the top must be closed and firmly latched prior to normalizing the windows.

3. Ignition ON.

4. With the driver window completely UP, press and hold the appropriate power window switch until the driver window is fully open and

continue holding the switch down for approximately 5 seconds after the driver window is completely open.

5. Pull the power window switch up until the driver window is fully closed and continue holding the switch up for approximately 5 seconds after the driver window is completely closed.
6. With the front passenger window completely UP, press and hold the appropriate power window switch until the front passenger window is fully open and continue holding the switch down for approximately 5 seconds after the front passenger window is completely open.
7. Pull the power window switch up until the front passenger window is fully closed and continue holding the switch up for approximately 5 seconds after the front passenger window is completely closed.

All the window motors should now be normalized and the windows should perform the express up and express down functions and should index normally when the door is opened and closed.

mcx30.com