

2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **Body Systems**
2. **Vehicle Access**
3. **Description and Operation**
- 4.

Hood Ajar Indicator Description and Operation

Front Stowage Compartment Cover Latch Ajar Switch

The body control module applies 5 volts to the front compartment entrapment release switch signal circuit and monitors the voltage to determine the position of the front stowage compartment cover. When the front stowage compartment cover is closed, the front stowage compartment cover latch ajar switch is open and voltage remains high. When the front stowage compartment cover is open, the front stowage compartment cover latch ajar switch is closed and the voltage is pulled low.

The body control module uses the front stowage compartment cover latch ajar switch as a content theft deterrent alarm trigger.

Open Hood Message

Note :

Failure of the front stowage compartment to release when commanded may cause the driver information center to display "Hood Ajar".

When the front stowage compartment cover is ajar, a message is displayed on the DIC or the hood ajar indicator will be illuminated.