

2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **Diagnostic Overview, Starting Point, and Programming**

2. **Programming and Setup**

3. **Repair Instructions**

- 4.

K219 Lighting Control Module: Programming and Setup

Note:

- DO NOT program a control module unless directed to by a service procedure or a service bulletin. If the control module is not properly configured with the correct calibration software, the control module will not control all of the vehicle features properly.
- Ensure the programming tool is equipped with the latest software and is securely connected to the data link connector. If there is an interruption during programming, programming failure or control module damage may occur.
- Stable battery voltage is critical during programming. Any fluctuation, spiking, over voltage or loss of voltage will interrupt programming. When required install the EL-49642, SPS Programming Support Tool to maintain system voltage. If not available, connect a fully charged 12 V jumper or booster pack disconnected from the AC voltage supply. DO NOT connect a battery charger.
- Turn OFF or disable systems that may put a load on the vehicles battery such as; interior lights, exterior lights (including daytime running lights), HVAC, radio, etc.
- During the programming procedure, follow the SPS prompts for the correct ignition switch position.
- Clear DTCs after programming is complete. Clearing powertrain DTCs will set the Inspection/Maintenance (I/M) system status indicators to NO.

Replace and Program Control Module

To program a replacement control module, perform the following procedure:

1. Access the Service Programming System (SPS) and follow the on-screen instructions.
2. On the SPS Supported Controllers screen, under Select Controller, select K219 Lighting Control Module.
3. On the SPS Supported Controllers screen, under Select Function / Sequence, select Programming and follow on screen instructions.
4. On the SPS Supported Controllers screen, under Select Function / Sequence, select Setup and follow the on-screen instructions.
5. Clear All DTCs.

Reprogram Control Module

Do not reprogram the lighting control module, unless directed by a service procedure, or a service bulletin.

To reprogram an existing control module, perform the following procedure:

1. Access the Service Programming System (SPS) and follow the on-screen instructions.
2. On the SPS Supported Controllers screen, under Select Controller, select K219 Lighting Control Module.
3. On the SPS Supported Controllers screen, under Select Function / Sequence, select Programming and follow on screen instructions.
4. Clear All DTCs.

Unsuccessful Programming Recovery

In the event of an interrupted or unsuccessful programming event, perform the following steps:

1. Ignition ON. Ensure the K219 Lighting Control Module, DLC and programming tool connections are secure and the SPS software is up to date.
2. Verify the lighting control module can be reprogrammed.

3.

- **If the K219 Lighting Control Module cannot be reprogrammed**

4.

1. Ignition OFF for one minute, ignition ON.
2. Verify the lighting control module can be reprogrammed.

3.

- If the K219 Lighting Control Module cannot be reprogrammed, replace the lighting control module.

4.

- If the K219 Lighting Control Module can be reprogrammed.

5. All OK.

5.

- **If the K219 Lighting Control Module can be reprogrammed**

6. All OK.

Repair Instructions

Perform the Diagnostic Repair Verification after completing the repair.

Control Module References for control module replacement, programming and setup