

2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH

1. Engine/Propulsion
2. 12 V Starting and Charging
3. Specifications
- 4.

Fastener Specifications

Reusable Threaded Fastener Tightening Specifications

Note:	
All fasteners listed in this table can be reused after removal.	
Application	Specification
	Metric (English)
Battery Hold Down Retainer Bolt	22 N-m (16 lb ft)
Battery Negative Cable Ground Bolt	22 N-m (16 lb ft)
Battery Negative Cable Nut @ Battery Monitor Module	9 N-m (80 lb in)
Battery Negative Post Clamp Nut	4.5 N-m (3 lb ft)
Battery Positive Cable Bracket Bolt	9 N-m (80 lb in)
Battery Positive Cable Nut @ Battery Distribution Engine Compartment Fuse Block	15 N-m (11 lb ft)
Battery Positive Cable Nut @ Battery Positive Cable Terminal	15 N-m (11 lb ft)
Battery Positive Cable Nut @ Generator	15 N-m (11 lb ft)
Battery Positive Cable Nut @ Starter Solenoid	12.5 N-m (111 lb in)
Battery Positive Junction Block Cable Nut (M6)	9 N-m (80 lb in)
Battery Positive Junction Block Cable Nut (M8)	15 N-m (11 lb ft)
Battery Positive Post Clamp Nut	9 N-m (80 lb in)
Battery Retainer Nut	9 N-m (80 lb in)
Battery Tray Bolt	22 N-m (16 lb ft)
Fuse Block Bracket Bolt	9 N-m (80 lb in)
Generator and Starter Cable Nut	12.5 N-m (111 lb in)
Generator Bolt	58 N-m (43 lb ft)
Generator Bolt (LT6)	36 N-m (27 lb ft)
Starter Bolt	58 N-m (43 lb ft)
Starter Bracket Bolt	22 N-m (16 lb ft)
Starter Bracket Bolt (LT6)	36 N-m (27 lb ft)