

2022 CHEVROLET CORVETTE SERVICE MANUAL


- SEARCH

1. Engine/Propulsion
2. 12 V Starting and Charging
3. Repair Instructions
- 4.

Battery Positive Junction Block Cable Replacement


Removal Procedure

1. Disconnect the battery negative cable. Battery Negative Cable Disconnection and Connection

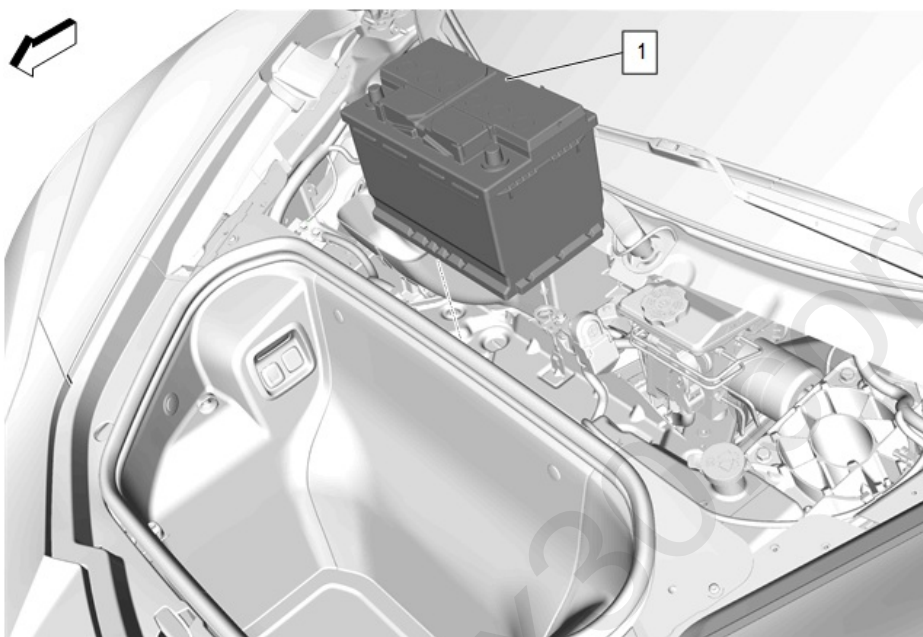


2.
Click here for full size

3. Battery (1) >>> Remove - Battery Replacement

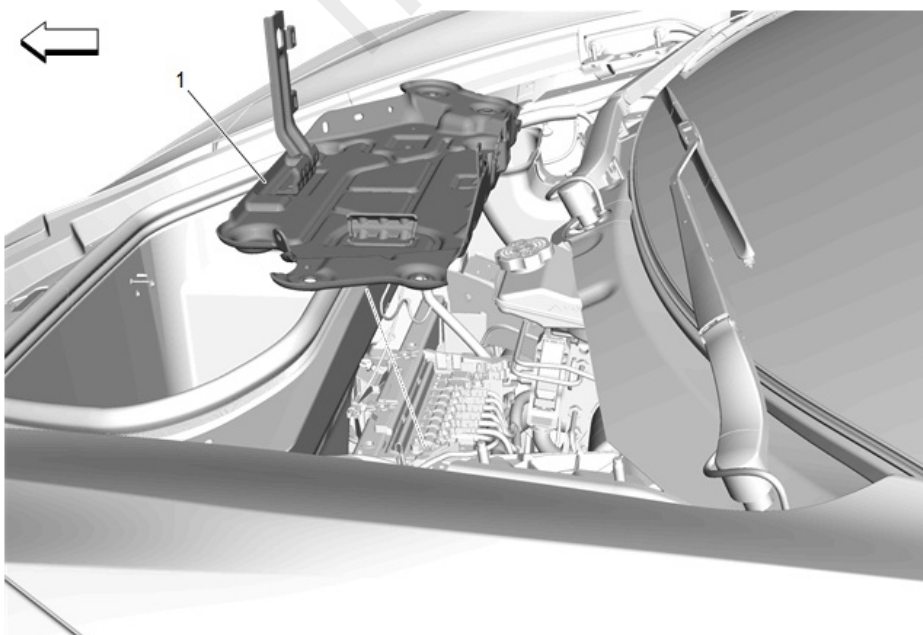

4.
Click here for full size


5. Battery Tray (1) >> Remove - Battery Tray Replacement

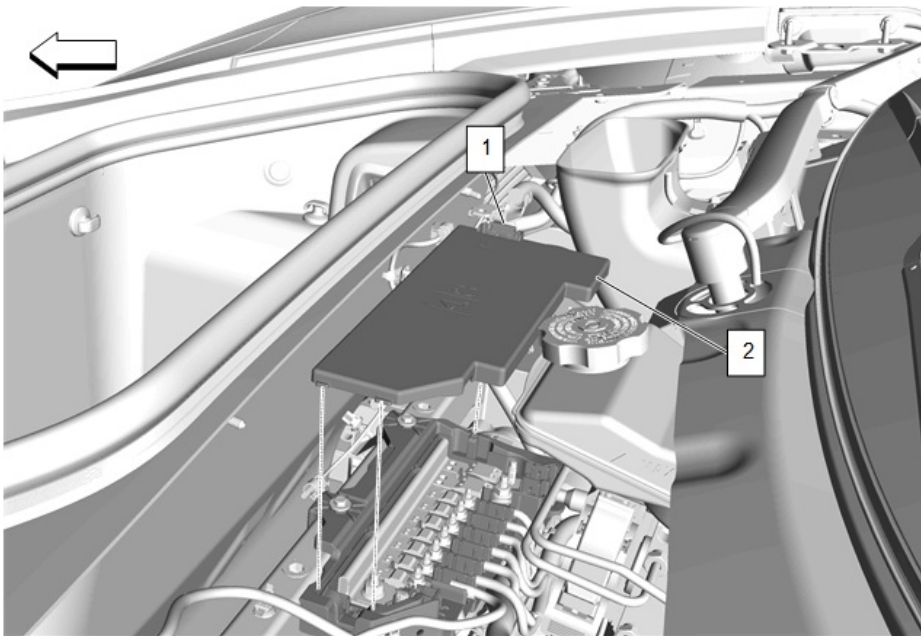

6.
[Click here for full size](#)

7. Retaining Tab (1) >> Disengage

8. Battery Distribution Fuse Block Cover (2) >> Remove

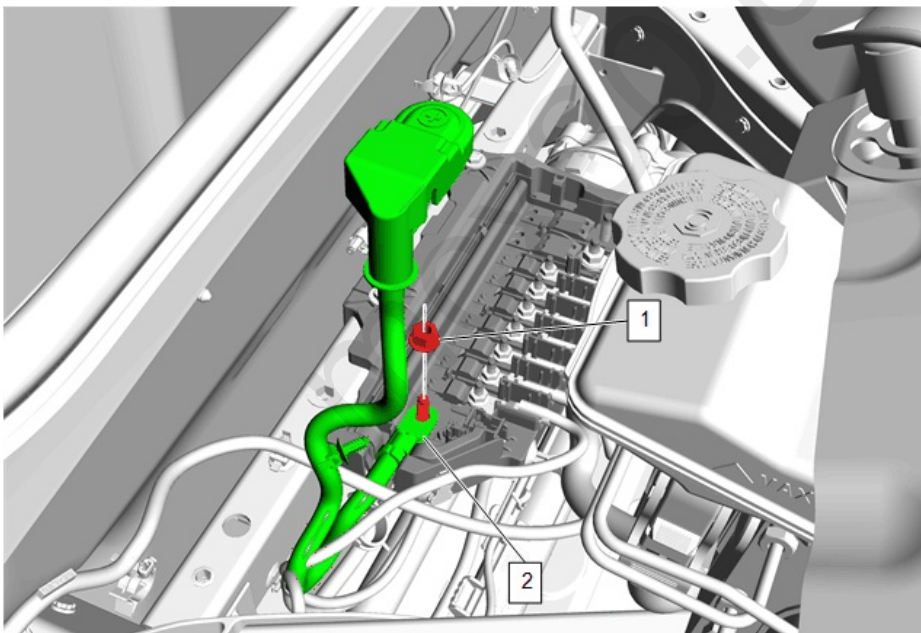


9.
[Click here for full size](#)


10. Battery Positive Junction Block Cable Nut (1) >> Remove

11. Battery Positive Junction Block Cable (2) >> Remove


Installation Procedure

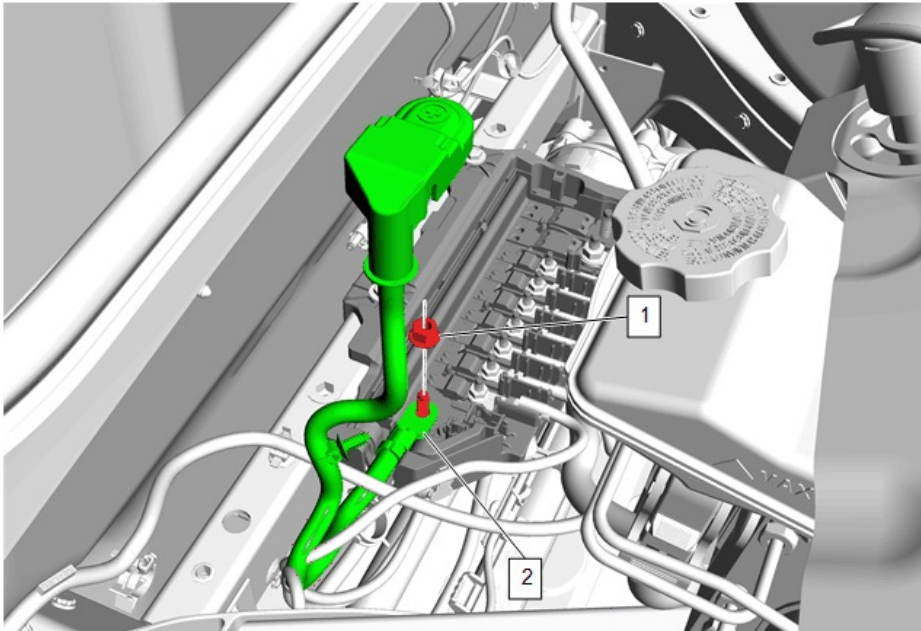

1. [Click here for full size](#)
2. Battery Positive Junction Block Cable (2) >> Install
3. Caution:
Refer to Fastener Caution
4. Battery Positive Junction Block Cable Nut (1) >> Install - Battery Distribution Engine Compartment Fuse Block Replacement

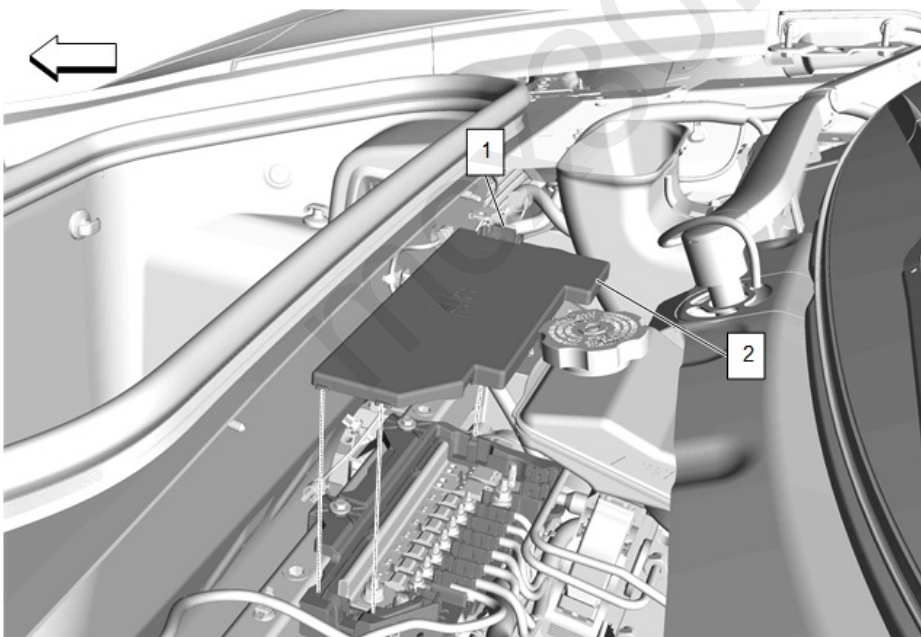


5. [Click here for full size](#)
6. Battery Distribution Fuse Block Cover (2) >> Install
7. Retaining Tab (1) >> Engage

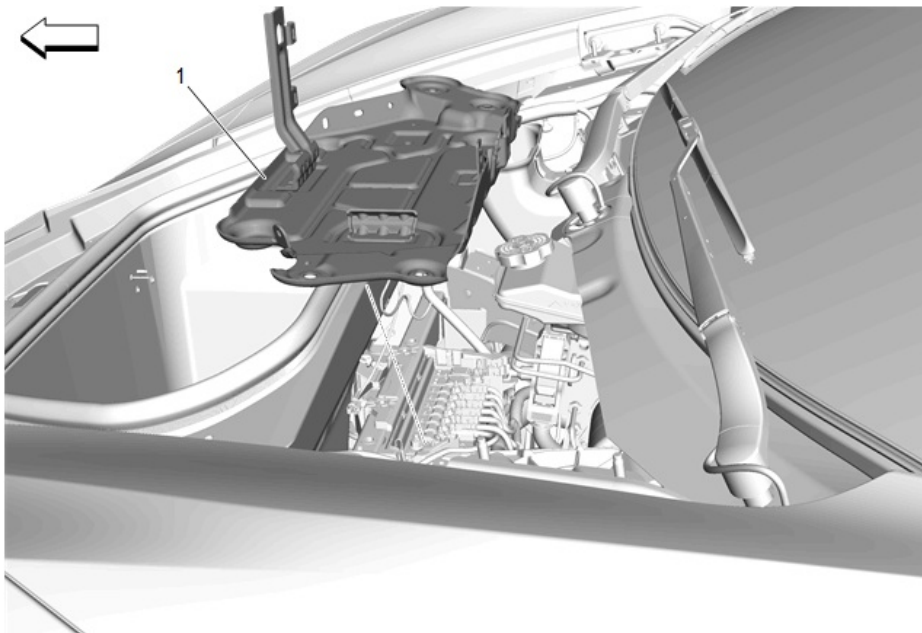

8.
[Click here for full size](#)

9. Battery Tray (1) >> Install - Battery Tray Replacement

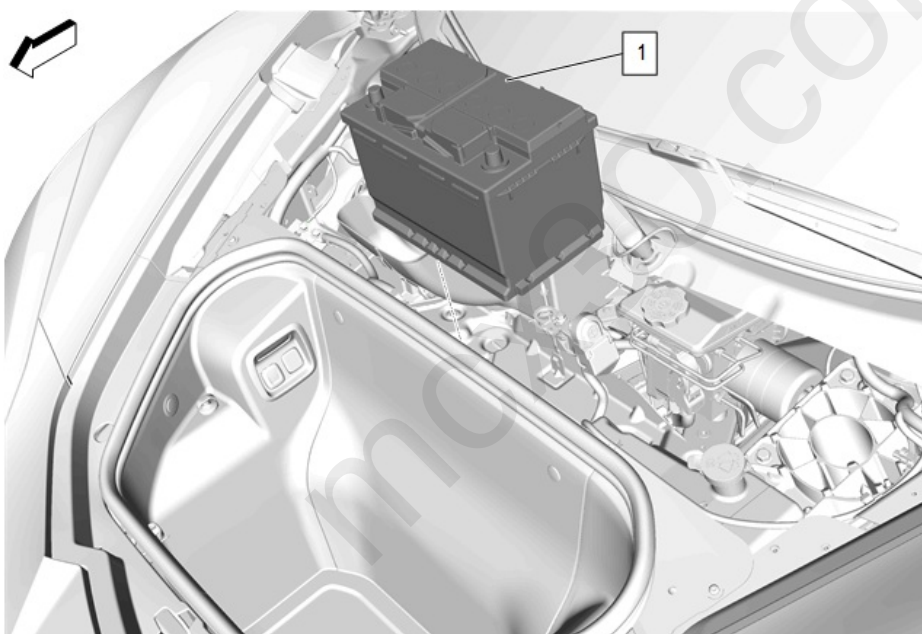

10.
[Click here for full size](#)

11. Battery (1) >> Install - Battery Replacement

12. Connect the battery negative cable. Battery Negative Cable Disconnection and Connection