

2022 CHEVROLET CORVETTE SERVICE MANUAL


- [SEARCH](#)

1. [Engine/Propulsion](#)
2. [12 V Starting and Charging](#)
3. [Repair Instructions](#)
- 4.


Battery Replacement

Removal Procedure


1. Disconnect the battery negative cable. Battery Negative Cable Disconnection and Connection

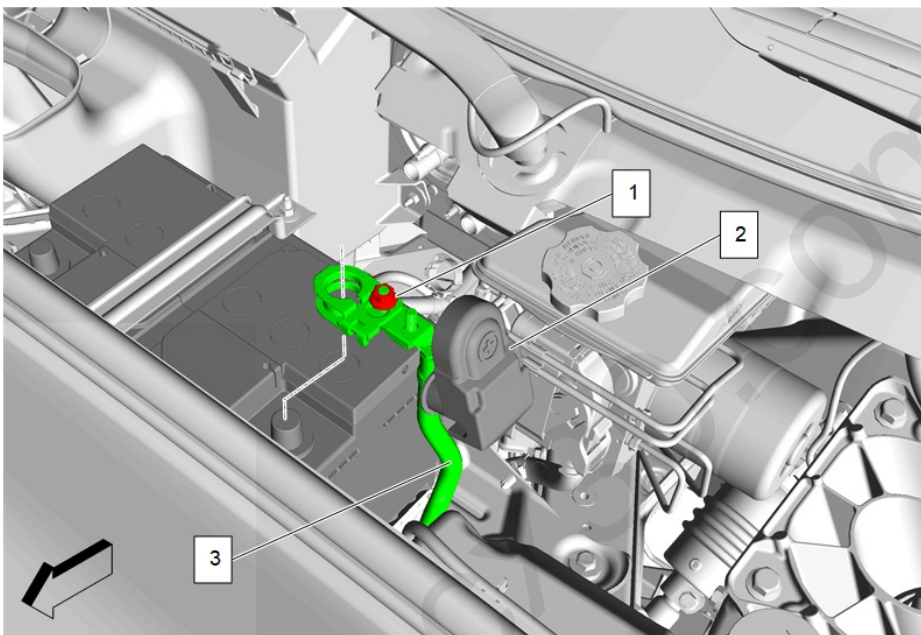


2. [Click here for full size](#)
3. Battery Positive Cable Terminal Cover (2) >> Reposition
4. Battery Positive Post Clamp Nut (1) >> Loosen
5. Battery Positive Junction Block Cable (3) >> Reposition away

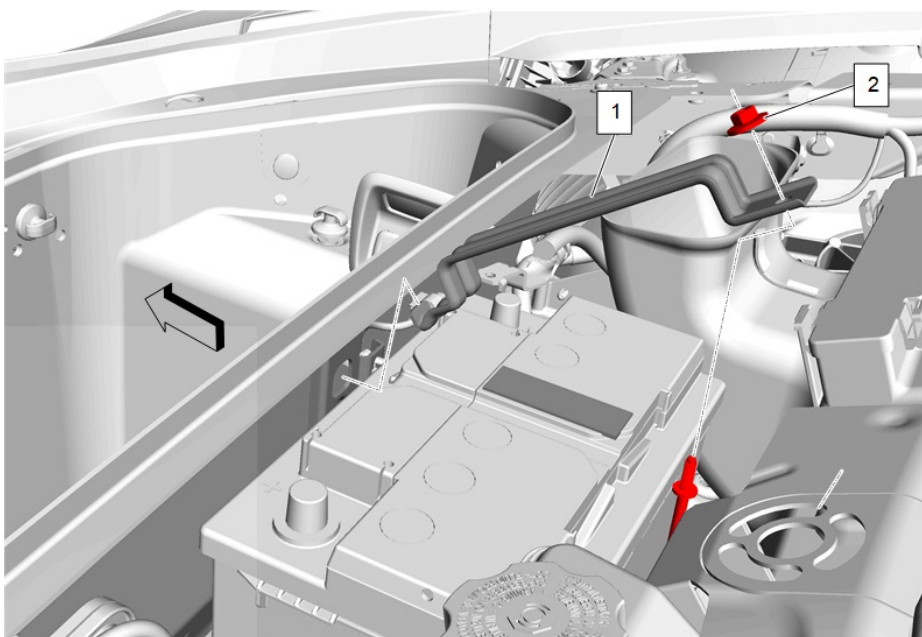

6. [Click here for full size](#)
7. Battery Retainer Nut (2) >> Remove
8. Battery Hold Down Strap (1) >> Remove

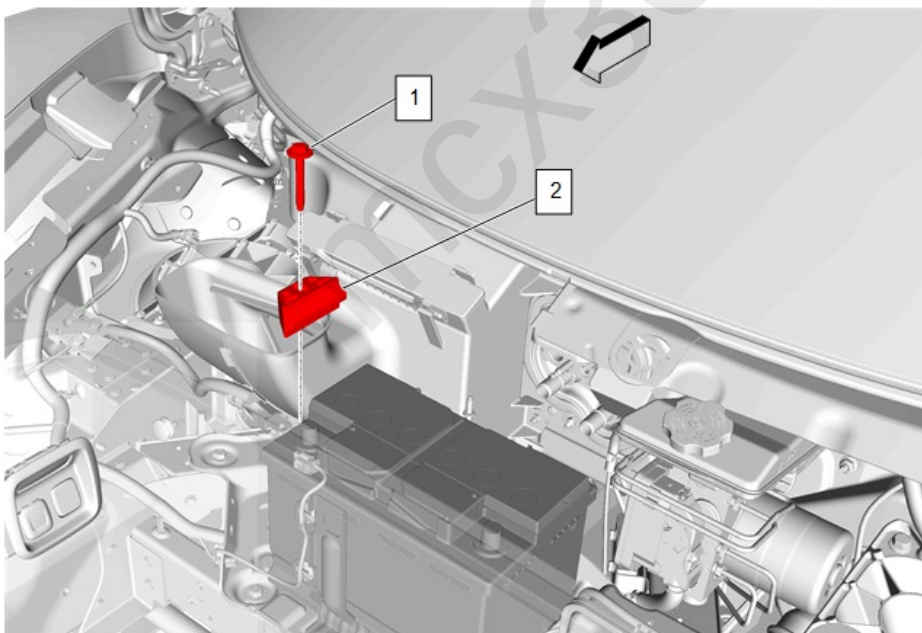


9. [Click here for full size](#)
10. Battery Hold Down Retainer Bolt (1) >> Remove
11. Battery Hold Down Retainer (2) >> Remove

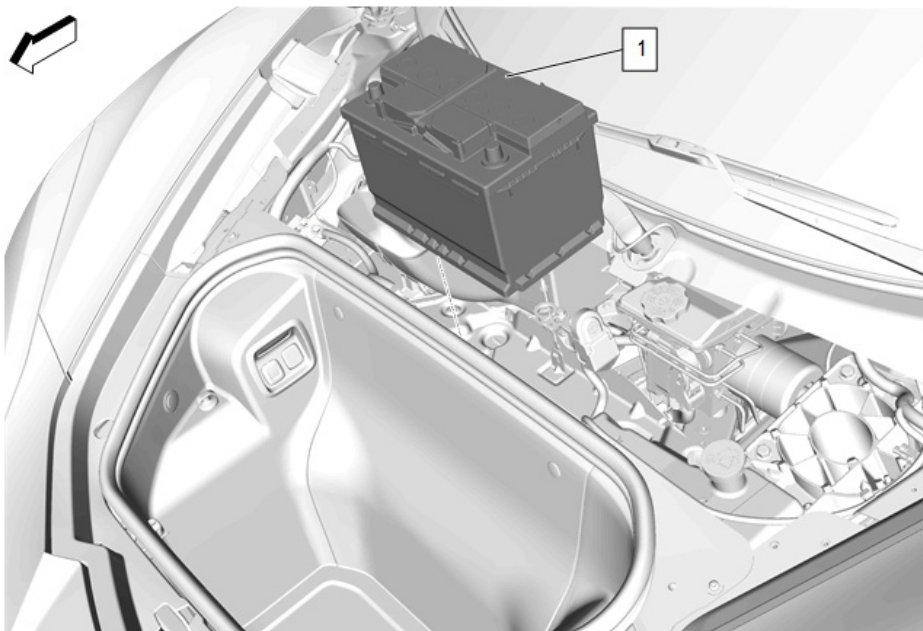


12. [Click here for full size](#)
13. Battery (1) >> Remove


Installation Procedure

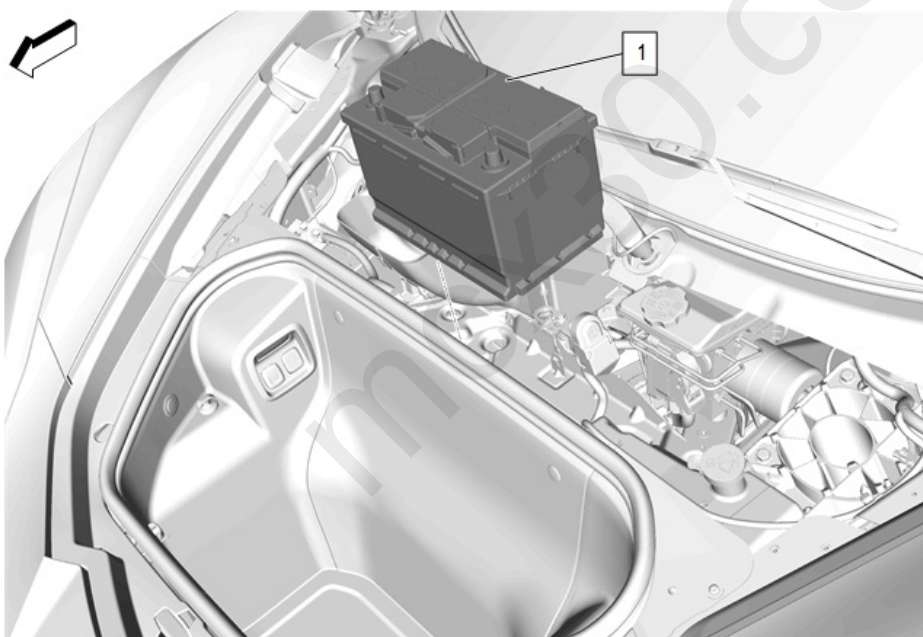


1. [Click here for full size](#)
2. Battery (1) >> Install

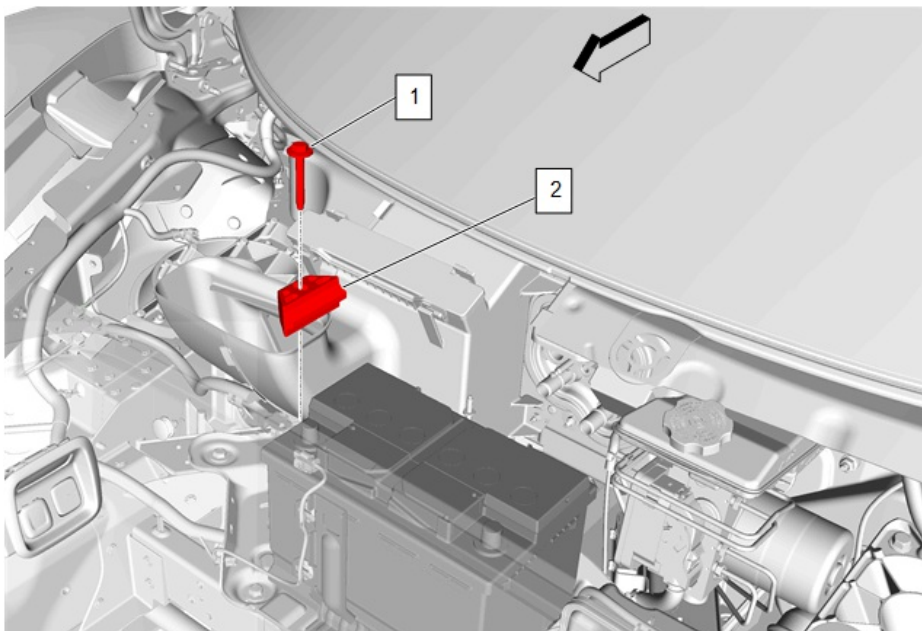

3. [Click here for full size](#)
4. Battery Hold Down Retainer (2) >>> Install
5. Caution:
Refer to Fastener Caution
6. Battery Hold Down Retainer Bolt (1) >>> Install and tighten 22N-m (16 lb ft)

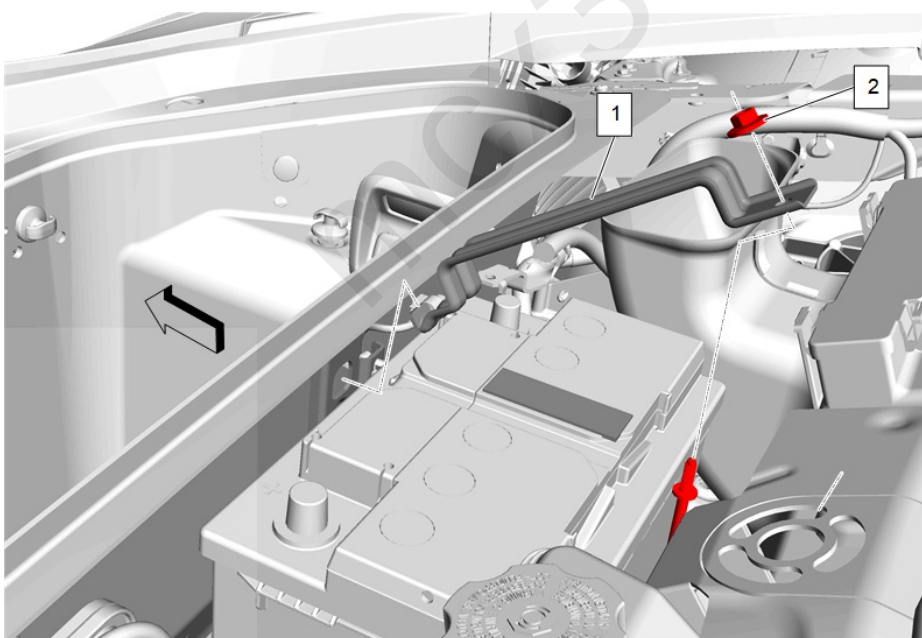

7. [Click here for full size](#)
8. Battery Hold Down Strap (1) >>> Install
9. Battery Retainer Nut (2) >>> Install and tighten 9>N-m (80 lb in)

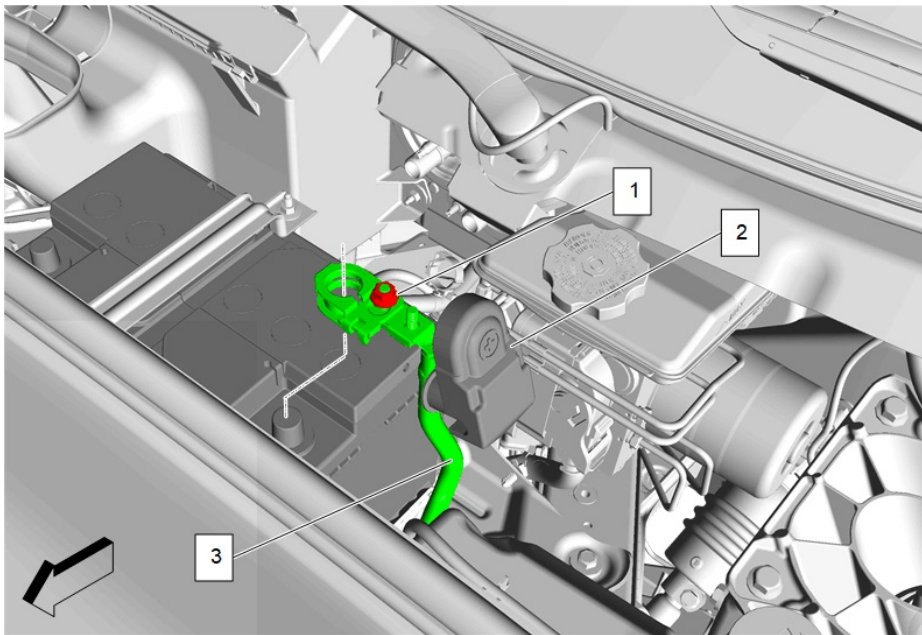

10.
[Click here for full size](#)
11. Battery Positive Junction Block Cable (3) >> Install
12. Battery Positive Post Clamp Nut (1) >> Tighten 9>N-m (80 lb in)
13. Battery Positive Cable Terminal Cover (2) >>> Install
14. Connect the battery negative cable. Battery Negative Cable Disconnection and Connection