

2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH

1. Engine/Propulsion

2. Engine Controls and Fuel - 6.2L (LT2)

3. Specifications

- 4.

Transmitting and Receiving Components

DTC	Transmitting Component	Receiving Component
DTC P1000	K111 Fuel Pump Driver Control Module	K20 Engine Control Module
DTC P1001	K111 Fuel Pump Driver Control Module	K20 Engine Control Module
DTC P1003	K111 Fuel Pump Driver Control Module	K20 Engine Control Module
DTC P1008	Q82 Passenger Compartment Heater Coolant Cut-Off Solenoid Valve	K20 Engine Control Module
DTC P1009	K111 Fuel Pump Driver Control Module	K20 Engine Control Module
DTC P100A	M103 Turbocharger Vane Position Actuator	K20 Engine Control Module
DTC P103D	G59 Engine Coolant Pump	K20 Engine Control Module
DTC P103E	G17 Heater Coolant Pump	K20 Engine Control Module
DTC P10C6	K115 Reductant Control Module	K20 Engine Control Module
DTC P10C7	K115 Reductant Control Module	K20 Engine Control Module
DTC P10C8	K115 Reductant Control Module	K20 Engine Control Module
DTC P10F5	G58 Evaporative Emission Canister Purge Pump	K20 Engine Control Module
DTC P1100	K111 Fuel Pump Driver Control Module	K20 Engine Control Module
DTC P1103	K111 Fuel Pump Driver Control Module	K20 Engine Control Module
DTC P117A	Q97 Engine Coolant Flow Control Valve	K20 Engine Control Module
DTC P11FF	K111 Fuel Pump Driver Control Module	K20 Engine Control Module
DTC P1200	K111 Fuel Pump Driver Control Module	K20 Engine Control Module
DTC P128C	B310 Fuel Pressure and Temperature Sensor	K20 Engine Control Module
DTC P128D	B310 Fuel Pressure and Temperature Sensor	K20 Engine Control Module
DTC P128F	B310 Fuel Pressure and Temperature Sensor	K20 Engine Control Module
DTC P129E	K111 Fuel Pump Driver Control Module or K209 Fuel Level Sensor Control Module	K20 Engine Control Module
DTC P12A8	K111 Fuel Pump Driver Control Module	K20 Engine Control Module
DTC P130F	K111 Fuel Pump Driver Control Module	K20 Engine Control Module
DTC P135C	G10 Cooling Fan Motor	K20 Engine Control Module
DTC P135D	G10 Cooling Fan Motor	K20 Engine Control Module
DTC P135E	G10 Cooling Fan Motor	K20 Engine Control Module
DTC P139A	K34 Glow Plug Control Module	K20 Engine Control Module
DTC P139B	K34 Glow Plug Control Module	K20 Engine Control Module
DTC P1436	B136 Exhaust Particulate Matter Sensor	K20 Engine Control Module
DTC P143A	K115 Reductant Control Module	K20 Engine Control Module
DTC P143B	K115 Reductant Control Module	K20 Engine Control Module
DTC P14A0	M10 Charge Air Cooler Coolant Pump	K20 Engine Control Module
DTC P14B6	B75 Mass Airflow Sensor or B75C Multifunction Intake Air Sensor	K20 Engine Control Module
DTC P14CD	K20 Engine Control Module	K111 Fuel Pump Driver Control Module
DTC P14CE	K20 Engine Control Module	K111 Fuel Pump Driver Control Module
DTC P14D4	K20 Engine Control Module	K111 Fuel Pump Driver Control Module
DTC P14D5	K20 Engine Control Module	K111 Fuel Pump Driver Control Module
DTC P14D6	K20 Engine Control Module	K111 Fuel Pump Driver Control Module
DTC P150C	K71 Transmission Control Module	K20 Engine Control Module
DTC P155D	K17 Electronic Brake Control Module	K20 Engine Control Module
DTC P15F2	K114 Hybrid/EV Powertrain Control Module	K20 Engine Control Module
DTC P15F9	K114 Hybrid/EV Powertrain Control Module	K20 Engine Control Module
DTC P15FB	K17 Electronic Brake Control Module	K20 Engine Control Module

DTC	Transmitting Component	Receiving Component
DTC P165C	K111 Fuel Pump Driver Control Module	K20 Engine Control Module
DTC P167F	K111 Fuel Pump Driver Control Module	K20 Engine Control Module
DTC P16FF	P16 Instrument Panel Cluster Control Module	K20 Engine Control Module
DTC P175F	K17 Electronic Brake Control Module	K20 Engine Control Module
DTC P1762	K9 Body Control Module	K20 Engine Control Module
DTC P1772	K71 Transmission Control Module	K20 Engine Control Module
DTC P1773	K71 Transmission Control Module	K20 Engine Control Module
DTC P1775	K20 Engine Control Module	K71 Transmission Control Module
DTC P188B	K71 Transmission Control Module	K20 Engine Control Module
DTC P18EF	K71 Transmission Control Module	K20 Engine Control Module
DTC P1919	K71 Transmission Control Module	K20 Engine Control Module
DTC P2544	K71 Transmission Control Module	K20 Engine Control Module
DTC P30B4	B195A Nitrogen Oxides Sensor 1	K20 Engine Control Module
DTC P30B5	B195B Nitrogen Oxides Sensor 2	K20 Engine Control Module
DTC P30BC	B136 Exhaust Particulate Matter Sensor	K20 Engine Control Module
DTC P30D5	B195C Nitrogen Oxides Sensor 3	K20 Engine Control Module
DTC P30DE	B310 Fuel Pressure and Temperature Sensor	K20 Engine Control Module
DTC P314E	K287 Fuel Heater Control Module	K20 Engine Control Module
DTC P316B	K103 Fuel Injector Control Module	K20 Engine Control Module