

2022 CHEVROLET CORVETTE SERVICE MANUAL


- [SEARCH](#)

1. [Engine/Propulsion](#)
2. [Engine Controls and Fuel - 6.2L \(LT2\)](#)
3. [Repair Instructions](#)
- 4.


Air Cleaner Assembly Replacement (Coupe)

Removal Procedure

1. [Click here for full size](#)
2. Air Cleaner Outlet Duct Clamp (1>) >> Loosen

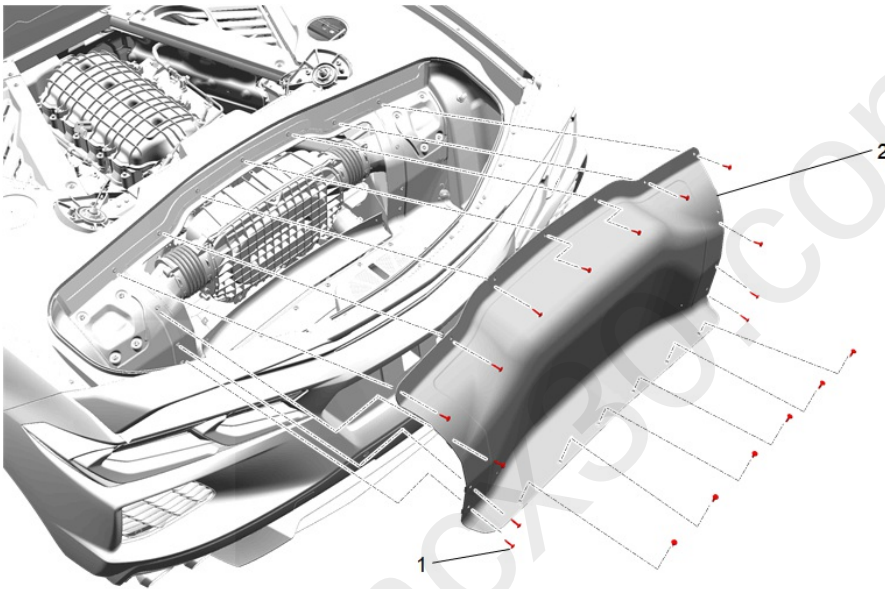


3. [Click here for full size](#)
4. Air Cleaner Access Cover (2>) >> Remove - Air Cleaner Access Cover Replacement

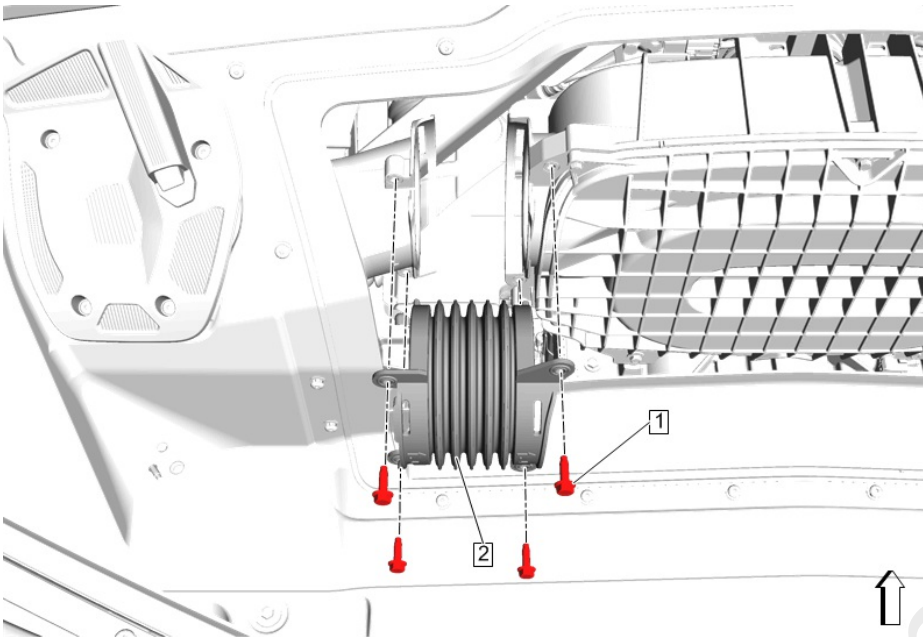

5.
[Click here for full size](#)


6. Intake Air Duct - Air Cleaner Left Side (2>) >> Remove - Intake Air Duct Replacement - Air Cleaner Left Side

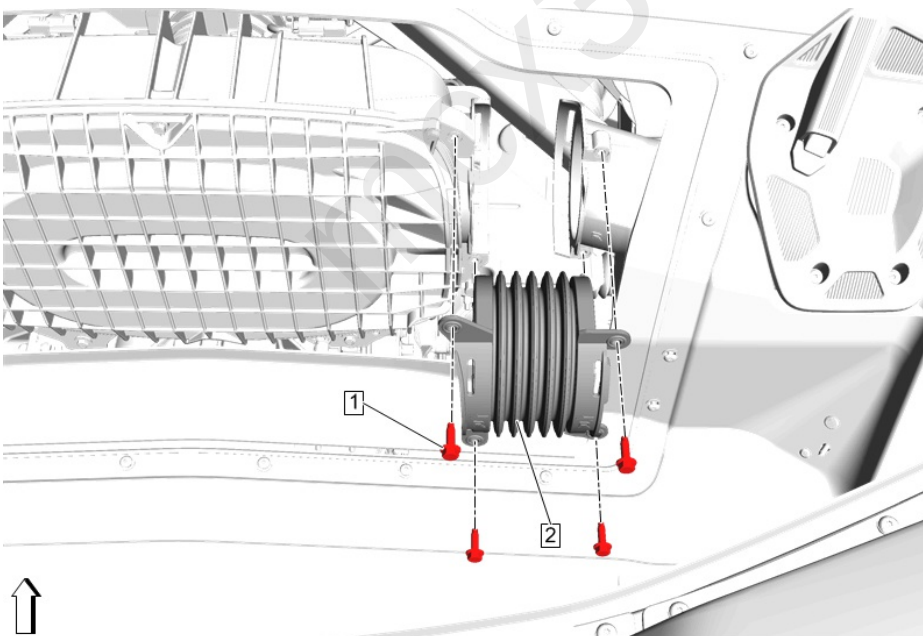

7.
[Click here for full size](#)


8. Intake Air Duct - Air Cleaner Right Side (2>) >> Remove - Intake Air Duct Replacement - Air Cleaner Right Side

9. Disconnect all electrical connectors and remove all retainers from air cleaner assembly.

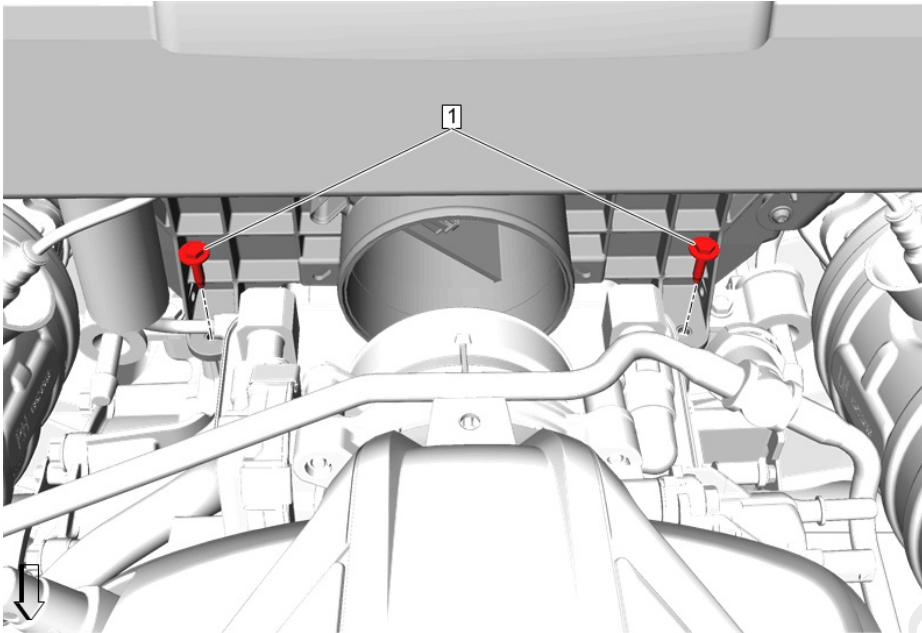


10.
[Click here for full size](#)

11. Air Cleaner Bolt (1>) >> Remove [2>x]

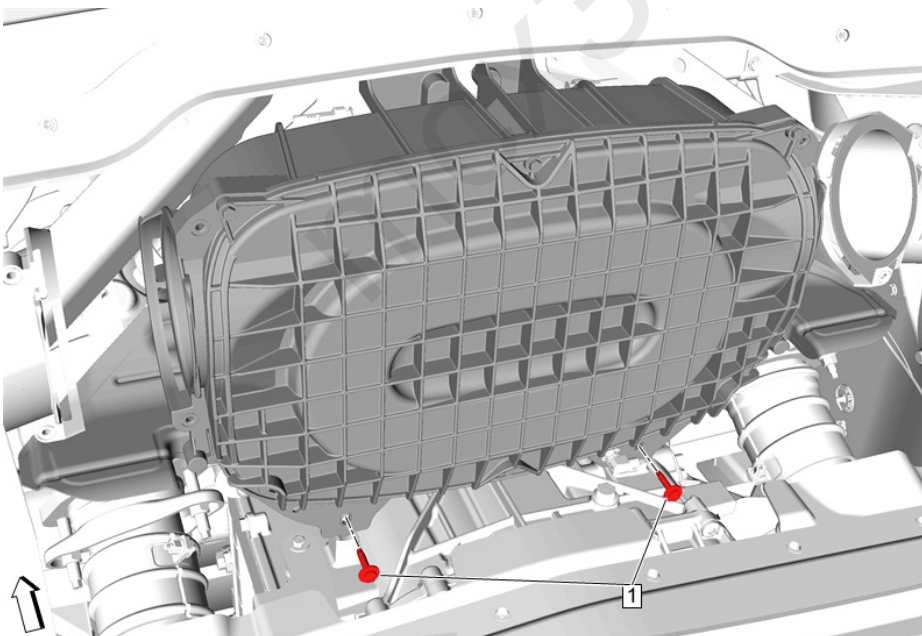

12.
[Click here for full size](#)


13. Air Cleaner Bolt (1>) >> Remove [2>x]

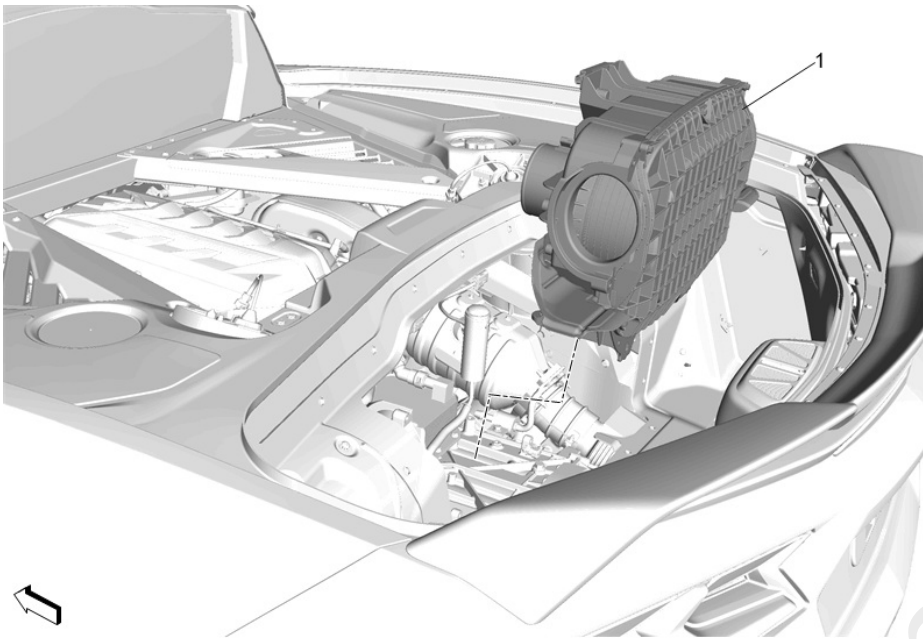

14.
[Click here for full size](#)


15. Air Cleaner Assembly (1>) >> Remove

Installation Procedure

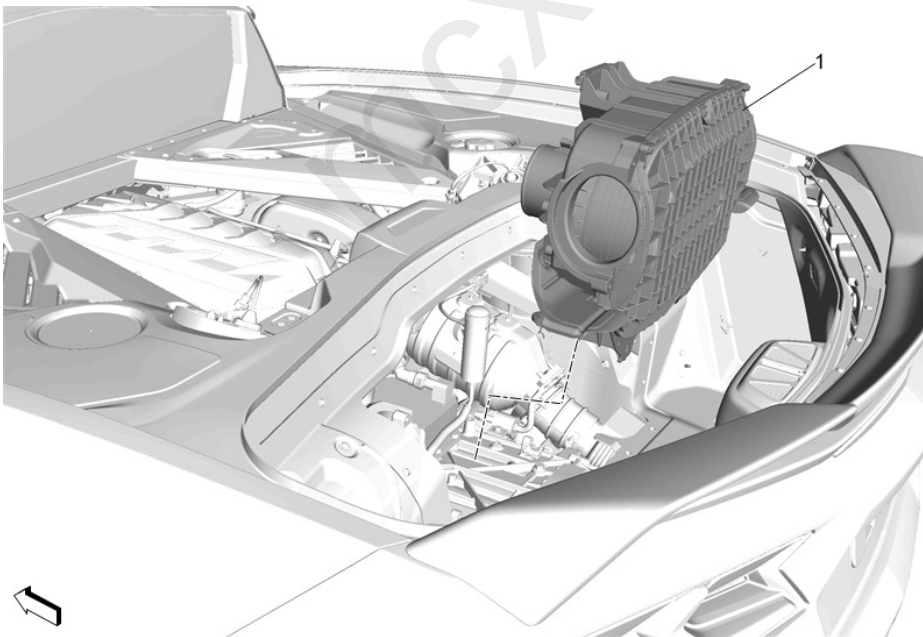


1.
[Click here for full size](#)

2. Air Cleaner Assembly (1>) >> Install

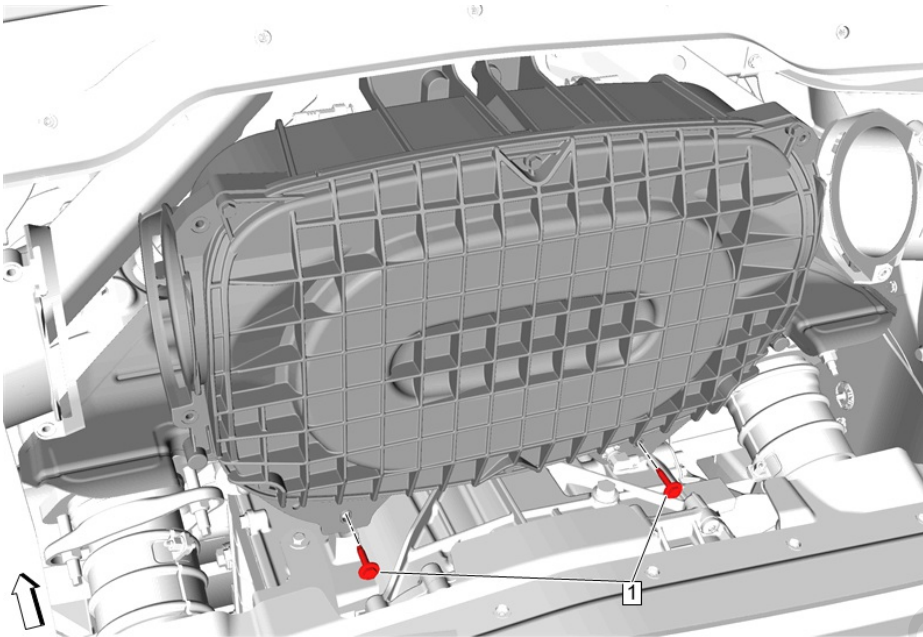


3. [Click here for full size](#)
4. **Caution:**
Refer to Fastener Caution.
5. Air Cleaner Bolt (1>) >> Install and tighten [2>x]12N-m (106thinsp;lb in)

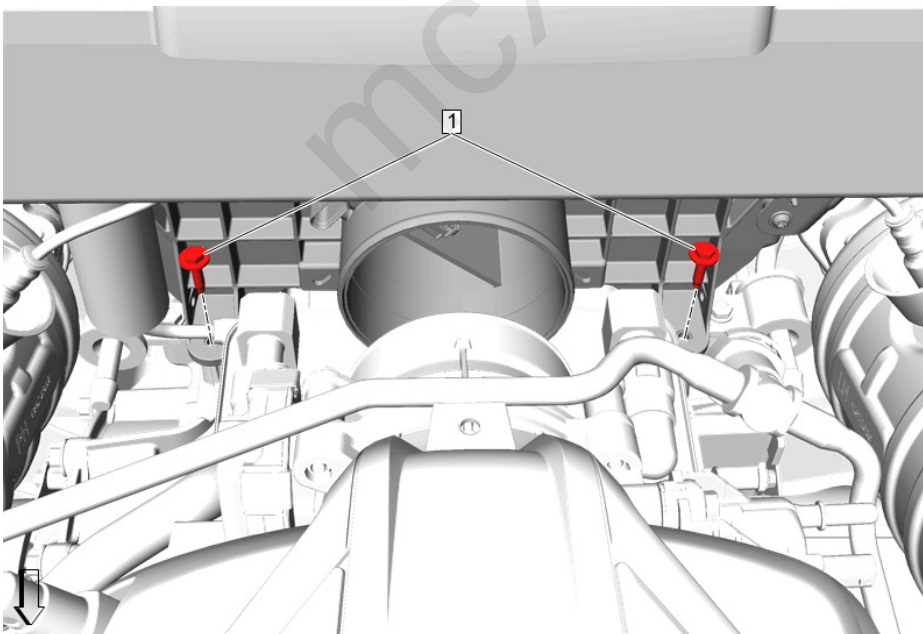


6. [Click here for full size](#)
7. Air Cleaner Bolt (1>) >> Install and tighten [2>x]12N-m (106thinsp;lb in)

8. Connect all electrical connectors and install all retainers to the air cleaner assembly.

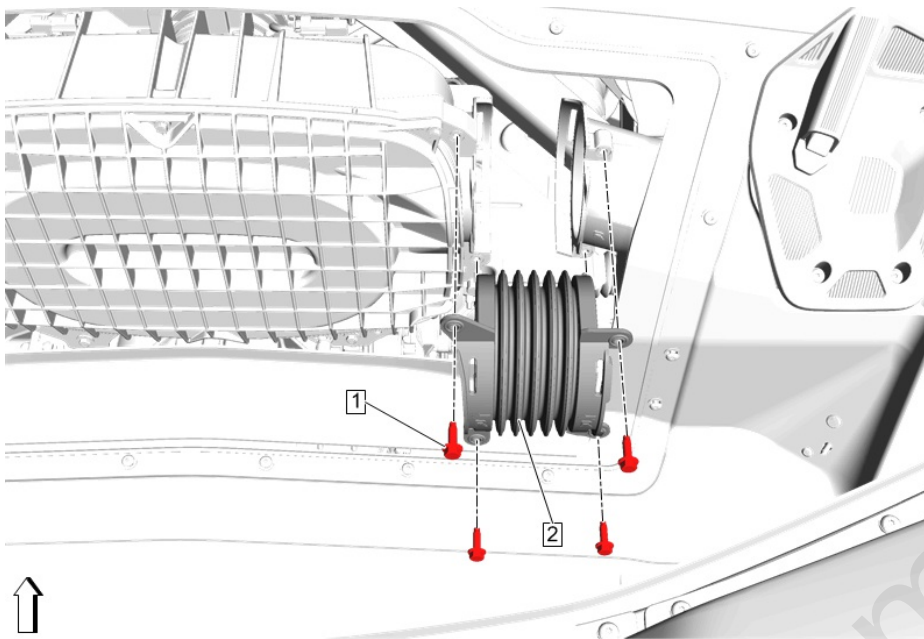


9.
[Click here for full size](#)

10. Intake Air Duct - Air Cleaner Right Side (2>) >> Install - Intake Air Duct Replacement - Air Cleaner Right Side

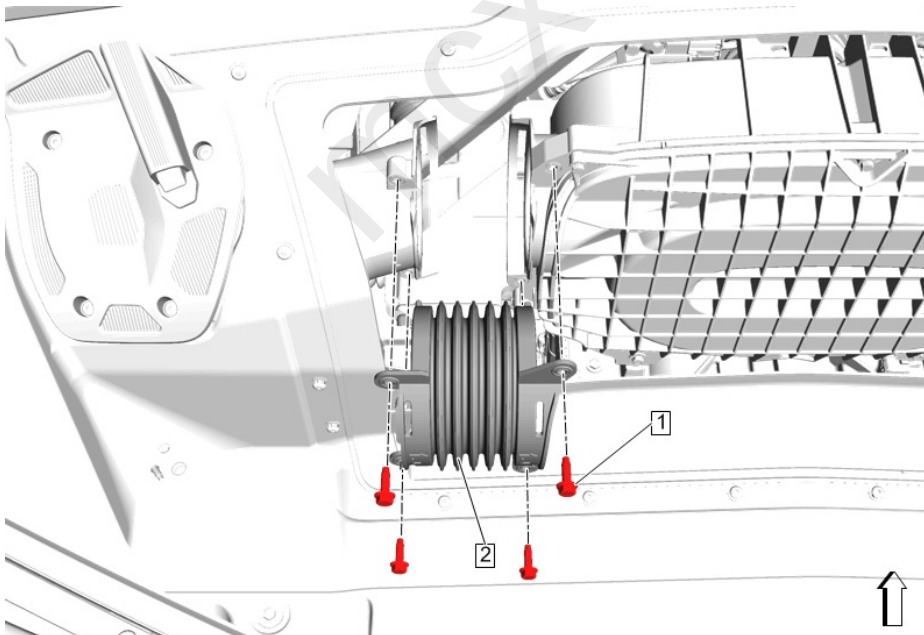

11.
[Click here for full size](#)

12. Intake Air Duct - Air Cleaner Left Side (2>) >> Install - Intake Air Duct Replacement - Air Cleaner Left Side

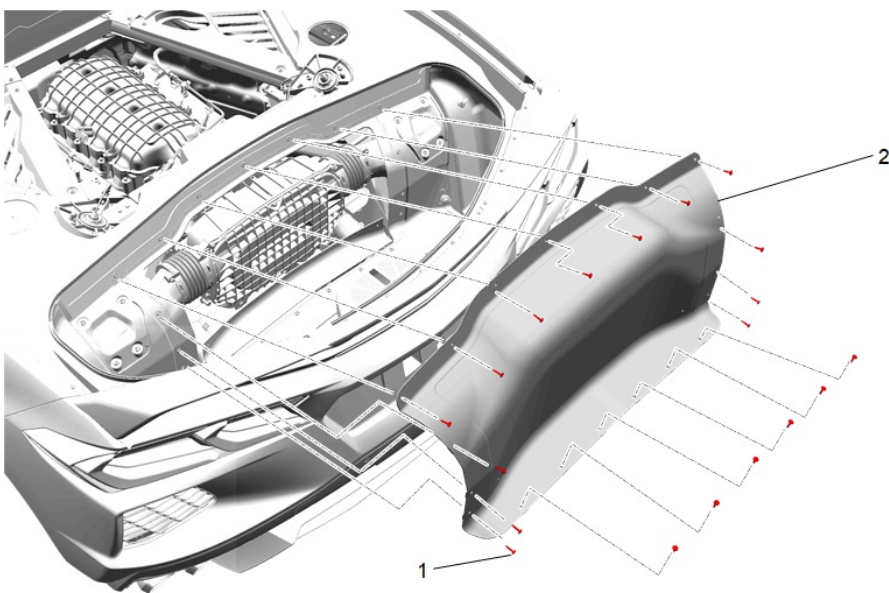

13. [Click here for full size](#)
14. Air Cleaner Access Cover (2>) >> Install - Air Cleaner Access Cover Replacement
15. [Click here for full size](#)
16. Air Cleaner Outlet Duct Clamp (1>) >> Tighten - Air Cleaner Outlet Duct Replacement