

2022 CHEVROLET CORVETTE SERVICE MANUAL

- [SEARCH](#)

1. [Engine/Propulsion](#)


2. [Engine Controls and Fuel - 6.2L \(LT2\)](#)

3. [Repair Instructions](#)


4.

Fuel Feed Front Pipe Shield Replacement


Removal Procedure

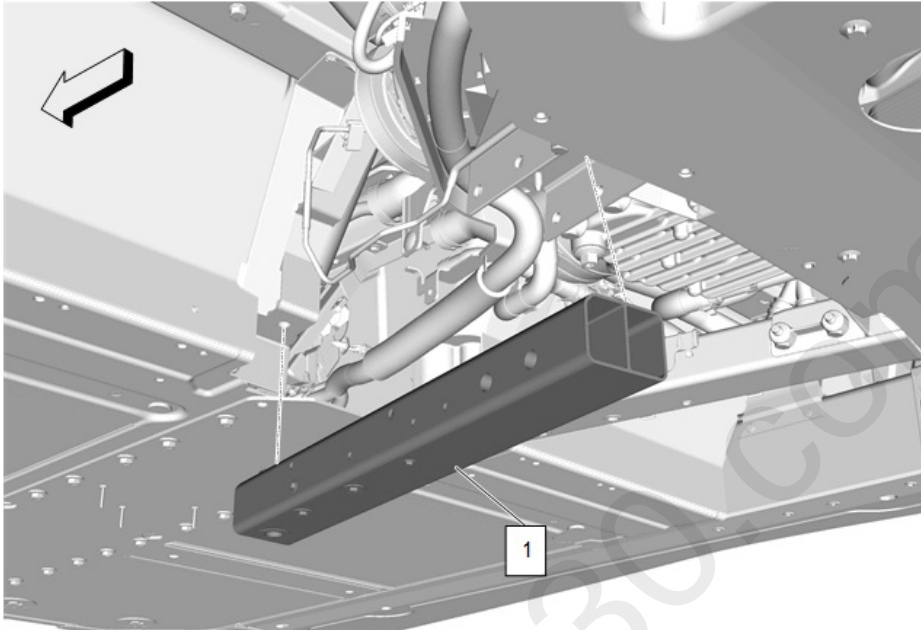

1. [Click here for full size](#)
2. [Rear Suspension Front Extension - Left Side \(1>\) >> Remove - Rear Suspension Front Extension Replacement - Left Side](#)

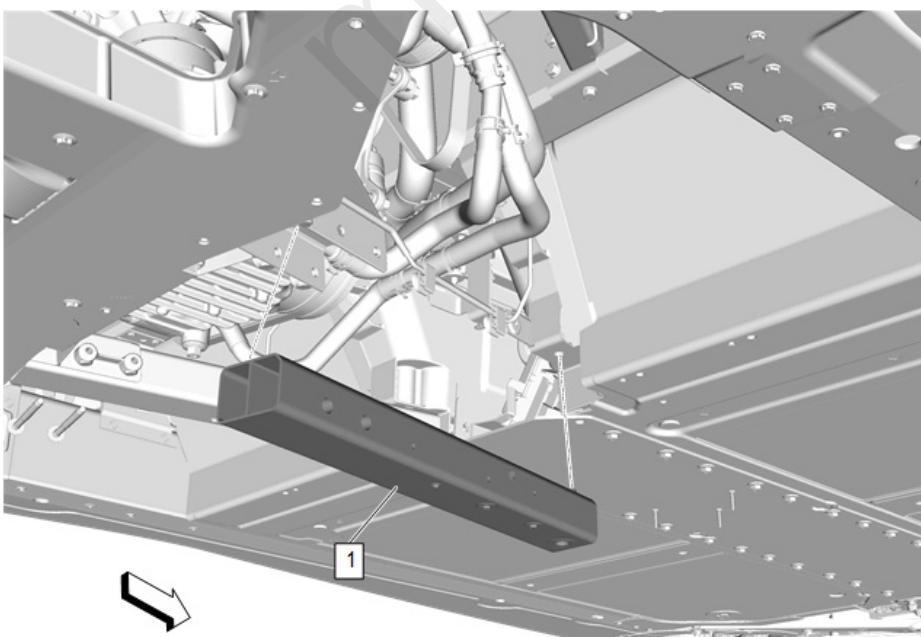


3. [Click here for full size](#)
4. [Rear Suspension Front Extension - Right Side \(1>\) >> Remove - Rear Suspension Front Extension Replacement - Right Side](#)

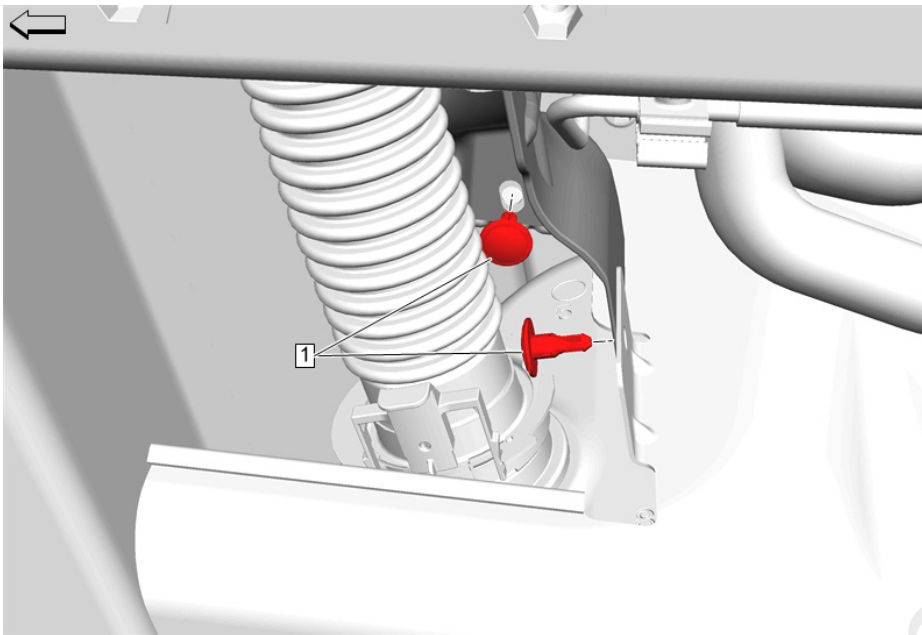


5.
[Click here for full size](#)

6. Fuel Pipe Shield Retainer (1>) >> Remove [2>x]

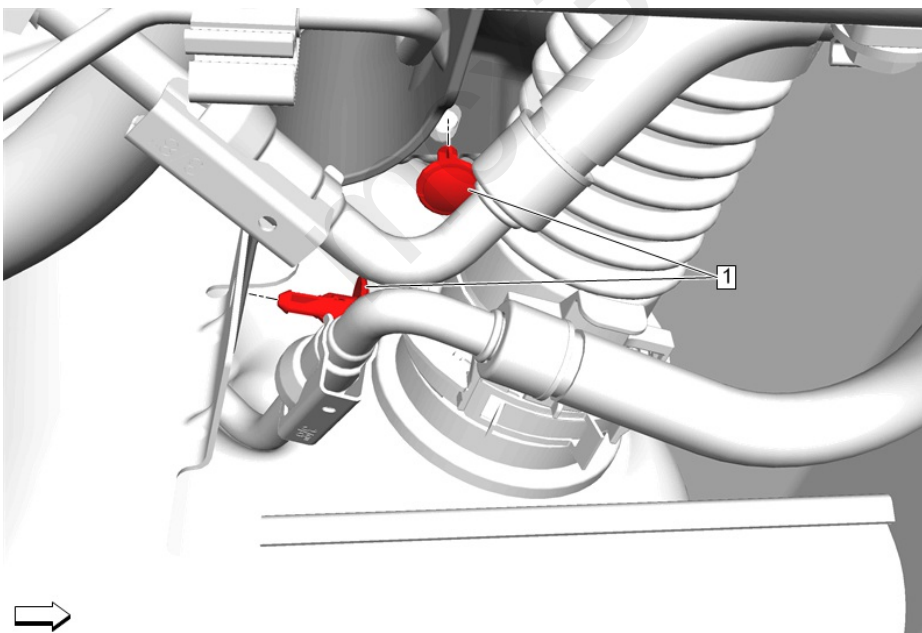

7.
[Click here for full size](#)


8. Fuel Pipe Shield Retainer (1>) >> Remove [2>x]

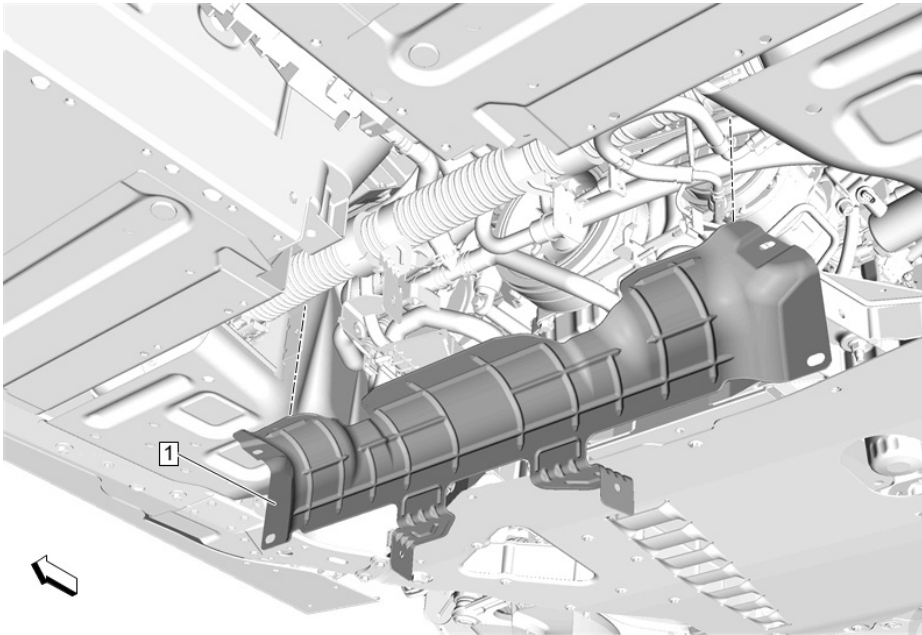

9.
[Click here for full size](#)


10. Fuel Feed Front Pipe Shield (1>) >> Remove

Installation Procedure

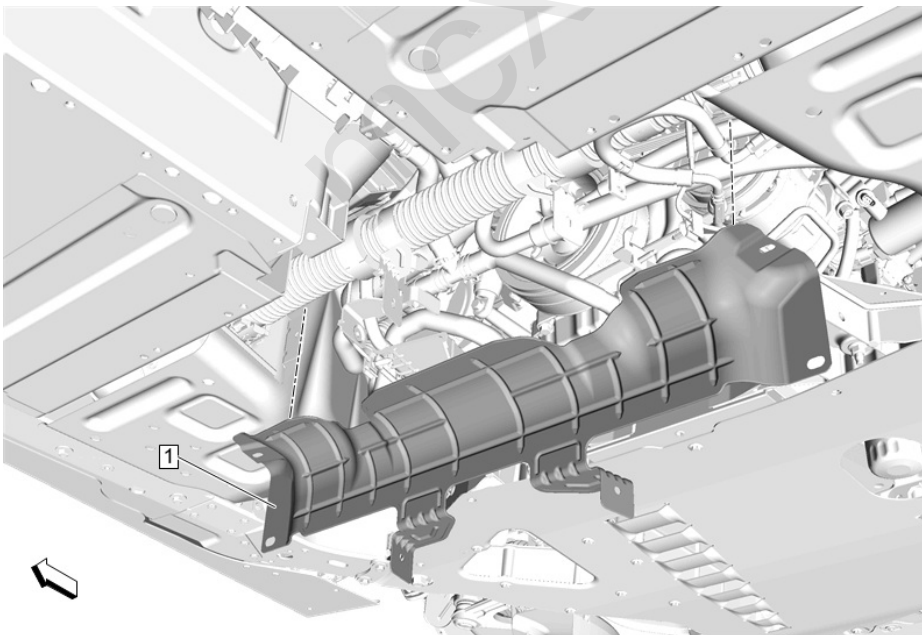


1.
[Click here for full size](#)

2. Fuel Feed Front Pipe Shield (1>) >> Install

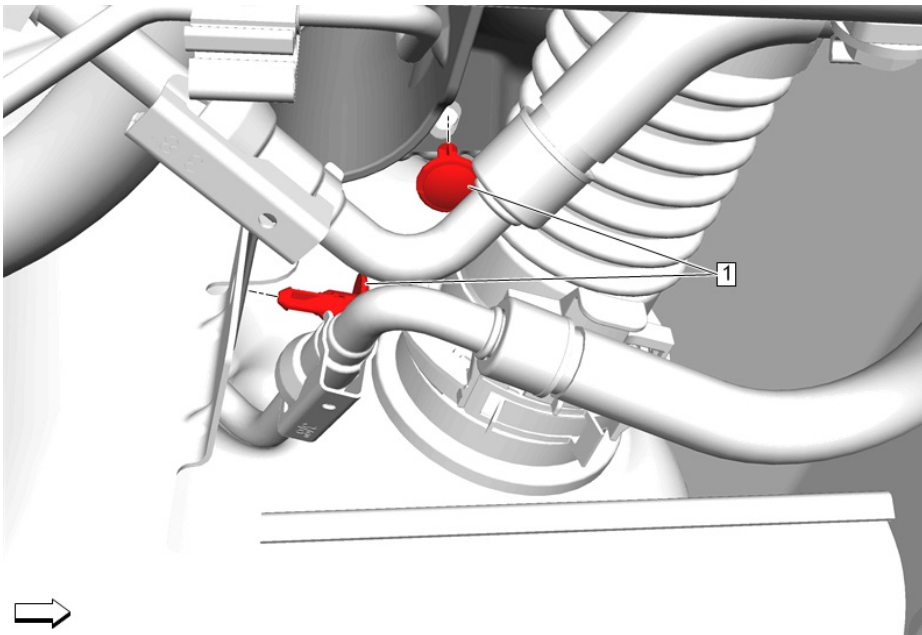


3.
[Click here for full size](#)

4. Fuel Pipe Shield Retainer (1>) >> Install [2>x]

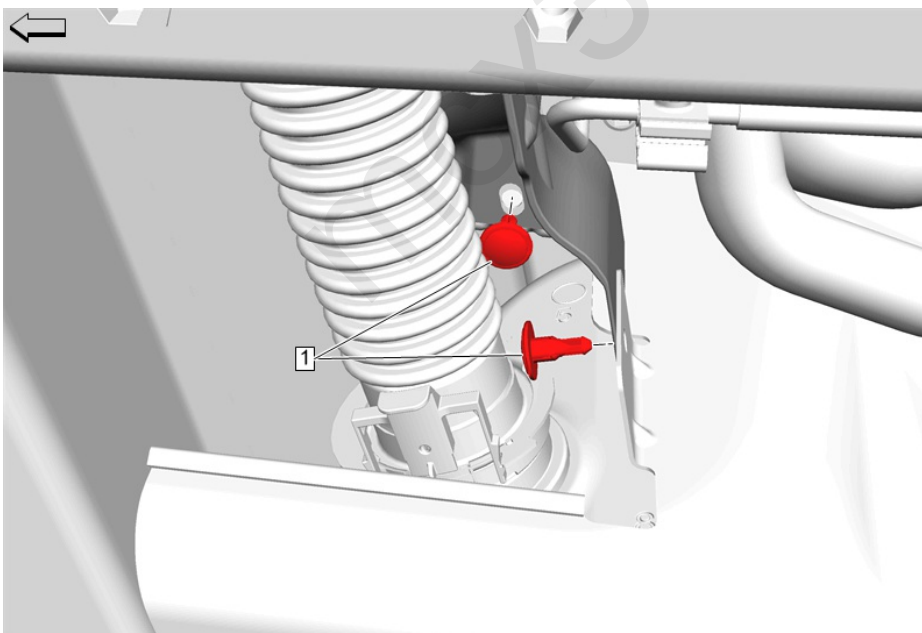


5.
[Click here for full size](#)

6. Fuel Pipe Shield Retainer (1>) >> Install [2>x]

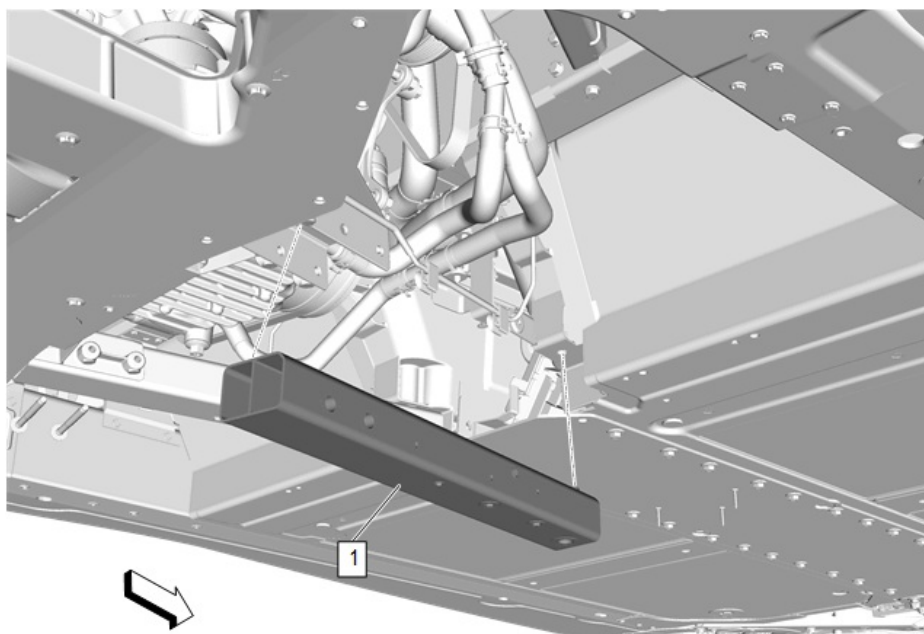

7.
[Click here for full size](#)

8. Rear Suspension Front Extension - Right Side (1>) >> Install - Rear Suspension Front Extension Replacement - Right Side

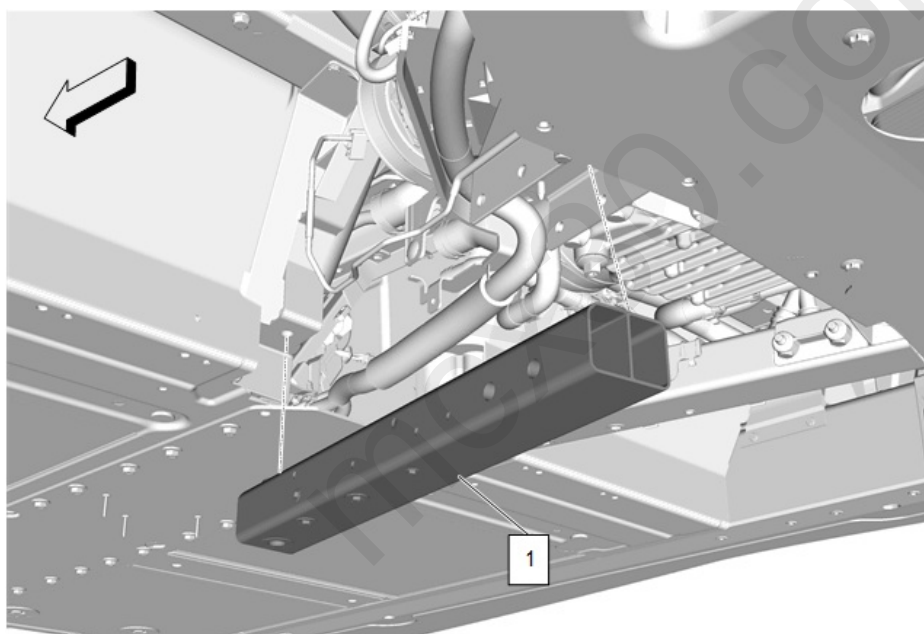

9.
[Click here for full size](#)

10. Rear Suspension Front Extension - Left Side (1>) >> Install - Rear Suspension Front Extension Replacement - Left Side