

2022 CHEVROLET CORVETTE SERVICE MANUAL


- SEARCH

1. [Engine/Propulsion](#)
2. [Engine Heating and Cooling](#)
3. [Repair Instructions](#)
- 4.


Radiator Inlet Hose Replacement - Radiator Inlet Pipe to A/C Tube

Removal Procedure


1. Drain the cooling system. Cooling System Draining and Filling

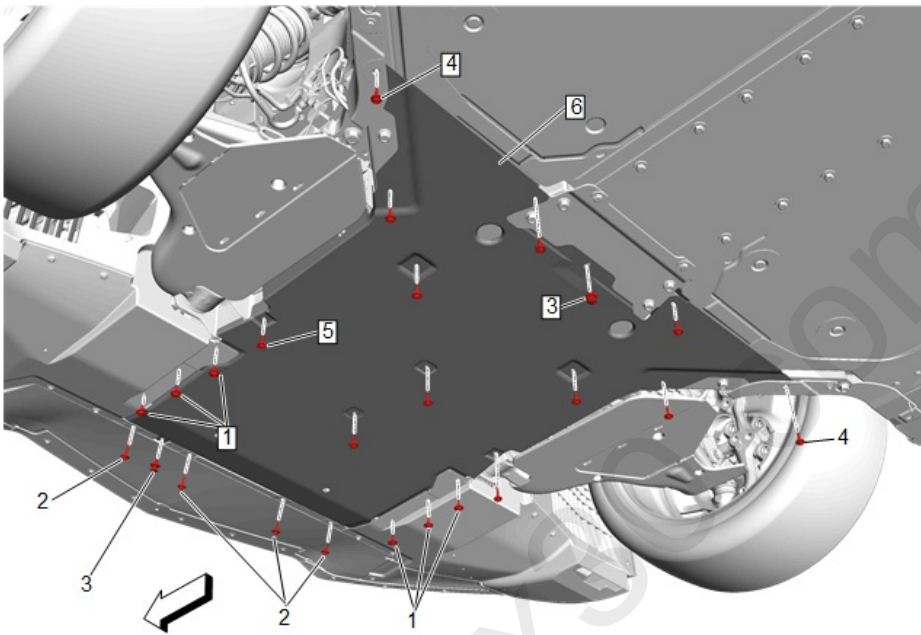


2. [Click here for full size](#)
3. Front Compartment Insulator (6) >> Remove - Front Compartment Insulator Replacement
4. Floor Panel Tunnel Panel Front Reinforcement - Front >> Remove - Floor Panel Tunnel Panel Front Reinforcement Replacement - Tunnel Front

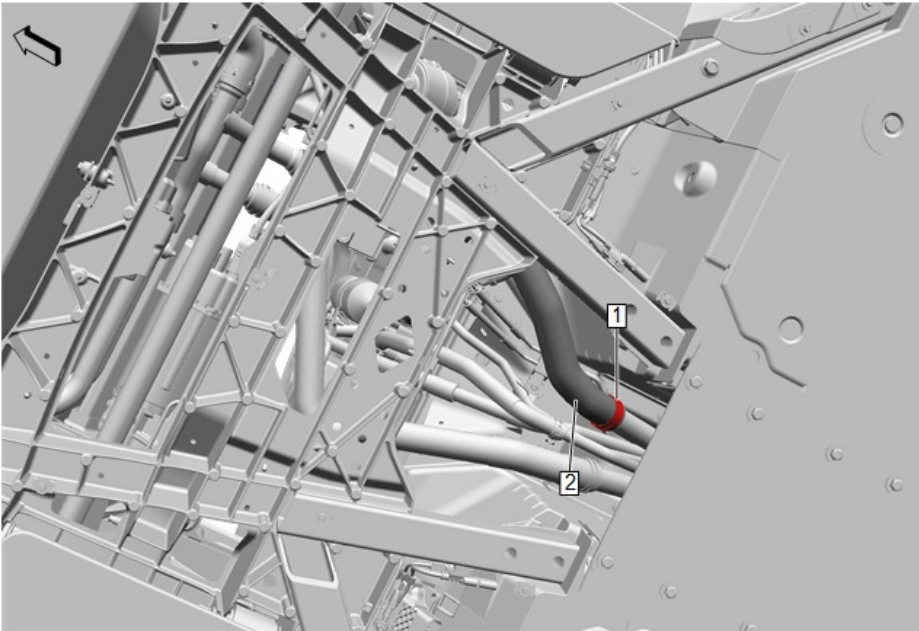


5. [Click here for full size](#)
6. Radiator Inlet Hose Clamp (1) >>> [Disengage - Hose Clamp Replacement Guidelines - Spring Type](#)
7. Radiator Inlet Hose (2) @ [Air Conditioning Condenser and Air Conditioning Evaporator Tube >> Remove](#)
8. [Battery Distribution Engine Compartment Fuse Block >> Remove - Battery Distribution Engine Compartment Fuse Block Replacement](#)
9. [Click here for full size](#)
10. Radiator Inlet Pipe Clip (1) @ [Front Compartment Inner Side Rail >> Remove](#)

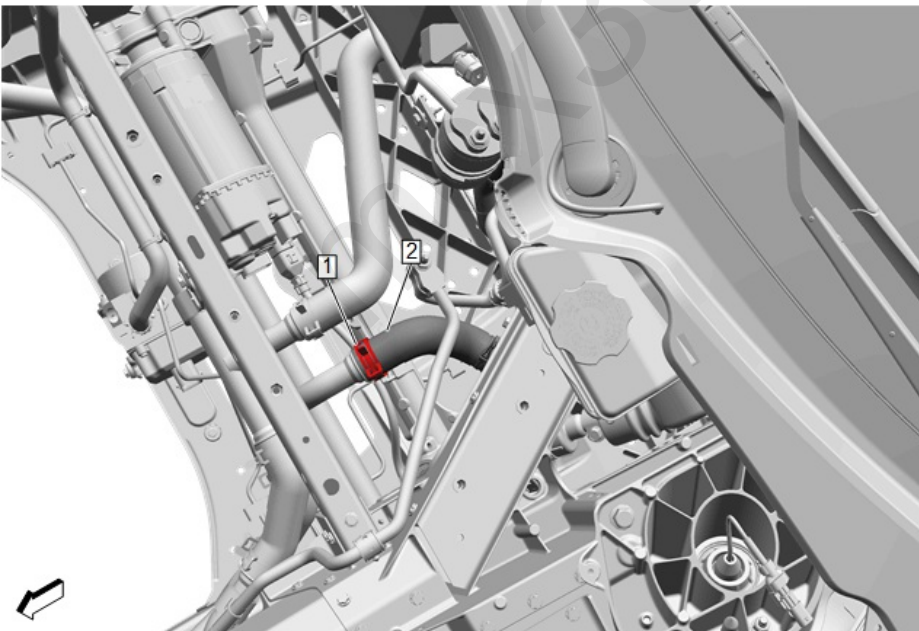

11. [Click here for full size](#)
12. Radiator Inlet Hose Clamp (1) >>> [Disengage - Hose Clamp Replacement Guidelines - Spring Type Disengage](#)
13. Radiator Inlet Hose (2) @ [Radiator Inlet Pipe >> Remove](#)

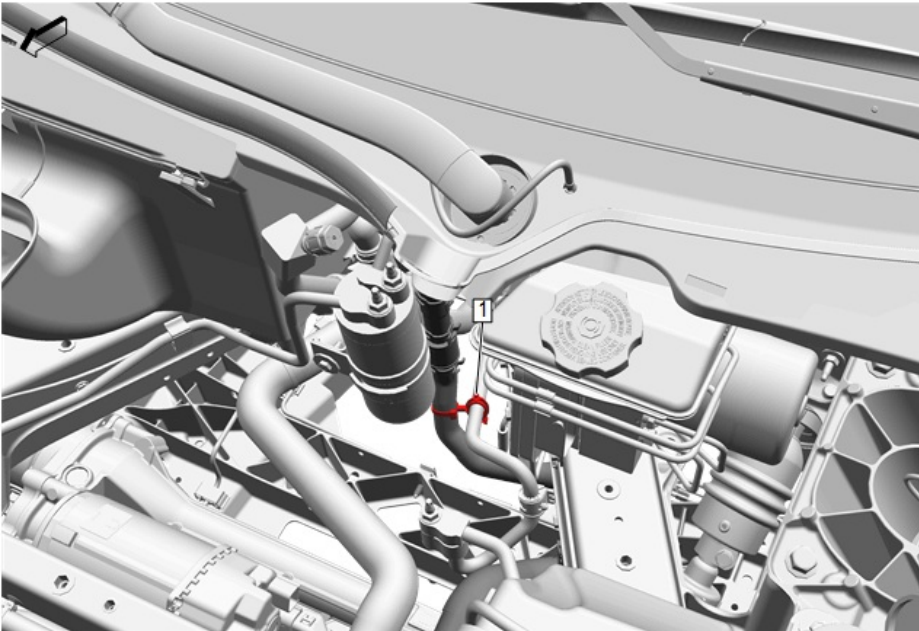


14. [Click here for full size](#)
15. Heater Inlet Hose Clip (1) @ Air Conditioning Condenser and Air Conditioning Evaporator Tube >> Remove

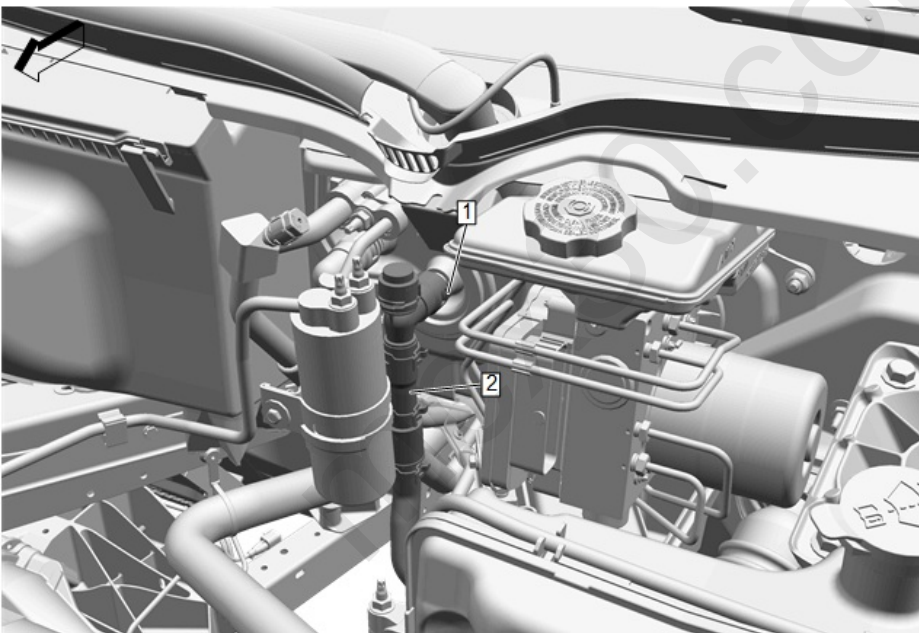


16. [Click here for full size](#)
17. Radiator Inlet Hose Retainer (1) >> Disengage
18. Radiator Inlet Hose (2) @ Heater Core >> Remove
19. Radiator Inlet Hose (2) >> Remove


Installation Procedure

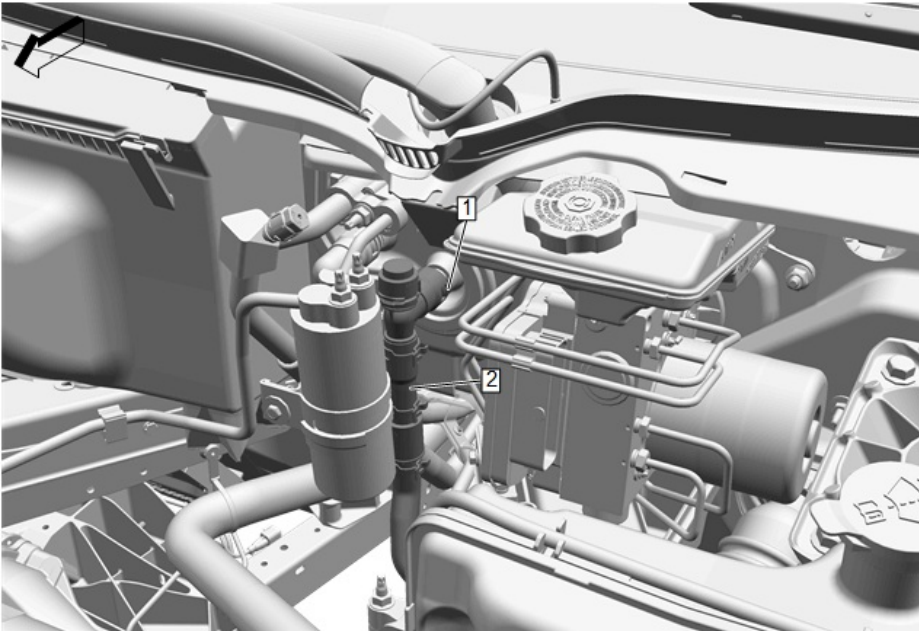


1.
[Click here for full size](#)
2. Radiator Inlet Hose (2) @ Heater Core >> Install
3. Radiator Inlet Hose Retainer (1) >> Engage

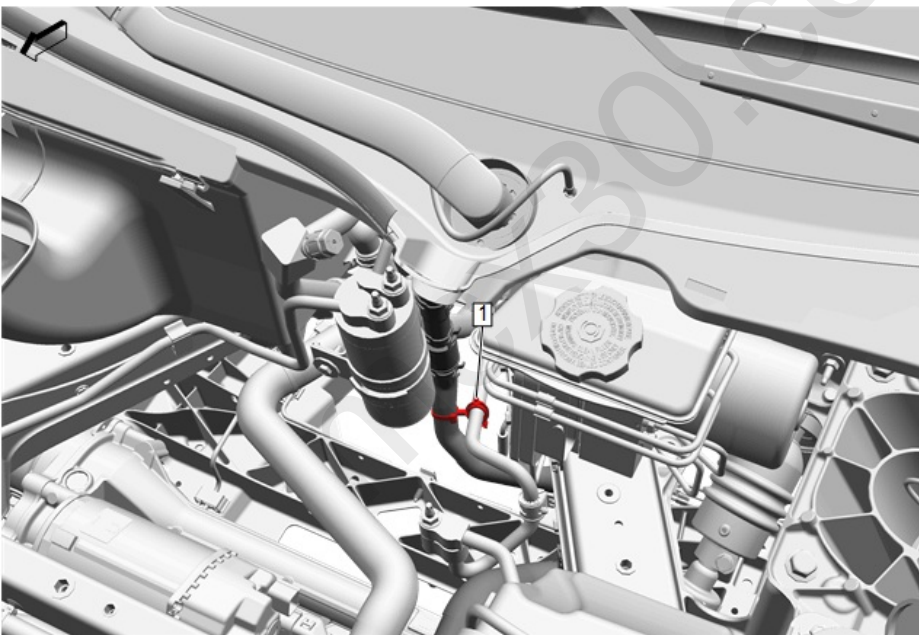


4.
[Click here for full size](#)
5. Heater Inlet Hose Clip (1) @ Air Conditioning Condenser and Air Conditioning Evaporator Tube >> Install

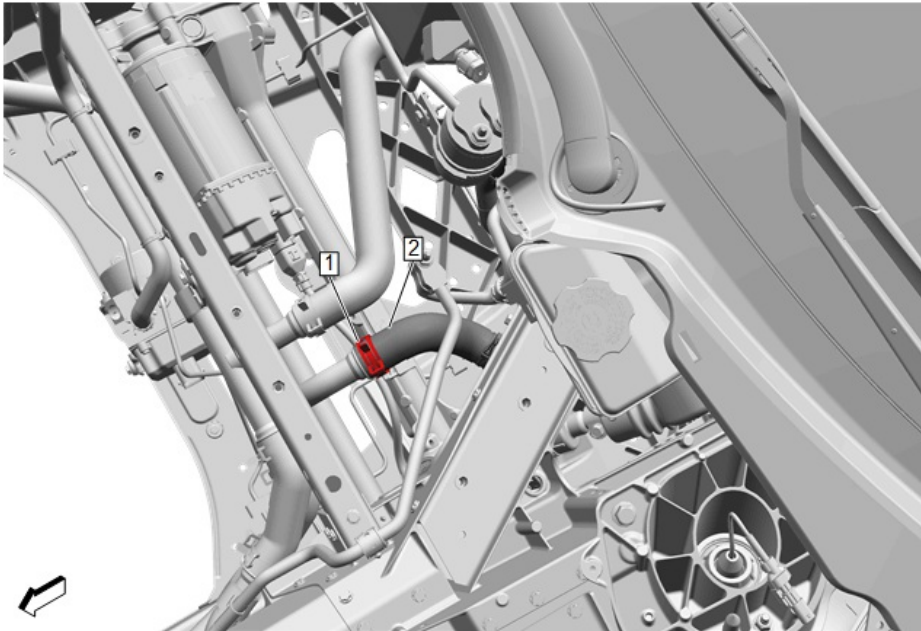

6. [Click here for full size](#)
7. Radiator Inlet Hose (2) @ Radiator Inlet Pipe >> Install
8. Radiator Inlet Hose Clamp (1) >>> Engage - Hose Clamp Replacement Guidelines - Spring Type
9. [Click here for full size](#)
10. Radiator Inlet Pipe Clip (1) @ Front Compartment Inner Side Rail >> Install
11. Battery Distribution Engine Compartment Fuse Block >> Install - Battery Distribution Engine Compartment Fuse Block Replacement

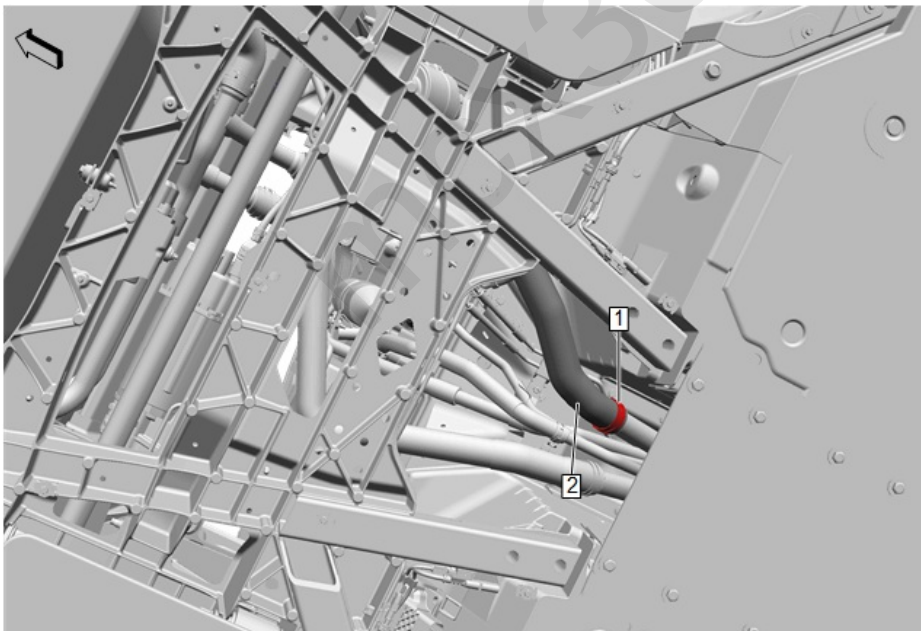

12. [Click here for full size](#)
13. Radiator Inlet Hose (2) @ Air Conditioning Condenser and Air Conditioning Evaporator Tube >> Install
14. Radiator Inlet Hose Clamp (1) >>> Engage - Hose Clamp Replacement Guidelines - Spring Type
15. Floor Panel Tunnel Panel Front Reinforcement - Front >> Install - Floor Panel Tunnel Panel Front Reinforcement Replacement - Tunnel Front

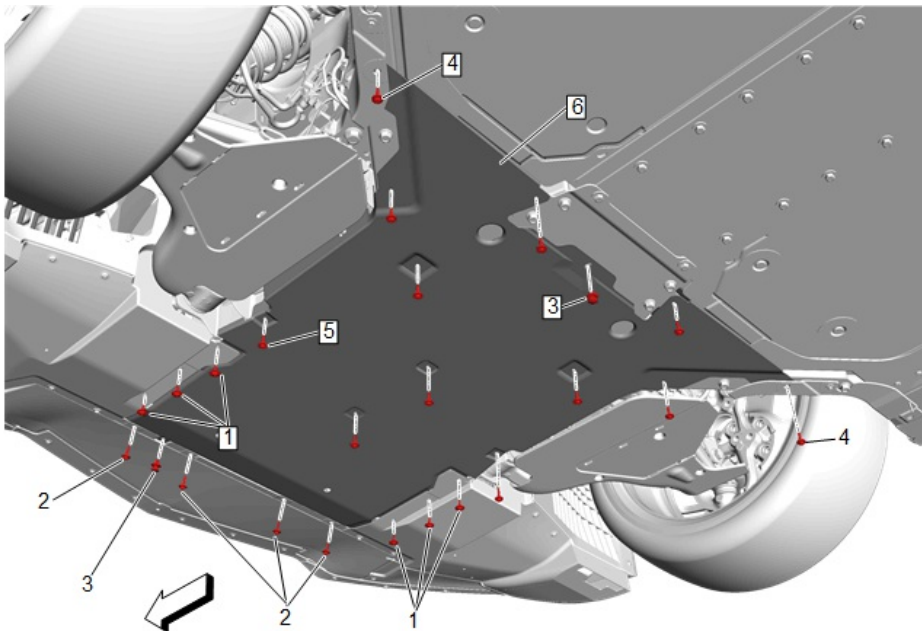

16. [Click here for full size](#)
17. Front Compartment Insulator (6) >> Install - Front Compartment Insulator Replacement
18. Fill the cooling system to the proper level. Cooling System Draining and Filling
19. Start the engine and check for coolant leaks.