

2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH

1. Engine/Propulsion
2. Engine Mechanical - 6.2L (LT2)
3. Specifications
- 4.

Fastener Specifications

Single Use Non-Threaded Fasteners/Components

Application
Note:
All fasteners/components listed in this table MUST BE DISCARDED and replaced with NEW after removal.
Air Conditioning Compressor Belt
Camshaft Position Actuator Magnet Gasket
Camshaft Position Sensor Oil Seal Ring
Camshaft Position Sensor Seal
Combustion Fuel Injector Seal
Crankshaft Front Oil Seal
Crankshaft Rear Oil Seal
Crankshaft Rear Oil Seal Housing Gasket
Cylinder Head Gasket
Direct Fuel Injector Hold Down Clamp
Engine Block Valley Cover Gasket
Engine Coolant Thermostat Housing Gasket
Engine Oil Cooler Core Seal
Engine Oil Cooler Seal
Exhaust Manifold Gasket
Fuel Feed Intermediate Pipe " Position 1
Fuel Feed Intermediate Pipe " Position 2
Fuel Injection Fuel Rail Seal
Fuel Injector Seal
Fuel Injector Seal Spacer
Fuel Injector Seal
Fuel Pump Gasket
Intake Manifold Gasket
Oil Filler Cap Seal
Oil Filler Tube Seal
Oil Level Indicator Tube Seal
Oil Pan Front Seal
Oil Pan High Pressure Port Seal
Oil Pump Housing Gasket
Lower Oil Pan
Positive Crankcase Ventilation Tube Seal
Throttle Body Gasket
Valve Rocker Arm Cover Gasket
Water Pump and Generator Belt
Water Pump Gasket
Wiring Harness Connector Seal

Single Use Threaded Fastener/Component Tightening Specifications Crankshaft and Bearing Removal and Installation

Cylinder Head Replacement - Left Side

-