


2022 CHEVROLET CORVETTE SERVICE MANUAL


- SEARCH

1. Engine/Propulsion
2. Engine Mechanical - 6.2L (LT2)
3. Special Tools and Equipment
- 4.


Special Tools

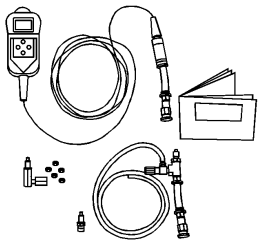

[Click here for full size](#)

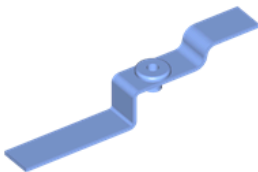


[Click here for full size](#)

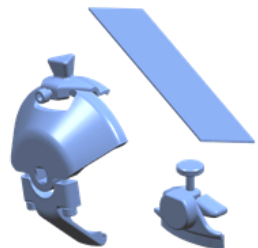


[Click here for full size](#)




[Click here for full size](#)

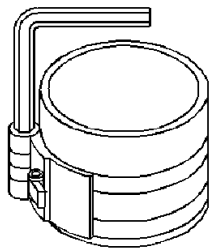


[Click here for full size](#)

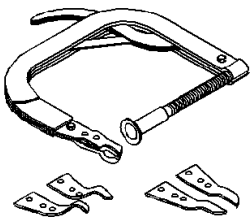


[Click here for full size](#)

 


[Click here for full size](#)

 


[Click here for full size](#)

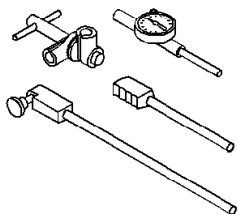

[Click here for full size](#)

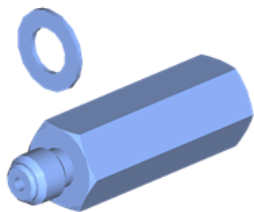


[Click here for full size](#)

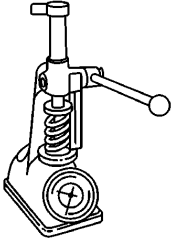

[Click here for full size](#)




[Click here for full size](#)

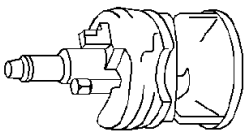

[Click here for full size](#)



[Click here for full size](#)

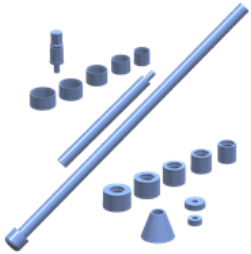

[Click here for full size](#)




[Click here for full size](#)




[Click here for full size](#)


mcx30.com

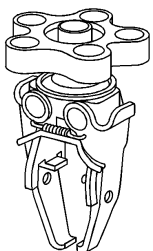

[Click here for full size](#)

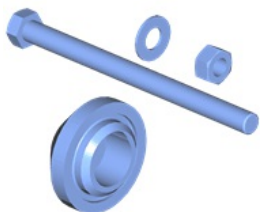


[Click here for full size](#)

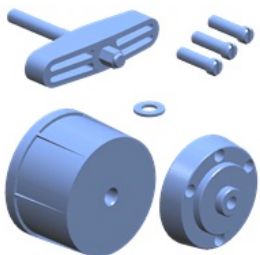


[Click here for full size](#)



[Click here for full size](#)

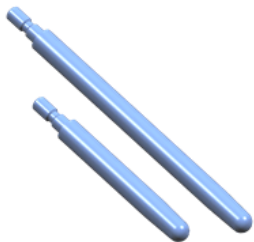


[Click here for full size](#)

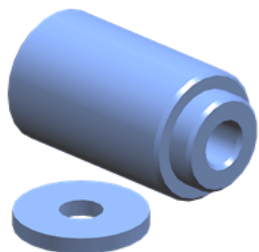


[Click here for full size](#)




[Click here for full size](#)

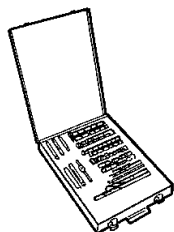


[Click here for full size](#)

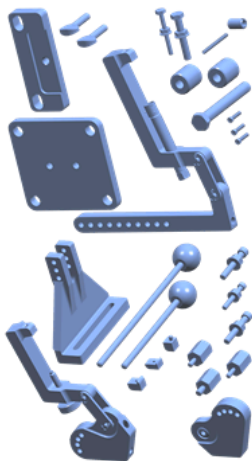


[Click here for full size](#)

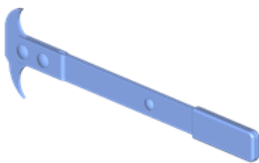


[Click here for full size](#)

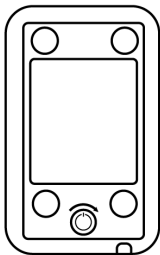


[Click here for full size](#)

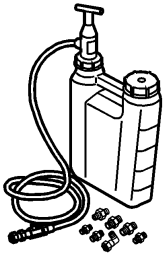


[Click here for full size](#)

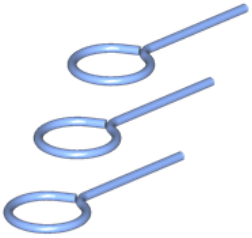


[Click here for full size](#)

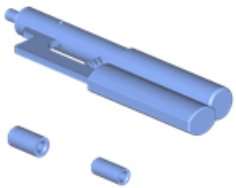


[Click here for full size](#)

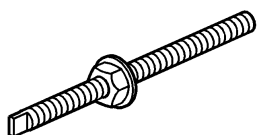


[Click here for full size](#)

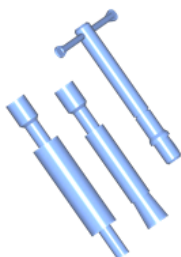


[Click here for full size](#)

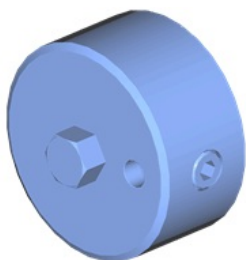

[Click here for full size](#)

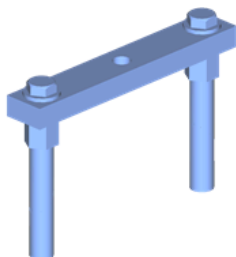


[Click here for full size](#)

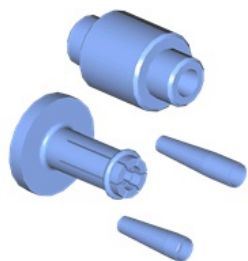


[Click here for full size](#)




[Click here for full size](#)

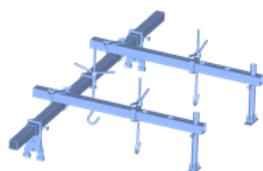

[Click here for full size](#)

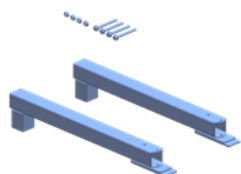


[Click here for full size](#)

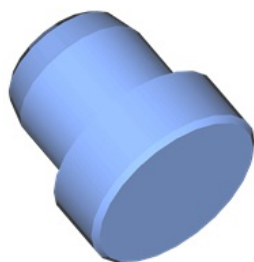


[Click here for full size](#)




[Click here for full size](#)

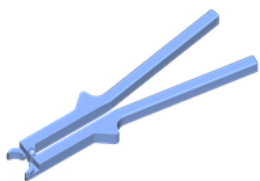


[Click here for full size](#)

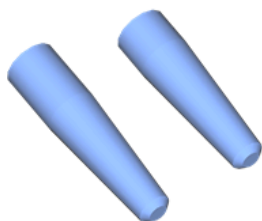


[Click here for full size](#)

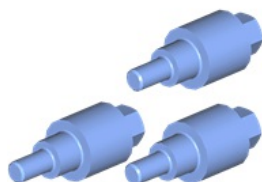

[Click here for full size](#)

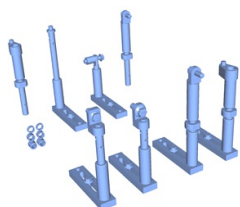


[Click here for full size](#)

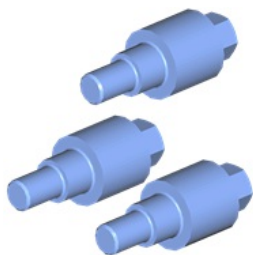


[Click here for full size](#)



[Click here for full size](#)

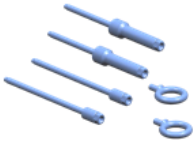


[Click here for full size](#)

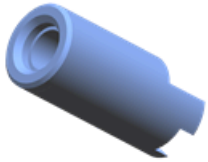


[Click here for full size](#)




[Click here for full size](#)

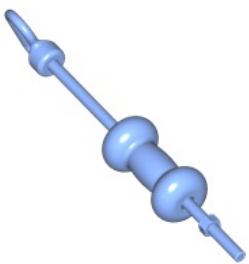


[Click here for full size](#)

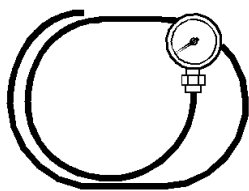

[Click here for full size](#)

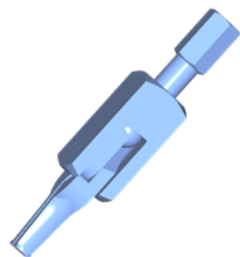

[Click here for full size](#)

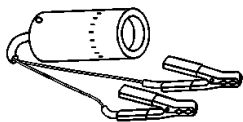


[Click here for full size](#)



[Click here for full size](#)



Click here for full size

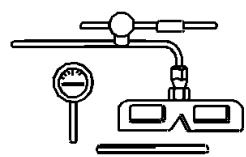

Click here for full size



Click here for full size

Illustration	Tool Number/Description
CH-48027	
Digital Pressure Gauge	
DT-21366	
J-21366	
Converter Holding Strap	
DT-51767	
Stretchy Belt Installer	
DT-51767-5A	
Webbing	
EN-8037	
J-8037	
Ring Compressor	
EN-8062	
J-8062	
Valve Spring Compressor w/ Head Off	
EN-8087	
J-8087	
Cylinder Bore Gauge	

Illustration	Tool Number/Description
EN-8089 J-8089 Carbon Removal Brush	
EN-8520 J-8520 Cam Lobe Lift Indicator	
EN-21867-850 Active Fuel Management Oil Pressure Adapter	
EN-22738-B J-9666 Valve Spring Tester	
EN-22794 J-22794 Spark Plug Port Adapter	
EN-24270 J-24270 Cylinder Bore Ridge Reamer	
EN-28410 J-28410 Gasket Remover	
EN-33049 J-33049 Camshaft Bearing Service Set	
EN-35667-A J-35667-A Cylinder Head Leakdown Tester	
EN-36857 J-36857 Engine Lift Bracket	
EN-38606 J-38606 Valve Spring Compressor	
EN-41478-A Crankshaft Front Oil Seal Installer	
EN-41479-B J-41479-B Crankshaft Rear Oil Seal Installer	

Illustration	Tool Number/Description
EN-41479-10 J-41479-10 Crankshaft Rear Oil Seal Installer Adapter	
EN-41556 J-41556 Connecting Rod Guide	
EN-41665-A J-41665-A Crankshaft Balancer and Sprocket Installer	
EN-41816 J-41816 Crankshaft Balancer Remover	
EN-42385 Head/Main Bolt Thread Repair Kit	
EN-43690-A J-43690-A Rod Bearing Clearance Checking Tool	
EN-45000 J-45000 Seal Remover	
EN-45059 J-45059 Angle Meter	
EN-45299 J-45299 Engine Preluber	
EN-46330 Timing Belt Tensioner Retaining Pin	
EN-46745 Piston Pin Clip Remover/Installer	
EN-47812 Installer Rod	
EN-47909 Injector Bore and Sleeve Cleaning Kit	
EN-47971 Oil Pressure Gauge Adapter	
EN-49102 Crankshaft Bearing Cap Remover	

Illustration	Tool Number/Description
except Europe EN-51955	
Europe EN-49245	
Fuel Injection Seal Installer Sizer	
EN-49248	
Injector Rail Assembly Remover	
EN-51007	
EN-28467-B	
EN-36462-A	
EN-43405	
Engine Support Fixture	
EN-51007-100	
Engine Support Fixture Adapter	
EN-51092	
Fuel Pump Installation Gauge	
EN-51096	
Rear Main Seal Remover	
EN-51097	
Injector Retaining Clip Installer	
EN-51105	
Injector Seal Installer and Sizer	
EN-51768-1	
Engine Support Fixture Adapter Bolt - M8	
EN-52055	
Powertrain Lift Table Adapters	
EN-52059	
Engine Support Fixture Adapter Bolt - M10	
EN-52287	
Crankshaft Balancer Holder	
EN-52499	
Engine Support Bolts	
EN-52511	
FAAFM Oil Control Solenoid Remover	
EN-52751	
Flywheel Holding Tool	
GE-02619-A	
J-02619-A	
Slide Hammer	

Illustration	Tool Number/Description
GE-21867-A J-21867-A Pressure Gauge	
GE-23907-1 J-23907-1 Slide Hammer with Bearing Adapter	
GE-42220 J-42220	
GE-52200 J-52200 Propulsion System Lift Table	
GE-6125-1B J-6125-1B Slide Hammer with Adapter	
GE-7872 J-7872 Magnetic Base Dial Indicator Set	
GE-8001 J-8001 Dial Indicator Set	