

2022 CHEVROLET CORVETTE SERVICE MANUAL

- [SEARCH](#)

1. [Engine/Propulsion](#)

2. [Engine Mechanical - 6.2L \(LT2\)](#)


3. [Repair Instructions](#)

4.


Engine Oil Tank Replacement

Removal Procedure

1. Engine >> Remove - Engine Replacement

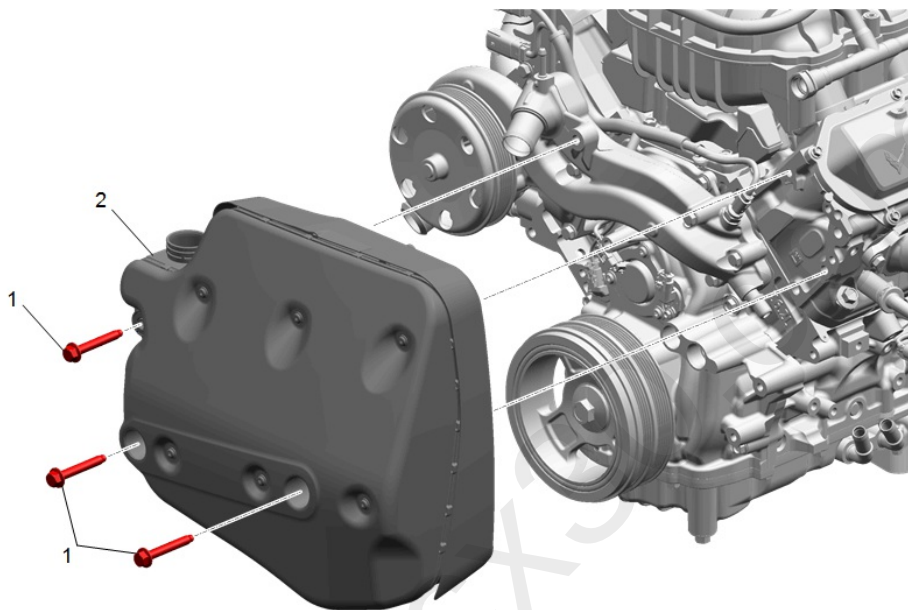

2.
[Click here for full size](#)
3. Engine Oil Tank Bolt (1) >> Remove [3x]
4. Engine Oil Tank (2) >> Remove

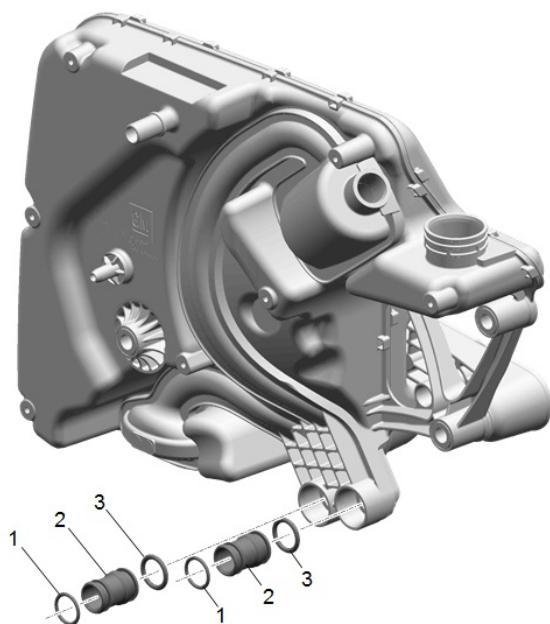


5.

[Click here for full size](#)

6. Oil Transfer Tube Seal (1,3) >> Remove and DISCARD - Engine Oil Tank Overhaul


Installation Procedure

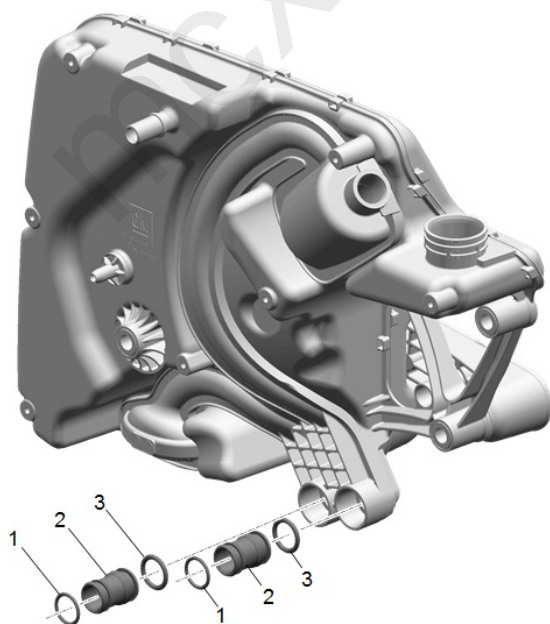

1.

[Click here for full size](#)

2. Oil Transfer Tube Seal (1,3) >> Install NEW - Engine Oil Tank Overhaul

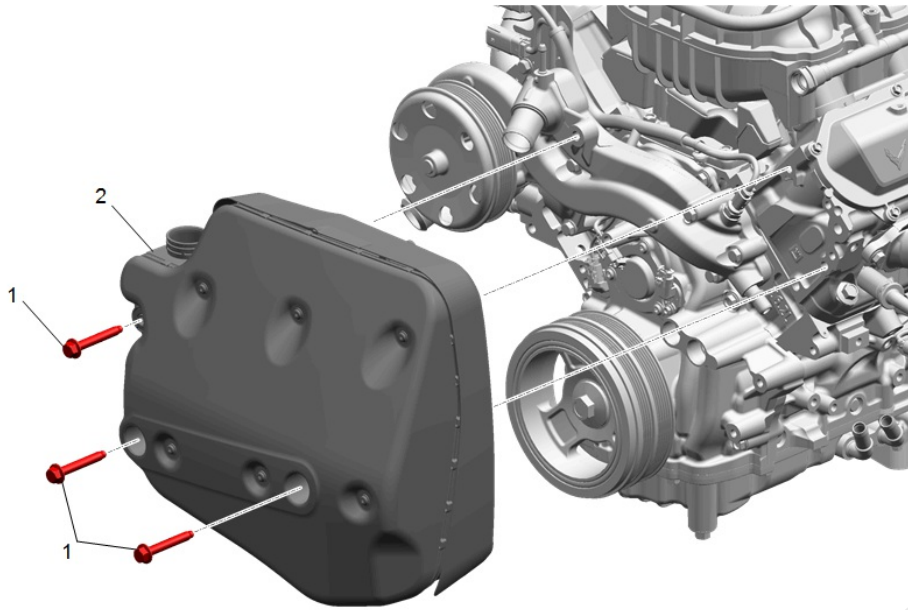

3.
[Click here for full size](#)

4. Engine Oil Tank (2) >> Install

5. Caution:

Refer to Fastener Caution.

6. Engine Oil Tank Bolt (1) >> Install and tighten 45 N-m (33 lb ft)

7. Engine >> Install - Engine Replacement