

2022 CHEVROLET CORVETTE SERVICE MANUAL

- [SEARCH](#)

1. [Engine/Propulsion](#)
2. [Engine Mechanical - 6.2L \(LT2\)](#)
3. [Repair Instructions](#)
- 4.

Positive Crankcase Ventilation Fresh Air Tube Replacement (Convertible)

Removal Procedure

1. [Click here for full size](#)
2. [Rear Window Panel \(2>\) >> Remove - Rear Window Panel Replacement](#)
3. [Click here for full size](#)
4. [Retainer \(2\) >> Remove \[2x\]](#)
5. [Positive Crankcase Ventilation Tube \(1\) >> Remove - Plastic Collar Quick Connect Fitting Service](#)

Installation Procedure

1. [Click here for full size](#)
2. [Positive Crankcase Ventilation Tube \(1\) >> Install - Plastic Collar Quick Connect Fitting Service](#)
3. [Retainer \(2\) >> Install \[2x\]](#)
4. [Click here for full size](#)
5. [Rear Window Panel \(2>\) >> Install - Rear Window Panel Replacement](#)