


# 2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH

- 1. Engine/Propulsion
- 2. Engine Mechanical - 6.2L (LT2)
- 3. Repair Instructions
- 4.

## Valve Lifter Oil Solenoid Valve Replacement

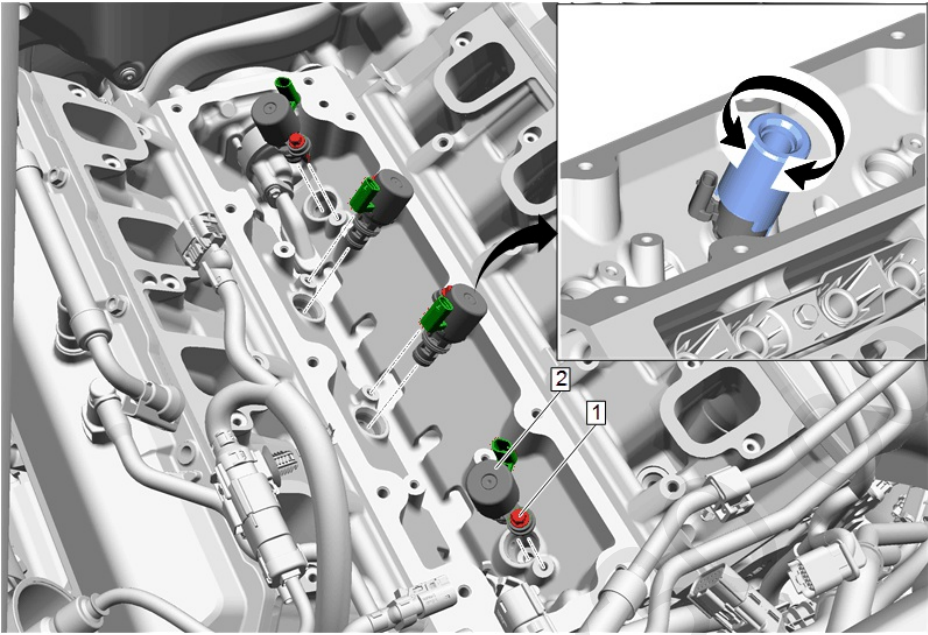

Click here for full size  
Extra Main: video  
Valve Rocker Arm Oil Control Valve Harness Replacement

Fastener Caution.

Tighten

10 N-m (89 lb in)

Special Tools

| Callout               | Component Name                                                               |
|-----------------------|------------------------------------------------------------------------------|
| Preliminary Procedure |                                                                              |
| 1                     | Valve Rocker Arm Oil Control Valve Bolt [4x]<br><br>Caution:<br><br>Refer to |
|                       |                                                                              |

| Callout | Component Name                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2       | <p data-bbox="180 125 528 147">Valve Lifter Oil Solenoid Valve [4x]</p> <p data-bbox="244 181 344 203">Procedure</p> <ol data-bbox="209 237 1425 349" style="list-style-type: none"> <li data-bbox="209 237 855 259">1. Install <i>EN-52511</i> FAAFM Oil Control Solenoid Remover.</li> <li data-bbox="209 293 1425 349">2. Using <i>EN-52511</i> FAAFM Oil Control Solenoid Remover turn the Valve Lifter Oil Solenoid Valve and then pull up to remove.</li> </ol> <p data-bbox="180 383 312 405">Special Tools</p> <p data-bbox="180 439 724 461"><i>EN-52511</i> FAAFM Oil Control Solenoid Remover</p> <p data-bbox="180 495 419 517">Equivalent regional tools:</p> |