

ACCESSORIES & EQUIPMENT

Squeaks and Rattles - Canyon, Colorado

DIAGNOSTIC INFORMATION AND PROCEDURES

SQUEAKS AND RATTLES

NOTE: Squeaks and rattles are caused by improperly controlled relative motion between vehicle components. There are 4 ways to prevent squeaks and rattles.

- Attach the component that squeaks or rattles securely.
 - Separate the components that squeak or rattle to prevent contact.
 - Insulate the components that squeak or rattle.
 - Insulate low uniform friction surfaces to eliminate stickslip motion.
-

mcx30.com