

ELECTRICAL

Wiring Systems And Power Management - Component Connector End Views - Index - Canyon, Colorado

COMPONENT CONNECTOR END VIEWS - INDEX

COMPONENT CONNECTOR END VIEWS - INDEX

Description
<u>A7 Fuel Pump and Level Sensor Assembly (LCV/LFX)</u>
<u>A7 Fuel Pump and Level Sensor Assembly (LWN)</u>
<u>A10 Inside Rearview Mirror</u>
<u>A11 Radio X1</u>
<u>A11 Radio X2</u>
<u>A11 Radio X3</u>
<u>A11 Radio X4</u>
<u>A11 Radio X6 (U2K)</u>
<u>A11 Radio X7</u>
<u>A16 Transfer Case Motor (NQ6/NQ7)</u>
<u>A23D Door Latch Assembly - Driver</u>
<u>A23G Door Latch Assembly - Left Rear Lower (Extended Cab)</u>
<u>A23H Door Latch Assembly - Left Rear Upper (Extended Cab)</u>
<u>A23J Door Latch Assembly - Right Rear Lower (Extended Cab)</u>
<u>A23K Door Latch Assembly - Right Rear Upper (Extended Cab)</u>
<u>A23LR Door Latch Assembly - Left Rear (Crew Cab)</u>
<u>A23P Door Latch Assembly - Passenger</u>
<u>A23RR Door Latch Assembly - Right Rear (Crew Cab)</u>
<u>A26 HVAC Controls</u>
<u>A38 Reductant Pump and Sensor Assembly (LWN)</u>
<u>B1 A/C Refrigerant Pressure Sensor</u>
<u>B5LF Wheel Speed Sensor - Left Front</u>
<u>B5LR Wheel Speed Sensor - Left Rear</u>
<u>B5RF Wheel Speed Sensor - Right Front</u>
<u>B5RR Wheel Speed Sensor - Right Rear</u>
<u>B7B Air Temperature Sensor - Duct Lower</u>
<u>B7F Air Temperature Sensor - Duct Upper</u>
<u>B9 Ambient Air Temperature Sensor</u>
<u>B10B Ambient Light/Sunload Sensor</u>
<u>B14A Transmission Output Shaft Speed Sensor (N8D)</u>
<u>B14A Transmission Output Shaft Speed Sensor (NQ6/NQ7)</u>
<u>B16 Backup Lamp Switch (N8D)</u>
<u>B18 Battery Current Sensor</u>
<u>B19B Brake Booster Vacuum Sensor</u>
<u>B20 Brake Fluid Level Switch (LCV/LFX)</u>
<u>B20 Brake Fluid Level Switch (LWN)</u>
<u>B22 Brake Pedal Position Sensor (MYB)</u>
<u>B22 Brake Pedal Position Sensor (N8D)</u>

<u>B23F Camshaft Position Sensor - Intake (LWN)</u>
<u>B23A Camshaft Position Sensor - Bank 1 Exhaust (LFX)</u>
<u>B23B Camshaft Position Sensor - Bank 1 Intake (LFX)</u>
<u>B23C Camshaft Position Sensor - Bank 2 Exhaust (LFX)</u>
<u>B23D Camshaft Position Sensor - Bank 2 Intake (LFX)</u>
<u>B23E Camshaft Position Sensor - Exhaust (LCV)</u>
<u>B23F Camshaft Position Sensor - Intake (LCV)</u>
<u>B24 Cellular Phone Microphone (UE1)</u>
<u>B25B Clutch Pedal Position Sensor (N8D)</u>
<u>B26 Crankshaft Position Sensor (LCV/LWN)</u>
<u>B26 Crankshaft Position Sensor (LFX)</u>
<u>B26 Crankshaft Position Sensor (LWN)</u>
<u>B34 Engine Coolant Temperature Sensor (LCV)</u>
<u>B34 Engine Coolant Temperature Sensor (LFX)</u>
<u>B34 Engine Coolant Temperature Sensor (LWN)</u>
<u>B35 Engine Oil Level Switch (LCV)</u>
<u>B35 Engine Oil Level Switch (LFX)</u>
<u>B35 Engine Oil Level Switch (LWN)</u>
<u>B37B Engine Oil Pressure Sensor (LCV)</u>
<u>B37B Engine Oil Pressure Sensor (LFX)</u>
<u>B37B Engine Oil Pressure Sensor (LWN)</u>
<u>B39 A/C Evaporator Temperature Sensor</u>
<u>B47 Fuel Pressure Sensor (LCV/LFX)</u>
<u>B47B Fuel Rail Pressure Sensor (LCV or LTG)</u>
<u>B47B Fuel Rail Pressure Sensor (LFX)</u>
<u>B47B Fuel Rail Pressure Sensor (LWN)</u>
<u>B52A Heated Oxygen Sensor 1 (LCV)</u>
<u>B52B Heated Oxygen Sensor 2 (LCV)</u>
<u>B52C Heated Oxygen Sensor - Bank 1 Sensor 1 (LFX)</u>
<u>B52D Heated Oxygen Sensor - Bank 1 Sensor 2 (LFX)</u>
<u>B52E Heated Oxygen Sensor - Bank 2 Sensor 1 (LFX)</u>
<u>B52F Heated Oxygen Sensor - Bank 2 Sensor 2 (LFX)</u>
<u>B55 Hood Ajar Switch (UTJ)</u>
<u>B59L Front Impact Sensor - Left</u>
<u>B59R Front Impact Sensor - Right</u>
<u>B61P Seat Belt Tension Sensor - Passenger</u>
<u>B63LF Side Impact Sensor - Left Front</u>
<u>B63LR Side Impact Sensor - Left Rear</u>
<u>B63RF Side Impact Sensor - Right Front</u>
<u>B63RR Side Impact Sensor - Right Rear</u>
<u>B65 Intake Manifold Pressure and Air Temperature Sensor (LWN)</u>
<u>B68A Knock Sensor 1 (LCV)</u>
<u>B68A Knock Sensor 1 (LFX)</u>
<u>B68B Knock Sensor 2 (LCV)</u>
<u>B68B Knock Sensor 2 (LFX)</u>

<u>B74 Manifold Absolute Pressure Sensor</u>
<u>B75C Multifunction Intake Air Sensor</u>
<u>B80 Park Brake Switch</u>
<u>B87 Rearview Camera</u>
<u>B88D Seat Belt Switch - Driver</u>
<u>B88P Seat Belt Switch - Passenger</u>
<u>B107 Accelerator Pedal Position Sensor</u>
<u>B116 Water in Fuel Sensor (LWN)</u>
<u>B130A Exhaust Gas Recirculation Temperature Sensor 1 (LWN)</u>
<u>B130B Exhaust Gas Recirculation Temperature Sensor 2 (LWN)</u>
<u>B131A Exhaust Temperature Sensor 1 (LWN)</u>
<u>B131B Exhaust Temperature Sensor 2 (LWN)</u>
<u>B131C Exhaust Temperature Sensor 3 (LWN)</u>
<u>B131D Exhaust Temperature Sensor 4 (LWN)</u>
<u>B131E Exhaust Temperature Sensor 5 (LWN)</u>
<u>B136 Exhaust Particulate Matter Sensor (LWN)</u>
<u>B150 Fuel Tank Pressure Sensor (LCV/LFX)</u>
<u>B154 Diesel Particulate Filter Exhaust Differential Pressure Sensor (LWN)</u>
<u>B160 Windshield Temperature and Inside Moisture Sensor (C68)</u>
<u>B193A Charge Air Cooler Inlet Temperature Sensor (LWN)</u>
<u>B193B Charge Air Cooler Outlet Temperature Sensor (LWN)</u>
<u>B195A Nitrogen Oxides Sensor 1 (LWN)</u>
<u>B195B Nitrogen Oxides Sensor 2 (LWN)</u>
<u>B203 Engine Coolant Radiator Temperature Sensor (LCV)</u>
<u>B227 Gear Position Sensor (NQ6)</u>
<u>C1 Battery</u>
<u>C3 Telematics Communication Interface Control Module Battery</u>
<u>E4E Headlamp - Left High Beam</u>
<u>E4F Headlamp - Right High Beam</u>
<u>E4H Headlamp - Right Low Beam</u>
<u>E4H Headlamp - Right Low Beam</u>
<u>E4J Park Lamp - Left Front (X88)</u>
<u>E4J Park Lamp - Right Front (X88)</u>
<u>E4N Park/Turn Signal Lamp - Left</u>
<u>E4P Park/Turn Signal Lamp - Right</u>
<u>E5A Backup Lamp - Left</u>
<u>E5AG Tail/Stop and Turn Signal Lamp - Left Upper</u>
<u>E5AH Tail/Stop and Turn Signal Lamp - Right Upper</u>
<u>E5B Backup Lamp - Right</u>
<u>E5U Tail/Stop and Turn Signal Lamp - Left Lower</u>
<u>E5V Tail/Stop and Turn Signal Lamp - Right Lower</u>
<u>E6 Center High Mounted Stop Lamp</u>
<u>E7L License Plate Lamp - Left</u>
<u>E7R License Plate Lamp - Right</u>
<u>E11 Fuel Heater (LWN)</u>

<u>E12A Glow Plug 1 (LWN)</u>
<u>E12B Glow Plug 2 (LWN)</u>
<u>E12C Glow Plug 3 (LWN)</u>
<u>E12D Glow Plug 4 (LWN)</u>
<u>E14A Seat Heating Element - Driver Back (KA1)</u>
<u>E14B Seat Heating Element - Driver Cushion (KA1)</u>
<u>E14C Seat Heating Element - Passenger Back (KA1)</u>
<u>E14D Seat Heating Element - Passenger Cushion (KA1)</u>
<u>E17D Outside Rearview Mirror Glass - Driver X1</u>
<u>E17D Outside Rearview Mirror Glass - Driver X2</u>
<u>E17P Outside Rearview Mirror Glass - Passenger X1</u>
<u>E17P Outside Rearview Mirror Glass - Passenger X2</u>
<u>E18 Rear Defogger Grid X1 (c49)</u>
<u>E18 Rear Defogger Grid X2 (c49)</u>
<u>E29LF Fog Lamp - Left Front (T3U)</u>
<u>E29RF Fog Lamp - Right Front (T3U)</u>
<u>E31L Sunshade Mirror Lamp - Left (D6I)</u>
<u>E31R Sunshade Mirror Lamp - Right (D6I)</u>
<u>X80A Accessory Power Receptacle - Center Console 1</u>
<u>E33L Cargo Lamp - Left</u>
<u>E33R Cargo Lamp - Right</u>
<u>E36AH Dome Lamp</u>
<u>E37F Dome/Reading Lamps - Front (C74)</u>
<u>E37R Dome/Reading Lamps - Rear</u>
<u>E40 Electrical Auxiliary Heater X1 (LWN)</u>
<u>E40 Electrical Auxiliary Heater X2 (LWN)</u>
<u>E41 Engine Coolant Thermostat Heater (LCV)</u>
<u>E45 Positive Crankcase Ventilation Heater (LWN)</u>
<u>E52 Reductant Line Heater (LWN)</u>
<u>X207 Instrument Panel Harness to Passenger Air Bag Extension Harness</u>
<u>F101 Passenger Instrument Panel Air Bag X2</u>
<u>F101 Passenger Instrument Panel Air Bag X3</u>
<u>F105L Roof Rail Air Bag - Left (Crew Cab)</u>
<u>F105L Roof Rail Air Bag - Left (Extended Cab)</u>
<u>F105R Roof Rail Air Bag - Right (Crew Cab)</u>
<u>F105R Roof Rail Air Bag - Right (Extended Cab)</u>
<u>F106D Seat Side Air Bag - Driver</u>
<u>F106P Seat Side Air Bag - Passenger</u>
<u>F107 Steering Wheel Air Bag X1</u>
<u>F107 Steering Wheel Air Bag X2</u>
<u>F112D Seat Belt Retractor Pretensioner - Driver (Crew Cab)</u>
<u>F112D Seat Belt Retractor Pretensioner - Driver (Extended Cab)</u>
<u>F112P Seat Belt Retractor Pretensioner - Passenger (Crew Cab)</u>
<u>F112P Seat Belt Retractor Pretensioner - Passenger (Extended Cab)</u>
<u>F113D Seat Belt Anchor Pretensioner - Driver</u>

F113P Seat Belt Anchor Pretensioner - Passenger

G13 Generator

G13 Generator X2 (LCV)

G13 Generator X2 (LFX)

G13 Generator X2 (LFX)

G18 High Pressure Fuel Pump (LCV)

G18 High Pressure Fuel Pump (LFX)

G24 Windshield Washer Pump

K8 Blower Motor Control Module

K9 Body Control Module X1

K9 Body Control Module X2

K9 Body Control Module X3

K9 Body Control Module X4

K9 Body Control Module X5

K9 Body Control Module X6

K9 Body Control Module X7

K17 Electronic Brake Control Module

K20 Engine Control Module X1 (LCV)

K20 Engine Control Module X1 (LFX)

K20 Engine Control Module X1 (LWN)

K20 Engine Control Module X2 (LCV)

K20 Engine Control Module X2 (LFX)

K20 Engine Control Module X2 (LWN)

K20 Engine Control Module X3 (LCV)

K20 Engine Control Module X3 (LFX)

K20 Engine Control Module X3 (LWN)

K22 Cooling Fan Control Module (LCV/LFX)

K29 Seat Heating Control Module X1 (KA1)

K29 Seat Heating Control Module X2 (KA1)

K33 HVAC Control Module X1

K33 HVAC Control Module X2

K33 HVAC Control Module X3

K36 Inflatable Restraint Sensing and Diagnostic Module X1

K36 Inflatable Restraint Sensing and Diagnostic Module X2

K38 Chassis Control Module (LFX)

K38 Chassis Control Module (LWN)

K43 Power Steering Control Module X1

K43 Power Steering Control Module X2

K43 Power Steering Control Module X3

K69 Transfer Case Control Module X1 (NQ6/NQ7)

K69 Transfer Case Control Module X2 (NQ6/NQ7)

K69 Transfer Case Control Module X3 (NQ6/NQ7)

K73 Telematics Communication Interface Control Module X1 (UE1)

K73 Telematics Communication Interface Control Module X2 (UE1)

K73 Telematics Communication Interface Control Module X5

<u>K73 Telematics Communication Interface Control Module X7</u>
<u>K74 Human Machine Interface Control Module X1 (IO4/IO5/IO6)</u>
<u>K74 Human Machine Interface Control Module X2 (IO4/IO5/IO6)</u>
<u>K74 Human Machine Interface Control Module X3 (IO4/IO5/IO6)</u>
<u>K74 Human Machine Interface Control Module X4 (IO4/IO5/IO6)</u>
<u>K74 Human Machine Interface Control Module X4</u>
<u>K74 Human Machine Interface Control Module X7 (IO6)</u>
<u>K77 Remote Control Door Lock Receiver</u>
<u>K85 Passenger Presence Module</u>
<u>K89 Immobilizer Control Module</u>
<u>K109 Frontview Camera Module (UEU/UFL)</u>
<u>K111 Fuel Pump Driver Control Module (LCV)</u>
<u>K115 Reductant Control Module (LWN)</u>
<u>K115 Reductant Control Module X2 (LWN)</u>
<u>K133 Trailer Brake Power Control Module (JL1)</u>
<u>M4 Air Inlet Door Actuator</u>
<u>M6 Air Temperature Door Actuator</u>
<u>M9 Brake Booster Pump Motor (LFX)</u>
<u>M26 Front Axle Engagement Actuator (NQ6/NQ7)</u>
<u>M37 Mode Door Actuator</u>
<u>M51D Seat Horizontal Motor - Driver</u>
<u>M51P Seat Horizontal Motor - Passenger</u>
<u>M52D Seat Lumbar Support Horizontal Motor - Driver</u>
<u>M52D Seat Lumbar Support Horizontal Motor - Passenger</u>
<u>M55D Seat Rear Vertical Motor - Driver</u>
<u>M55P Seat Rear Vertical Motor - Passenger</u>
<u>M64 Starter Motor X1 (LCV)</u>
<u>M64 Starter Motor X1 (LFX)</u>
<u>M64 Starter Motor X1 (LWN)</u>
<u>M64 Starter Motor X2 (LCV)</u>
<u>M64 Starter Motor X2 (LFX)</u>
<u>M64 Starter Motor X2 (LWN)</u>
<u>M74D Window Motor - Driver</u>
<u>M74LR Window Motor - Left Rear (Crew Cab)</u>
<u>M74P Window Motor - Passenger</u>
<u>M74RR Window Motor - Right Rear (Crew Cab)</u>
<u>M75 Windshield Wiper Motor</u>
<u>M77D Outside Rearview Mirror Motor - Driver</u>
<u>M77P Outside Rearview Mirror Motor - Passenger (without AAB)</u>
<u>M93 Key Capture Solenoid Actuator (MYB)</u>
<u>M96 Active Grill Air Shutter Actuator (LCV)</u>
<u>M96 Active Grill Air Shutter Actuator (LFX)</u>
<u>M103 Turbocharger Vane Position Actuator (LWN)</u>
<u>P2 Transmission Shift Lever Position Indicator (MYB)</u>
<u>P3 Backup Alarm (8S3)</u>

<u>P13 Horn Assembly</u>
<u>P14 Passenger Air Bag Disabled Indicator</u>
<u>P16 Instrument Cluster</u>
<u>P17 Info Display Module X1</u>
<u>P17 Info Display Module X3</u>
<u>P19AG Speaker - Left Front Door</u>
<u>P19AH Speaker - Right Front Door</u>
<u>P19AL Speaker - Left Rear Door</u>
<u>P19AM Speaker - Right Rear Door</u>
<u>P19B Speaker - Center Instrument Panel (UQA)</u>
<u>P19H Speaker - Left Front Tweeter (UQ3)</u>
<u>P19H Speaker - Left Front Tweeter (UQA)</u>
<u>P19V Speaker - Right Front Tweeter (UQ3)</u>
<u>P19V Speaker - Right Front Tweeter (UQA)</u>
<u>P43 Collision Alert Indicators (UEU)</u>
<u>Q2 A/C Compressor Clutch</u>
<u>Q6A Camshaft Position Actuator Solenoid Valve - Bank 1 Exhaust (LFX)</u>
<u>Q6B Camshaft Position Actuator Solenoid Valve - Bank 1 Intake (LFX)</u>
<u>Q6C Camshaft Position Actuator Solenoid Valve - Bank 2 Exhaust (LFX)</u>
<u>Q6D Camshaft Position Actuator Solenoid Valve - Bank 2 Intake (LFX)</u>
<u>Q6E Camshaft Position Actuator Solenoid Valve - Exhaust (LCV)</u>
<u>Q6F Camshaft Position Actuator Solenoid Valve - Intake (LCV)</u>
<u>Q8 Control Solenoid Valve Assembly</u>
<u>Q8 Control Solenoid Valve Assembly X2 (MYB, MYC or MYD)</u>
<u>Q8 Control Solenoid Valve Assembly X3 (MYB, MYC or MYD)</u>
<u>Q12 Evaporative Emission Purge Solenoid Valve (LCV)</u>
<u>Q12 Evaporative Emission Purge Solenoid Valve (LFX)</u>
<u>Q13 Evaporative Emission Vent Solenoid Valve</u>
<u>Q14 Exhaust Gas Recirculation Valve (LWN)</u>
<u>Q17A Fuel Injector 1 (LCV or LTG)</u>
<u>Q17A Fuel Injector 1 (LFX)</u>
<u>Q17A Fuel Injector 1 (LWN)</u>
<u>Q17B Fuel Injector 2 (LCV or LTG)</u>
<u>Q17B Fuel Injector 2 (LFX)</u>
<u>Q17B Fuel Injector 2 (LWN)</u>
<u>Q17C Fuel Injector 3 (LCV or LTG)</u>
<u>Q17C Fuel Injector 3 (LFX)</u>
<u>Q17C Fuel Injector 3 (LWN)</u>
<u>Q17D Fuel Injector 4 (LCV or LTG)</u>
<u>Q17D Fuel Injector 4 (LFX)</u>
<u>Q17D Fuel Injector 4 (LWN)</u>
<u>Q17E Fuel Injector 5 (LFX)</u>
<u>Q17F Fuel Injector 6 (LFX)</u>
<u>Q18A Fuel Pressure Regulator 1 (LWN)</u>
<u>Q18B Fuel Pressure Regulator 2 (LWN)</u>

<u>Q38 Throttle Body (LCV/LEF)</u>
<u>Q38 Throttle Body (LWN)</u>
<u>Q44 Engine Oil Pressure Control Solenoid Valve (LCV)</u>
<u>Q46 A/C Compressor Solenoid Valve</u>
<u>Q47 Exhaust Gas Recirculation Cooler Bypass Solenoid Valve (LWN)</u>
<u>Q61 Reductant Injector (LWN)</u>
<u>Q67 Exhaust Aftertreatment Fuel Injector (LWN)</u>
<u>Q85 Cooling Fan Clutch (LWN)</u>
<u>R6A Terminating Resistor - High Speed Bus</u>
<u>R10 Cooling Fan Resistor (LWN)</u>
<u>S3 Transmission Shift Lever (MYB)</u>
<u>S13D Door Lock Switch - Driver (ATG)</u>
<u>S13P Door Lock Switch - Passenger (ATG)</u>
<u>S30 Headlamp Switch</u>
<u>S32D Seat Heating Switch - Driver (KA1)</u>
<u>S32P Seat Heating Switch - Passenger (KA1)</u>
<u>S33 Horn Switch X1</u>
<u>S33 Horn Switch X2</u>
<u>S39 Ignition Switch</u>
<u>S48A Multifunction Switch - Instrument Panel</u>
<u>S52 Outside Rearview Mirror Switch (DL6/DL9)</u>
<u>S64D Seat Adjuster Switch - Driver X1</u>
<u>S64D Seat Adjuster Switch - Driver X2</u>
<u>S64P Seat Adjuster Switch - Passenger X1</u>
<u>S64P Seat Adjuster Switch - Passenger X2</u>
<u>S70E Steering Wheel Controls Switch - Radio Presets (W1Y)</u>
<u>S70F Steering Wheel Controls Switch - Radio Volume (W1Y)</u>
<u>S70L Steering Wheel Controls Switch - Left</u>
<u>S70R Steering Wheel Controls Switch - Right</u>
<u>S76 Trailer Brake Control Switch (JL1)</u>
<u>S77 Transfer Case Shift Control Switch (NQ6/NQ7)</u>
<u>S78 Turn Signal/Multifunction Switch</u>
<u>S79D Window Switch - Driver</u>
<u>S79LR Window Switch - Left Rear (Crew Cab)</u>
<u>S79P Window Switch - Passenger</u>
<u>S79RR Window Switch - Right Rear (Crew Cab)</u>
<u>S82 Windshield Wiper/Washer Switch</u>
<u>T3 Audio Amplifier X1 (UQA)</u>
<u>T3 Audio Amplifier X2 (UQA)</u>
<u>T3 Audio Amplifier X3 (UQA)</u>
<u>T3 Audio Amplifier X4 (UQA)</u>
<u>T4G Cellular Phone, Navigation, and Digital Radio Antenna UE1</u>
<u>T4H Digital Radio Antenna U2M</u>
<u>T4M Radio Antenna Without U2M</u>
<u>T8A Ignition Coil 1 (LCV)</u>

T8A Ignition Coil 1 (LFX)

T8B Ignition Coil 2 (LCV)

T8B Ignition Coil 2 (LFX)

T8C Ignition Coil 3 (LCV)

T8C Ignition Coil 3 (LFX)

T8D Ignition Coil 4 (LCV)

T8D Ignition Coil 4 (LFX)

T8E Ignition Coil 5 (LFX)

T8F Ignition Coil 6 (LFX)

T15 Navigation Antenna Signal Splitter X1

T15 Navigation Antenna Signal Splitter X2

T15 Navigation Antenna Signal Splitter X3

X80A Accessory Power Receptacle - Center Console 1 (MYB)

X80A Accessory Power Receptacle - Center Console 1 (N8D)

X80B Accessory Power Receptacle - Center Console 2

X83 Auxiliary Audio Input X1 (IO3/IO4+N8D)

X83 Auxiliary Audio Input X1

X83 Auxiliary Audio Input X2 ((IO3/IO4)+N8D)

X83 Auxiliary Audio Input X2 (IO3/IO4/IO5/IO6 WITH MYB)

X83 Auxiliary Audio Input X1 (MYB)

X83R Auxiliary Audio Input - Rear X2 (IO5/IO6)

X83R Auxiliary Audio Input - Rear X3 (IO5/IO6)

X84 Data Link Connector

X85 Steering Wheel Air Bag Coil X1

X85 Steering Wheel Air Bag Coil X2

X85 Steering Wheel Air Bag Coil X3

X88 Trailer Connector (Z82)

X92 USB Receptacle (IO5/IO6)