

2021 DTC INDEX

Canyon, Colorado

DIAGNOSTIC TROUBLE CODE (DTC) LIST - VEHICLE

This master list includes all applicable diagnostic trouble codes in alphanumeric order.

DTC	Diagnostic Procedure
B0000	Antilock Brake System - DTC B0000
B0010	Image Display Cameras - DTC B0010
B0012	Supplemental Restraints - DTC B0012 or B0013
B0013	Supplemental Restraints - DTC B0012 or B0013
B0014	Supplemental Restraints - DTC B0014 or B0021
B0015	Supplemental Restraints - DTC B0015, B001A, B001B, or B0022
B0016	Supplemental Restraints - DTC B0016 or B0023
B0019	Supplemental Restraints - DTC B0019 or B0020
B001A	Supplemental Restraints - DTC B0015, B001A, B001B, or B0022
B001B	Supplemental Restraints - DTC B0015, B001A, B001B, or B0022
B0020	Supplemental Restraints - DTC B0019 or B0020
B0021	Supplemental Restraints - DTC B0014 or B0021
B0022	Supplemental Restraints - DTC B0015, B001A, B001B, or B0022
B0023	Supplemental Restraints - DTC B0016 or B0023
B0052	Supplemental Restraints - DTC B0052
B0071	Supplemental Restraints - DTC B0071
B0072	Seat Belts - DTC B0072 or B0073
B0073	Seat Belts - DTC B0072 or B0073
B0081	Supplemental Restraints - DTC B0081 (Inflatable Restraint Sensing and Diagnostic Module) , or DTC B0081 (Passenger Presence Module) .
B0083	Supplemental Restraints - DTC B0083-B0088
B0084	Supplemental Restraints - DTC B0083-B0088
B0085	Supplemental Restraints - DTC B0083-B0088
B0086	Supplemental Restraints - DTC B0083-B0088
B0087	Supplemental Restraints - DTC B0083-B0088
B0088	Supplemental Restraints - DTC B0083-B0088
B0163	HVAC - Automatic - DTC B0163 or B0183
B0173	HVAC - Automatic - DTC B0173, B0178, or B3933
B0178	HVAC - Automatic - DTC B0173, B0178, or B3933
B0183	HVAC - Automatic - DTC B0163 or B0183
B018A	HVAC - Automatic - DTC B018A, B048C, B048E, or B1395
B0193	HVAC - Automatic - DTC B0193
B0193	HVAC - Manual - DTC B0193
B0223	HVAC - Automatic - DTC B0223, B0233, B023A, or B0408
B0223	HVAC - Manual - DTC B0223, B0233, B023A, or B0408
B0233	HVAC - Automatic - DTC B0223, B0233, B023A, or B0408
B0233	HVAC - Manual - DTC B0223, B0233, B023A, or B0408
B023A	HVAC - Automatic - DTC B0223, B0233, B023A, or B0408
B023A	HVAC - Manual - DTC B0223, B0233, B023A, or B0408
B0283	Fixed and Moveable Windows - DTC B0283
B0408	HVAC - Automatic - DTC B0223, B0233, B023A, or B0408

DTC	Diagnostic Procedure
B0408	HVAC - Manual - <u>DTC B0223, B0233, B023A, or B0408</u>
B048C	HVAC - Automatic - <u>DTC B018A, B048C, B048E, or B1395</u>
B048D	HVAC - Automatic - <u>DTC B048D or B048E</u>
B048D	HVAC - Manual - <u>DTC B048D or B048E</u>
B048E	HVAC - Automatic - <u>DTC B048D or B048E</u>
B048E	HVAC - Manual - <u>DTC B048D or B048E</u>
B048F	HVAC - Automatic - <u>DTC B018A, B048C, B048E, or B1395</u>
B0550	Displays and Gauges - <u>DTC B0550</u>
B0560	Cellular, Entertainment, and Navigation - <u>DTC B0560</u>
B071F	Displays and Gauges - <u>DTC B071F</u>
B0770	Transfer Case - MP 3025G (NQ6) - <u>DTC B0770</u>
B0775	Transfer Case - MP 1622G (NQ7) - <u>DTC B0775</u>
B0775	Transfer Case - MP 3025G (NQ6) - <u>DTC B0775</u>
B0780	Transfer Case - MP 1622G (NQ7) - <u>DTC B0780</u>
B0780	Transfer Case - MP 3025G (NQ6) - <u>DTC B0780</u>
B0785	Transfer Case - MP 1622G (NQ7) - <u>DTC B0785</u>
B0785	Transfer Case - MP 3025G (NQ6) - <u>DTC B0785</u>
B0790	Transfer Case - MP 1622G (NQ7) - <u>DTC B0790</u>
B0790	Transfer Case - MP 3025G (NQ6) - <u>DTC B0790</u>
B0958	Parking Assistance Systems - <u>DTC B0958, B0959, B0960, or B0961</u>
B0959	Parking Assistance Systems - <u>DTC B0958, B0959, B0960, or B0961</u>
B0960	Parking Assistance Systems - <u>DTC B0958, B0959, B0960, or B0961</u>
B0961	Parking Assistance Systems - <u>DTC B0958, B0959, B0960, or B0961</u>
B0967	Parking Assistance Systems - <u>DTC B0967</u>
B0968	Parking Assistance Systems - <u>DTC B0968</u>
B0969	Fixed and Moveable Windows - <u>DTC B0969</u>
B0969	Lighting - <u>DTC B0969</u>
B0987	Driver Assistance Systems - <u>DTC B0987</u>
B1000	Data Communications - <u>DTC B1000</u>
B1001	Data Communications - <u>DTC B1001</u>
B1001	Supplemental Restraints - <u>DTC B1001 (Passenger Presence System)</u> , or <u>DTC B1001 (Inflatable Restraint Sensing and Diagnostic Module)</u>
B1008	Driver Assistance Systems - <u>DTC B1008</u>
B1011	Driver Assistance Systems - <u>DTC B1011</u>
B1015	Driver Assistance Systems - <u>DTC B1015</u>
B1015	Parking Assistance Systems - <u>DTC B1015 (K182 Parking Assist Control Module)</u>
B1019	Supplemental Restraints - <u>DTC B1019</u>
B101D	Data Communications - <u>DTC B101D</u>
B101D	Driver Assistance Systems - <u>DTC B101D</u>
B101E	Data Communications - <u>DTC B101E</u>
B1024	Cellular, Entertainment, and Navigation - <u>DTC B1024</u>
B1025	Cellular, Entertainment, and Navigation - <u>DTC B1025-B1135 (UQ3)</u> , or <u>DTC B1025-B1135 (IOR)</u> , or <u>DTC B1025-B1135 (UQA)</u>
B1026	Cellular, Entertainment, and Navigation - <u>DTC B1025-B1135 (UQ3)</u> , or <u>DTC B1025-B1135 (IOR)</u> , or <u>DTC B1025-B1135 (UQA)</u>
B1027	Cellular, Entertainment, and Navigation - <u>DTC B1025-B1135 (UQ3)</u> , or <u>DTC B1025-B1135 (IOR)</u> , or <u>DTC B1025-B1135 (UQA)</u>
B1028	Cellular, Entertainment, and Navigation - <u>DTC B1025-B1135 (UQ3)</u> , or <u>DTC B1025-B1135 (IOR)</u> , or <u>DTC B1025-B1135 (UQA)</u>

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

DTC	Diagnostic Procedure
B112D	Cellular, Entertainment, and Navigation - <u>DTC B1025-B1135 (UQ3)</u> , or <u>DTC B1025-B1135 (IOR)</u> , or <u>DTC B1025-B1135 (UQA)</u> .
B112E	Cellular, Entertainment, and Navigation - <u>DTC B1025-B1135 (UQ3)</u> , or <u>DTC B1025-B1135 (IOR)</u> , or <u>DTC B1025-B1135 (UQA)</u> .
B112F	Cellular, Entertainment, and Navigation - <u>DTC B1025-B1135 (UQ3)</u> , or <u>DTC B1025-B1135 (IOR)</u> , or <u>DTC B1025-B1135 (UQA)</u> .
B1130	Cellular, Entertainment, and Navigation - <u>DTC B1025-B1135 (UQ3)</u> , or <u>DTC B1025-B1135 (IOR)</u> , or <u>DTC B1025-B1135 (UQA)</u> .
B1131	Cellular, Entertainment, and Navigation - <u>DTC B1025-B1135 (UQ3)</u> , or <u>DTC B1025-B1135 (IOR)</u> , or <u>DTC B1025-B1135 (UQA)</u> .
B1132	Cellular, Entertainment, and Navigation - <u>DTC B1025-B1135 (UQ3)</u> , or <u>DTC B1025-B1135 (IOR)</u> , or <u>DTC B1025-B1135 (UQA)</u> .
B1133	Cellular, Entertainment, and Navigation - <u>DTC B1025-B1135 (UQ3)</u> , or <u>DTC B1025-B1135 (IOR)</u> , or <u>DTC B1025-B1135 (UQA)</u> .
B1134	Cellular, Entertainment, and Navigation - <u>DTC B1025-B1135 (UQ3)</u> , or <u>DTC B1025-B1135 (IOR)</u> , or <u>DTC B1025-B1135 (UQA)</u> .
B1135	Cellular, Entertainment, and Navigation - <u>DTC B1025-B1135 (UQ3)</u> , or <u>DTC B1025-B1135 (IOR)</u> , or <u>DTC B1025-B1135 (UQA)</u> .
B124B	Cellular, Entertainment, and Navigation - <u>DTC B124B</u>
B124F	Cellular, Entertainment, and Navigation - <u>DTC B124F</u>
B124F	Displays and Gauges - <u>DTC B124F</u>
B125A	Cellular, Entertainment, and Navigation - <u>DTC B125A</u>
B125C	Cellular, Entertainment, and Navigation - <u>DTC B125C</u>
B1271	Cellular, Entertainment, and Navigation - <u>DTC B1271</u>
B1277	Cellular, Entertainment, and Navigation - <u>DTC B1277</u>
B127B	Image Display Cameras - <u>DTC B127B (UVB)</u> , or <u>DTC B127B (UVC)</u> .
B127C	Cellular, Entertainment, and Navigation - <u>DTC B127C</u>
B127E	Cellular, Entertainment, and Navigation - <u>DTC B127E (IOR)</u> , or <u>DTC B127E (IOS/IOU)</u> .
B1325	12 V Starting and Charging - <u>DTC B1325, C0800, or C1512</u>
B133B	Image Display Cameras - <u>DTC B133B</u>
B1370	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1371	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1372	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1373	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1374	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1375	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1376	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1377	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1378	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1379	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>

DTC	Diagnostic Procedure
B1380	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1381	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1382	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1383	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1384	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1385	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1386	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1387	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1388	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1389	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1395	Lighting - <u>DTC B1395</u>
B1395	HVAC - Automatic - <u>DTC B018A, B048C, B048E, or B1395</u>
B1405	Secondary and Configurable Customer Controls - <u>DTC B1405</u>
B1405	Parking Assistance Systems - <u>DTC B1405</u>
B1440	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1441	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1442	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1443	Wiring Systems and Power Management - <u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>
B1445	Wiring Systems and Power Management - <u>DTC B1445</u>
B1446	Cellular, Entertainment, and Navigation - <u>DTC B1446 or B1447</u>
B1447	Cellular, Entertainment, and Navigation - <u>DTC B1446 or B1447</u>
B144A	Wiring Systems and Power Management - <u>DTC B144A</u>
B144B	Wiring Systems and Power Management - <u>DTC B144B</u>
B1480	Lighting - <u>DTC B1480</u>
B1516	12 V Starting and Charging - <u>DTC B1516</u>
B1517	12 V Starting and Charging - <u>DTC B1517</u>
B151A	12 V Starting and Charging - <u>DTC B151A</u>
B1527	12 V Starting and Charging - <u>DTC B1527</u>
B1529	Secondary and Configurable Customer Controls - <u>DTC B1529</u>
B191A	Seat Heating and Cooling - <u>DTC B191A</u>
B2455	Cellular, Entertainment, and Navigation - <u>DTC B2455</u>
B2462	Cellular, Entertainment, and Navigation - <u>DTC B2462</u>
B2470	Cellular, Entertainment, and Navigation - <u>DTC B2470</u>
B2476	Cellular, Entertainment, and Navigation - <u>DTC B2476</u>
B248A	Cellular, Entertainment, and Navigation - <u>DTC B248A</u>
B2530	Lighting - <u>DTC B2530</u>

DTC	Diagnostic Procedure
B2545	Lighting - DTC B2545
B2560	Lighting - DTC B2560
B256B	Lighting - DTC B256B
B2575	Lighting - DTC B2575 or B2699
B257A	Lighting - DTC B257A
B257B	Lighting - DTC B257B
B2580	Lighting - DTC B2580
B2585	Lighting - DTC B2585 or B3867
B2610	Lighting - DTC B2610
B2615	Lighting - DTC B2615
B2625	Lighting - DTC B2625
B2645	Lighting - DTC B2645
B2699	Lighting - DTC B2575 or B2699
B270A	Shift Lock Control - DTC B270A
B2725	Transfer Case - MP 1622G (NQ7) - DTC B2725, P0698, or P0699
B2725	Transfer Case - MP 3025G (NQ6) - DTC B2725, P0698, or P0699
B272D	Rear Drive Axle - DTC B272D
B273A	Antilock Brake System - DTC B273A
B2740	Lighting - DTC B2740
B2745	Antilock Brake System - DTC B2745
B2750	Horns and Pedestrian Alerts - DTC B2750
B2955	Immobilizer - DTC B2955
B2B0D	Wiring Systems and Power Management - DTC B2B0D or B2B0E
B2B0E	Wiring Systems and Power Management - DTC B2B0D or B2B0E
B2B11	12 V Starting and Charging - DTC B2B11
B2B12	Data Communications - DTC B2B12 or B2B13
B2B13	Data Communications - DTC B2B12 or B2B13
B302A	Immobilizer - DTC B302A
B3031	Immobilizer - DTC B3031
B3055	Immobilizer - DTC B3055
B305C	Immobilizer - DTC B305C
B3060	Immobilizer - DTC B3060
B3105	Remote Functions - DTC B3105
B3106	Remote Functions - DTC B3106
B3109	Remote Functions - DTC B3109-B3113
B310D	Remote Functions - DTC B310D-B310F
B310E	Remote Functions - DTC B310D-B310F
B310F	Remote Functions - DTC B310D-B310F
B3110	Remote Functions - DTC B3109-B3113
B3111	Remote Functions - DTC B3109-B3113
B3112	Remote Functions - DTC B3109-B3113
B3113	Remote Functions - DTC B3109-B3113
B3125	Vehicle Access - DTC B3125, B3130, or B3135 (Crew Cab) , or DTC B3125, B3130, or B3135 (Extended Cab)
B3130	Vehicle Access - DTC B3125, B3130, or B3135 (Crew Cab) , or DTC B3125, B3130, or B3135 (Extended Cab)
B3135	Vehicle Access - DTC B3125, B3130, or B3135 (Crew Cab) , or DTC B3125, B3130, or B3135 (Extended Cab)
B3140	Vehicle Access - DTC B3140, B3145, B3150, or B3155

DTC	Diagnostic Procedure
B3145	Vehicle Access - <u>DTC B3140, B3145, B3150, or B3155</u>
B3150	Vehicle Access - <u>DTC B3140, B3145, B3150, or B3155</u>
B3155	Vehicle Access - <u>DTC B3140, B3145, B3150, or B3155</u>
B316B	Fixed and Moveable Windows - <u>DTC B316B, B317A, B318A, or B319A</u>
B317A	Fixed and Moveable Windows - <u>DTC B316B, B317A, B318A, or B319A</u>
B318A	Fixed and Moveable Windows - <u>DTC B316B, B317A, B318A, or B319A</u>
B319A	Fixed and Moveable Windows - <u>DTC B316B, B317A, B318A, or B319A</u>
B3205	Fixed and Moveable Windows - <u>DTC B3205</u>
B3567	Displays and Gauges - <u>DTC B3567</u>
B356A	Driver Assistance Systems - <u>DTC B356A</u>
B3596	Lighting - <u>DTC B3596</u>
B3600	Lighting - <u>DTC B3600</u>
B3622	Secondary and Configurable Customer Controls - <u>DTC B3622</u>
B3623	Cruise Control - <u>DTC B3623, B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P0589, P0592, P0593, P155A-P155C, or P162C</u>
B3650	Lighting - <u>DTC B3650</u>
B3715	Wipers and Washers - <u>DTC B3715 or B3875</u>
B3794	Cruise Control - <u>DTC B3623, B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P0589, P0592, P0593, P155A-P155C, or P162C</u>
B3806	Lighting - <u>DTC B3806</u>
B3867	Lighting - <u>DTC B2585 or B3867</u>
B3873	Wipers and Washers - <u>DTC B3873</u>
B3875	Wipers and Washers - <u>DTC B3715 or B3875</u>
B3881	Lighting - <u>DTC B3881 or B3882</u>
B3882	Lighting - <u>DTC B3881 or B3882</u>
B3883	Lighting - <u>DTC B3883</u>
B3884	Lighting - <u>DTC B3884</u>
B3899	Immobilizer - <u>DTC B3899</u>
B389A	Immobilizer - <u>DTC B389A</u>
B3902	Immobilizer - <u>DTC B3902</u>
B3924	Immobilizer - <u>DTC B3924-B3928</u>
B3925	Immobilizer - <u>DTC B3924-B3928</u>
B3926	Immobilizer - <u>DTC B3924-B3928</u>
B3927	Immobilizer - <u>DTC B3924-B3928</u>
B3928	Immobilizer - <u>DTC B3924-B3928</u>
B3930	Vehicle Access - <u>DTC B3930</u>
B3933	HVAC - Automatic - <u>DTC B0173, B0178, or B3933</u>
B3933	HVAC - Manual - <u>DTC B3933</u>
B3935	Immobilizer - <u>DTC B3935</u>
B393B	HVAC - Automatic - <u>DTC B393B</u>
B393B	HVAC - Manual - <u>DTC B393B</u>
B3948	Lighting - <u>DTC B3948 or B3949</u>
B3949	Lighting - <u>DTC B3948 or B3949</u>
B3950	Lighting - <u>DTC B3950 or B3951</u>
B3951	Lighting - <u>DTC B3950 or B3951</u>
B395A	Image Display Cameras - <u>DTC B395A</u>
B3976	Immobilizer - <u>DTC B3976</u>
B3978	Immobilizer - <u>DTC B3978-B3982</u>
B3979	Immobilizer - <u>DTC B3978-B3982</u>

[illegible]

DTC	Diagnostic Procedure
C0082	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0083	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0084	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0085	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0086	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0087	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0088	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0089	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C008A	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C008B	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C008C	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C008D	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C008E	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C008F	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0090	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0091	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0092	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0093	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0094	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0095	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0110	Antilock Brake System - DTC C0110
C0121	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0131	Antilock Brake System - DTC C0131
C0141	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0146	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0151	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0156	Antilock Brake System - DTC C0060-C0095, C0121, C0141, C0146, C0151, or C0156
C0161	Antilock Brake System - DTC C0161
C0176	Power Steering - DTC C0176
C0186	Antilock Brake System - DTC C0186, C0196, or C0287
C0196	Antilock Brake System - DTC C0186, C0196, or C0287
C025E	Hydraulic Brakes - DTC C025E
C025F	Antilock Brake System - DTC C025F, C0274, C0275, or C0280
C0267	Hydraulic Brakes - DTC C0267
C0273	Hydraulic Brakes - DTC C0273
C0274	Antilock Brake System - DTC C025F, C0274, C0275, or C0280
C0275	Antilock Brake System - DTC C025F, C0274, C0275, or C0280
C0277	Lighting - DTC C0277 or C0890
C027B	Hydraulic Brakes - DTC C027B
C0280	Antilock Brake System - DTC C025F, C0274, C0275, or C0280
C0287	Antilock Brake System - DTC C0186, C0196, or C0287
C0297	Lighting - DTC C0297
C0299	Hydraulic Brakes - DTC C0299
C0306	Transfer Case - MP 1622G (NQ7) - DTC C0306 or C0381
C0306	Transfer Case - MP 3025G (NQ6) - DTC C0306 or C0381
C0321	Transfer Case - MP 1622G (NQ7) - DTC C0321
C0321	Transfer Case - MP 3025G (NQ6) - DTC C0321 or C0326
C0326	Transfer Case - MP 3025G (NQ6) - DTC C0321 or C0326

DTC	Diagnostic Procedure
C0364	Transfer Case - MP 1622G (NQ7) - <u>DTC C0364 or C0379</u>
C0364	Transfer Case - MP 3025G (NQ6) - <u>DTC C0364 or C0379</u>
C0379	Transfer Case - MP 1622G (NQ7) - <u>DTC C0364 or C0379</u>
C0379	Transfer Case - MP 3025G (NQ6) - <u>DTC C0364 or C0379</u>
C0381	Transfer Case - MP 1622G (NQ7) - <u>DTC C0306 or C0381</u>
C0381	Transfer Case - MP 3025G (NQ6) - <u>DTC C0306 or C0381</u>
C0387	Transfer Case - MP 1622G (NQ7) - <u>DTC C0387</u>
C0387	Transfer Case - MP 3025G (NQ6) - <u>DTC C0387</u>
C038D	Transfer Case - MP 1622G (NQ7) - <u>DTC C038D</u>
C038D	Transfer Case - MP 3025G (NQ6) - <u>DTC C038D</u>
C0392	Transfer Case - MP 3025G (NQ6) - <u>DTC C0392, P0642, or P0643</u>
C0396	Transfer Case - MP 1622G (NQ7) - <u>DTC C0396, C039E, P0652, or P0653</u>
C0396	Transfer Case - MP 3025G (NQ6) - <u>DTC C0396, C039E, P0652, or P0653</u>
C0397	Transfer Case - MP 3025G (NQ6) - <u>DTC C0397</u>
C0398	Transfer Case - MP 3025G (NQ6) - <u>DTC C0398</u>
C039E	Transfer Case - MP 1622G (NQ7) - <u>DTC C0396, C039E, P0652, or P0653</u>
C039E	Transfer Case - MP 3025G (NQ6) - <u>DTC C0396, C039E, P0652, or P0653</u>
C0460	Power Steering - <u>DTC C0460</u>
C0475	Power Steering - <u>DTC C0475</u>
C047A	Power Steering - <u>DTC C047A</u>
C0545	Power Steering - <u>DTC C0545</u>
C0569	Tire Pressure Monitoring - <u>DTC C0569</u>
C056D	Data Communications - <u>DTC C056D</u>
C056D	Power Steering - <u>DTC C056D (Power Steering Control Module)</u>
C056E	Data Communications - <u>DTC C056E</u>
C056E	Power Steering - <u>DTC C056E</u>
C0750	Tire Pressure Monitoring - <u>DTC C0750, C0755, C0760, or C0765</u>
C0755	Tire Pressure Monitoring - <u>DTC C0750, C0755, C0760, or C0765</u>
C0760	Tire Pressure Monitoring - <u>DTC C0750, C0755, C0760, or C0765</u>
C0765	Tire Pressure Monitoring - <u>DTC C0750, C0755, C0760, or C0765</u>
C0775	Tire Pressure Monitoring - <u>DTC C0775</u>
C0800	12 V Starting and Charging - <u>DTC B1325, C0800, or C1512</u>
C0890	Lighting - <u>DTC C0277 or C0890</u>
C1114	Trailer Systems - <u>DTC C1114, C111B, C1595, or C1596</u>
C1115	Trailer Systems - <u>DTC C1115-C1118 or C1562</u>
C1116	Trailer Systems - <u>DTC C1115-C1118 or C1562</u>
C1117	Trailer Systems - <u>DTC C1115-C1118 or C1562</u>
C1118	Trailer Systems - <u>DTC C1115-C1118 or C1562</u>
C111A	Trailer Systems - <u>DTC C111A</u>
C111B	Trailer Systems - <u>DTC C1114, C111B, C1595, or C1596</u>
C11A5	Rear Drive Axle - <u>DTC C11A5</u>
C11B0	Front Drive Axle - <u>DTC C11B0</u>
C1211	Front Drive Axle - <u>DTC C1211</u>
C124F	Antilock Brake System - <u>DTC C124F, C1250, or C1251</u>
C1250	Antilock Brake System - <u>DTC C124F, C1250, or C1251</u>
C1251	Antilock Brake System - <u>DTC C124F, C1250, or C1251</u>
C1252	Antilock Brake System - <u>DTC C1252-C1254</u>
C1253	Antilock Brake System - <u>DTC C1252-C1254</u>

DTC	Diagnostic Procedure
C1254	Antilock Brake System - DTC C1252-C1254
C1304	Front Drive Axle - DTC C1304 or C1305
C1305	Front Drive Axle - DTC C1304 or C1305
C1306	Rear Drive Axle - DTC C1306 or C1307
C1307	Rear Drive Axle - DTC C1306 or C1307
C1308	Front Drive Axle - DTC C1308
C1309	Rear Drive Axle - DTC C1309
C1512	12 V Starting and Charging - DTC B1325, C0800, or C1512
C1562	Trailer Systems - DTC C1115-C1118 or C1562
C1595	Trailer Systems - DTC C1114, C111B, C1595, or C1596
C1596	Trailer Systems - DTC C1114, C111B, C1595, or C1596
C159A	Rear Drive Axle - DTC C159A
C159B	Front Drive Axle - DTC C159B
P0010	Engine Controls and Fuel - 2.5L (LCV) - DTC P0010-P0014 or P2088-P2091
P0010	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095
P0011	Engine Controls and Fuel - 2.5L (LCV) - DTC P0010-P0014 or P2088-P2091
P0011	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095
P0012	Engine Controls and Fuel - 2.5L (LCV) - DTC P0010-P0014 or P2088-P2091
P0013	Engine Controls and Fuel - 2.5L (LCV) - DTC P0010-P0014 or P2088-P2091
P0013	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095
P0014	Engine Controls and Fuel - 2.5L (LCV) - DTC P0010-P0014 or P2088-P2091
P0014	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095
P0016	Engine Controls and Fuel - 2.5L (LCV) - DTC P0016 or P0017
P0016	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0016
P0016	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0016, P0017, P0018, or P0019
P0017	Engine Controls and Fuel - 2.5L (LCV) - DTC P0016 or P0017
P0017	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0016, P0017, P0018, or P0019
P0018	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0016, P0017, P0018, or P0019
P0019	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0016, P0017, P0018, or P0019
P0020	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095
P0021	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095
P0023	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095
P0024	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095
P0030	Engine Controls and Fuel - 2.5L (LCV) - DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C
P0030	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0030-P0032, P0036-P0038, P0050-P0054, P0056-P0060, P0135, P0141, P0155, P0161, P103B, or P103C
P0031	Engine Controls and Fuel - 2.5L (LCV) - DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C
P0031	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0030-P0032, P0036-P0038, P0050-P0054, P0056-P0060, P0135, P0141, P0155, P0161, P103B, or P103C

[illegible]

DTC	Diagnostic Procedure
P005D	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0030-P0032, P0036-P0038, P0050-P0054, P0056-P0060, P0135, P0141, P0155, P0161, P103B, or P103C</u>
P005E	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0030-P0032, P0036-P0038, P0050-P0054, P0056-P0060, P0135, P0141, P0155, P0161, P103B, or P103C</u>
P005F	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0030-P0032, P0036-P0038, P0050-P0054, P0056-P0060, P0135, P0141, P0155, P0161, P103B, or P103C</u>
P0060	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0030-P0032, P0036-P0038, P0050-P0054, P0056-P0060, P0135, P0141, P0155, P0161, P103B, or P103C</u>
P0068	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0068 or P1101</u>
P0068	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0068 or P1101</u>
P0070	Displays and Gauges - <u>DTC P0070</u>
P0071	Displays and Gauges - <u>DTC P0071-P0074</u>
P0072	Displays and Gauges - <u>DTC P0071-P0074</u>
P0073	Displays and Gauges - <u>DTC P0071-P0074</u>
P0074	Displays and Gauges - <u>DTC P0071-P0074</u>
P007B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P007B or P105D</u>
P007C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P007C-P007E or P10D6-P10D8</u>
P007D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P007C-P007E or P10D6-P10D8</u>
P007E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P007C-P007E or P10D6-P10D8</u>
P0087	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0087, P0089, P228C, P228D, or P2293</u>
P0089	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20</u>
P0089	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0087, P0089, P228C, P228D, or P2293</u>
P0089	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20</u>
P0090	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P0090	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0090-P0092, P163A, P163B, or P2294-P2296</u>
P0090	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0090-P0092, P00C8, P00C9, P00CA, or P163A</u>
P0091	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P0091	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0090-P0092, P163A, P163B, or P2294-P2296</u>
P0091	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0090-P0092, P00C8, P00C9, P00CA, or P163A</u>
P0092	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P0092	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0090-P0092, P163A, P163B, or P2294-P2296</u>
P0092	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0090-P0092, P00C8, P00C9, P00CA, or P163A</u>
P0096	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0096 or P0111</u>
P0096	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0096, P00E9, or P0111</u>
P0096	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0096 or P0111</u>
P0097	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P0097	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P0097	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0097-P0099 or P00F4-P00F6</u>

DTC	Diagnostic Procedure
P0098	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P0098	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P0098	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P0099	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P0099	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P0099	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P00B3	Engine Heating and Cooling - <u>DTC P00B3 or P00B4</u>
P00B4	Engine Heating and Cooling - <u>DTC P00B3 or P00B4</u>
P00B7	Engine Heating and Cooling - <u>DTC P00B7, P0597-P0599, or P2181 - E41 Engine Coolant Thermostat Heater Malfunction</u>
P00C6	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20</u>
P00C6	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20</u>
P00C7	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P00C7</u>
P00C7	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P00C7</u>
P00C7	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P00C7</u>
P00C8	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P00C8	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0090-P0092, P00C8, P00C9, P00CA, or P163A</u>
P00C9	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P00C9	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0090-P0092, P00C8, P00C9, P00CA, or P163A</u>
P00CA	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>
P00CA	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0090-P0092, P00C8, P00C9, P00CA, or P163A</u>
P00E9	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0096, P00E9, or P0111</u>
P00EA	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P00EA-P00EC</u>
P00EB	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P00EA-P00EC</u>
P00EC	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P00EA-P00EC</u>
P00F4	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P00F4	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P00F4	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P00F5	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P00F5	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P00F5	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P00F6	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P00F6	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P00F6	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0097-P0099 or P00F4-P00F6</u>
P0101	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0101</u>
P0101	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0101-P0103</u>
P0101	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0101-P0103</u>
P0102	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0102 or P0103</u>
P0102	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0101-P0103</u>
P0102	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0101-P0103</u>
P0103	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0102 or P0103</u>
P0103	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0101-P0103</u>

DTC	Diagnostic Procedure
P0103	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0101-P0103</u>
P0106	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0106, P0107, or P0108</u>
P0106	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0106, P0107, or P0108</u>
P0106	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0106, P0107, or P0108</u>
P0107	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0106, P0107, or P0108</u>
P0107	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0106, P0107, or P0108</u>
P0107	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0106, P0107, or P0108</u>
P0108	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0106, P0107, or P0108</u>
P0108	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0106, P0107, or P0108</u>
P0108	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0106, P0107, or P0108</u>
P0111	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0096 or P0111</u>
P0111	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0096, P00E9, or P0111</u>
P0111	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0096 or P0111</u>
P0112	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0112, P0113, or P0114</u>
P0112	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0112, P0113, or P0114</u>
P0112	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0112, P0113, or P0114</u>
P0113	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0112, P0113, or P0114</u>
P0113	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0112, P0113, or P0114</u>
P0113	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0112, P0113, or P0114</u>
P0114	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0112, P0113, or P0114</u>
P0114	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0112, P0113, or P0114</u>
P0114	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0112, P0113, or P0114</u>
P0116	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0116-P0119</u>
P0116	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0116-P0119</u>
P0117	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0116-P0119</u>
P0117	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0117, P0118, or P0119</u>
P0117	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0116-P0119</u>
P0118	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0116-P0119</u>
P0118	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0117, P0118, or P0119</u>
P0118	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0116-P0119</u>
P0119	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0116-P0119</u>
P0119	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0117, P0118, or P0119</u>
P0119	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0116-P0119</u>
P0121	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0121-P0123, P0222, P0223, P2135, U0606, or U0607</u>
P0121	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0121-P0123, P0222, P0223, P2135, U0606, or U0607</u>
P0122	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0121-P0123, P0222, P0223, P2135, U0606, or U0607</u>
P0122	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0121-P0123, P0222, P0223, P2135, U0606, or U0607</u>
P0123	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0121-P0123, P0222, P0223, P2135, U0606, or U0607</u>
P0123	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0121-P0123, P0222, P0223, P2135, U0606, or U0607</u>
P0128	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0128 or P01F0</u>
P0128	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0128 or P01F0</u>
P0128	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0128 or P01F0</u>
P0131	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0131, P0132, P0137, or P0138</u>

DTC	Diagnostic Procedure
P0131	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158
P0132	Engine Controls and Fuel - 2.5L (LCV) - DTC P0131, P0132, P0137, or P0138
P0132	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158
P0133	Engine Controls and Fuel - 2.5L (LCV) - DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P1133, P2270, or P2271
P0135	Engine Controls and Fuel - 2.5L (LCV) - DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C
P0135	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0030-P0032, P0036-P0038, P0050-P0054, P0056-P0060, P0135, P0141, P0155, P0161, P103B, or P103C
P0137	Engine Controls and Fuel - 2.5L (LCV) - DTC P0131, P0132, P0137, or P0138
P0137	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158
P0138	Engine Controls and Fuel - 2.5L (LCV) - DTC P0131, P0132, P0137, or P0138
P0138	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158
P013A	Engine Controls and Fuel - 2.5L (LCV) - DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P1133, P2270, or P2271
P013A	Engine Controls and Fuel - 3.6L (LGZ) - DTC P013A-P013F, P014A, P014B, P015A-P015D, or P2270-P2273
P013B	Engine Controls and Fuel - 2.5L (LCV) - DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P1133, P2270, or P2271
P013B	Engine Controls and Fuel - 3.6L (LGZ) - DTC P013A-P013F, P014A, P014B, P015A-P015D, or P2270-P2273
P013C	Engine Controls and Fuel - 3.6L (LGZ) - DTC P013A-P013F, P014A, P014B, P015A-P015D, or P2270-P2273
P013D	Engine Controls and Fuel - 3.6L (LGZ) - DTC P013A-P013F, P014A, P014B, P015A-P015D, or P2270-P2273
P013E	Engine Controls and Fuel - 2.5L (LCV) - DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P1133, P2270, or P2271
P013E	Engine Controls and Fuel - 3.6L (LGZ) - DTC P013A-P013F, P014A, P014B, P015A-P015D, or P2270-P2273
P013F	Engine Controls and Fuel - 2.5L (LCV) - DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P1133, P2270, or P2271
P013F	Engine Controls and Fuel - 3.6L (LGZ) - DTC P013A-P013F, P014A, P014B, P015A-P015D, or P2270-P2273
P0141	Engine Controls and Fuel - 2.5L (LCV) - DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C
P0141	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0030-P0032, P0036-P0038, P0050-P0054, P0056-P0060, P0135, P0141, P0155, P0161, P103B, or P103C
P014A	Engine Controls and Fuel - 3.6L (LGZ) - DTC P013A-P013F, P014A, P014B, P015A-P015D, or P2270-P2273
P014B	Engine Controls and Fuel - 3.6L (LGZ) - DTC P013A-P013F, P014A, P014B, P015A-P015D, or P2270-P2273
P0151	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158
P0152	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158
P0155	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0030-P0032, P0036-P0038, P0050-P0054, P0056-P0060, P0135, P0141, P0155, P0161, P103B, or P103C

DTC	Diagnostic Procedure
P0157	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158</u>
P0158	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158</u>
P015A	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P1133, P2270, or P2271</u>
P015A	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P013A-P013F, P014A, P014B, P015A-P015D, or P2270-P2273</u>
P015B	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P1133, P2270, or P2271</u>
P015B	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P013A-P013F, P014A, P014B, P015A-P015D, or P2270-P2273</u>
P015C	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P013A-P013F, P014A, P014B, P015A-P015D, or P2270-P2273</u>
P015D	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P013A-P013F, P014A, P014B, P015A-P015D, or P2270-P2273</u>
P0161	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0030-P0032, P0036-P0038, P0050-P0054, P0056-P0060, P0135, P0141, P0155, P0161, P103B, or P103C</u>
P0171	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0171 or P0172</u>
P0171	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0171 or P0172</u>
P0171	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0171, P0172, P0174, or P0175</u>
P0172	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0171 or P0172</u>
P0172	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0171 or P0172</u>
P0172	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0171, P0172, P0174, or P0175</u>
P0174	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0171, P0172, P0174, or P0175</u>
P0175	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0171, P0172, P0174, or P0175</u>
P0181	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0181-P0184</u>
P0182	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5</u>
P0182	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0181-P0184</u>
P0182	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5</u>
P0183	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5</u>
P0183	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0181-P0184</u>
P0183	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5</u>
P0184	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0181-P0184</u>
P0187	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5</u>
P0187	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5</u>
P0188	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5</u>
P0188	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5</u>
P018B	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P018B-P018D</u>
P018B	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P018B-P018D</u>
P018C	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P018B-P018D</u>
P018C	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P018B-P018D</u>
P018D	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P018B-P018D</u>

DTC	Diagnostic Procedure
P018D	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P018B-P018D</u>
P0191	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5</u>
P0191	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0191-P0193, P127C, or P127D</u>
P0191	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5</u>
P0192	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5</u>
P0192	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0191-P0193, P127C, or P127D</u>
P0192	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5</u>
P0193	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0191-P0193, P127C, or P127D</u>
P01CB	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P01CB-P01D2</u>
P01CC	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P01CB-P01D2</u>
P01CD	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P01CB-P01D2</u>
P01CE	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P01CB-P01D2</u>
P01CF	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P01CB-P01D2</u>
P01D0	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P01CB-P01D2</u>
P01D1	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P01CB-P01D2</u>
P01D2	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P01CB-P01D2</u>
P01F0	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0128 or P01F0</u>
P01F0	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0128 or P01F0</u>
P01F0	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0128 or P01F0</u>
P0201	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0201	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151</u>
P0201	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P0202	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0202	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151</u>
P0202	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P0203	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0203	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151</u>
P0203	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P0204	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148,</u>

DTC	Diagnostic Procedure
	<u>P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0204	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151</u>
P0204	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P0205	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P0206	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P020A	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P020A-P020D</u>
P020B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P020A-P020D</u>
P020C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P020A-P020D</u>
P020D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P020A-P020D</u>
P0216	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0216</u>
P0222	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0121-P0123, P0222, P0223, P2135, U0606, or U0607</u>
P0222	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0121-P0123, P0222, P0223, P2135, U0606, or U0607</u>
P0223	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0121-P0123, P0222, P0223, P2135, U0606, or U0607</u>
P0223	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0121-P0123, P0222, P0223, P2135, U0606, or U0607</u>
P0231	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0231, P0232, or P023F</u>
P0231	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0231, P0232, or P023F</u>
P0232	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0231, P0232, or P023F</u>
P0232	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0231, P0232, or P023F</u>
P0234	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0234, P0299, or P2263</u>
P023F	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0231, P0232, or P023F</u>
P023F	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0231, P0232, or P023F</u>
P0261	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0261	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151</u>
P0261	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P0262	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0262	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151</u>
P0262	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>

DTC	Diagnostic Procedure
P0264	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0264	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151</u>
P0264	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P0265	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0265	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151</u>
P0265	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P0267	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0267	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151</u>
P0267	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P0268	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0268	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151</u>
P0268	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P026A	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026A</u>
P026B	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P026B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P026B	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P026C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026C or P026D</u>
P026D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026C or P026D</u>
P0270	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148,</u>

DTC	Diagnostic Procedure
	<u>P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0270	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151</u>
P0270	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P0271	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>
P0271	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151</u>
P0271	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P0273	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P0274	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P0276	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P0277	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>
P0299	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0234, P0299, or P2263</u>
P02CC	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02CC-P02D3</u>
P02CD	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02CC-P02D3</u>
P02CE	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02CC-P02D3</u>
P02CF	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02CC-P02D3</u>
P02D0	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02CC-P02D3</u>
P02D1	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02CC-P02D3</u>
P02D2	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02CC-P02D3</u>
P02D3	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02CC-P02D3</u>
P02E0	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02E0, P02E2, P02E3, P02EB, P122B, P122C, or P1425</u>
P02E1	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02E1, P02E4, or P02E5</u>
P02E2	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02E0, P02E2, P02E3, P02EB, P122B, P122C, or P1425</u>
P02E3	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02E0, P02E2, P02E3, P02EB, P122B, P122C, or P1425</u>
P02E4	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02E1, P02E4, or P02E5</u>
P02E5	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02E1, P02E4, or P02E5</u>
P02E8	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02E8, P02E9, or U0654</u>
P02E9	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02E8, P02E9, or U0654</u>
P02EB	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02E0, P02E2, P02E3, P02EB, P122B, P122C, or P1425</u>
P0300	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0300-P0304</u>
P0300	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0300-P0304</u>

[illegible]

DTC	Diagnostic Procedure
P0333	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0324-P0333, P06B6, or P06B7</u>
P0333	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0324-P0328, P0330-P0333, P06B6, or P06B7</u>
P0335	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0335 or P0336</u>
P0335	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0335 or P0336</u>
P0335	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0335 or P0336</u>
P0336	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0335 or P0336</u>
P0336	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0335 or P0336</u>
P0336	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0335 or P0336</u>
P0340	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0340, P0341, P0365, or P0366</u>
P0340	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0340 or P0341</u>
P0340	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0340, P0341, P0345, P0346, P0365, P0366, P0390, or P0391</u>
P0341	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0340, P0341, P0365, or P0366</u>
P0341	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0340 or P0341</u>
P0341	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0340, P0341, P0345, P0346, P0365, P0366, P0390, or P0391</u>
P0345	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0340, P0341, P0345, P0346, P0365, P0366, P0390, or P0391</u>
P0346	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0340, P0341, P0345, P0346, P0365, P0366, P0390, or P0391</u>
P0351	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P0351	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316</u>
P0352	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P0352	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316</u>
P0353	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P0353	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316</u>
P0354	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>
P0354	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316</u>
P0355	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316</u>
P0356	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316</u>
P0365	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0340, P0341, P0365, or P0366</u>
P0365	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0340, P0341, P0345, P0346, P0365, P0366, P0390, or P0391</u>
P0366	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0340, P0341, P0365, or P0366</u>
P0366	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0340, P0341, P0345, P0346, P0365, P0366, P0390, or P0391</u>
P037A	Displays and Gauges - <u>DTC P037A, P037B, or P0381</u>
P037A	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P037A, P037B, or P0381</u>
P037B	Displays and Gauges - <u>DTC P037A, P037B, or P0381</u>
P037B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P037A, P037B, or P0381</u>

DTC	Diagnostic Procedure
P037E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P037E or P037F</u>
P037F	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P037E or P037F</u>
P0381	Displays and Gauges - <u>DTC P037A, P037B, or P0381</u>
P0381	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P037A, P037B, or P0381</u>
P0390	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0340, P0341, P0345, P0346, P0365, P0366, P0390, or P0391</u>
P0391	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0340, P0341, P0345, P0346, P0365, P0366, P0390, or P0391</u>
P0400	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0400-P0402</u>
P0401	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0400-P0402</u>
P0402	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0400-P0402</u>
P0403	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0403, P1402, P1407, P140F, or P1424</u>
P0404	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0404 or P042E</u>
P0405	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0405 or P0406</u>
P0406	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0405 or P0406</u>
P040B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P040B-P040E or P041B-P041E</u>
P040C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P040B-P040E or P041B-P041E</u>
P040D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P040B-P040E or P041B-P041E</u>
P040E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P040B-P040E or P041B-P041E</u>
P041B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P040B-P040E or P041B-P041E</u>
P041C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P040B-P040E or P041B-P041E</u>
P041D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P040B-P040E or P041B-P041E</u>
P041E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P040B-P040E or P041B-P041E</u>
P0420	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0420</u>
P0420	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0420 or P0430</u>
P0421	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0421</u>
P0422	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0422</u>
P042E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0404 or P042E</u>
P0430	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0420 or P0430</u>
P0442	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0442 or P0455</u>
P0442	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0442 or P0455</u>
P0443	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0443, P0458, or P0459</u>
P0443	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0443, P0458, or P0459</u>
P0446	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0446</u>
P0446	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0446</u>
P0449	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0449, P0498, or P0499</u>
P0449	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0449, P0498, or P0499</u>
P0451	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0451-P0454</u>
P0451	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0451-P0454</u>
P0452	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0451-P0454</u>
P0452	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0451-P0454</u>
P0453	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0451-P0454</u>
P0453	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0451-P0454</u>
P0454	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0451-P0454</u>
P0454	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0451-P0454</u>
P0455	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0442 or P0455</u>
P0455	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0442 or P0455</u>
P0458	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0443, P0458, or P0459</u>

DTC	Diagnostic Procedure
P0458	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0443, P0458, or P0459</u>
P0459	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0443, P0458, or P0459</u>
P0459	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0443, P0458, or P0459</u>
P0460	Displays and Gauges - <u>DTC P0460</u>
P0461	Displays and Gauges - <u>DTC P0461-P0464 (with LCV or LGZ)</u> , or <u>DTC P0461-P0464 (with LWN)</u>
P0462	Displays and Gauges - <u>DTC P0461-P0464 (with LCV or LGZ)</u> , or <u>DTC P0461-P0464 (with LWN)</u>
P0463	Displays and Gauges - <u>DTC P0461-P0464 (with LCV or LGZ)</u> , or <u>DTC P0461-P0464 (with LWN)</u>
P0464	Displays and Gauges - <u>DTC P0461-P0464 (with LCV or LGZ)</u> , or <u>DTC P0461-P0464 (with LWN)</u>
P0480	Engine Heating and Cooling - <u>DTC P0480, P0691, or P0692 (with LWN)</u>
P0483	Engine Heating and Cooling - <u>DTC P0483</u>
P0494	Engine Heating and Cooling - <u>DTC P0494, P30EE, P30EF, or U0632 - Cooling Fan Malfunction</u>
P0495	Engine Heating and Cooling - <u>DTC P0495</u>
P0496	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0496</u>
P0496	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0496</u>
P0498	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0449, P0498, or P0499</u>
P0498	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0449, P0498, or P0499</u>
P0499	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0449, P0498, or P0499</u>
P0499	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0449, P0498, or P0499</u>
P049D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P049D</u>
P0506	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0506 or P0507</u>
P0506	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0506 or P0507</u>
P0506	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0506 or P0507</u>
P0507	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0506 or P0507</u>
P0507	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0506 or P0507</u>
P0507	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0506 or P0507</u>
P050D	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P050D</u>
P050D	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P050D</u>
P0513	Immobilizer - <u>DTC P0513</u>
P0521	Displays and Gauges - <u>DTC P0521, P0522, or P0523</u>
P0522	Displays and Gauges - <u>DTC P0521, P0522, or P0523</u>
P0523	Displays and Gauges - <u>DTC P0521, P0522, or P0523</u>
P0526	Engine Heating and Cooling - <u>DTC P0526</u>
P0532	HVAC - Automatic - <u>DTC P0532 or P0533</u>
P0532	HVAC - Manual - <u>DTC P0532 or P0533</u>
P0533	HVAC - Automatic - <u>DTC P0532 or P0533</u>
P0533	HVAC - Manual - <u>DTC P0532 or P0533</u>
P053A	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P053A-P053C</u>
P053B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P053A-P053C</u>
P053C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P053A-P053C</u>
P0545	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0545, P0546, P2032, P2033, P242C, P242D, P2470, P2471, P2481, or P2482</u>
P0546	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0545, P0546, P2032, P2033, P242C, P242D, P2470, P2471, P2481, or P2482</u>
P054E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P054E or P054F</u>

DTC	Diagnostic Procedure
P054F	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P054E or P054F</u>
P0560	12 V Starting and Charging - <u>DTC P0560-P0563</u>
P0561	12 V Starting and Charging - <u>DTC P0560-P0563</u>
P0562	12 V Starting and Charging - <u>DTC P0560-P0563</u>
P0563	12 V Starting and Charging - <u>DTC P0560-P0563</u>
P0564	Cruise Control - <u>DTC B3623, B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P0589, P0592, P0593, P155A-P155C, or P162C</u>
P0565	Cruise Control - <u>DTC B3623, B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P0589, P0592, P0593, P155A-P155C, or P162C</u>
P0567	Cruise Control - <u>DTC B3623, B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P0589, P0592, P0593, P155A-P155C, or P162C</u>
P0568	Cruise Control - <u>DTC B3623, B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P0589, P0592, P0593, P155A-P155C, or P162C</u>
P056C	Cruise Control - <u>DTC B3623, B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P0589, P0592, P0593, P155A-P155C, or P162C</u>
P0572	Cruise Control - <u>DTC P0572 or P0573</u>
P0573	Cruise Control - <u>DTC P0572 or P0573</u>
P0575	Cruise Control - <u>DTC P0575</u>
P057B	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P057B-P057E</u>
P057B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P057B-P057E</u>
P057B	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P057B-P057E</u>
P057C	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P057B-P057E</u>
P057C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P057B-P057E</u>
P057C	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P057B-P057E</u>
P057D	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P057B-P057E</u>
P057D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P057B-P057E</u>
P057D	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P057B-P057E</u>
P057E	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P057B-P057E</u>
P057E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P057B-P057E</u>
P057E	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P057B-P057E</u>
P0580	Cruise Control - <u>DTC B3623, B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P0589, P0592, P0593, P155A-P155C, or P162C</u>
P0581	Cruise Control - <u>DTC B3623, B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P0589, P0592, P0593, P155A-P155C, or P162C</u>
P0589	Cruise Control - <u>DTC B3623, B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P0589, P0592, P0593, P155A-P155C, or P162C</u>
P0592	Cruise Control - <u>DTC B3623, B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P0589, P0592, P0593, P155A-P155C, or P162C</u>
P0593	Cruise Control - <u>DTC B3623, B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P0589, P0592, P0593, P155A-P155C, or P162C</u>
P0597	Engine Heating and Cooling - <u>DTC P00B7, P0597-P0599, or P2181 - E41 Engine Coolant Thermostat Heater Malfunction</u>
P0598	Engine Heating and Cooling - <u>DTC P00B7, P0597-P0599, or P2181 - E41 Engine Coolant Thermostat Heater Malfunction</u>
P0599	Engine Heating and Cooling - <u>DTC P00B7, P0597-P0599, or P2181 - E41 Engine Coolant Thermostat Heater Malfunction</u>
P059F	Bumpers and Fascias - <u>DTC P059F or P151E</u>
P0601	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>

DTC	Diagnostic Procedure
P0601	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P0601	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P0601	Data Communications - DTC P0601-P0607 , P060A-P060C , P0610 , P062F , P0630 , P16E9-P16F3 , P16F9 , P16FD , P16FE , P262B , P30D6-P30DD , P3186 , or P3996
P0601	Automatic Transmission - 6L50 (MYB) - DTC P0601-P0604 or P062F
P0601	Automatic Transmission - 8L45 (M5T) - DTC P0601-P0604 , P0606 , P0607 , P060A , P062F , P16F3 , P16F4 , or P16FB
P0602	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P0602	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P0602	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P0602	Data Communications - DTC P0601-P0607 , P060A-P060C , P0610 , P062F , P0630 , P16E9-P16F3 , P16F9 , P16FD , P16FE , P262B , P30D6-P30DD , P3186 , or P3996
P0602	Automatic Transmission - 6L50 (MYB) - DTC P0601-P0604 or P062F
P0602	Automatic Transmission - 8L45 (M5T) - DTC P0601-P0604 , P0606 , P0607 , P060A , P062F , P16F3 , P16F4 , or P16FB
P0603	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P0603	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P0603	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P0603	Data Communications - DTC P0601-P0607 , P060A-P060C , P0610 , P062F , P0630 , P16E9-P16F3 , P16F9 , P16FD , P16FE , P262B , P30D6-P30DD , P3186 , or P3996
P0603	Automatic Transmission - 6L50 (MYB) - DTC P0601-P0604 or P062F
P0603	Automatic Transmission - 8L45 (M5T) - DTC P0601-P0604 , P0606 , P0607 , P060A , P062F , P16F3 , P16F4 , or P16FB
P0604	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P0604	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C ,

DTC	Diagnostic Procedure
	<u>P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P0604	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P0604	Data Communications - <u>DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996</u>
P0604	Automatic Transmission - 6L50 (MYB) - <u>DTC P0601-P0604 or P062F</u>
P0604	Automatic Transmission - 8L45 (M5T) - <u>DTC P0601-P0604, P0606, P0607, P060A, P062F, P16F3, P16F4, or P16FB</u>
P0605	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P0605	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P0605	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P0605	Data Communications - <u>DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996</u>
P0606	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P0606	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P0606	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P0606	Data Communications - <u>DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996</u>
P0606	Automatic Transmission - 8L45 (M5T) - <u>DTC P0601-P0604, P0606, P0607, P060A, P062F, P16F3, P16F4, or P16FB</u>
P0607	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P0607	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P0607	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>

DTC	Diagnostic Procedure
P0607	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996
P0607	Automatic Transmission - 8L45 (M5T) - DTC P0601-P0604, P0606, P0607, P060A, P062F, P16F3, P16F4, or P16FB
P060A	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P060A	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P060A	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P060A	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996
P060A	Automatic Transmission - 8L45 (M5T) - DTC P0601-P0604, P0606, P0607, P060A, P062F, P16F3, P16F4, or P16FB
P060B	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P060B	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P060B	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P060B	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996
P060C	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996
P0610	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P0610	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P0610	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P0610	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996
P0615	12 V Starting and Charging - DTC P0615, P0616, or P0617
P0616	12 V Starting and Charging - DTC P0615, P0616, or P0617
P0617	12 V Starting and Charging - DTC P0615, P0616, or P0617

DTC	Diagnostic Procedure
P061C	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P061C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P061C	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P0621	12 V Starting and Charging - DTC P0621
P0622	12 V Starting and Charging - DTC P0622
P0627	Engine Controls and Fuel - 2.5L (LCV) - DTC P0627-P0629 or P12A6
P0627	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0627-P0629
P0627	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0627-P0629 or P12A6
P0628	Engine Controls and Fuel - 2.5L (LCV) - DTC P0627-P0629 or P12A6
P0628	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0627-P0629
P0628	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0627-P0629 or P12A6
P0629	Engine Controls and Fuel - 2.5L (LCV) - DTC P0627-P0629 or P12A6
P0629	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0627-P0629
P0629	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0627-P0629 or P12A6
P062B	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P062B	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P062B	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P062D	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P062D
P062F	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P062F	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P062F	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P062F	Data Communications - DTC P0601-P0607 , P060A-P060C , P0610 , P062F , P0630 , P16E9-P16F3 , P16F9 , P16FD , P16FE , P262B , P30D6-P30DD , P3186 , or P3996
P062F	Automatic Transmission - 6L50 (MYB) - DTC P0601-P0604 or P062F
P062F	Automatic Transmission - 8L45 (M5T) - DTC P0601-P0604 , P0606 , P0607 , P060A ,

DTC	Diagnostic Procedure
	<u>P062F, P16F3, P16F4, or P16FB</u>
P062F	Transfer Case - MP 1622G (NQ7) - <u>DTC P062F or P064F</u>
P062F	Transfer Case - MP 3025G (NQ6) - <u>DTC P062F or P064F</u>
P0630	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P0630	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P0630	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P0630	Data Communications - <u>DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996</u>
P0633	Immobilizer - <u>DTC P0633</u>
P0634	Automatic Transmission - 6L50 (MYB) - <u>DTC P0634</u>
P0641	Rear Drive Axle - <u>DTC P0641</u>
P0641	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0641, P0651, P0697, P06A3, or P06D2</u>
P0641	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0641, P0651, P0697, or P06A3</u>
P0641	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0641, P0651, P0697, or P06A3</u>
P0642	Transfer Case - MP 3025G (NQ6) - <u>DTC C0392, P0642, or P0643</u>
P0643	Transfer Case - MP 3025G (NQ6) - <u>DTC C0392, P0642, or P0643</u>
P0645	HVAC - Automatic - <u>DTC P0645, P0646, or P0647</u>
P0645	HVAC - Manual - <u>DTC P0645, P0646, or P0647</u>
P0646	HVAC - Automatic - <u>DTC P0645, P0646, or P0647</u>
P0646	HVAC - Manual - <u>DTC P0645, P0646, or P0647</u>
P0647	HVAC - Automatic - <u>DTC P0645, P0646, or P0647</u>
P0647	HVAC - Manual - <u>DTC P0645, P0646, or P0647</u>
P064C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P064C</u>
P064D	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P064D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P064D	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P064E	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P064E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C,</u>

DTC	Diagnostic Procedure
	<u>P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P064E	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P064F	Transfer Case - MP 1622G (NQ7) - <u>DTC P062F or P064F</u>
P064F	Transfer Case - MP 3025G (NQ6) - <u>DTC P062F or P064F</u>
P0650	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0650, P263A, or P263B - Malfunction Indicator Lamp (MIL) Malfunction</u>
P0650	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0650, P263A, or P263B - Malfunction Indicator Lamp (MIL) Malfunction (LWN)</u>
P0650	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0650, P263A, or P263B - Malfunction Indicator Lamp (MIL) Malfunction</u>
P0651	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0641, P0651, P0697, P06A3, or P06D2</u>
P0651	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0641, P0651, P0697, or P06A3</u>
P0651	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0641, P0651, P0697, or P06A3</u>
P0652	Transfer Case - MP 1622G (NQ7) - <u>DTC C0396, C039E, P0652, or P0653</u>
P0652	Transfer Case - MP 3025G (NQ6) - <u>DTC C0396, C039E, P0652, or P0653</u>
P0653	Transfer Case - MP 1622G (NQ7) - <u>DTC C0396, C039E, P0652, or P0653</u>
P0653	Transfer Case - MP 3025G (NQ6) - <u>DTC C0396, C039E, P0652, or P0653</u>
P0658	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0658 or P0659</u>
P0658	Automatic Transmission - 6L50 (MYB) - <u>DTC P0658 or P0659</u>
P0658	Automatic Transmission - 8L45 (M5T) - <u>DTC P0658, P0659, P2718, P2720, P2721, P2727, P2729, P2730, P281B, P281D, or P281E</u>
P0659	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0658 or P0659</u>
P0659	Automatic Transmission - 6L50 (MYB) - <u>DTC P0658 or P0659</u>
P0659	Automatic Transmission - 8L45 (M5T) - <u>DTC P0658, P0659, P2718, P2720, P2721, P2727, P2729, P2730, P281B, P281D, or P281E</u>
P0667	Automatic Transmission - 6L50 (MYB) - <u>DTC P0667, P0668, or P0669</u>
P0668	Automatic Transmission - 6L50 (MYB) - <u>DTC P0667, P0668, or P0669</u>
P0669	Automatic Transmission - 6L50 (MYB) - <u>DTC P0667, P0668, or P0669</u>
P066A	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P066A-P066F, P0671-P0674, P067A, or P067B</u>
P066B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P066A-P066F, P0671-P0674, P067A, or P067B</u>
P066C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P066A-P066F, P0671-P0674, P067A, or P067B</u>
P066D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P066A-P066F, P0671-P0674, P067A, or P067B</u>
P066E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P066A-P066F, P0671-P0674, P067A, or P067B</u>
P066F	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P066A-P066F, P0671-P0674, P067A, or P067B</u>
P0671	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P066A-P066F, P0671-P0674, P067A, or P067B</u>
P0672	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P066A-P066F, P0671-P0674, P067A, or P067B</u>
P0673	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P066A-P066F, P0671-P0674, P067A, or P067B</u>

DTC	Diagnostic Procedure
P0674	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P066A-P066F, P0671-P0674, P067A, or P067B</u>
P067A	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P066A-P066F, P0671-P0674, P067A, or P067B</u>
P067B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P066A-P066F, P0671-P0674, P067A, or P067B</u>
P0685	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3</u>
P0685	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3</u>
P0685	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3</u>
P0686	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3</u>
P0686	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3</u>
P0686	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3</u>
P0687	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3</u>
P0687	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3</u>
P0687	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3</u>
P0689	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3</u>
P0689	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3</u>
P0689	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3</u>
P0690	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3</u>
P0690	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3</u>
P0690	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3</u>
P0691	Engine Heating and Cooling - <u>DTC P0480, P0691, or P0692 (with LWN)</u>
P0692	Engine Heating and Cooling - <u>DTC P0480, P0691, or P0692 (with LWN)</u>
P0697	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0641, P0651, P0697, P06A3, or P06D2</u>
P0697	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0641, P0651, P0697, or P06A3</u>
P0697	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0641, P0651, P0697, or P06A3</u>
P0698	Transfer Case - MP 1622G (NQ7) - <u>DTC B2725, P0698, or P0699</u>
P0698	Transfer Case - MP 3025G (NQ6) - <u>DTC B2725, P0698, or P0699</u>
P0699	Transfer Case - MP 1622G (NQ7) - <u>DTC B2725, P0698, or P0699</u>
P0699	Transfer Case - MP 3025G (NQ6) - <u>DTC B2725, P0698, or P0699</u>
P06A3	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0641, P0651, P0697, P06A3, or P06D2</u>
P06A3	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0641, P0651, P0697, or P06A3</u>
P06A3	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0641, P0651, P0697, or P06A3</u>
P06AC	Automatic Transmission - 6L50 (MYB) - <u>DTC P06AC, P06AD, or P06AE</u>

DTC	Diagnostic Procedure
P06AD	Automatic Transmission - 6L50 (MYB) - <u>DTC P06AC, P06AD, or P06AE</u>
P06AE	Automatic Transmission - 6L50 (MYB) - <u>DTC P06AC, P06AD, or P06AE</u>
P06B6	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0324-P0333, P06B6, or P06B7</u>
P06B6	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0324-P0328, P0330-P0333, P06B6, or P06B7</u>
P06B7	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0324-P0333, P06B6, or P06B7</u>
P06B7	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0324-P0328, P0330-P0333, P06B6, or P06B7</u>
P06D2	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0641, P0651, P0697, P06A3, or P06D2</u>
P06DA	Engine Mechanical - 2.5L (LCV) - <u>DTC P06DA-P06DE</u>
P06DA	Engine Mechanical - 3.6L (LGZ) - <u>DTC P06DA-P06DE</u>
P06DB	Engine Mechanical - 2.5L (LCV) - <u>DTC P06DA-P06DE</u>
P06DB	Engine Mechanical - 3.6L (LGZ) - <u>DTC P06DA-P06DE</u>
P06DC	Engine Mechanical - 2.5L (LCV) - <u>DTC P06DA-P06DE</u>
P06DC	Engine Mechanical - 3.6L (LGZ) - <u>DTC P06DA-P06DE</u>
P06DD	Engine Mechanical - 2.5L (LCV) - <u>DTC P06DA-P06DE</u>
P06DD	Engine Mechanical - 3.6L (LGZ) - <u>DTC P06DA-P06DE</u>
P06DE	Engine Mechanical - 2.5L (LCV) - <u>DTC P06DA-P06DE</u>
P06DE	Engine Mechanical - 3.6L (LGZ) - <u>DTC P06DA-P06DE</u>
P0700	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0700</u>
P0700	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0700</u>
P0700	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0700</u>
P0703	Cruise Control - <u>DTC P0703</u>
P0707	Automatic Transmission - 8L45 (M5T) - <u>DTC P0707, P0708, P2802, P2803, or P2805</u>
P0708	Automatic Transmission - 8L45 (M5T) - <u>DTC P0707, P0708, P2802, P2803, or P2805</u>
P0711	Automatic Transmission - 6L50 (MYB) - <u>DTC P0711-P0713</u>
P0711	Automatic Transmission - 8L45 (M5T) - <u>DTC P0711-P0713</u>
P0712	Automatic Transmission - 6L50 (MYB) - <u>DTC P0711-P0713</u>
P0712	Automatic Transmission - 8L45 (M5T) - <u>DTC P0711-P0713</u>
P0713	Automatic Transmission - 6L50 (MYB) - <u>DTC P0711-P0713</u>
P0713	Automatic Transmission - 8L45 (M5T) - <u>DTC P0711-P0713</u>
P0716	Automatic Transmission - 6L50 (MYB) - <u>DTC P0716 or P0717</u>
P0716	Automatic Transmission - 8L45 (M5T) - <u>DTC P0716, P0717, P07BE, or P07C0</u>
P0717	Automatic Transmission - 6L50 (MYB) - <u>DTC P0716 or P0717</u>
P0717	Automatic Transmission - 8L45 (M5T) - <u>DTC P0716, P0717, P07BE, or P07C0</u>
P0722	Automatic Transmission - 6L50 (MYB) - <u>DTC P0722 or P0723</u>
P0722	Automatic Transmission - 8L45 (M5T) - <u>DTC P0722, P0723, P077C, or P077D</u>
P0723	Automatic Transmission - 6L50 (MYB) - <u>DTC P0722 or P0723</u>
P0723	Automatic Transmission - 8L45 (M5T) - <u>DTC P0722, P0723, P077C, or P077D</u>
P0741	Automatic Transmission - 6L50 (MYB) - <u>DTC P0741 or P0742</u>
P0742	Automatic Transmission - 6L50 (MYB) - <u>DTC P0741 or P0742</u>
P0746	Automatic Transmission - 8L45 (M5T) - <u>DTC P0746 or P0747</u>
P0747	Automatic Transmission - 8L45 (M5T) - <u>DTC P0746 or P0747</u>
P0751	Automatic Transmission - 6L50 (MYB) - <u>DTC P0751 or P0752</u>
P0752	Automatic Transmission - 6L50 (MYB) - <u>DTC P0751 or P0752</u>
P0756	Automatic Transmission - 6L50 (MYB) - <u>DTC P0756</u>
P0776	Automatic Transmission - 6L50 (MYB) - <u>DTC P0776 or P0777</u>
P0776	Automatic Transmission - 8L45 (M5T) - <u>DTC P0776 or P0777</u>

DTC	Diagnostic Procedure
P0777	Automatic Transmission - 6L50 (MYB) - DTC P0776 or P0777
P0777	Automatic Transmission - 8L45 (M5T) - DTC P0776 or P0777
P077C	Automatic Transmission - 8L45 (M5T) - DTC P0722, P0723, P077C, or P077D
P077D	Automatic Transmission - 8L45 (M5T) - DTC P0722, P0723, P077C, or P077D
P0796	Automatic Transmission - 6L50 (MYB) - DTC P0796 or P0797
P0796	Automatic Transmission - 8L45 (M5T) - DTC P0796 or P0797
P0797	Automatic Transmission - 6L50 (MYB) - DTC P0796 or P0797
P0797	Automatic Transmission - 8L45 (M5T) - DTC P0796 or P0797
P07BF	Automatic Transmission - 8L45 (M5T) - DTC P0716, P0717, P07BE, or P07C0
P07C0	Automatic Transmission - 8L45 (M5T) - DTC P0716, P0717, P07BE, or P07C0
P0815	Automatic Transmission - 6L50 (MYB) - DTC P0815, P0816, or P0826
P0815	Automatic Transmission - 8L45 (M5T) - DTC P0815, P0816, P0826, or P1876
P0816	Automatic Transmission - 6L50 (MYB) - DTC P0815, P0816, or P0826
P0816	Automatic Transmission - 8L45 (M5T) - DTC P0815, P0816, P0826, or P1876
P0826	Automatic Transmission - 6L50 (MYB) - DTC P0815, P0816, or P0826
P0826	Automatic Transmission - 8L45 (M5T) - DTC P0815, P0816, P0826, or P1876
P0842	Automatic Transmission - 6L50 (MYB) - DTC P0842 or P0843
P0843	Automatic Transmission - 6L50 (MYB) - DTC P0842 or P0843
P0851	Automatic Transmission - 6L50 (MYB) - DTC P0851
P0851	Automatic Transmission - 6L50 (MYB) - DTC P0851 or P0852
P0852	Automatic Transmission - 6L50 (MYB) - DTC P0851 or P0852
P0856	Antilock Brake System - DTC P0856
P0872	Automatic Transmission - 6L50 (MYB) - DTC P0872 or P0873
P0873	Automatic Transmission - 6L50 (MYB) - DTC P0872 or P0873
P0877	Automatic Transmission - 6L50 (MYB) - DTC P0877 or P0878
P0878	Automatic Transmission - 6L50 (MYB) - DTC P0877 or P0878
P0960	Automatic Transmission - 8L45 (M5T) - DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827
P0961	Automatic Transmission - 6L50 (MYB) - DTC P0961-P0963
P0962	Automatic Transmission - 6L50 (MYB) - DTC P0961-P0963
P0962	Automatic Transmission - 8L45 (M5T) - DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827
P0963	Automatic Transmission - 6L50 (MYB) - DTC P0961-P0963
P0963	Automatic Transmission - 8L45 (M5T) - DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827
P0964	Automatic Transmission - 8L45 (M5T) - DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827
P0965	Automatic Transmission - 6L50 (MYB) - DTC P0965-P0967
P0966	Automatic Transmission - 6L50 (MYB) - DTC P0965-P0967
P0966	Automatic Transmission - 8L45 (M5T) - DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827
P0967	Automatic Transmission - 6L50 (MYB) - DTC P0965-P0967
P0967	Automatic Transmission - 8L45 (M5T) - DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827

DTC	Diagnostic Procedure
P0968	Automatic Transmission - 8L45 (M5T) - DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827
P0969	Automatic Transmission - 6L50 (MYB) - DTC P0969-P0971
P096A	Automatic Transmission - 6L50 (MYB) - DTC P0969-P0971
P096B	Automatic Transmission - 6L50 (MYB) - DTC P0969-P0971
P096C	Automatic Transmission - 6L50 (MYB) - DTC P0969-P0971
P096D	Automatic Transmission - 6L50 (MYB) - DTC P0969-P0971
P096E	Automatic Transmission - 6L50 (MYB) - DTC P0969-P0971
P096F	Automatic Transmission - 6L50 (MYB) - DTC P0969-P0971
P0970	Automatic Transmission - 6L50 (MYB) - DTC P0969-P0971
P0970	Automatic Transmission - 8L45 (M5T) - DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827
P0971	Automatic Transmission - 6L50 (MYB) - DTC P0969-P0971
P0971	Automatic Transmission - 8L45 (M5T) - DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827
P0973	Automatic Transmission - 6L50 (MYB) - DTC P0973 or P0974
P0974	Automatic Transmission - 6L50 (MYB) - DTC P0973 or P0974
P0976	Automatic Transmission - 6L50 (MYB) - DTC P0976 or P0977
P0977	Automatic Transmission - 6L50 (MYB) - DTC P0976 or P0977
P0989	Automatic Transmission - 6L50 (MYB) - DTC P0989 or P0990
P0990	Automatic Transmission - 6L50 (MYB) - DTC P0989 or P0990
P1000	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B
P1000	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B
P1000	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B
P1001	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B
P1001	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B
P1001	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B
P1003	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B

DTC	Diagnostic Procedure
P1003	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FE, P175F, P1772, P30DE, P314E, or P316B
P1003	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FE, P175F, P1772, P30DE, P314E, or P316B
P1004	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P1008	Engine Controls and Fuel - 2.5L (LCV) - DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5
P1008	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5
P1008	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5
P1009	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FE, P175F, P1772, P30DE, P314E, or P316B
P1009	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FE, P175F, P1772, P30DE, P314E, or P316B
P1009	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FE, P175F, P1772, P30DE, P314E, or P316B
P100A	Engine Controls and Fuel - 2.5L (LCV) - DTC P100A, P135C-P135E, P14A0, or P14B6
P100A	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P100A, P135C-P135E, P14A0, or P14B6
P100A	Engine Controls and Fuel - 3.6L (LGZ) - DTC P100A, P135C-P135E, P14A0, or P14B6
P1015	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1015-P1019 or P101A
P1016	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1015-P1019 or P101A
P1017	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1015-P1019 or P101A
P1018	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1015-P1019 or P101A
P1019	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1015-P1019 or P101A
P101A	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1015-P1019 or P101A
P103B	Engine Controls and Fuel - 2.5L (LCV) - DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C
P103B	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0030-P0032, P0036-P0038, P0050-P0054, P0056-P0060, P0135, P0141, P0155, P0161, P103B, or P103C
P103C	Engine Controls and Fuel - 2.5L (LCV) - DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, P0141, P103B, or P103C
P103C	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0030-P0032, P0036-P0038, P0050-P0054, P0056-P0060, P0135, P0141, P0155, P0161, P103B, or P103C
P103D	Engine Controls and Fuel - 2.5L (LCV) - DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5
P103D	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1008, P103D, P103E, P10C7,

DTC	Diagnostic Procedure
	<u>P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P103D	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P103E	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P103E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P103E	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P103F	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P103F, P1040, P208A, P208C, P208D, or P214E</u>
P1040	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P103F, P1040, P208A, P208C, P208D, or P214E</u>
P1048	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1048, P1049, or P2047-P2049</u>
P1049	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1048, P1049, or P2047-P2049</u>
P1051	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1051, P20B9, P20BA-P20BC, P248A, or P248B</u>
P1052	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1052, P20BD-P20BF, P20C0, P248C, or P248D</u>
P105A	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P105A</u>
P105D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P007B or P105D</u>
P1089	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1089</u>
P10C6	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FF, P175E, P1772, P30DE, P314E, or P316B</u>
P10C6	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FF, P175E, P1772, P30DE, P314E, or P316B</u>
P10C6	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FF, P175E, P1772, P30DE, P314E, or P316B</u>
P10C7	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P10C7	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P10C7	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P10C8	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P10C8	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P10C8	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P10D1	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P10D1</u>
P10D6	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P007C-P007E or P10D6-P10D8</u>
P10D7	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P007C-P007E or P10D6-P10D8</u>
P10D8	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P007C-P007E or P10D6-P10D8</u>
P10F5	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128E, P129E, P12A8, P130F,</u>

DTC	Diagnostic Procedure
	<u>P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P10F5	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P10F5	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P1100	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P1100	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P1100	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P1101	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0068 or P1101</u>
P1101	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0068 or P1101</u>
P1103	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P1103	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P1103	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P111E	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P111E</u>
P111E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P111E</u>
P111F	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5</u>
P111F	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5</u>
P112F	Engine Heating and Cooling - <u>DTC P112F (LCV or LGZ)</u>
P1133	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P1133, P2270, or P2271</u>
P113B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P113B-P113F, P118E, P118F, P1196-P1198, P2081, P2085, P242E, P2472, or P2484</u>
P113C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P113B-P113F, P118E, P118F, P1196-P1198, P2081, P2085, P242E, P2472, or P2484</u>
P113D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P113B-P113F, P118E, P118F, P1196-P1198, P2081, P2085, P242E, P2472, or P2484</u>
P113E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P113B-P113F, P118E, P118F, P1196-P1198, P2081, P2085, P242E, P2472, or P2484</u>

DTC	Diagnostic Procedure
P113F	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P113B-P113F, P118E, P118F, P1196-P1198, P2081, P2085, P242E, P2472, or P2484</u>
P115E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P115F	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P1160	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P116A	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P116B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P116C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P116D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P116E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P116F	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P117A	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P117A	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P117A	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P118B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P118B</u>
P118E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P113B-P113F, P118E, P118F, P1196-P1198, P2081, P2085, P242E, P2472, or P2484</u>
P118F	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P113B-P113F, P118E, P118F, P1196-P1198, P2081, P2085, P242E, P2472, or P2484</u>
P1192	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P1193	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P1194	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P1196	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P113B-P113F, P118E, P118F, P1196-P1198, P2081, P2085, P242E, P2472, or P2484</u>
P1197	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P113B-P113F, P118E, P118F, P1196-P1198, P2081, P2085, P242E, P2472, or P2484</u>

DTC	Diagnostic Procedure
P1198	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P113B-P113F, P118E, P118F, P1196-P1198, P2081, P2085, P242E, P2472, or P2484
P119A	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P119B	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P119C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P119D	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P119E	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P119F	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P11B3	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P11B3, P22B6, P22B7, or P2A01
P11BE	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P11BF	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P11C0	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P11C5	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P11C6	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P11C7	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P11C8	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P11CC	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P11D0	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P11D1	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE

DTC	Diagnostic Procedure
P11D2	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P11D3	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P11D5	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P11D8	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P11D9	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P11DA	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P11DB	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P11DC	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P11FC	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P11FD	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P11FE	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P11FF	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FE, P175F, P1772, P30DE, P314E, or P316B
P11FF	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FE, P175F, P1772, P30DE, P314E, or P316B
P11FF	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FE, P175F, P1772, P30DE, P314E, or P316B
P1200	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FE, P175F, P1772, P30DE, P314E, or P316B
P1200	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FE, P175F, P1772, P30DE, P314E, or P316B

DTC	Diagnostic Procedure
P1200	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B
P122B	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P02E0, P02E2, P02E3, P02EB, P122B, P122C, or P1425
P122C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P02E0, P02E2, P02E3, P02EB, P122B, P122C, or P1425
P122D	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P122D
P1248	Engine Controls and Fuel - 2.5L (LCV) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P1248	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151
P1248	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1248-P124D
P1249	Engine Controls and Fuel - 2.5L (LCV) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P1249	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151
P1249	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1248-P124D
P124A	Engine Controls and Fuel - 2.5L (LCV) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P124A	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151
P124A	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1248-P124D
P124B	Engine Controls and Fuel - 2.5L (LCV) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P124B	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151
P124B	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1248-P124D
P124C	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1248-P124D
P124D	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1248-P124D
P1255	Engine Controls and Fuel - 2.5L (LCV) - DTC P1255
P1255	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1255
P126E	Engine Controls and Fuel - 2.5L (LCV) - DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5
P126E	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5
P126F	Engine Controls and Fuel - 2.5L (LCV) - DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5
P126F	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5
P127C	Engine Controls and Fuel - 2.5L (LCV) - DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5
P127C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0191-P0193, P127C, or P127D

DTC	Diagnostic Procedure
P127C	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5
P127D	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0191-P0193, P127C, or P127D
P128A	Engine Controls and Fuel - 2.5L (LCV) - DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5
P128A	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5
P128B	Engine Controls and Fuel - 2.5L (LCV) - DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5
P128B	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5
P128C	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175E, P1772, P30DE, P314E, or P316B
P128C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175E, P1772, P30DE, P314E, or P316B
P128C	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175E, P1772, P30DE, P314E, or P316B
P128D	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175E, P1772, P30DE, P314E, or P316B
P128D	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175E, P1772, P30DE, P314E, or P316B
P128D	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175E, P1772, P30DE, P314E, or P316B
P128F	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175E, P1772, P30DE, P314E, or P316B
P128F	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175E, P1772, P30DE, P314E, or P316B
P128F	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175E, P1772, P30DE, P314E, or P316B
P129B	12 V Starting and Charging - DTC P129B or P129C
P129C	12 V Starting and Charging - DTC P129B or P129C
P129D	Engine Controls and Fuel - 2.5L (LCV) - DTC P129D
P129D	Engine Controls and Fuel - 3.6L (LGZ) - DTC P129D
P129E	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128F, P129E, P12A8, P130F,

DTC	Diagnostic Procedure
	<u>P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P129E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P129E	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P12A6	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0627-P0629 or P12A6</u>
P12A6	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0627-P0629 or P12A6</u>
P12A8	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P12A8	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P12A8	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P1307	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1307-P130A</u>
P1308	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1307-P130A</u>
P1309	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1307-P130A</u>
P130A	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1307-P130A</u>
P130F	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P130F	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P130F	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FF, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175F, P1772, P30DE, P314E, or P316B</u>
P134C	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062E, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264E, P27B5, P30D6-P30DD, P3186, or P3191</u>
P134C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062E, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264E, P27B5, P30D6-P30DD, P3186, or P3191</u>
P134C	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062E, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264E, P27B5, P30D6-P30DD, P3186, or P3191</u>
P135A	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P135A</u>

DTC	Diagnostic Procedure
P135A	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P135A or P135B</u>
P135B	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P135A or P135B</u>
P135C	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P100A, P135C-P135E, P14A0, or P14B6</u>
P135C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P100A, P135C-P135E, P14A0, or P14B6</u>
P135C	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P100A, P135C-P135E, P14A0, or P14B6</u>
P135D	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P100A, P135C-P135E, P14A0, or P14B6</u>
P135D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P100A, P135C-P135E, P14A0, or P14B6</u>
P135D	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P100A, P135C-P135E, P14A0, or P14B6</u>
P135E	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P100A, P135C-P135E, P14A0, or P14B6</u>
P135E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P100A, P135C-P135E, P14A0, or P14B6</u>
P135E	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P100A, P135C-P135E, P14A0, or P14B6</u>
P139A	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130E, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B</u>
P139A	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130E, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B</u>
P139A	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130E, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B</u>
P139B	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130E, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B</u>
P139B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130E, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B</u>
P139B	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130E, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B</u>
P1400	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1400</u>
P1400	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1400</u>
P1402	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0403, P1402, P1407, P140F, or P1424</u>
P1407	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0403, P1402, P1407, P140F, or P1424</u>
P140B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P140B or P140C</u>
P140C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P140B or P140C</u>

DTC	Diagnostic Procedure
P140F	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0403, P1402, P1407, P140F, or P1424</u>
P1424	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0403, P1402, P1407, P140F, or P1424</u>
P1425	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02E0, P02E2, P02E3, P02EB, P122B, P122C, or P1425</u>
P1428	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1428 or P142A</u>
P142A	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1428 or P142A</u>
P142B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P142B-P142F, P1435, or P1436</u>
P142C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P142B-P142F, P1435, or P1436</u>
P142D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P142B-P142F, P1435, or P1436</u>
P142E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P142B-P142F, P1435, or P1436</u>
P142F	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P142B-P142F, P1435, or P1436</u>
P1435	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P142B-P142F, P1435, or P1436</u>
P1436	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P1436	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P1436	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P142B-P142F, P1435, or P1436</u>
P1436	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P143A	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P143A	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P143A	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P143B	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P143B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P143B	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5</u>
P144E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P144E</u>
P1474	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1474-P1479, P147B, or P1488</u>
P1475	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1474-P1479, P147B, or P1488</u>
P1476	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1474-P1479, P147B, or P1488</u>
P1477	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1474-P1479, P147B, or P1488</u>
P1478	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1474-P1479, P147B, or P1488</u>
P1479	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1474-P1479, P147B, or P1488</u>
P147B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1474-P1479, P147B, or P1488</u>
P1488	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1474-P1479, P147B, or P1488</u>
P14A0	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P100A, P135C-P135E, P14A0, or P14B6</u>
P14A0	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P100A, P135C-P135E, P14A0, or P14B6</u>
P14A0	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P100A, P135C-P135E, P14A0, or P14B6</u>
P14B6	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P100A, P135C-P135E, P14A0, or P14B6</u>

DTC	Diagnostic Procedure
P14B6	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P100A , P135C-P135E , P14A0 , or P14B6
P14B6	Engine Controls and Fuel - 3.6L (LGZ) - DTC P100A , P135C-P135E , P14A0 , or P14B6
P14CD	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FF , P1200 , P128C , P128D , P128F , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167F , P16FF , P175E , P1772 , P30DE , P314E , or P316B
P14CD	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FF , P1200 , P128C , P128D , P128F , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167F , P16FF , P175E , P1772 , P30DE , P314E , or P316B
P14CD	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FF , P1200 , P128C , P128D , P128F , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167F , P16FF , P175E , P1772 , P30DE , P314E , or P316B
P14CE	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FF , P1200 , P128C , P128D , P128F , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167F , P16FF , P175E , P1772 , P30DE , P314E , or P316B
P14CE	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FF , P1200 , P128C , P128D , P128F , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167F , P16FF , P175E , P1772 , P30DE , P314E , or P316B
P14CE	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FF , P1200 , P128C , P128D , P128F , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167F , P16FF , P175E , P1772 , P30DE , P314E , or P316B
P14D4	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FF , P1200 , P128C , P128D , P128F , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167F , P16FF , P175E , P1772 , P30DE , P314E , or P316B
P14D4	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FF , P1200 , P128C , P128D , P128F , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167F , P16FF , P175E , P1772 , P30DE , P314E , or P316B
P14D4	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FF , P1200 , P128C , P128D , P128F , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167F , P16FF , P175E , P1772 , P30DE , P314E , or P316B
P14D5	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FF , P1200 , P128C , P128D , P128F , P129E , P12A8 , <

DTC	Diagnostic Procedure
	P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167F , P16FF , P175F , P1772 , P30DE , P314E , or P316B
P14D6	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FE , P1200 , P128C , P128D , P128E , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167F , P16FF , P175F , P1772 , P30DE , P314E , or P316B
P14D6	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FE , P1200 , P128C , P128D , P128E , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167F , P16FF , P175F , P1772 , P30DE , P314E , or P316B
P150C	Engine Controls and Fuel - 2.5L (LCV) - DTC P150C , P155D , P15F2 , P1762 , P1773 , P1775 , P188B , P18EF , P1919 , or P2544
P150C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P150C , P155D , P15F2 , P1762 , P1773 , P1775 , P188B , P18EF , P1919 , or P2544
P150C	Engine Controls and Fuel - 3.6L (LGZ) - DTC P150C , P155D , P15F2 , P1762 , P1773 , P1775 , P188B , P18EF , P1919 , or P2544
P1513	Antilock Brake System - DTC P1513
P1516	Engine Controls and Fuel - 2.5L (LCV) - DTC P1516 , P2101 , P2119 , or P2176
P1516	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1516 , P2101 , P2119 , or P2176
P151E	Bumpers and Fascias - DTC P059F or P151E
P1553	Cruise Control - DTC P1553
P155A	Cruise Control - DTC B3623 , B3794 , P0564 , P0565 , P0567 , P0568 , P056C , P0580 , P0581 , P0589 , P0592 , P0593 , P155A-P155C , or P162C
P155B	Cruise Control - DTC B3623 , B3794 , P0564 , P0565 , P0567 , P0568 , P056C , P0580 , P0581 , P0589 , P0592 , P0593 , P155A-P155C , or P162C
P155C	Cruise Control - DTC B3623 , B3794 , P0564 , P0565 , P0567 , P0568 , P056C , P0580 , P0581 , P0589 , P0592 , P0593 , P155A-P155C , or P162C
P155D	Front Drive Axle - DTC P155D
P155D	Engine Controls and Fuel - 2.5L (LCV) - DTC P150C , P155D , P15F2 , P1762 , P1773 , P1775 , P188B , P18EF , P1919 , or P2544
P155D	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P150C , P155D , P15F2 , P1762 , P1773 , P1775 , P188B , P18EF , P1919 , or P2544
P155D	Engine Controls and Fuel - 3.6L (LGZ) - DTC P150C , P155D , P15F2 , P1762 , P1773 , P1775 , P188B , P18EF , P1919 , or P2544
P157A	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P157A or P16D7-P16D9
P158A	Cruise Control - DTC P158A
P15F2	Engine Controls and Fuel - 2.5L (LCV) - DTC P150C , P155D , P15F2 , P1762 , P1773 , P1775 , P188B , P18EF , P1919 , or P2544
P15F2	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P150C , P155D , P15F2 , P1762 , P1773 , P1775 , P188B , P18EF , P1919 , or P2544
P15F2	Engine Controls and Fuel - 3.6L (LGZ) - DTC P150C , P155D , P15F2 , P1762 , P1773 , P1775 , P188B , P18EF , P1919 , or P2544
P15F6	Driver Assistance Systems - DTC P15F6
P15F8	Antilock Brake System - DTC P15F8
P15F9	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FE , P1200 , P128C , P128D , P128E , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167F , P16FF , P175F , P1772 , P30DE , P314E , or P316B
P15F9	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FE , P1200 , P128C , P128D , P128E , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167F , P16FF , P175F , P1772 , P30DE , P314E , or P316B

DTC	Diagnostic Procedure
P15F9	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130E, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B</u>
P15FB	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130E, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B</u>
P15FB	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130E, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B</u>
P15FB	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130E, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B</u>
P15FD	Antilock Brake System - <u>DTC P15FD</u>
P160A	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P160A	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P160A	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P160D	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P160D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P160D	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P160E	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P160E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P160E	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>

DTC	Diagnostic Procedure
P161C	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P161C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P161C	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P161E	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P161E
P162B	Immobilizer - DTC P162B
P162C	Cruise Control - DTC B3623 , B3794 , P0564 , P0565 , P0567 , P0568 , P056C , P0580 , P0581 , P0589 , P0592 , P0593 , P155A-P155C , or P162C
P1631	Immobilizer - DTC P1631
P163A	Engine Controls and Fuel - 2.5L (LCV) - DTC P163A
P163A	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0090-P0092 , P163A , P163B , or P2294-P2296
P163A	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0090-P0092 , P00C8 , P00C9 , P00CA , or P163A
P163B	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0090-P0092 , P163A , P163B , or P2294-P2296
P1649	Immobilizer - DTC P1649
P165C	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FE , P1200 , P128C , P128D , P128E , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167E , P16FE , P175E , P1772 , P30DE , P314E , or P316B
P165C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FE , P1200 , P128C , P128D , P128E , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167E , P16FE , P175E , P1772 , P30DE , P314E , or P316B
P165C	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FE , P1200 , P128C , P128D , P128E , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167E , P16FE , P175E , P1772 , P30DE , P314E , or P316B
P167F	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FE , P1200 , P128C , P128D , P128E , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167E , P16FE , P175E , P1772 , P30DE , P314E , or P316B
P167F	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FE , P1200 , P128C , P128D , P128E , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167E , P16FE , P175E , P1772 , P30DE , P314E , or P316B
P167F	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000 , P1001 , P1003 , P1009 , P10C6 , P10F5 , P1100 , P1103 , P11FE , P1200 , P128C , P128D , P128E , P129E , P12A8 , P130F , P139A , P139B , P14CD , P14CE , P14D4-P14D6 , P15F9 , P15FB , P165C , P167E , P16FE , P175E , P1772 , P30DE , P314E , or P316B
P1682	Engine Controls and Fuel - 2.5L (LCV) - DTC P0685-P0687 , P0689 , P0690 , P1682 , P16A7 , P16AF , or P16B3
P1682	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0685-P0687 , P0689 , P0690 , P1682 , P16A7 , P16AF , or P16B3

DTC	Diagnostic Procedure
P1682	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3
P169E	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0045, P0047, P0048, P169E, or P169F
P169F	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0045, P0047, P0048, P169E, or P169F
P16A7	Engine Controls and Fuel - 2.5L (LCV) - DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3
P16A7	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3
P16A7	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3
P16AF	Engine Controls and Fuel - 2.5L (LCV) - DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3
P16AF	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3
P16AF	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3
P16B3	Engine Controls and Fuel - 2.5L (LCV) - DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3
P16B3	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3
P16B3	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0685-P0687, P0689, P0690, P1682, P16A7, P16AF, or P16B3
P16D7	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P157A or P16D7-P16D9
P16D8	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P157A or P16D7-P16D9
P16D9	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P157A or P16D7-P16D9
P16E4	Engine Controls and Fuel - 2.5L (LCV) - DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5
P16E4	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5
P16E5	Engine Controls and Fuel - 2.5L (LCV) - DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5
P16E5	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0182, P0183, P0187, P0188, P0191, P0192, P111F, P126E, P126F, P127C, P128A, P128B, P16E4, or P16E5
P16E9	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P16E9	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P16E9	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P16E9	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996
P16EA	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A,

[illegible]

DTC	Diagnostic Procedure
P16EE	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P16EE	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P16EE	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P16EE	Data Communications - DTC P0601-P0607 , P060A-P060C , P0610 , P062F , P0630 , P16E9-P16F3 , P16F9 , P16FD , P16FE , P262B , P30D6-P30DD , P3186 , or P3996
P16EF	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P16EF	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P16EF	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P16EF	Data Communications - DTC P0601-P0607 , P060A-P060C , P0610 , P062F , P0630 , P16E9-P16F3 , P16F9 , P16FD , P16FE , P262B , P30D6-P30DD , P3186 , or P3996
P16F0	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P16F0	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P16F0	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P16F0	Data Communications - DTC P0601-P0607 , P060A-P060C , P0610 , P062F , P0630 , P16E9-P16F3 , P16F9 , P16FD , P16FE , P262B , P30D6-P30DD , P3186 , or P3996
P16F1	Data Communications - DTC P0601-P0607 , P060A-P060C , P0610 , P062F , P0630 , P16E9-P16F3 , P16F9 , P16FD , P16FE , P262B , P30D6-P30DD , P3186 , or P3996
P16F2	Data Communications -

DTC	Diagnostic Procedure
P16F3	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P16F3	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996
P16F3	Automatic Transmission - 8L45 (M5T) - DTC P0601-P0604, P0606, P0607, P060A, P062F, P16F3, P16F4, or P16FB
P16F4	Automatic Transmission - 8L45 (M5T) - DTC P0601-P0604, P0606, P0607, P060A, P062F, P16F3, P16F4, or P16FB
P16F9	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996
P16FA	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P16FA or P16FC
P16FB	Automatic Transmission - 8L45 (M5T) - DTC P0601-P0604, P0606, P0607, P060A, P062F, P16F3, P16F4, or P16FB
P16FC	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P16FA or P16FC
P16FD	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996
P16FE	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996
P16FF	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B
P16FF	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B
P16FF	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B
P175E	Automatic Transmission - 8L45 (M5T) - DTC P175E
P175F	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B
P175F	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B
P175F	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B
P175F	Automatic Transmission - 8L45 (M5T) - DTC P175F
P1761	Automatic Transmission - 6L50 (MYB) - DTC P1761
P1761	Automatic Transmission - 8L45 (M5T) - DTC P1761
P1762	Engine Controls and Fuel - 2.5L (LCV) - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544
P1762	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544

DTC	Diagnostic Procedure
P1762	Engine Controls and Fuel - 3.6L (LGZ) - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544
P1762	Automatic Transmission - 8L45 (M5T) - DTC P1762
P176B	Automatic Transmission - 8L45 (M5T) - DTC P176B-P176D
P176C	Automatic Transmission - 8L45 (M5T) - DTC P176B-P176D
P176D	Automatic Transmission - 8L45 (M5T) - DTC P176B-P176D
P1772	Engine Controls and Fuel - 2.5L (LCV) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B
P1772	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B
P1772	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175E, P1772, P30DE, P314E, or P316B
P1773	Engine Controls and Fuel - 2.5L (LCV) - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544
P1773	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544
P1773	Engine Controls and Fuel - 3.6L (LGZ) - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544
P1775	Engine Controls and Fuel - 2.5L (LCV) - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544
P1775	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544
P1775	Engine Controls and Fuel - 3.6L (LGZ) - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544
P17D4	Transfer Case - MP 1622G (NQ7) - DTC P17D4, P185E, or P279A-P279C (NQ6, NQ7)
P17D4	Transfer Case - MP 3025G (NQ6) - DTC P17D4, P185E, or P279A-P279C (NQ6, NQ7)
P182E	Automatic Transmission - 6L50 (MYB) - DTC P182E or P1915
P185F	Transfer Case - MP 1622G (NQ7) - DTC P17D4, P185E, or P279A-P279C (NQ6, NQ7)
P185F	Transfer Case - MP 3025G (NQ6) - DTC P17D4, P185E, or P279A-P279C (NQ6, NQ7)
P1876	Automatic Transmission - 8L45 (M5T) - DTC P0815, P0816, P0826, or P1876
P188B	Engine Controls and Fuel - 2.5L (LCV) - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544
P188B	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544
P188B	Engine Controls and Fuel - 3.6L (LGZ) - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544
P18CB	Parking Assistance Systems - DTC P18CB
P18EF	Engine Controls and Fuel - 2.5L (LCV) - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544
P18EF	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544

DTC	Diagnostic Procedure
P18EF	Engine Controls and Fuel - 3.6L (LGZ) - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544
P1915	Automatic Transmission - 6L50 (MYB) - DTC P182E or P1915
P1919	Engine Controls and Fuel - 2.5L (LCV) - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544
P1919	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544
P1919	Engine Controls and Fuel - 3.6L (LGZ) - DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544
P2002	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2002
P200C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P200C
P200E	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P200E
P2032	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0545, P0546, P2032, P2033, P242C, P242D, P2470, P2471, P2481, or P2482
P2033	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0545, P0546, P2032, P2033, P242C, P242D, P2470, P2471, P2481, or P2482
P203B	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P203B-P203D
P203C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P203B-P203D
P203D	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P203B-P203D
P2047	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1048, P1049, or P2047-P2049
P2048	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1048, P1049, or P2047-P2049
P2049	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1048, P1049, or P2047-P2049
P204B	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P204B-P204D
P204C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P204B-P204D
P204D	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P204B-P204D
P205B	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P205B-P205E
P205C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P205B-P205E
P205D	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P205B-P205E
P205E	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P205B-P205E
P206B	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P206B-P206D
P206C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P206B-P206D
P206D	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P206B-P206D
P2081	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P113B-P113F, P118E, P118F, P1196-P1198, P2081, P2085, P242E, P2472, or P2484
P2085	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P113B-P113F, P118E, P118F, P1196-P1198, P2081, P2085, P242E, P2472, or P2484
P2088	Engine Controls and Fuel - 2.5L (LCV) - DTC P0010-P0014 or P2088-P2091
P2088	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095
P2089	Engine Controls and Fuel - 2.5L (LCV) - DTC P0010-P0014 or P2088-P2091
P2089	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095
P208A	Engine Controls and Fuel - 2.5L (LCV) - DTC P0010-P0014 or P2088-P2091
P208A	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P103F, P1040, P208A, P208C, P208D, or P214E
P208A	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095
P208B	Engine Controls and Fuel - 2.5L (LCV) - DTC P0010-P0014 or P2088-P2091
P208B	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095

DTC	Diagnostic Procedure
P208C	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0010-P0014 or P2088-P2091</u>
P208C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P103F, P1040, P208A, P208C, P208D, or P214E</u>
P208C	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095</u>
P208D	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0010-P0014 or P2088-P2091</u>
P208D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P103F, P1040, P208A, P208C, P208D, or P214E</u>
P208D	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095</u>
P208E	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0010-P0014 or P2088-P2091</u>
P208E	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095</u>
P208F	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0010-P0014 or P2088-P2091</u>
P208F	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095</u>
P2090	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0010-P0014 or P2088-P2091</u>
P2090	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095</u>
P2091	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0010-P0014 or P2088-P2091</u>
P2091	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095</u>
P2092	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095</u>
P2093	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095</u>
P2094	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095</u>
P2095	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0010, P0011, P0013, P0014, P0020, P0021, P0023, P0024, or P2088-P2095</u>
P2096	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P2096 or P2097</u>
P2096	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P2096-P2099</u>
P2097	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P2096 or P2097</u>
P2097	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P2096-P2099</u>
P2098	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P2096-P2099</u>
P2099	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P2096-P2099</u>
P20B9	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1051, P20B9, P20BA-P20BC, P248A, or P248B</u>
P20BA	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1051, P20B9, P20BA-P20BC, P248A, or P248B</u>
P20BB	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1051, P20B9, P20BA-P20BC, P248A, or P248B</u>
P20BC	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1051, P20B9, P20BA-P20BC, P248A, or P248B</u>
P20BD	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1052, P20BD-P20BE, P20C0, P248C, or P248D</u>
P20BE	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1052, P20BD-P20BE, P20C0, P248C, or P248D</u>
P20BF	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1052, P20BD-P20BE, P20C0, P248C, or P248D</u>

DTC	Diagnostic Procedure
P20C0	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1052, P20BD-P20BE, P20C0, P248C, or P248D
P20CB	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P20CB, P20CD, P20CE, P2670, or P2671
P20CD	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P20CB, P20CD, P20CE, P2670, or P2671
P20CE	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P20CB, P20CD, P20CE, P2670, or P2671
P20E8	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P20E8 or P20E9
P20E9	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P20E8 or P20E9
P20EE	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P20EE, P249D, or P249E
P2101	Engine Controls and Fuel - 2.5L (LCV) - DTC P1516, P2101, P2119, or P2176
P2101	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1516, P2101, P2119, or P2176
P2119	Engine Controls and Fuel - 2.5L (LCV) - DTC P1516, P2101, P2119, or P2176
P2119	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1516, P2101, P2119, or P2176
P2122	Engine Controls and Fuel - 2.5L (LCV) - DTC P2122, P2123, P2127, P2128, or P2138
P2122	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2122, P2123, P2127, P2128, or P2138
P2122	Engine Controls and Fuel - 3.6L (LGZ) - DTC P2122, P2123, P2127, P2128, or P2138
P2123	Engine Controls and Fuel - 2.5L (LCV) - DTC P2122, P2123, P2127, P2128, or P2138
P2123	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2122, P2123, P2127, P2128, or P2138
P2123	Engine Controls and Fuel - 3.6L (LGZ) - DTC P2122, P2123, P2127, P2128, or P2138
P2127	Engine Controls and Fuel - 2.5L (LCV) - DTC P2122, P2123, P2127, P2128, or P2138
P2127	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2122, P2123, P2127, P2128, or P2138
P2127	Engine Controls and Fuel - 3.6L (LGZ) - DTC P2122, P2123, P2127, P2128, or P2138
P2128	Engine Controls and Fuel - 2.5L (LCV) - DTC P2122, P2123, P2127, P2128, or P2138
P2128	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2122, P2123, P2127, P2128, or P2138
P2128	Engine Controls and Fuel - 3.6L (LGZ) - DTC P2122, P2123, P2127, P2128, or P2138
P2135	Engine Controls and Fuel - 2.5L (LCV) - DTC P0121-P0123, P0222, P0223, P2135, U0606, or U0607
P2135	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0121-P0123, P0222, P0223, P2135, U0606, or U0607
P2138	Engine Controls and Fuel - 2.5L (LCV) - DTC P2122, P2123, P2127, P2128, or P2138
P2138	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2122, P2123, P2127, P2128, or P2138
P2138	Engine Controls and Fuel - 3.6L (LGZ) - DTC P2122, P2123, P2127, P2128, or P2138
P2147	Engine Controls and Fuel - 2.5L (LCV) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157
P2147	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, or P2151
P2147	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F
P2148	Engine Controls and Fuel - 2.5L (LCV) - DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157

[illegible]

DTC	Diagnostic Procedure
P2161	Transfer Case - MP 3025G (NQ6) - DTC P2160 or P2161 (3-Wire)
P216B	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F
P216C	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F
P216E	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F
P216F	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0201-P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, P0277, P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F
P2176	Engine Controls and Fuel - 2.5L (LCV) - DTC P1516, P2101, P2119, or P2176
P2176	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1516, P2101, P2119, or P2176
P2181	Engine Heating and Cooling - DTC P00B7, P0597-P0599, or P2181 - E41 Engine Coolant Thermostat Heater Malfunction
P2199	Engine Controls and Fuel - 2.5L (LCV) - DTC P2199
P2199	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2199
P2199	Engine Controls and Fuel - 3.6L (LGZ) - DTC P2199
P219A	Engine Controls and Fuel - 2.5L (LCV) - DTC P219A
P219A	Engine Controls and Fuel - 3.6L (LGZ) - DTC P219A or P219B
P219B	Engine Controls and Fuel - 3.6L (LGZ) - DTC P219A or P219B
P21C5	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P21C5
P21CB	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P21CB
P2202	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P2203	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P2205	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P2206	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P2207	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P2208	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P2209	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P220A	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P220A or P220B
P220B	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P220A or P220B
P220C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA

DTC	Diagnostic Procedure
P220D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115E, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P220E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115E, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P220F	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115E, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P2210	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115E, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P2211	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P115E, P115E, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA</u>
P2227	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P2227-P2230</u>
P2227	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2227-P2230</u>
P2227	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P2227-P2230</u>
P2228	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P2227-P2230</u>
P2228	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2227-P2230</u>
P2228	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P2227-P2230</u>
P2229	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P2227-P2230</u>
P2229	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2227-P2230</u>
P2229	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P2227-P2230</u>
P222A	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P2227-P2230</u>
P222A	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2227-P2230</u>
P222A	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P2227-P2230</u>
P222B	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P2227-P2230</u>
P222B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2227-P2230</u>
P222B	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P2227-P2230</u>
P222C	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P2227-P2230</u>
P222C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2227-P2230</u>
P222C	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P2227-P2230</u>
P222D	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P2227-P2230</u>
P222D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2227-P2230</u>
P222D	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P2227-P2230</u>
P222E	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P2227-P2230</u>
P222E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2227-P2230</u>
P222E	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P2227-P2230</u>
P222F	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P2227-P2230</u>
P222F	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2227-P2230</u>
P222F	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P2227-P2230</u>
P2230	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P2227-P2230</u>
P2230	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2227-P2230</u>
P2230	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P2227-P2230</u>
P2263	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0234, P0299, or P2263</u>
P2264	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2264</u>
P2269	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2269</u>
P226D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P226D</u>

DTC	Diagnostic Procedure
P2270	Engine Controls and Fuel - 2.5L (LCV) - DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P1133, P2270, or P2271
P2270	Engine Controls and Fuel - 3.6L (LGZ) - DTC P013A-P013F, P014A, P014B, P015A-P015D, or P2270-P2273
P2271	Engine Controls and Fuel - 2.5L (LCV) - DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P1133, P2270, or P2271
P2271	Engine Controls and Fuel - 3.6L (LGZ) - DTC P013A-P013F, P014A, P014B, P015A-P015D, or P2270-P2273
P2272	Engine Controls and Fuel - 3.6L (LGZ) - DTC P013A-P013F, P014A, P014B, P015A-P015D, or P2270-P2273
P2273	Engine Controls and Fuel - 3.6L (LGZ) - DTC P013A-P013F, P014A, P014B, P015A-P015D, or P2270-P2273
P227B	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P227B-P227E
P227C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P227B-P227E
P227D	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P227B-P227E
P227E	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P227B-P227E
P228A	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P228A or P228B
P228B	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P228A or P228B
P228C	Engine Controls and Fuel - 2.5L (LCV) - DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20
P228C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0087, P0089, P228C, P228D, or P2293
P228C	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20
P228D	Engine Controls and Fuel - 2.5L (LCV) - DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20
P228D	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0087, P0089, P228C, P228D, or P2293
P228D	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20
P2293	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0087, P0089, P228C, P228D, or P2293
P2294	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0090-P0092, P163A, P163B, or P2294-P2296
P2295	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0090-P0092, P163A, P163B, or P2294-P2296
P2296	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0090-P0092, P163A, P163B, or P2294-P2296
P2297	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2297 or P2A00
P22A0	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P22A1	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P22A3	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P22A4	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119F, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE

DTC	Diagnostic Procedure
P22A5	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119E, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P22A6	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119E, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P22A7	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119E, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P22A8	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119E, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P22A9	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119E, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P22B6	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P11B3, P22B6, P22B7, or P2A01
P22B7	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P11B3, P22B6, P22B7, or P2A01
P22F9	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P22FA	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P115E, P115F, P1160, P116A-P116F, P1192-P1194, P119A-P119C, P11C5, P11C6, P11CC, P11D3, P11DB, P2202, P2203, P2205-P2211, P22F9, or P22FA
P22FE	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1004, P119D-P119E, P11BE, P11BF, P11C0, P11C7, P11C8, P11D0-P11D2, P11D5, P11D8, P11D9, P11DA, P11DC, P11FC-P11FE, P22A0, P22A1, P22A3-P22A9, or P22FE
P2300	Engine Controls and Fuel - 2.5L (LCV) - DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310
P2300	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316
P2301	Engine Controls and Fuel - 2.5L (LCV) - DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310
P2301	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316
P2303	Engine Controls and Fuel - 2.5L (LCV) - DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310
P2303	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316
P2304	Engine Controls and Fuel - 2.5L (LCV) - DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310
P2304	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316
P2306	Engine Controls and Fuel - 2.5L (LCV) - DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310
P2306	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316
P2307	Engine Controls and Fuel - 2.5L (LCV) - DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310
P2307	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316

DTC	Diagnostic Procedure
P2309	Engine Controls and Fuel - 2.5L (LCV) - DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310
P2309	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316
P2310	Engine Controls and Fuel - 2.5L (LCV) - DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310
P2310	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316
P2312	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316
P2313	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316
P2315	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316
P2316	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316
P242C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0545, P0546, P2032, P2033, P242C, P242D, P2470, P2471, P2481, or P2482
P242D	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0545, P0546, P2032, P2033, P242C, P242D, P2470, P2471, P2481, or P2482
P242E	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P113B-P113F, P118E, P118F, P1196-P1198, P2081, P2085, P242E, P2472, or P2484
P244A	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P244A
P244C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P244C
P2452	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2452-P2456
P2453	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2452-P2456
P2454	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2452-P2456
P2455	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2452-P2456
P2456	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2452-P2456
P2457	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2457
P2459	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2459
P245A	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P245A-P245D
P245B	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P245A-P245D
P245C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P245A-P245D
P245D	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P245A-P245D
P2463	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2463
P2470	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0545, P0546, P2032, P2033, P242C, P242D, P2470, P2471, P2481, or P2482
P2471	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0545, P0546, P2032, P2033, P242C, P242D, P2470, P2471, P2481, or P2482
P2472	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P113B-P113F, P118E, P118F, P1196-P1198, P2081, P2085, P242E, P2472, or P2484
P2481	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0545, P0546, P2032, P2033, P242C, P242D, P2470, P2471, P2481, or P2482
P2482	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P0545, P0546, P2032, P2033, P242C, P242D, P2470, P2471, P2481, or P2482
P2484	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P113B-P113F, P118E, P118F, P1196-P1198, P2081, P2085, P242E, P2472, or P2484
P248A	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1051, P20B9, P20BA-P20BC, P248A, or P248B

DTC	Diagnostic Procedure
P248B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1051, P20B9, P20BA-P20BC, P248A, or P248B</u>
P248C	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1052, P20BD-P20BE, P20C0, P248C, or P248D</u>
P248D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1052, P20BD-P20BE, P20C0, P248C, or P248D</u>
P249D	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P20EE, P249D, or P249E</u>
P249E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P20EE, P249D, or P249E</u>
P24A0	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P24A0 or P24A1</u>
P24A1	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P24A0 or P24A1</u>
P24A4	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P24A4</u>
P24A5	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P24A5</u>
P24B0	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P24B0-P24B6, P24C7, P24D0, or P24D1</u>
P24B1	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P24B0-P24B6, P24C7, P24D0, or P24D1</u>
P24B2	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P24B0-P24B6, P24C7, P24D0, or P24D1</u>
P24B3	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P24B0-P24B6, P24C7, P24D0, or P24D1</u>
P24B4	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P24B0-P24B6, P24C7, P24D0, or P24D1</u>
P24B5	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P24B0-P24B6, P24C7, P24D0, or P24D1</u>
P24B6	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P24B0-P24B6, P24C7, P24D0, or P24D1</u>
P24C7	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P24B0-P24B6, P24C7, P24D0, or P24D1</u>
P24D0	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P24B0-P24B6, P24C7, P24D0, or P24D1</u>
P24D1	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P24B0-P24B6, P24C7, P24D0, or P24D1</u>
P250A	Displays and Gauges - <u>DTC P250A</u>
P2534	Wiring Systems and Power Management - <u>DTC P2534 or P2535</u>
P2535	Wiring Systems and Power Management - <u>DTC P2534 or P2535</u>
P2537	Wiring Systems and Power Management - <u>DTC P2537</u>
P2544	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544</u>
P2544	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544</u>
P2544	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P150C, P155D, P15F2, P1762, P1773, P1775, P188B, P18EF, P1919, or P2544</u>
P2564	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2564, P2565, or U0656</u>
P2565	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2564, P2565, or U0656</u>
P2598	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0046, P2598, or P2599</u>
P2599	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0046, P2598, or P2599</u>
P25BD	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P25BD</u>
P25CA	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P25CA-P25CF</u>
P25CB	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P25CA-P25CF</u>
P25CC	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P25CA-P25CF</u>
P25CD	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P25CA-P25CF</u>

DTC	Diagnostic Procedure
P25CE	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P25CA-P25CF</u>
P25CF	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P25CA-P25CF</u>
P2610	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P2610	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P2610	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P2627	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2627 or P2628</u>
P2628	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2627 or P2628</u>
P262B	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P262B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P262B	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P262B	Data Communications - <u>DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996</u>
P2635	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P2635</u>
P2635	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P2635</u>
P263A	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0650, P263A, or P263B - Malfunction Indicator Lamp (MIL) Malfunction</u>
P263A	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0650, P263A, or P263B - Malfunction Indicator Lamp (MIL) Malfunction (LWN)</u>
P263A	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0650, P263A, or P263B - Malfunction Indicator Lamp (MIL) Malfunction</u>
P263B	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0650, P263A, or P263B - Malfunction Indicator Lamp (MIL) Malfunction</u>
P263B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P0650, P263A, or P263B - Malfunction Indicator Lamp (MIL) Malfunction (LWN)</u>
P263B	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0650, P263A, or P263B - Malfunction Indicator Lamp (MIL) Malfunction</u>
P264F	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P264F	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>

DTC	Diagnostic Procedure
P264F	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P2670	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P20CB, P20CD, P20CE, P2670, or P2671
P2670	Automatic Transmission - 8L45 (M5T) - DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827
P2671	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P20CB, P20CD, P20CE, P2670, or P2671
P2671	Automatic Transmission - 8L45 (M5T) - DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827
P2687	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2687-P2689
P2688	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2687-P2689
P2689	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2687-P2689
P268C	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P268C-P268F
P268D	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P268C-P268F
P268E	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P268C-P268F
P268F	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P268C-P268F
P2714	Automatic Transmission - 6L50 (MYB) - DTC P2714 or P2715
P2714	Automatic Transmission - 8L45 (M5T) - DTC P2714 or P2715
P2715	Automatic Transmission - 6L50 (MYB) - DTC P2714 or P2715
P2715	Automatic Transmission - 8L45 (M5T) - DTC P2714 or P2715
P2718	Automatic Transmission - 8L45 (M5T) - DTC P0658, P0659, P2718, P2720, P2721, P2727, P2729, P2730, P281B, P281D, or P281E
P2719	Automatic Transmission - 6L50 (MYB) - DTC P2719-P2721
P271A	Automatic Transmission - 6L50 (MYB) - DTC P2719-P2721
P271B	Automatic Transmission - 6L50 (MYB) - DTC P2719-P2721
P271C	Automatic Transmission - 6L50 (MYB) - DTC P2719-P2721
P271D	Automatic Transmission - 6L50 (MYB) - DTC P2719-P2721
P271E	Automatic Transmission - 6L50 (MYB) - DTC P2719-P2721
P271F	Automatic Transmission - 6L50 (MYB) - DTC P2719-P2721
P2720	Automatic Transmission - 6L50 (MYB) - DTC P2719-P2721
P2720	Automatic Transmission - 8L45 (M5T) - DTC P0658, P0659, P2718, P2720, P2721, P2727, P2729, P2730, P281B, P281D, or P281E
P2721	Automatic Transmission - 6L50 (MYB) - DTC P2719-P2721
P2721	Automatic Transmission - 8L45 (M5T) - DTC P0658, P0659, P2718, P2720, P2721, P2727, P2729, P2730, P281B, P281D, or P281E
P2723	Automatic Transmission - 6L50 (MYB) - DTC P2723 or P2724
P2723	Automatic Transmission - 8L45 (M5T) - DTC P2723 or P2724
P2724	Automatic Transmission - 6L50 (MYB) - DTC P2723 or P2724
P2724	Automatic Transmission - 8L45 (M5T) - DTC P2723 or P2724
P2727	Automatic Transmission - 8L45 (M5T) - DTC P0658, P0659, P2718, P2720, P2721, P2727, P2729, P2730, P281B, P281D, or P281E
P2728	Automatic Transmission - 6L50 (MYB) - DTC P2728-P2730
P2729	Automatic Transmission - 6L50 (MYB) - DTC P2728-P2730
P2729	Automatic Transmission - 8L45 (M5T) - DTC P0658, P0659, P2718, P2720, P2721, P2727, P2729, P2730, P281B, P281D, or P281E

DTC	Diagnostic Procedure
P272A	Automatic Transmission - 6L50 (MYB) - <u>DTC P2728-P2730</u>
P272B	Automatic Transmission - 6L50 (MYB) - <u>DTC P2728-P2730</u>
P272C	Automatic Transmission - 6L50 (MYB) - <u>DTC P2728-P2730</u>
P272D	Automatic Transmission - 6L50 (MYB) - <u>DTC P2728-P2730</u>
P272E	Automatic Transmission - 6L50 (MYB) - <u>DTC P2728-P2730</u>
P272F	Automatic Transmission - 6L50 (MYB) - <u>DTC P2728-P2730</u>
P2730	Automatic Transmission - 6L50 (MYB) - <u>DTC P2728-P2730</u>
P2730	Automatic Transmission - 8L45 (M5T) - <u>DTC P0658, P0659, P2718, P2720, P2721, P2727, P2729, P2730, P281B, P281D, or P281E</u>
P2736	Automatic Transmission - 8L45 (M5T) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827</u>
P2738	Automatic Transmission - 8L45 (M5T) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827</u>
P2739	Automatic Transmission - 8L45 (M5T) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827</u>
P2762	Automatic Transmission - 6L50 (MYB) - <u>DTC P2762, P2763, or P2764</u>
P2763	Automatic Transmission - 6L50 (MYB) - <u>DTC P2762, P2763, or P2764</u>
P2764	Automatic Transmission - 6L50 (MYB) - <u>DTC P2762, P2763, or P2764</u>
P279A	Transfer Case - MP 1622G (NQ7) - <u>DTC P17D4, P185E, or P279A-P279C (NQ6, NQ7)</u>
P279A	Transfer Case - MP 3025G (NQ6) - <u>DTC P17D4, P185E, or P279A-P279C (NQ6, NQ7)</u>
P279B	Front Drive Axle - <u>DTC P279B</u>
P279B	Transfer Case - MP 1622G (NQ7) - <u>DTC P17D4, P185E, or P279A-P279C (NQ6, NQ7)</u>
P279B	Transfer Case - MP 3025G (NQ6) - <u>DTC P17D4, P185E, or P279A-P279C (NQ6, NQ7)</u>
P279C	Transfer Case - MP 1622G (NQ7) - <u>DTC P17D4, P185E, or P279A-P279C (NQ6, NQ7)</u>
P279C	Transfer Case - MP 3025G (NQ6) - <u>DTC P17D4, P185E, or P279A-P279C (NQ6, NQ7)</u>
P27A7	Automatic Transmission - 8L45 (M5T) - <u>DTC P27A7-P27AD</u>
P27A8	Automatic Transmission - 8L45 (M5T) - <u>DTC P27A7-P27AD</u>
P27A9	Automatic Transmission - 8L45 (M5T) - <u>DTC P27A7-P27AD</u>
P27AA	Automatic Transmission - 8L45 (M5T) - <u>DTC P27A7-P27AD</u>
P27AB	Automatic Transmission - 8L45 (M5T) - <u>DTC P27A7-P27AD</u>
P27AC	Automatic Transmission - 8L45 (M5T) - <u>DTC P27A7-P27AD</u>
P27AD	Automatic Transmission - 8L45 (M5T) - <u>DTC P27A7-P27AD</u>
P27B5	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P27B5	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P27B5	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A,</u>

DTC	Diagnostic Procedure
	<u>P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P2802	Automatic Transmission - 8L45 (M5T) - <u>DTC P0707, P0708, P2802, P2803, or P2805</u>
P2803	Automatic Transmission - 8L45 (M5T) - <u>DTC P0707, P0708, P2802, P2803, or P2805</u>
P2805	Automatic Transmission - 8L45 (M5T) - <u>DTC P0707, P0708, P2802, P2803, or P2805</u>
P2808	Automatic Transmission - 8L45 (M5T) - <u>DTC P2808 or P2809</u>
P2809	Automatic Transmission - 8L45 (M5T) - <u>DTC P2808 or P2809</u>
P2812	Automatic Transmission - 8L45 (M5T) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827</u>
P2814	Automatic Transmission - 8L45 (M5T) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827</u>
P2815	Automatic Transmission - 8L45 (M5T) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827</u>
P2817	Automatic Transmission - 8L45 (M5T) - <u>DTC P2817 or P2818</u>
P2818	Automatic Transmission - 8L45 (M5T) - <u>DTC P2817 or P2818</u>
P281B	Automatic Transmission - 8L45 (M5T) - <u>DTC P0658, P0659, P2718, P2720, P2721, P2727, P2729, P2730, P281B, P281D, or P281E</u>
P281D	Automatic Transmission - 8L45 (M5T) - <u>DTC P0658, P0659, P2718, P2720, P2721, P2727, P2729, P2730, P281B, P281D, or P281E</u>
P281E	Automatic Transmission - 8L45 (M5T) - <u>DTC P0658, P0659, P2718, P2720, P2721, P2727, P2729, P2730, P281B, P281D, or P281E</u>
P2824	Automatic Transmission - 8L45 (M5T) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827</u>
P2826	Automatic Transmission - 8L45 (M5T) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827</u>
P2827	Automatic Transmission - 8L45 (M5T) - <u>DTC P0960, P0962-P0964, P0966-P0968, P0970, P0971, P2670, P2671, P2736, P2738, P2739, P2812, P2814, P2815, P2824, P2826, or P2827</u>
P2A00	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2297 or P2A00</u>
P2A01	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P11B3, P22B6, P22B7, or P2A01</u>
P2ADA	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2ADA-P2ADD</u>
P2ADB	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2ADA-P2ADD</u>
P2ADC	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2ADA-P2ADD</u>
P2ADD	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2ADA-P2ADD</u>
P2BAA	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2BAA</u>
P2C1E	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20</u>
P2C1E	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20</u>
P2C1F	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20</u>
P2C1F	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20</u>
P2C20	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20</u>

DTC	Diagnostic Procedure
P2C20	Engine Controls and Fuel - 3.6L (LGZ) - DTC P0089, P00C6, P228C, P228D, or P2C1E-P2C20
P2D45	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P2D45
P30B4	Engine Controls and Fuel - 2.5L (LCV) - DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5
P30B4	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5
P30B4	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5
P30B5	Engine Controls and Fuel - 2.5L (LCV) - DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5
P30B5	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5
P30B5	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5
P30BC	Engine Controls and Fuel - 2.5L (LCV) - DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5
P30BC	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5
P30BC	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5
P30D5	Engine Controls and Fuel - 2.5L (LCV) - DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5
P30D5	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5
P30D5	Engine Controls and Fuel - 3.6L (LGZ) - DTC P1008, P103D, P103E, P10C7, P10C8, P117A, P1436, P143A, P143B, P30B4, P30B5, P30BC, or P30D5
P30D6	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P30D6	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P30D6	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P30D6	Data Communications - DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996
P30D7	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P30D7	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191
P30D7	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191

DTC	Diagnostic Procedure
P30D7	Data Communications - DTC P0601-P0607 , P060A-P060C , P0610 , P062F , P0630 , P16E9-P16F3 , P16F9 , P16FD , P16FE , P262B , P30D6-P30DD , P3186 , or P3996
P30D8	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P30D8	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P30D8	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P30D8	Data Communications - DTC P0601-P0607 , P060A-P060C , P0610 , P062F , P0630 , P16E9-P16F3 , P16F9 , P16FD , P16FE , P262B , P30D6-P30DD , P3186 , or P3996
P30D9	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P30D9	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P30D9	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P30D9	Data Communications - DTC P0601-P0607 , P060A-P060C , P0610 , P062F , P0630 , P16E9-P16F3 , P16F9 , P16FD , P16FE , P262B , P30D6-P30DD , P3186 , or P3996
P30DA	Engine Controls and Fuel - 2.5L (LCV) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P30DA	Engine Controls and Fuel - 2.8L (LWN) Diesel - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P30DA	Engine Controls and Fuel - 3.6L (LGZ) - DTC P026B , P05EC , P0601-P0607 , P060A , P060B , P0610 , P061C , P062B , P062F , P0630 , P064D , P064E , P134C , P160A , P160D , P160E , P161C , P16E9-P16F0 , P16F3 , P2610 , P262B , P264F , P27B5 , P30D6-P30DD , P3186 , or P3191
P30DA	Data Communications - DTC P0601-P0607 , P060A-P060C , P0610 , P062F , P0630 , P16E9-P16F3 , P16F9 , P16FD , P16FE , P262B , P30D6-P30DD , P3186 , or P3996
P30DB	Engine Controls and

DTC	Diagnostic Procedure
	<u>P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P30DB	Data Communications - <u>DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996</u>
P30DC	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P30DC	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P30DC	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P30DC	Data Communications - <u>DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996</u>
P30DD	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P30DD	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P30DD	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P30DD	Data Communications - <u>DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996</u>
P30DE	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175F, P1772, P30DE, P314E, or P316B</u>
P30DE	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175F, P1772, P30DE, P314E, or P316B</u>
P30DE	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175F, P1772, P30DE, P314E, or P316B</u>
P30EE	Engine Heating and Cooling - <u>DTC P0494, P30EE, P30EF, or U0632 - Cooling Fan Malfunction</u>
P30EF	Engine Heating and Cooling - <u>DTC P0494, P30EE, P30EF, or U0632 - Cooling Fan Malfunction</u>
P314E	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167E, P16FE, P175F, P1772, P30DE, P314E, or P316B</u>
P314E	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128E, P129E, P12A8,</u>

DTC	Diagnostic Procedure
	<u>P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175E, P1772, P30DE, P314E, or P316B</u>
P314E	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175E, P1772, P30DE, P314E, or P316B</u>
P316B	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175E, P1772, P30DE, P314E, or P316B</u>
P316B	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175E, P1772, P30DE, P314E, or P316B</u>
P316B	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P1000, P1001, P1003, P1009, P10C6, P10F5, P1100, P1103, P11FE, P1200, P128C, P128D, P128F, P129E, P12A8, P130F, P139A, P139B, P14CD, P14CE, P14D4-P14D6, P15F9, P15FB, P165C, P167F, P16FF, P175E, P1772, P30DE, P314E, or P316B</u>
P3186	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P3186	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P3186	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P026B, P05EC, P0601-P0607, P060A, P060B, P0610, P061C, P062B, P062F, P0630, P064D, P064E, P134C, P160A, P160D, P160E, P161C, P16E9-P16F0, P16F3, P2610, P262B, P264F, P27B5, P30D6-P30DD, P3186, or P3191</u>
P3186	Data Communications - <u>DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996</u>
P3400	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P3400, P3409, P3411, P3412, P3433, P3435, or P3436</u>
P3409	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P3400, P3409, P3411, P3412, P3433, P3435, or P3436</u>
P3411	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P3400, P3409, P3411, P3412, P3433, P3435, or P3436</u>
P3412	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P3400, P3409, P3411, P3412, P3433, P3435, or P3436</u>
P3433	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P3400, P3409, P3411, P3412, P3433, P3435, or P3436</u>
P3435	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P3400, P3409, P3411, P3412, P3433, P3435, or P3436</u>
P3436	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P3400, P3409, P3411, P3412, P3433, P3435, or P3436</u>
P3996	Data Communications - <u>DTC P0601-P0607, P060A-P060C, P0610, P062F, P0630, P16E9-P16F3, P16F9, P16FD, P16FE, P262B, P30D6-P30DD, P3186, or P3996</u>
U0020	Data Communications - <u>DTC U0020</u>
U0073	Data Communications - <u>DTC U0073 or U2100</u>
U0074	Data Communications - <u>DTC U0074</u>
U0076	Data Communications - <u>DTC U0076</u>
U0077	Data Communications - <u>DTC U0077</u>

DTC	Diagnostic Procedure
U0078	Data Communications - <u>DTC U0078</u>
U007B	Data Communications - <u>DTC U007B</u>
U007C	Data Communications - <u>DTC U007C</u>
U007D	Data Communications - <u>DTC U007D</u>
U0100-U02FF	Data Communications - <u>DTC U0100-U02FF</u>
U010C	Data Communications - <u>DTC U010C, U010E, U029D, U029E, or U02A3</u>
U010E	Data Communications - <u>DTC U010C, U010E, U029D, U029E, or U02A3</u>
U029D	Data Communications - <u>DTC U010C, U010E, U029D, U029E, or U02A3</u>
U029E	Data Communications - <u>DTC U010C, U010E, U029D, U029E, or U02A3</u>
U02A3	Data Communications - <u>DTC U010C, U010E, U029D, U029E, or U02A3</u>
U0300-U0336	Data Communications - <u>DTC U0300-U0336</u>
U0400-U05FF	Data Communications - <u>DTC U0400-U05FF</u>
U0600-U06FF	Data Communications - <u>DTC U0600-U06FF</u>
U0606	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0121-P0123, P0222, P0223, P2135, U0606, or U0607</u>
U0606	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0121-P0123, P0222, P0223, P2135, U0606, or U0607</u>
U0607	Engine Controls and Fuel - 2.5L (LCV) - <u>DTC P0121-P0123, P0222, P0223, P2135, U0606, or U0607</u>
U0607	Engine Controls and Fuel - 3.6L (LGZ) - <u>DTC P0121-P0123, P0222, P0223, P2135, U0606, or U0607</u>
U0632	Engine Heating and Cooling - <u>DTC P0494, P30EE, P30EF, or U0632 - Cooling Fan Malfunction</u>
U0654	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P02E8, P02E9, or U0654</u>
U0656	Engine Controls and Fuel - 2.8L (LWN) Diesel - <u>DTC P2564, P2565, or U0656</u>
U1340-U135F	Data Communications - <u>DTC U1340-U135F</u>
U1500-U15FF	Data Communications - <u>DTC U1500-U15FF</u>
U1814	Data Communications - <u>DTC U1814</u>
U1818	Data Communications - <u>DTC U1818</u>
U1833	Data Communications - <u>DTC U1833</u>
U183A	Data Communications - <u>DTC U183A</u>
U184A	Data Communications - <u>DTC U184A</u>
U184C	Data Communications - <u>DTC U184C</u>
U18A2	Data Communications - <u>DTC U18A2</u>
U18AF-U18B4	Data Communications - <u>DTC U18AF-U18B4</u>
U18B9-U18BF	Data Communications - <u>DTC U18B9-U18BF</u>
U18BA	Data Communications - <u>DTC U18BA</u>
U18C8	Data Communications - <u>DTC U18C8</u>
U18D5	Data Communications - <u>DTC U18D5</u>
U18D7	Data Communications - <u>DTC U18D7</u>
U18D9	Data Communications - <u>DTC U18D9</u>
U18DE	Data Communications - <u>DTC U18DE</u>
U18E1	Data Communications - <u>DTC U18E1</u>
U18E9	Data Communications - <u>DTC U18E9</u>
U1980	Data Communications - <u>DTC U1980</u>
U2010-U2013	Data Communications - <u>DTC U2010-U2013</u>
U2099	Data Communications - <u>DTC U2099</u>
U2100	Data Communications - <u>DTC U0073 or U2100</u>
U2160-U2231	Data Communications - <u>DTC U2160-U2231</u>

DTC	Diagnostic Procedure
U2412	Data Communications - <u>DTC U2412</u>
U2413	Data Communications - <u>DTC U2413</u>
U2500-U25FF	Data Communications - <u>DTC U2500-U25FF</u>
U2616	Data Communications - <u>DTC U2616</u>
U2626	Data Communications - <u>DTC U2626</u>
U3000	Data Communications - <u>DTC U3000</u>
U3012	Data Communications - <u>DTC U3012</u>

mcx30.com