


Fastener Tightening Specifications


Application	Specification	
	Metric	English
Luggage Carrier Side Rail Nut	4 N·m	35 lb in
Luggage Carrier Support Nut	4 N·m	35 lb in
Luggage Carrier Support Screw	6 N·m	53 lb in

Luggage Carrier Replacement (Equinox)

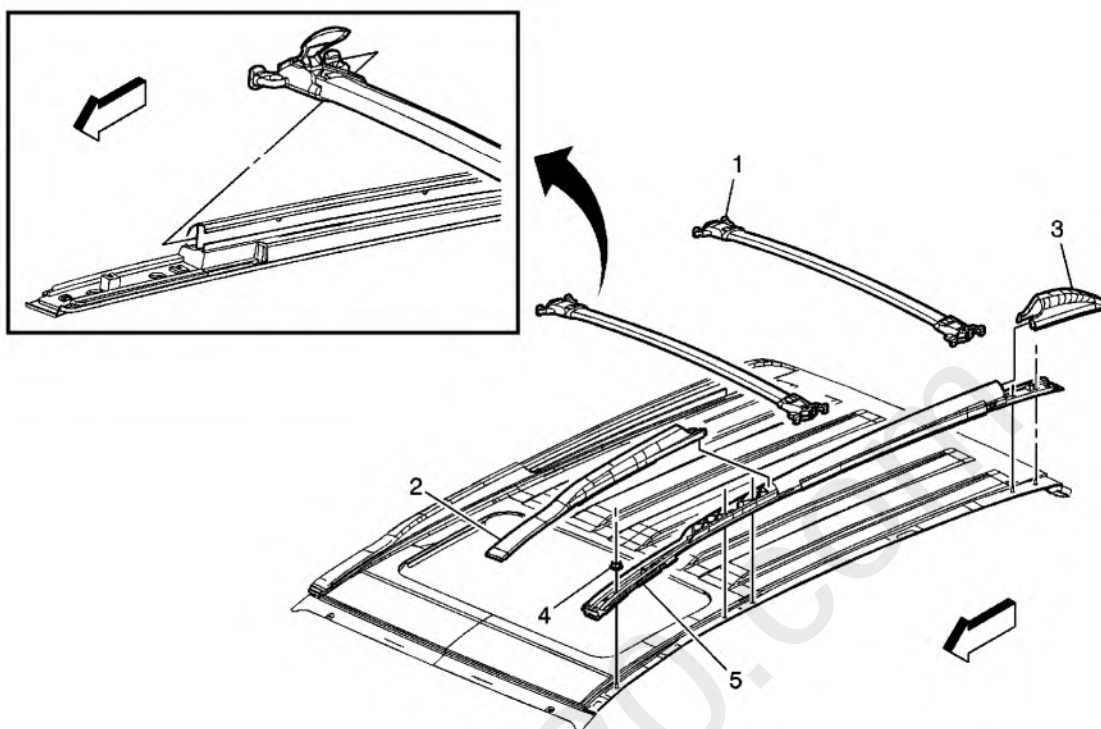

Callout	Component Name
1	Luggage Carrier Center Rail Assembly (Qty: 2) Procedure Remove the luggage carrier center rails by flipping up the side retainers and sliding the center rails rearward off the side rails.
2	Luggage Carrier Side Rail Front Finish Cover (Qty: 2)
3	Luggage Carrier Side Rail Rear Finish Cover (Qty: 2)
4	Luggage Carrier Side Rail Nut (Qty: 8) Caution: Refer to Fastener Caution in the Preface section. Tighten 4 N·m (35 lb in)
5	Luggage Carrier Side Rail

Luggage Carrier Replacement (Torrent)

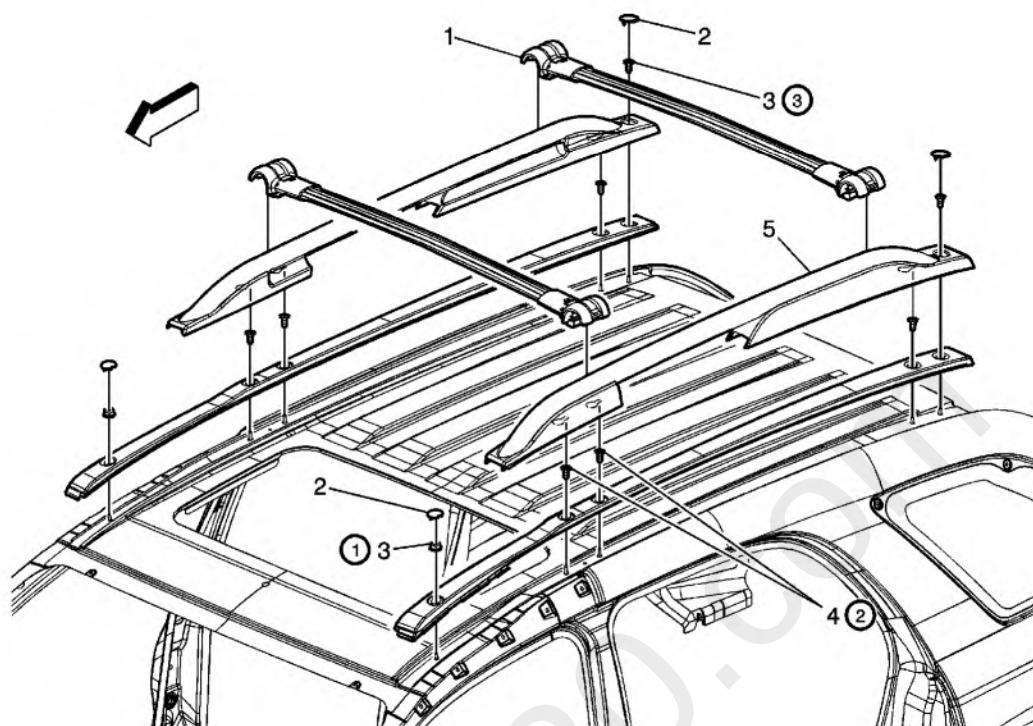

Callout	Component Name
1	Luggage Carrier Center Rail Assembly (Qty: 2) Procedure Remove the luggage carrier center rails by flipping up the side retainers and sliding the center rails rearward off the side rails.
2	Luggage Carrier Support Nut Cap (Qty: 4)
3	Luggage Carrier Support Screw (Qty: 8) Caution: Refer to Fastener Caution in the Preface section. Procedure Tighten in mandatory sequence as indicated in image. Tighten 6 N·m (53 lb in)
	Luggage Carrier Front Rail Nut (Qty: 2)

© 2010 General Motors Corporation. All rights reserved.

4	Tighten 4 N·m (35 lb in)
5	Luggage Carrier Side Rail Procedure Slide the rail assembly rearward and lift up to disengage the rail assembly from the vehicle and access the hidden fasteners.

mcx30.com