


Power Steering Fluid Reservoir Replacement

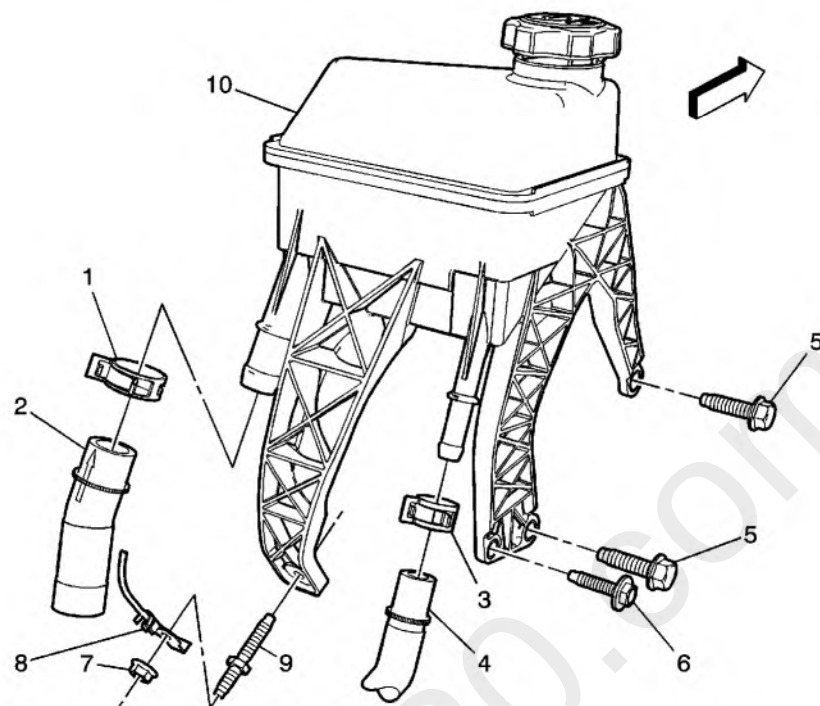

Callout	Component Name
Preliminary Procedures 1. Remove the fuel injector sight shield. Refer to Fuel Injector Sight Shield Replacement. 2. Remove the air cleaner outlet duct. Refer to Air Cleaner Outlet Duct Replacement. 3. Remove as much power steering fluid from the remote power steering fluid reservoir as possible. 4. Place drain pans under the vehicle as needed.	
1	Power Steering Reservoir Outlet Hose Clamp
2	Power Steering Fluid Reservoir Outlet Hose
3	Power Steering Cooler Pipe Clamp
4	Power Steering Cooler Pipe
5	Remote Power Steering Fluid Reservoir Bolt (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 9 N·m (80 lb in)
	Remote Power Steering Fluid Reservoir Bolt

© 2009 General Motors Corporation. All rights reserved.

6	Tighten 9 N·m (80 lb in)
7	Ground Terminal Nut, if equipped Tighten 9 N·m (80 lb in) Tip A clip may exist in place of the nut.
8	Ground Terminal
9	Power Steering Fluid Reservoir Stud Tighten 9 N·m (80 lb in)
10	Remote Power Steering Fluid Reservoir Procedure Fill and bleed the power steering system. Refer to Power Steering System Bleeding . Tip Clean any excess power steering fluid from the vehicle.