


Power Steering Pump Pulley Replacement

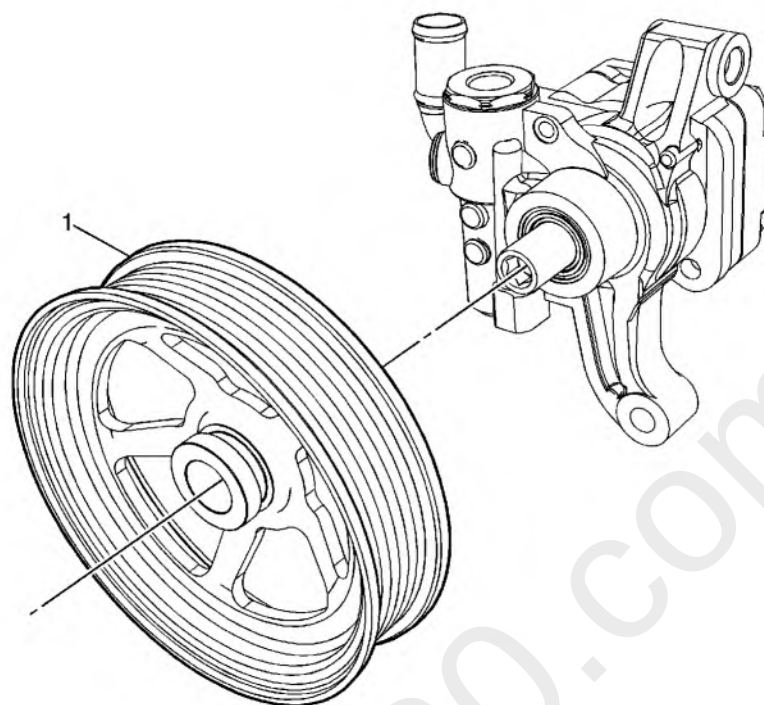

Callout	Component Name
Preliminary Procedure	
Remove the power steering pump. Refer to Power Steering Pump Replacement .	
1	Power Steering Pump Pulley Procedure 1. Use remover J 25034-C to remove the power steering pump pulley. 2. Use installer J 25033-C to install the power steering pump pulley. 3. Ensure the axial tolerance of the power steering pump pulley on the shaft is within 0.25 mm (0.010 in). Special Tools • J 25033-C Pulley Installer • J 25034-C Pulley Remover