



Power Steering Fluid Reservoir Outlet Hose Replacement

Removal Procedure

1. Remove the fuel injector sight shield. Refer to [Fuel Injector Sight Shield Replacement](#).
2. Remove as much power steering fluid from the remote power steering fluid reservoir as possible.
3. Place drain pans under the vehicle as needed.

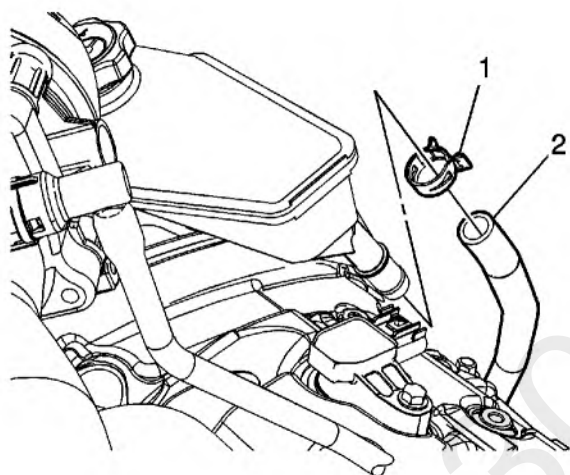

4. Compress the power steering reservoir outlet hose clamp (1) and disconnect the power steering reservoir outlet hose (2) from the remote power steering fluid reservoir.
5. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#).

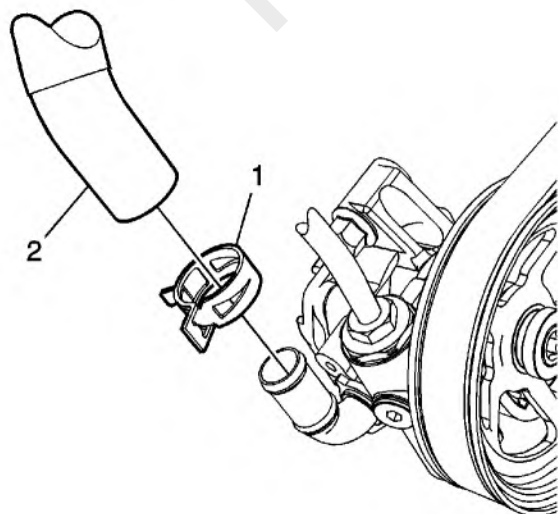





6. Compress the power steering reservoir outlet hose clamp (1) and disconnect the power steering reservoir outlet hose (2) from the power steering pump.
7. Remove the power steering reservoir outlet hose.

Installation Procedure

1. Position the power steering reservoir outlet hose to the vehicle.

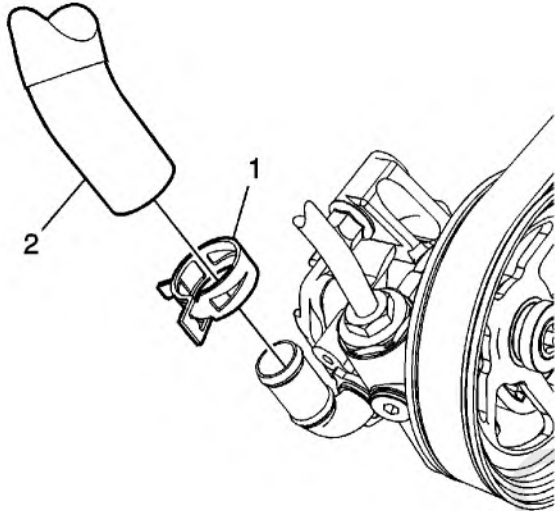

2. Compress the power steering reservoir outlet hose clamp (1) and connect the power steering reservoir outlet hose (2) to the power steering pump.

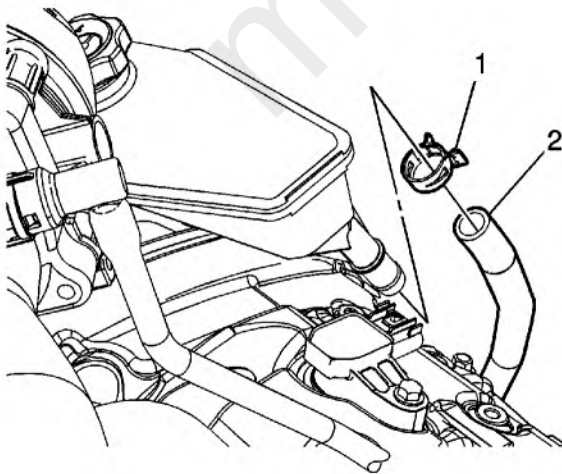

3. Compress the power steering reservoir outlet hose clamp (1) and connect the power steering

reservoir outlet hose (2) to the remote power steering fluid reservoir.

4. Clean any excess power steering fluid from the vehicle and remove the drain pans.
5. Lower the vehicle.
6. Install the fuel injector sight shield. Refer to [Fuel Injector Sight Shield Replacement](#).
7. Fill and bleed the power steering system. Refer to [Power Steering System Bleeding](#).

mcx30.com