


Fastener Tightening Specifications

Application	Specification	
	Metric	English
Front Bucket Seat Adjuster Bolt	50 N·m	37 lb ft
Front Bucket Seat Back Frame Bolts - Fold Flat	70 N·m	52 lb ft
Front Bucket Seat Back Frame Nut - Non Fold Flat	17 N·m	13 lb ft
Front Bucket Seat Back Panel Screws - Fold Flat	2 N·m	18 lb in
Front Bucket Seat Cushion Frame Bolt	12 N·m	9 lb ft
Front Bucket Seat Inboard Recliner Trim Panel Screw	2.5 N·m	22 lb in
Front Bucket Seat Outboard Recliner Trim Panel Screw	2.5 N·m	22 lb in
Front Bucket Seat Recliner Handle Bolt - Non Fold Flat	10 N·m	89 lb in
Front Bucket Seat Teardrop Washer Bolt - Non Fold Flat	35 N·m	26 lb ft
Front Seat Back Recliner Trim Panel Screw	2.5 N·m	22 lb in
Front Seat Belt Buckle Bolt	45 N·m	33 lb ft
Front Seat Belt Anchor Plate Bolt	45 N·m	33 lb ft
Front Seat Cushion Inner Trim Panel Screw	2.5 N·m	22 lb in
Front Seat Cushion Outer Trim Panel Screw	2.5 N·m	22 lb in
Front Seat Recliner Bolt - Fold Flat	45 N·m	33 lb ft
Rear Seat Bolts	40 N·m	30 lb ft
Seat Back Panel - Front Screw	2 N·m	18 lb in


Front Seat Replacement - Bucket

Removal Procedure

1. Remove the seat cushion outer trim panel. Refer to [Front Seat Cushion Outer Trim Panel Replacement](#).

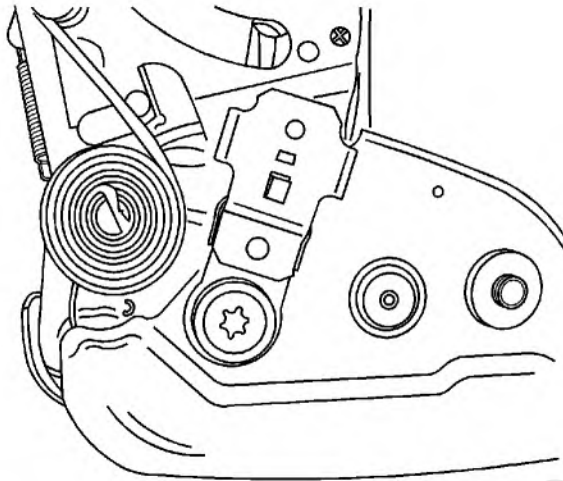


2. Position the seat fully forward.
3. Disconnect the shoulder belt from the seat quick disconnect feature by using a flat-bladed tool to press the tab.

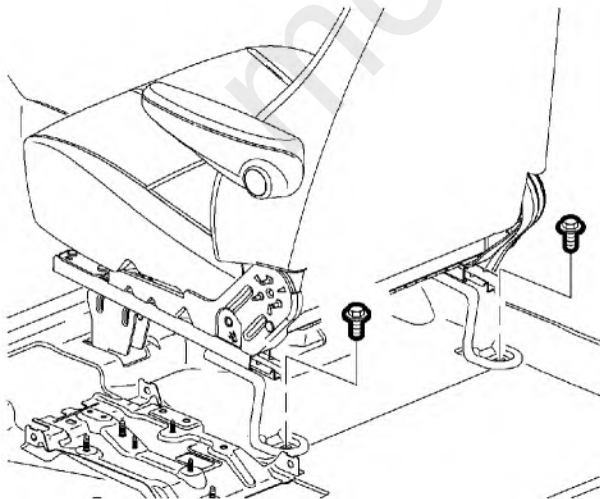

4. Remove the front seat adjuster bolts.


© 2010 General Motors Corporation. All rights reserved.

5. Move the seat to the full rearward position.

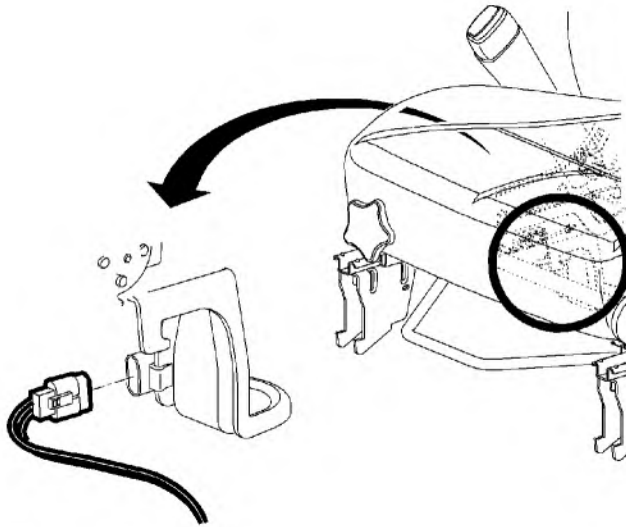


6. Disconnect the seat electrical connectors.
7. Lift the front seat adjuster hooks from the floor pan.
8. Remove the seat from the vehicle.

Installation Procedure

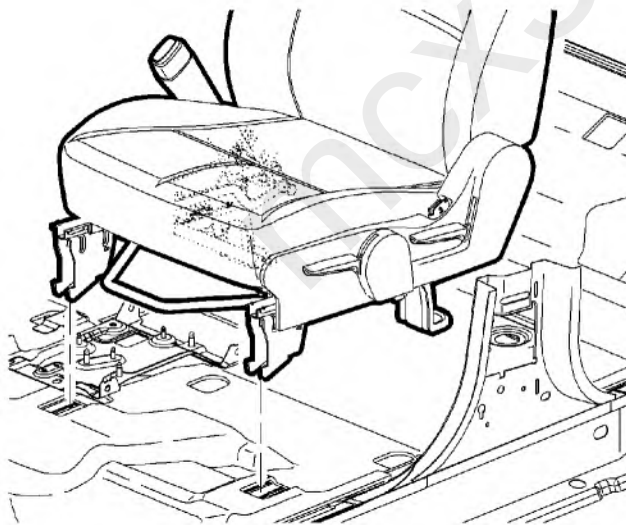


Note: This step must be performed to assure proper timing of the adjusters.

1. Adjust the seat adjuster tracks to the fully rearward position.
2. Position the seat in the vehicle and engage the front adjuster hooks in the floor pan.

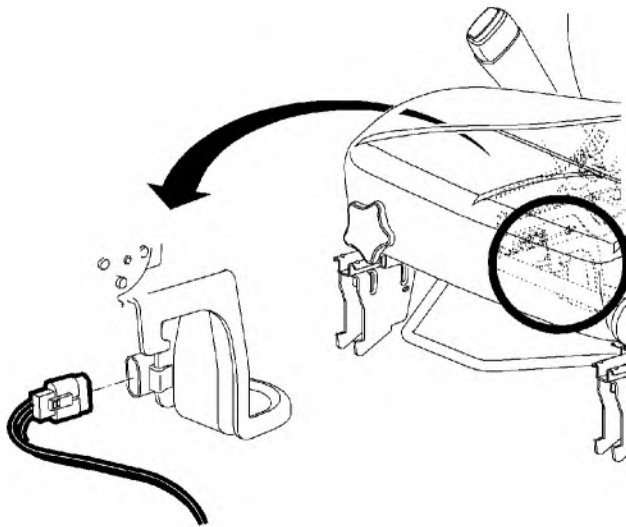


3. Connect the seat electrical connectors.
4. Position the seat in the fully forward position to expose the rear bolt locations.

Caution: Refer to [Fastener Caution](#) in the Preface section.

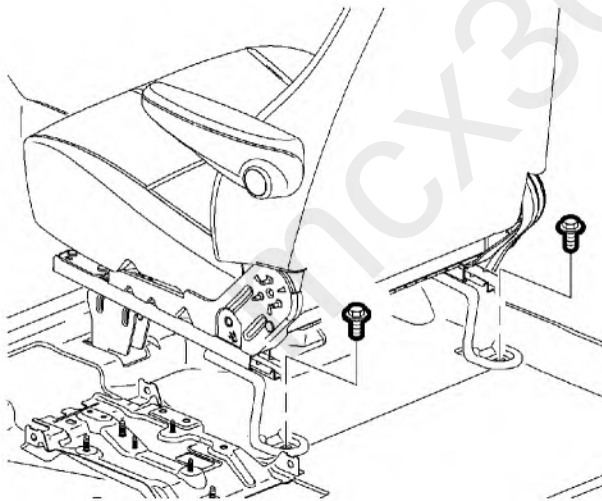


5. Install the seat adjuster bolts and tighten to **50 N·m (37 lb ft)**.
6. Install the shoulder belt webbing in the quick disconnect anchor.
7. Install the seat cushion outer trim panel. Refer to [Front Seat Cushion Outer Trim Panel Replacement](#).
8. Inspect the front seat belt for proper operation.

Rear Seat Back Cushion Trim Panel Replacement

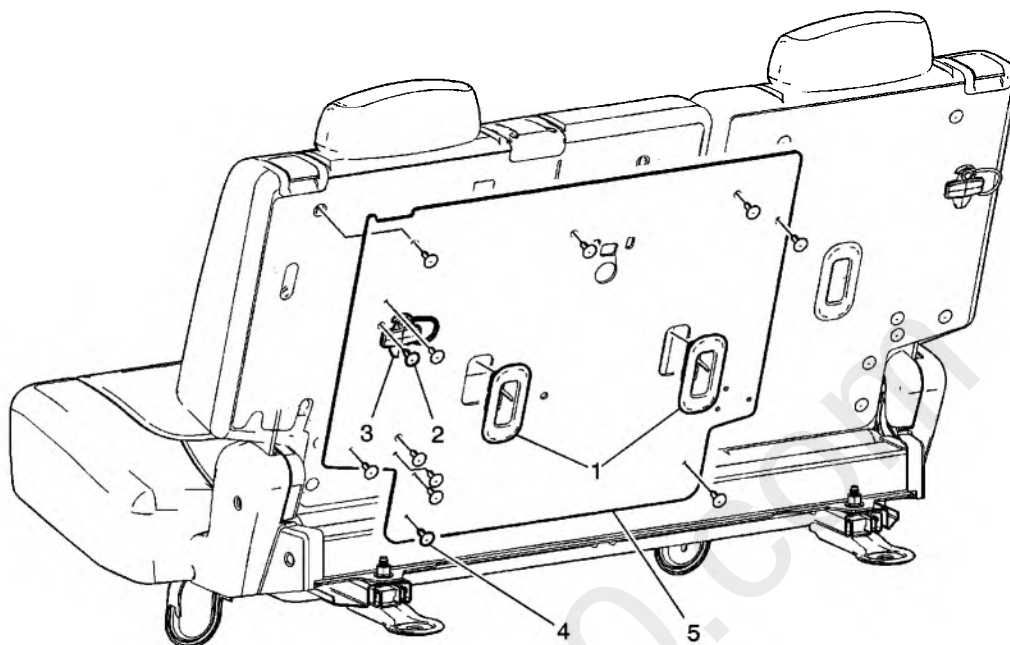

Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Rear Seat Anchor Plate Bezel (Qty: 2)
2	Child Seat Restraint System Belt Guide Retainer
3	Child Seat Restraint System Belt Guide
4	Rear Seat Back Cushion Panel Retainer (Qty: 13)
5	Rear Seat Back Cushion Panel

Front Seat Adjuster Replacement (2-Way Fold Flat)

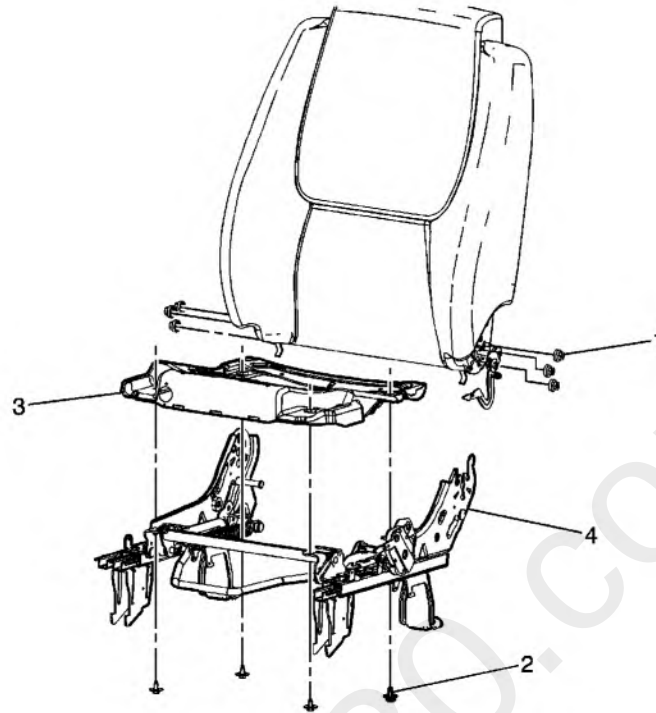

Callout	Component Name
Preliminary Procedure 1. Remove the front seat. Refer to Front Seat Replacement - Bucket . 2. Remove the seat cushion cover and pad. Refer to Front Seat Cushion Cover and Pad Replacement .	
1	Front Seat Back Recliner Nut Caution: Refer to Fastener Caution in the Preface section. Tighten 45 N·m (33 lb ft)
2	Front Seat Cushion Frame Bolt (Qty: 4) Tighten 12 N·m (9 lb ft)
3	Front Seat Cushion Frame
	Front Seat Adjuster Assembly
Procedure	

© 2010 General Motors Corporation. All rights reserved.

4

1. Use a flat-bladed tool to remove the recliner cable from the seat frame.
2. When replacing the adjuster assembly with a new unit, transfer components as necessary.


mcx30.com

Driver or Passenger Seat Head Restraint Replacement




Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Front Seat Head Restraint Tip 1. Push the button in and raise the head restraint to the full-up position. 2. Insert a small round tool into the guide hole 3. Pull up to remove the head restraint.

Front Seat Head Restraint Guide Replacement (Fold Flat)

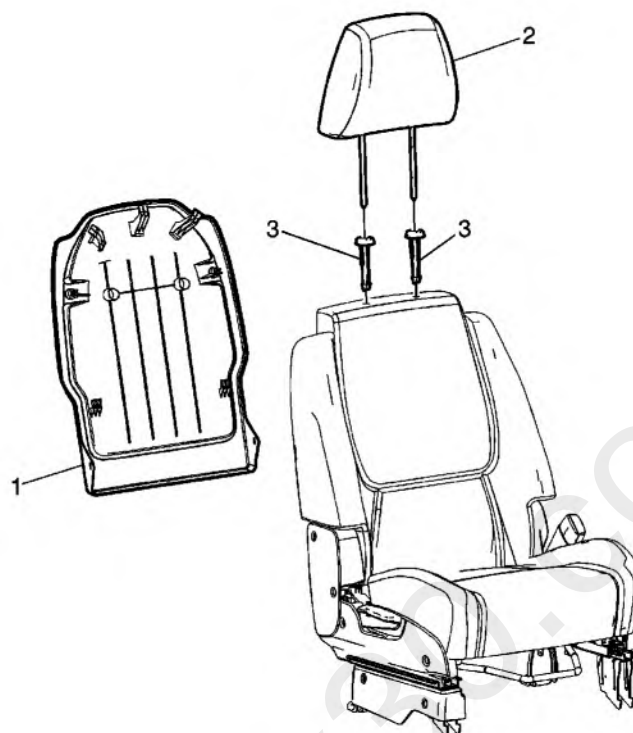


Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Seat Back Cushion Finish Panel Refer to Driver Seat and Passenger Seat Back Cushion Finish Panel Replacement .
2	Front Seat Head Restraint Refer to Front Seat Head Restraint Replacement .
3	Front Seat Head Restraint Guides Tip Squeeze the bottom of the guides together and push upward to remove.

Front Seat Head Restraint Guide Replacement (Non-Fold Flat)

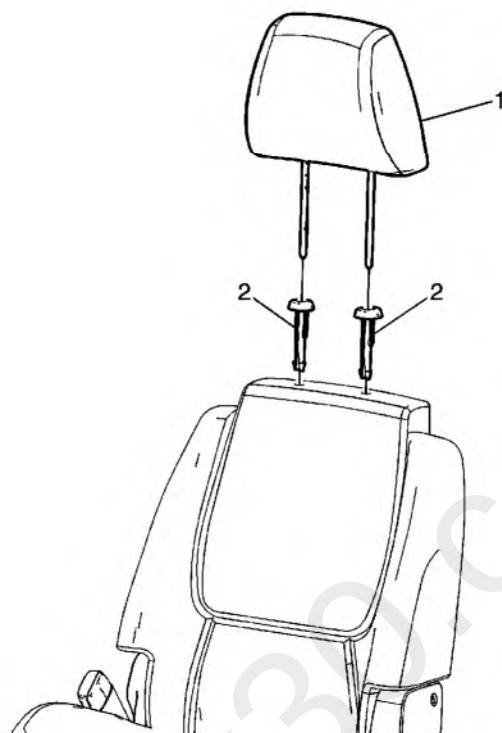


Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Front Seat Head Restraint Refer to Front Seat Head Restraint Replacement .
2	Front Seat Head Restraint Guides Tip 1. Disconnect the lower J-hook retainer from the seat back trim cover. 2. Carefully pull up the trim cover, disengaging the hoop and loop retainers, until the headrest guides are exposed. 3. Squeeze the locking tabs on the headrest guide and pull the guides up and out of the seat back pad.

Driver or Passenger Seat Cushion Frame Replacement

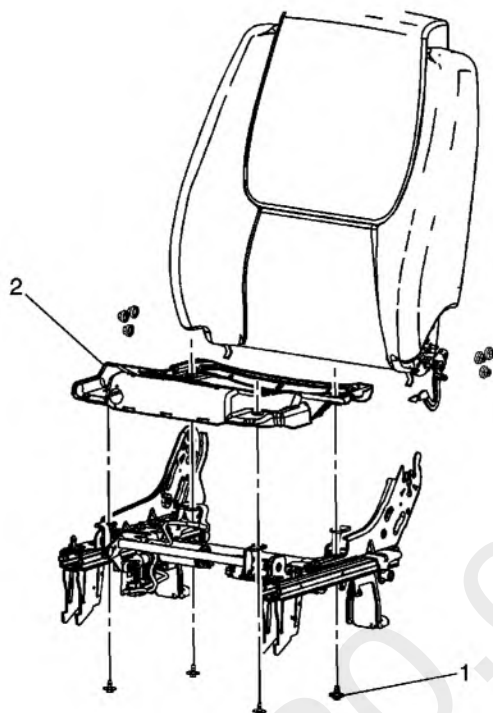


Callout	Component Name
Preliminary Procedure	
1. Remove the front seat. Refer to Front Seat Replacement - Bucket. 2. Remove the seat cushion cover and pad. Refer to Front Seat Cushion Cover and Pad Replacement.	
1	Front Seat Cushion Frame Bolt (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 12 N·m (9 lb ft)
2	Front Seat Cushion Frame

Front Seat Cushion Outer Trim Panel Replacement (Non-Fold Flat)

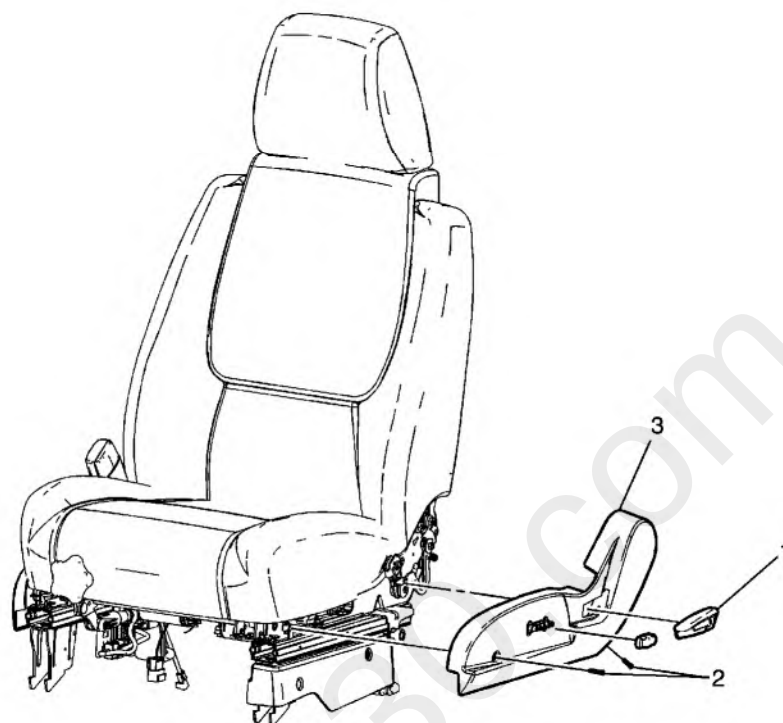


Callout	Component Name
1	Front Seat Recliner Handle Tip Pull firmly forward on the handle to remove.
2	Front Seat Outer Adjuster Finish Cover Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2.5 N·m (22 lb in)
3	Front Seat Outer Adjuster Finish Cover Procedure Disconnect the electrical connector.

Front Seat Cushion Outer Trim Panel Replacement (Fold Flat)

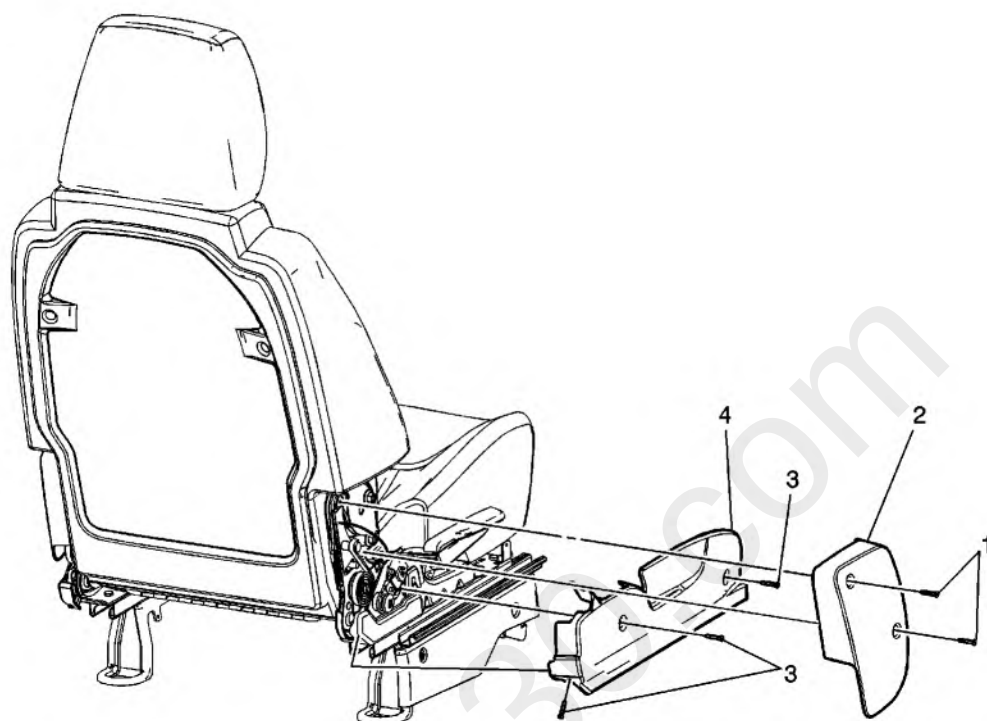


Callout	Component Name
1	Front Seat Outer Recliner Finish Panel Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Front Seat Outer Recliner Finish Panel
3	Front Seat Outer Adjuster Finish Panel Screw (Qty: 2) Tighten 2 N·m (18 lb in)
4	Front Seat Outer Adjuster Finish Panel

Front Seat Cushion Inner Trim Panel Replacement (Non-Fold Flat)

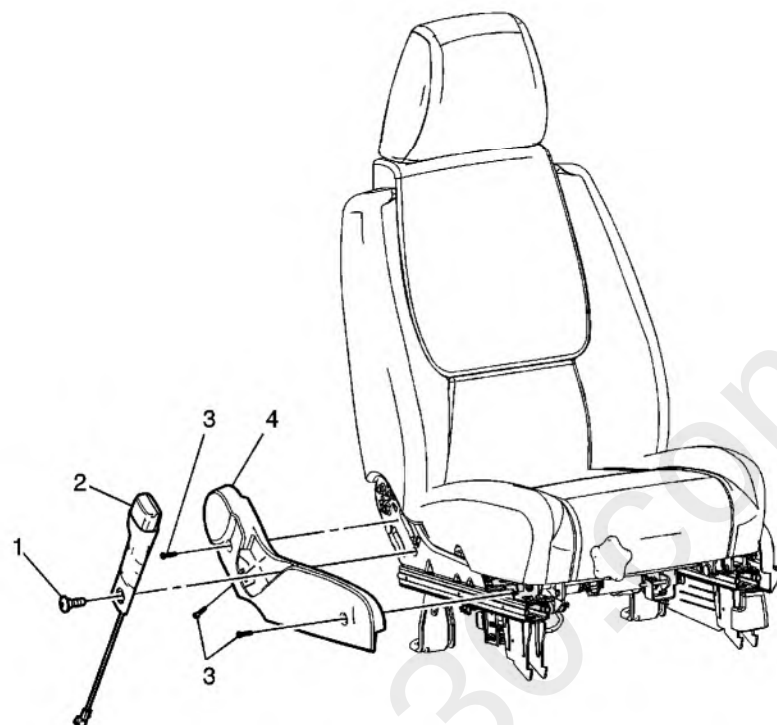

Callout	Component Name
1	Front Seat Belt Buckle Bolt Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Front Seat Belt Buckle Refer to Driver or Passenger Seat Belt Buckle Replacement .
3	Front Seat Inner Adjuster Finish Panel Screw (Qty: 3) Tighten 2 N·m (18 lb in)
4	Front Seat Inner Adjuster Finish Panel


Front Seat Cushion Cover and Pad Replacement

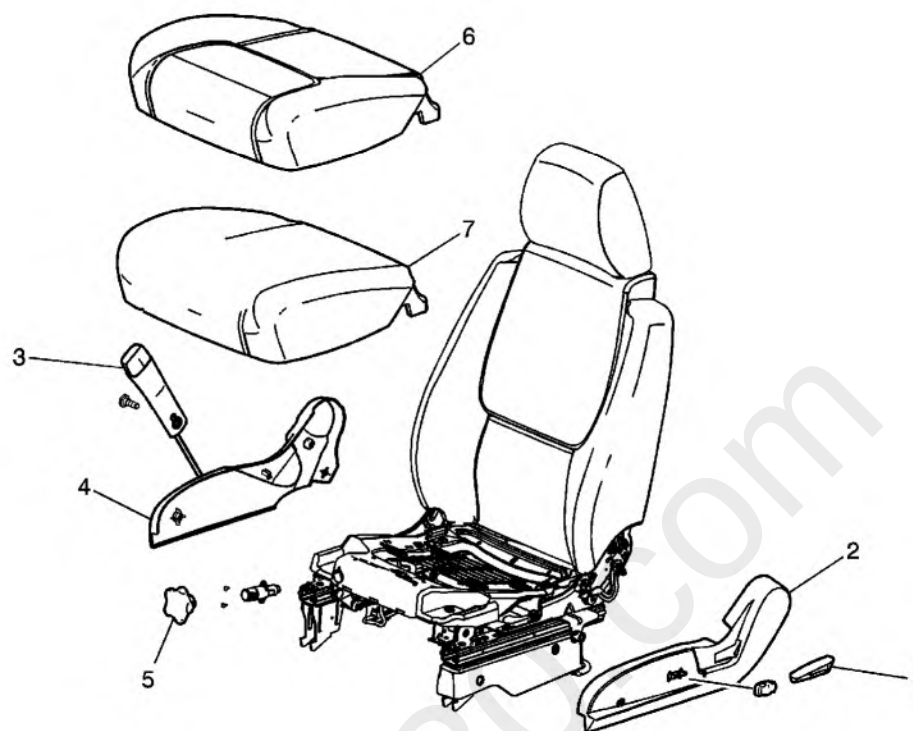

Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
Preliminary Procedure	
Remove the front seat. Refer to Front Seat Replacement - Bucket .	
1	Front Seat Recliner Handle Tip Pull firmly forward on the handle to remove.
2	Front Seat Outer Adjuster Finish Cover Refer to Front Seat Cushion Outer Trim Panel Replacement .
3	Front Seat Belt Buckle Refer to Front Seat Belt Buckle Replacement .
4	Front Seat Inner Adjuster Finish Panel Refer to Front Seat Cushion Inner Trim Panel Replacement .
© 2010 General Motors Corporation. All rights reserved.	

5	Front Seat Lumbar Support Actuator Knob Tip 1. Adjust the lumbar knob until the lumbar is in the setting of the least support. 2. Remove the lumbar knob by pulling firmly away from the seat.
6	Front Seat Cushion Cover Tip 1. Remove the seat cushion frame bolts and seat cushion assembly from the seat. 2. Disconnect the J-hook retainers. 3. Disengage the J-strip at the rear of the cushion. 4. Remove the seat cushion cover from the pad by carefully disengaging the hook and loop retainers.
7	Front Seat Cushion Pad

Driver or Passenger Seat Back Cushion Cover and Pad Replacement (Fold Flat)

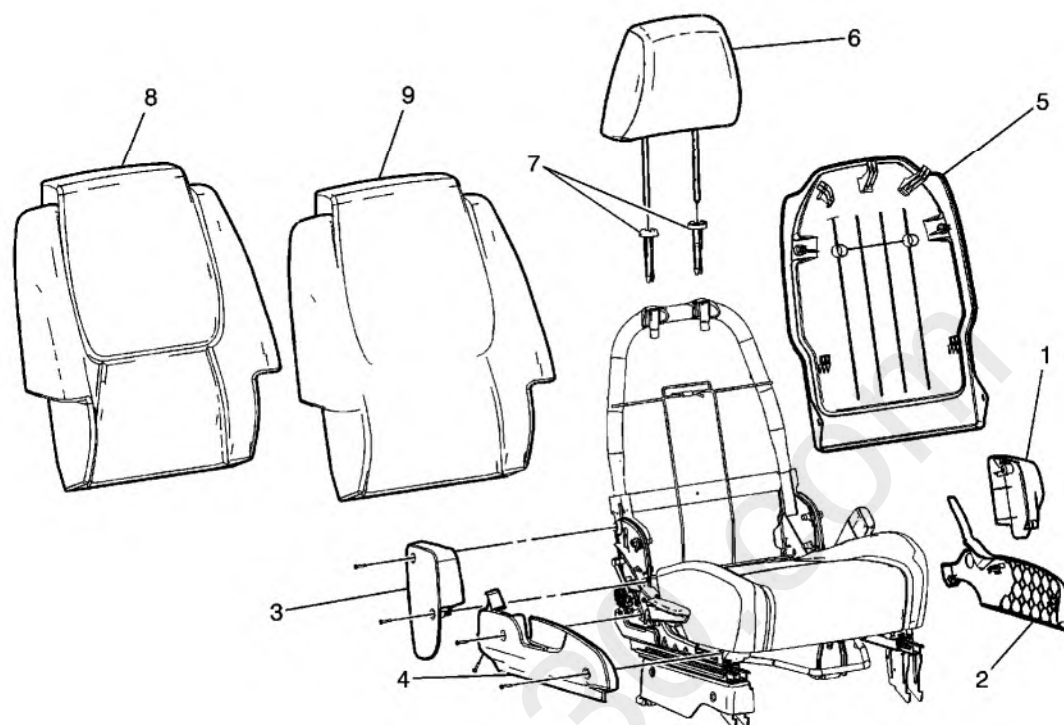


Callout	Component Name
Fastener Tightening Specifications: Refer to Fastener Tightening Specifications .	
Preliminary Procedure	
Remove the front seat. Refer to Front Seat Replacement - Bucket .	
1	Front Seat Outer Recliner Finish Cover Refer to Front Seat Back Recliner Outer Trim Panel Replacement .
2	Front Seat Outer Adjuster Finish Cover Refer to Front Seat Cushion Outer Trim Panel Replacement .
3	Front Seat Inner Recliner Finish Cover Refer to Front Seat Back Recliner Inner Trim Panel Replacement .
4	Front Seat Inner Adjuster Finish Panel Refer to Front Seat Cushion Inner Trim Panel Replacement .

© 2010 General Motors Corporation. All rights reserved.

5	Front Seat Back Finish Panel Refer to Driver Seat and Passenger Seat Back Cushion Finish Panel Replacement .
6	Front Seat Head Restraint Refer to Front Seat Head Restraint Replacement .
7	Front Seat Head Restraint Guides Tip Squeeze the bottom of the guides together and push upward to remove.
8	Front Seat Back Cushion Cover 1. Disconnect the lower J-hook retainer from the seat back trim cover. 2. Remove the seat back trim cover from the seat.
9	Front Seat Back Cushion Pad Tip Remove the seat back pad from the frame.

Driver or Passenger Seat Back Cushion Cover and Pad Replacement (Non-Fold Flat)

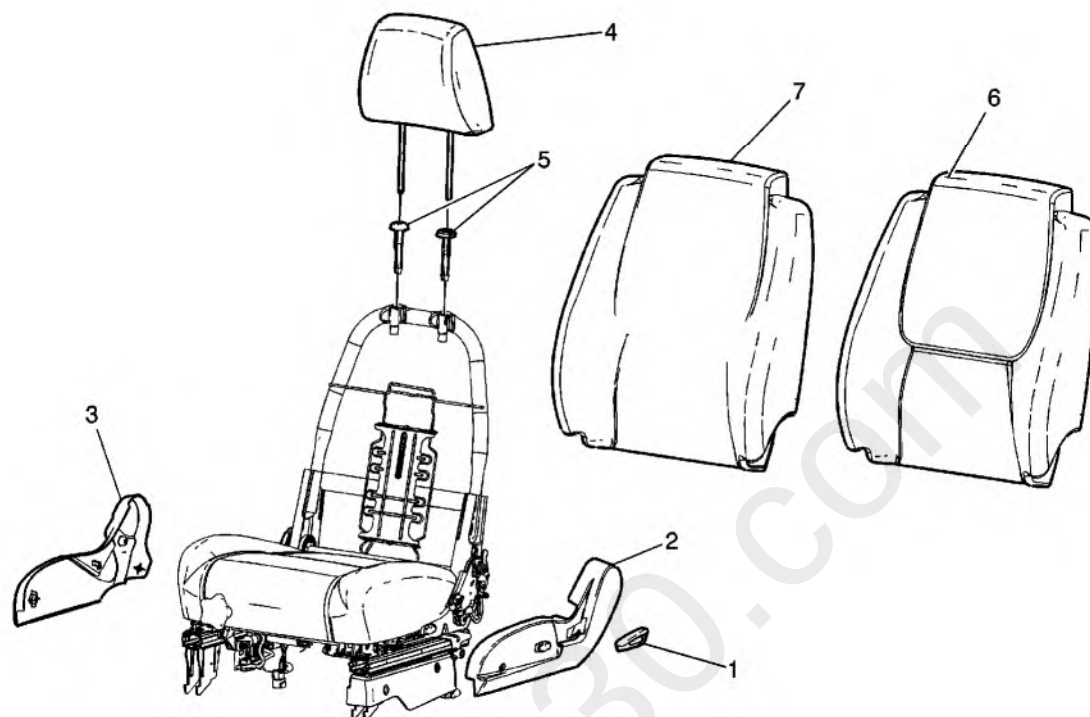


Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
Preliminary Procedure	
Remove the front seat. Refer to Front Seat Replacement - Bucket .	
1	Front Seat Recliner Handle Tip Pull firmly forward on the handle to remove.
2	Front Seat Outer Adjuster Finish Cover Refer to Front Seat Cushion Outer Trim Panel Replacement .
3	Front Seat Inner Adjuster Finish Panel Refer to Front Seat Cushion Inner Trim Panel Replacement .
4	Front Seat Head Restraint

	Refer to Front Seat Head Restraint Replacement .
5	Front Seat Head Restraint Guides Tip 1. Disconnect the lower J-hook retainer from the seat back trim cover. 2. Carefully pull up the trim cover, disengaging the hoop and loop retainers, until the headrest guides are exposed. 3. Squeeze the locking tabs on the headrest guide and pull the guides up and out of the seat back pad.
6	Front Seat Back Cushion Cover
7	Front Seat Back Cushion Pad

Driver or Passenger Seat Back Cushion Frame Replacement (Non-Fold Flat)


Removal Procedure

1. Remove the front seat from the vehicle. Refer to [Front Seat Replacement - Bucket](#).
2. Remove the seat back trim cover and pad. Refer to [Front Seat Back Cushion Cover and Cushion Pad Replacement](#).
3. If the seat is equipped with lumbar support, perform the following procedure:
 - 3.1. Adjust the knob until the lumbar basket is in the position of least support.
 - 3.2. Pull back on the lumbar cable sleeve.
 - 3.3. Remove the barrel end of the cable from the lumbar actuator.

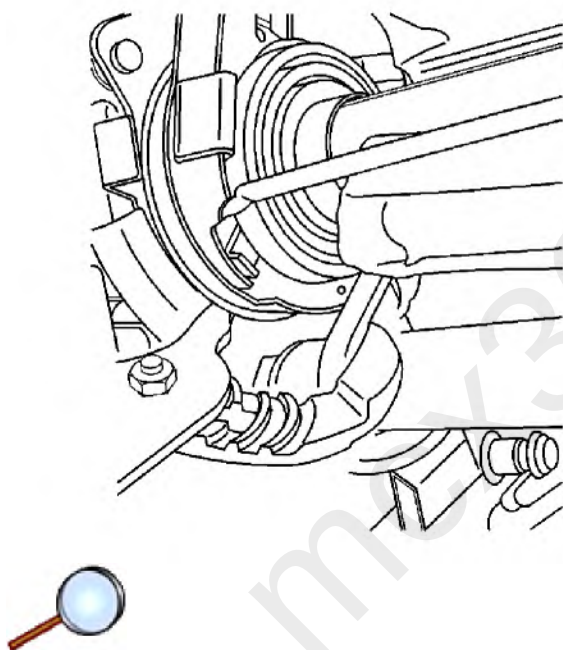


Warning: The seat back frame springs are under tension. To avoid personal injury, use care when removing or installing the frame.


4. From the rear of the seat, adjust the rear seat back until the notches in the seat back frame line up with the hook end of the springs on the seat back frame.
5. Using a pair of channel lock® pliers, slide the spring into the notches on both sides of the seat back frame.

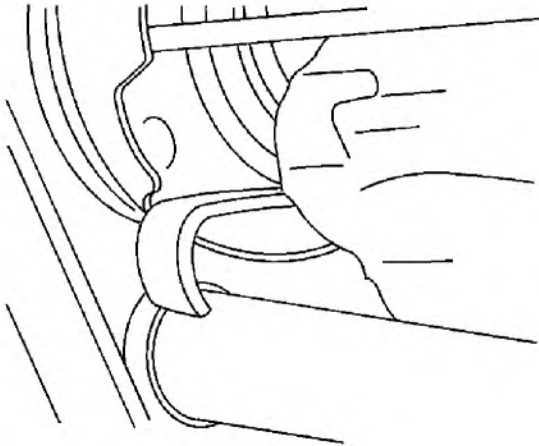

6. Adjust the seat back forward to ensure that the springs are fully seated in the notches.

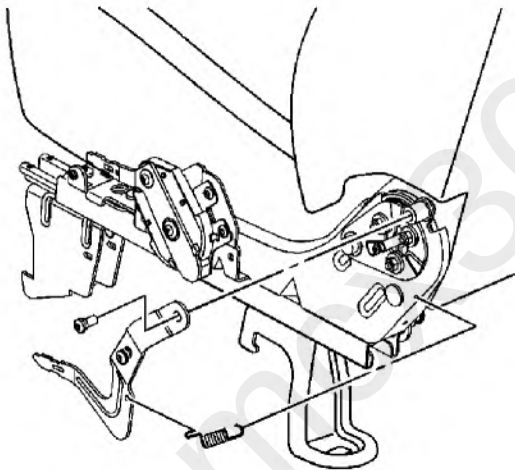

7. Remove the recliner handle screw and spring. Remove the recliner handle.

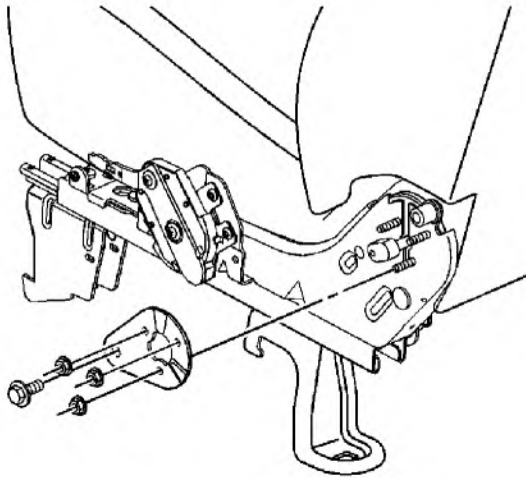


8. Remove the nuts from the outboard seat back frame.
9. If equipped, remove the teardrop washer bolt and washer.
10. Remove the nuts from the inboard seat back frame.

Note: To provide additional clearance, you may loosen, but do NOT remove, the bolts on the rear seat cushion frame.

11. Remove the seat back frame from between the adjusters.

Installation Procedure

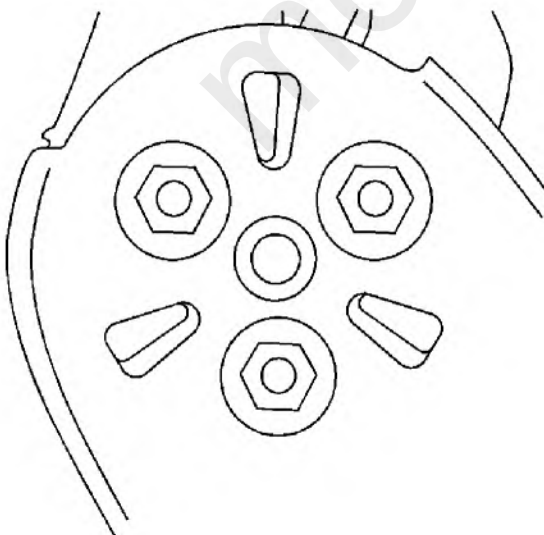


1. Position the seat back frame between the adjusters.


Assure that the locating triangles on the seat back frame are properly seated in the mating holes in the adjusters.

Caution: Refer to [Fastener Caution](#) in the Preface section.

2. If you loosened the bolts on the rear seat cushion frame during removal, secure the bolts at this time. Tighten the bolts to **12 N·m (9 lb ft)**.

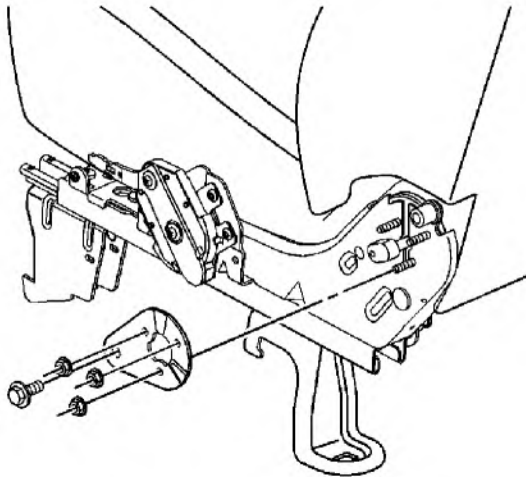


3. Install the outboard teardrop washer and bolt and tighten the bolt to **35 N·m (26 lb ft)**.
4. Install the nut to the outboard seat back frame and tighten to **17 N·m (13 lb ft)**.
5. Install the nuts to the inboard seat back frame and tighten to **17 N·m (13 lb ft)**.

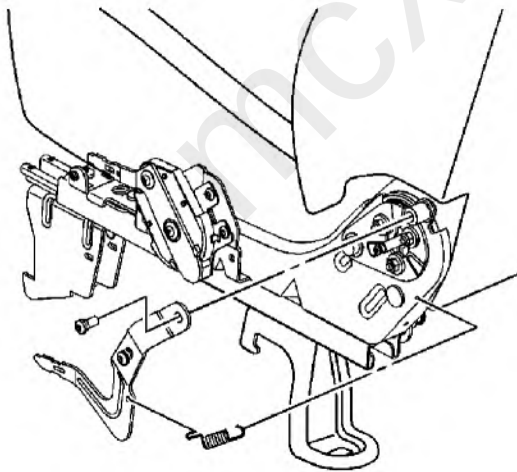


Warning: The seat back frame springs are under tension. To avoid personal injury, use care when removing or installing the frame.

6. Position the recliner handle and spring. Install the recliner handle bolt to **10 N·m (89 lb in)**.

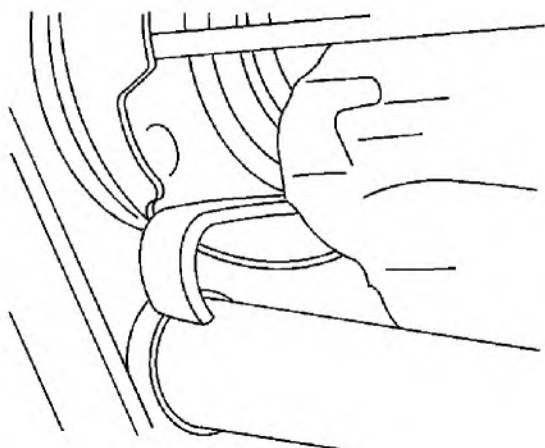


7. Adjust the seat back until the hook end of the springs are adjacent to the adjuster pins.

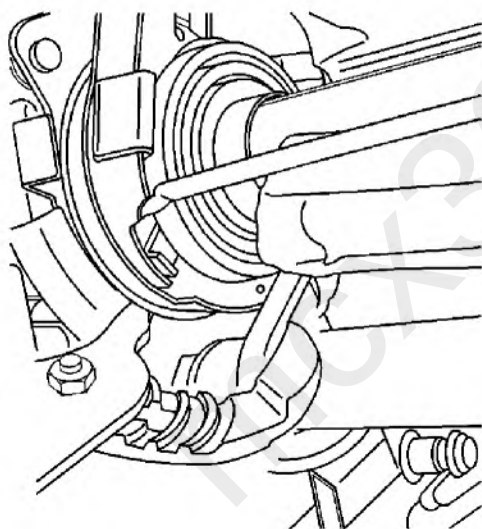

8. Using a pair of channel lock® pliers, slide the springs from the notches in the frame to the pin.
9. Adjust the seat back to ensure proper operation.
10. If the seat is equipped with lumbar support, perform the following procedure:
 - 10.1. Pull back on the lumbar cable sleeve.
 - 10.2. Install the barrel end of the cable from the lumbar actuator.
 - 10.3. Adjust the knob to ensure that the cable is properly installed.
11. Install the seat back trim cover and pad. Refer to [Front Seat Back Cushion Cover and Cushion Pad Replacement](#).
12. Install the front seat to the vehicle. Refer to [Front Seat Replacement - Bucket](#).

Driver or Passenger Seat Back Cushion Frame Replacement (Fold Flat)

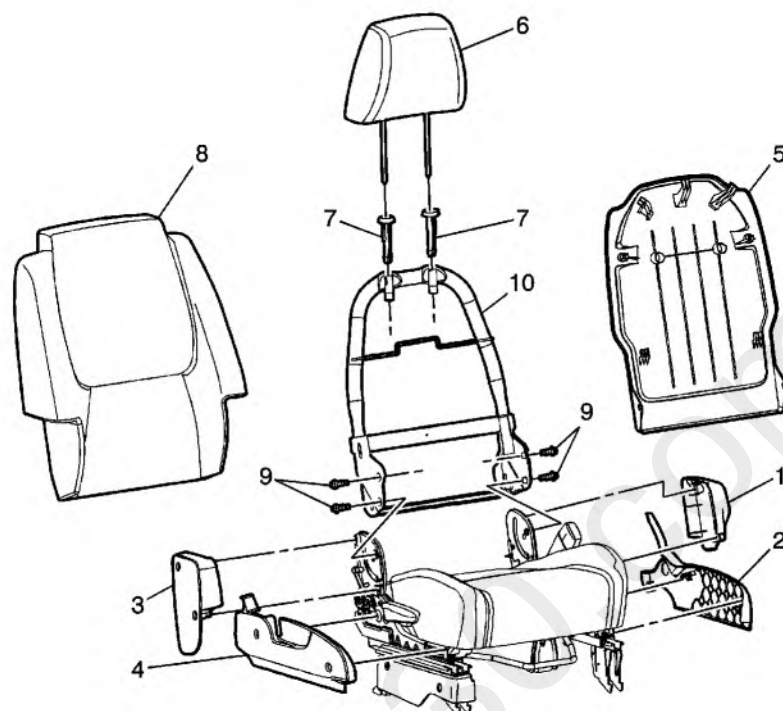


Callout	Component Name
Preliminary Procedure	
Remove the front seat. Refer to Front Seat Replacement - Bucket .	
1	Front Seat Outer Recliner Finish Cover Refer to Front Seat Back Recliner Outer Trim Panel Replacement .
2	Front Seat Outer Adjuster Finish Cover Refer to Front Seat Cushion Outer Trim Panel Replacement .
3	Front Seat Inner Recliner Finish Cover Refer to Front Seat Back Recliner Inner Trim Panel Replacement .
4	Front Seat Inner Adjuster Finish Panel Refer to Front Seat Cushion Inner Trim Panel Replacement .
5	Front Seat Back Finish Panel

© 2010 General Motors Corporation. All rights reserved.


	Refer to Driver or Passenger Seat Back Cushion Finish Panel Replacement .
6	Front Seat Head Restraint Refer to Front Seat Head Restraint Replacement .
7	Front Seat Head Restraint Guides Tip Squeeze the bottom of the guides together and push upward to remove.
8	Front Seat Back Cushion Cover and Pad Procedure 1. Disconnect the lower J-hook retainer from the seat back trim cover. 2. Remove the seat back trim cover and pad from the seat back frame.
9	Front Seat Back Cushion Frame Bolt (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 70 N·m (52 lb ft)
10	Front Seat Back Cushion Frame

Front Seat Back Recliner Outer Trim Panel Replacement (Fold Flat)

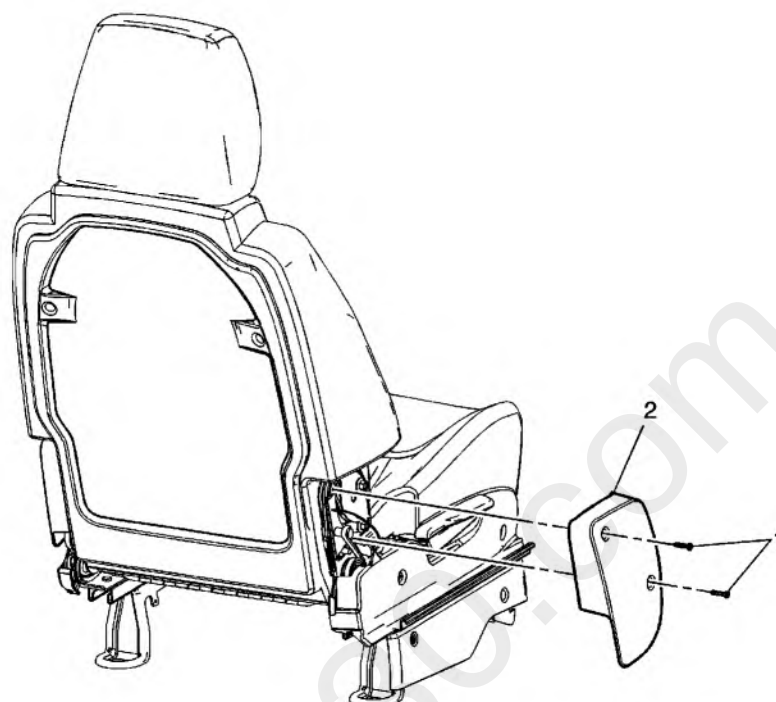


Callout	Component Name
1	Front Seat Outer Recliner Finish Panel Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Front Seat Outer Recliner Finish Panel

Front Seat Back Recliner Inner Trim Panel Replacement (Fold Flat)

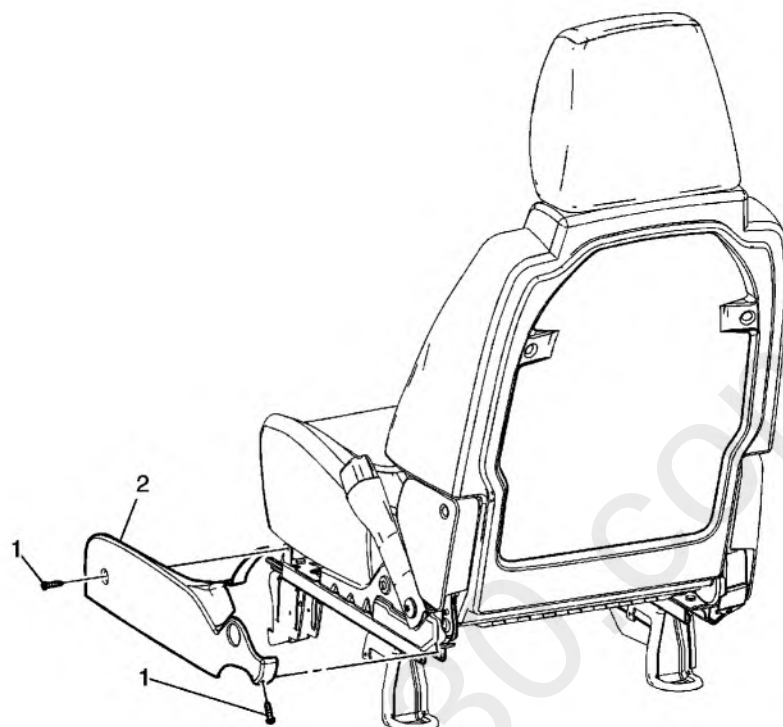

Callout	Component Name
1	Front Seat Inner Adjuster Finish Panel Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Front Seat Inner Adjuster Finish Panel

Front Seat Recliner Mechanism Replacement

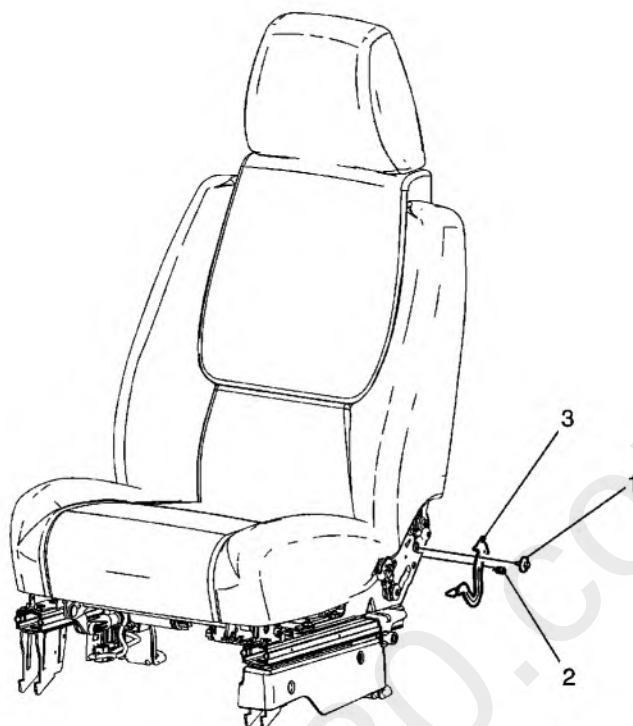

Callout	Component Name
Preliminary Procedures	
1. Remove the front seat. Refer to Front Seat Replacement - Bucket. 2. Remove the recliner handle by pulling firmly forward. 3. Remove the front seat outer adjuster finish cover. Refer to Front Seat Cushion Outer Trim Panel Replacement.	
1	Front Seat Recliner Lever Bolt Caution: Refer to Fastener Caution in the Preface section. Tighten 10 N·m (89 lb in)
2	Front Seat Recliner Spring
3	Front Seat Recliner Lever

Driver or Passenger Seat Recliner Handle Replacement




Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Front Seat Recliner Handle Tip Pull firmly forward on the handle to remove.

Driver or Passenger Seat Recliner Actuator Cable Replacement (Fold Flat)


Removal Procedure

1. Remove the seat from the vehicle. Refer to [Front Seat Replacement - Bucket](#).
2. Remove the seat cushion cover/pad assembly. Refer to [Front Seat Cushion Cover and Pad Replacement](#).

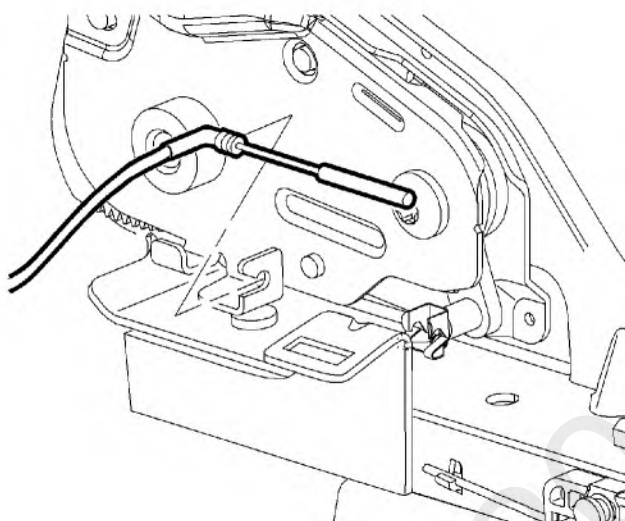


3. Using a small flat-bladed tool pry the seat recliner cable from the inner recliner cable clip.
4. Remove the seat recliner cable from the outer recliner mechanism.

Installation Procedure

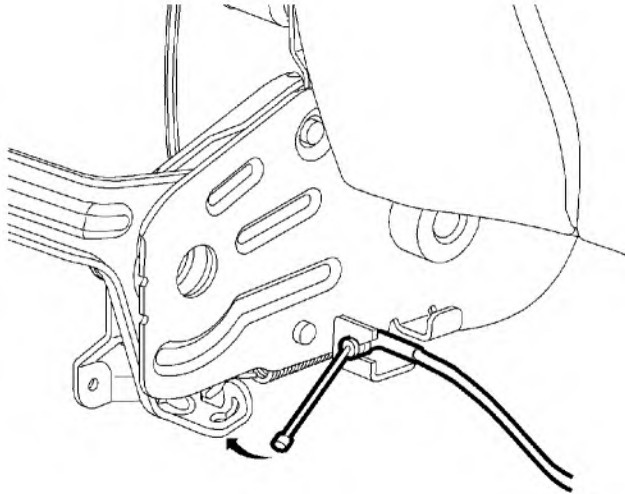


1. Install the seat recliner cable mechanism into the outer recliner mechanism.
2. Snap the recliner cable into the inner recliner mechanism.

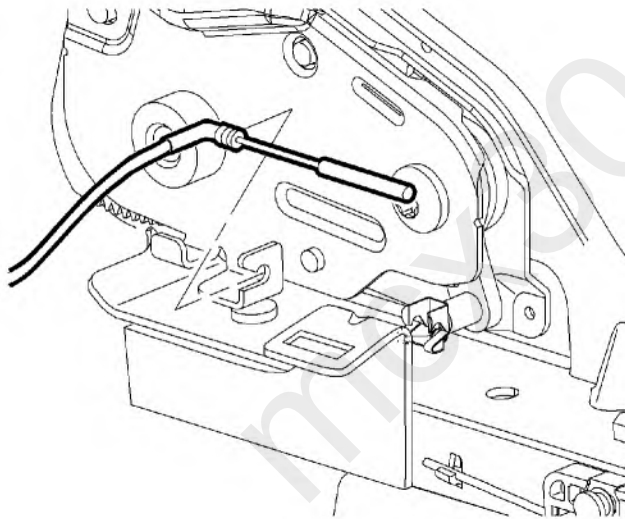


3. Remove the slack from the recliner cable by turning the threaded end of the cable in the clip.
4. Install the seat cushion cover/pad assembly. Refer to [Front Seat Cushion Cover and Pad Replacement](#).
5. Install the seat into the vehicle. Refer to [Front Seat Replacement - Bucket](#).

Driver or Passenger Seat Back Cushion Finish Panel Replacement (Fold Flat)

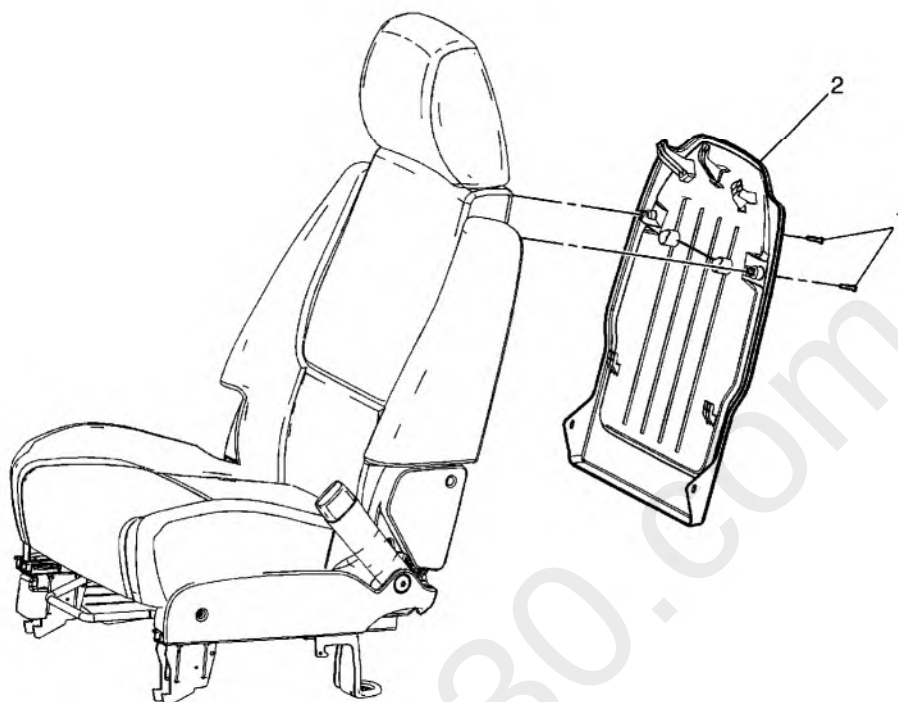

Callout	Component Name
1	Front Seat Back Finish Panel Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Front Seat Back Finish Panel

Front Seat Lumbar Support Replacement

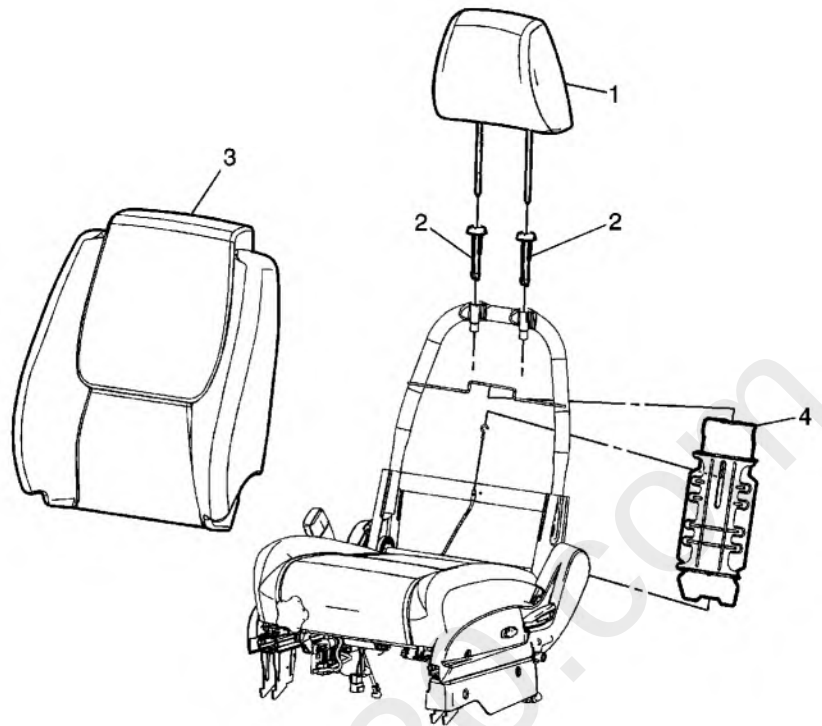


Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
Preliminary Procedure	
Remove the front seat. Refer to Front Seat Replacement - Bucket .	
1	Front Seat Head Restraint Refer to Front Seat Head Restraint Replacement .
2	Front Seat Head Restraint Guides Tip Squeeze the bottom of the guides together and push upward to remove.
3	Seat Back Cushion Cover and Pad Refer to Front Seat Back Cushion Cover and Cushion Pad Replacement .
	Front Seat Back Lumbar Tip

4

1. Adjust the lumbar knob until the lumbar is at the position of the least support.
2. Remove the lumbar cable end from the lumbar unit by compressing the unit while lifting out the barrel end of the cable assembly.
3. Using a flat-bladed tool, twist out the upper portion of the lumbar unit from the seat frame cross wire.
4. Using a flat-bladed tool, twist out the lower portion of the lumbar unit from the seat frame cross wire.


mcx30.com

Lumbar Support Knob Replacement

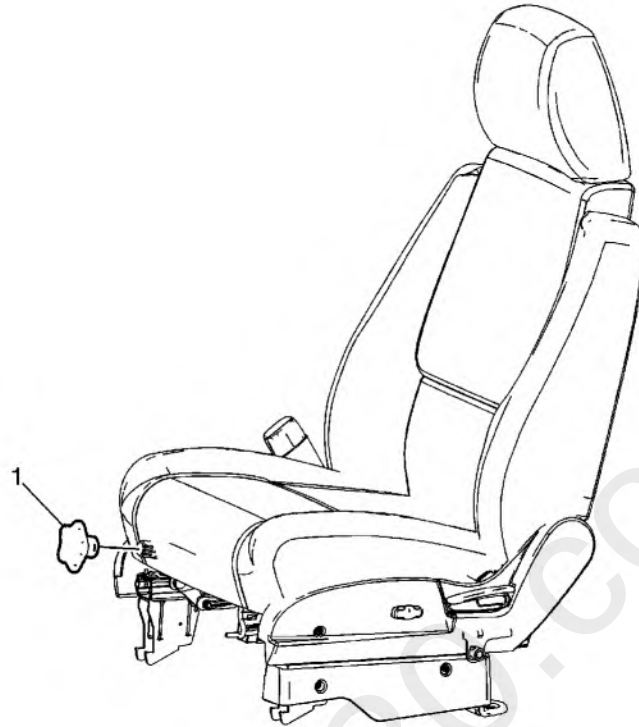

Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Front Seat Manual Lumbar Knob Tip Remove the lumbar knob by pulling firmly on the knob.

Driver or Passenger Seat Lumbar Support Actuator Replacement

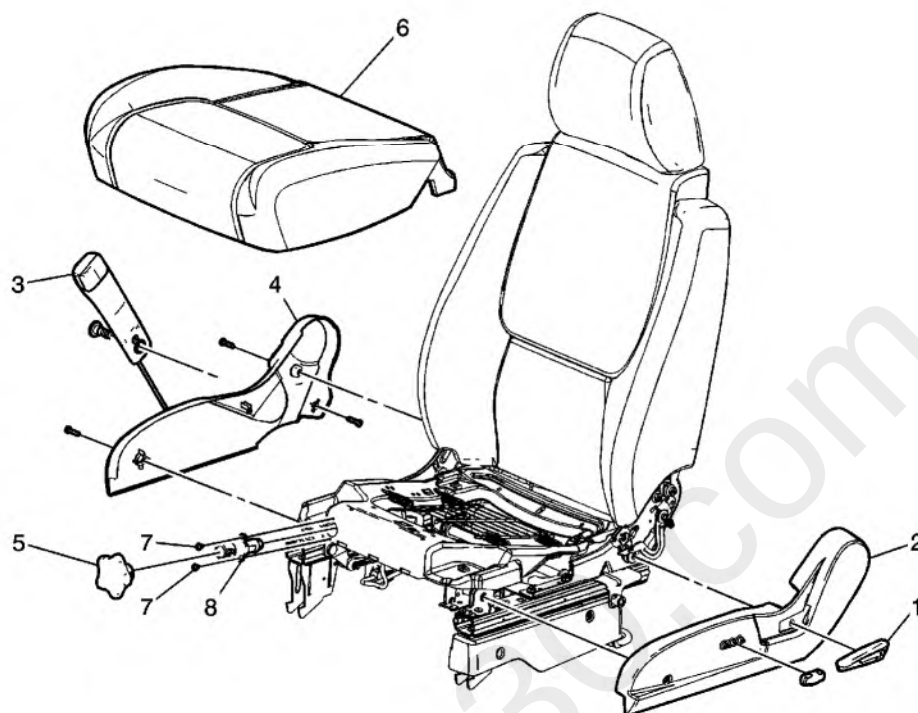


Callout	Component Name
Preliminary Procedures	
1. Remove the front seat. Refer to Front Seat Replacement - Bucket. 2. Adjust the lumbar support knob until the lumbar basket is in the position of least support. 3. Pull back on the lumbar cable sleeve. 4. Remove the barrel end of the cable from the lumbar actuator.	
1	Front Seat Recliner Handle Tip Pull firmly forward on the handle to remove.
2	Front Seat Outer Adjuster Finish Cover Refer to Front Seat Cushion Outer Trim Panel Replacement .
3	Front Seat Belt Buckle Refer to Driver or Passenger Seat Belt Buckle Replacement .
© 2010 General Motors Corporation. All rights reserved.	


4	Front Seat Inner Adjuster Finish Panel Refer to Front Seat Cushion Inner Trim Panel Replacement .
5	Front Seat Lumbar Support Actuator Knob Tip Remove the lumbar knob by pulling firmly on the knob.
6	Front Seat Cushion Cover and Pad Refer to Front Seat Cushion Cover and Pad Replacement .
7	Front Seat Lumbar Support Actuator Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
8	Front Seat Lumbar Support Actuator

Rear Seat Replacement

Removal Procedure

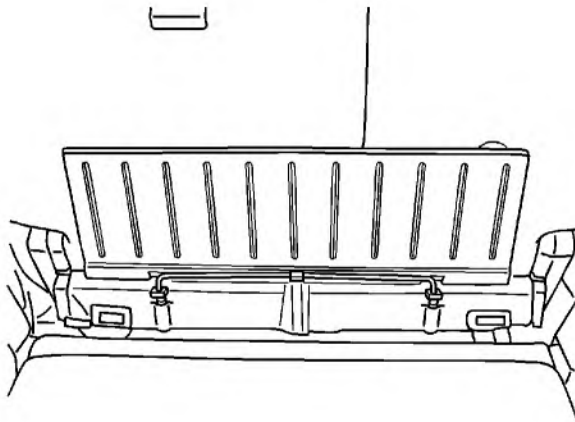


1. Remove the rear seat floor filler trim panel.
2. Slide the rear seat forward. Remove the rear fasteners.

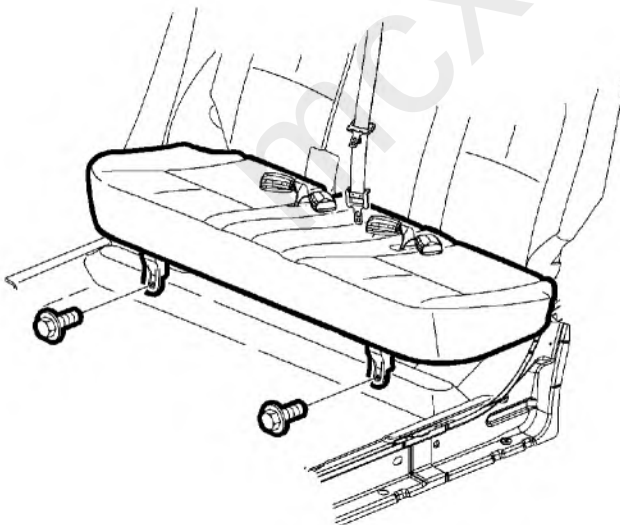

3. Slide the rear seat backward. Remove the front fasteners.
4. Remove the seat.


Installation Procedure

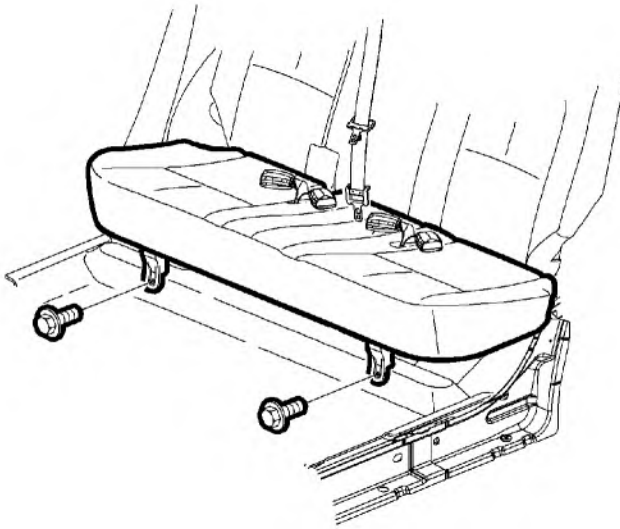

1. Position the rear seat to the vehicle.
2. Install the front fasteners.


Caution: Refer to [Fastener Caution](#) in the Preface section.

3. Slide the seat forward. Install the rear fasteners and tighten the bolts to **40 N·m (30 lb ft)**.

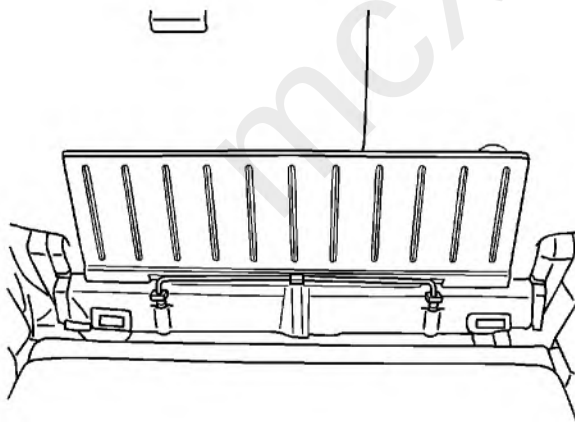


4. Install the rear floor filler trim panel.

Rear Seat Latch Release Handle Replacement

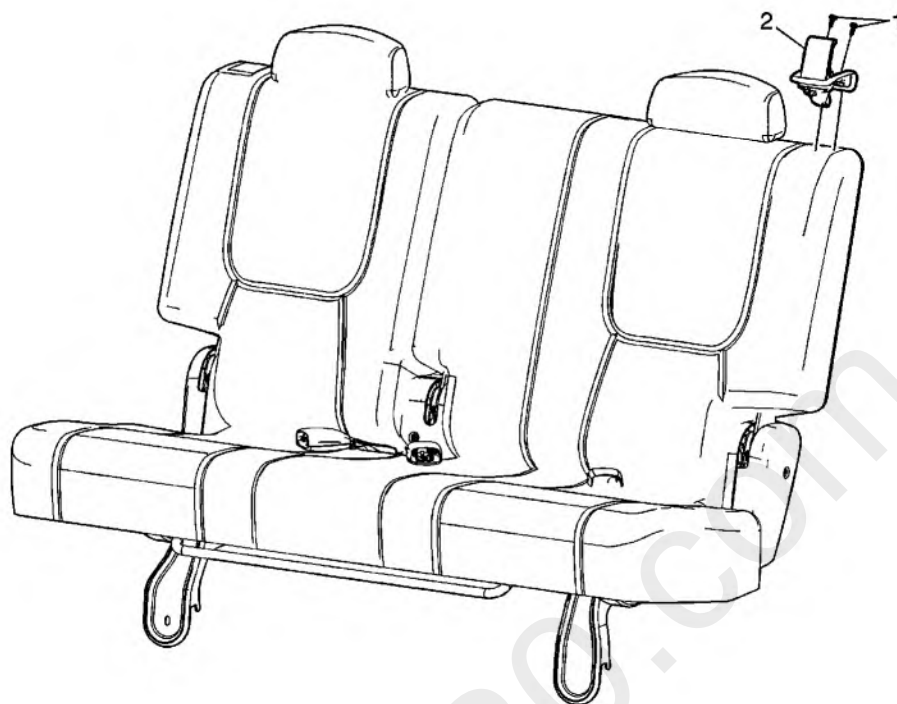


Callout	Component Name
1	Rear Seat Back Cushion Latch Release Handle Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tip Lift up the handle to access the screws. Tighten 2.5 N·m (22 lb ft)
2	Rear Seat Back Cushion Latch Release Handle Tip Disconnect the latch release cable from the handle.

Rear Seat Head Restraint Replacement

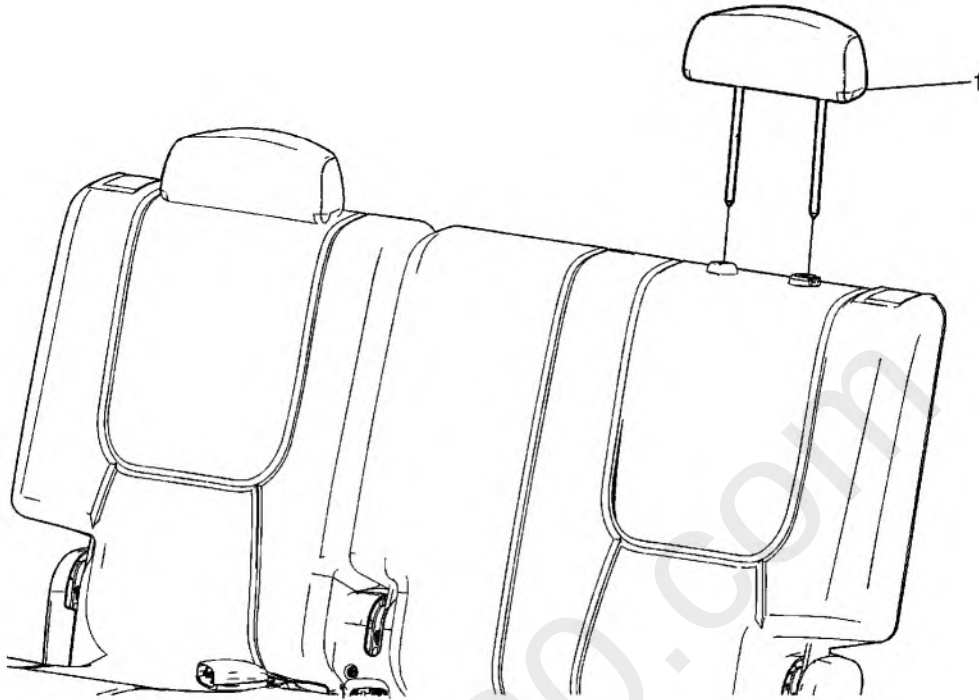


Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Front Seat Head Restraint Tip 1. Push the button in and raise the head restraint to the full-up position. 2. Insert a small round tool into the guide hole 3. Pull up to remove the head restraint.

Rear Seat Head Restraint Guide Replacement

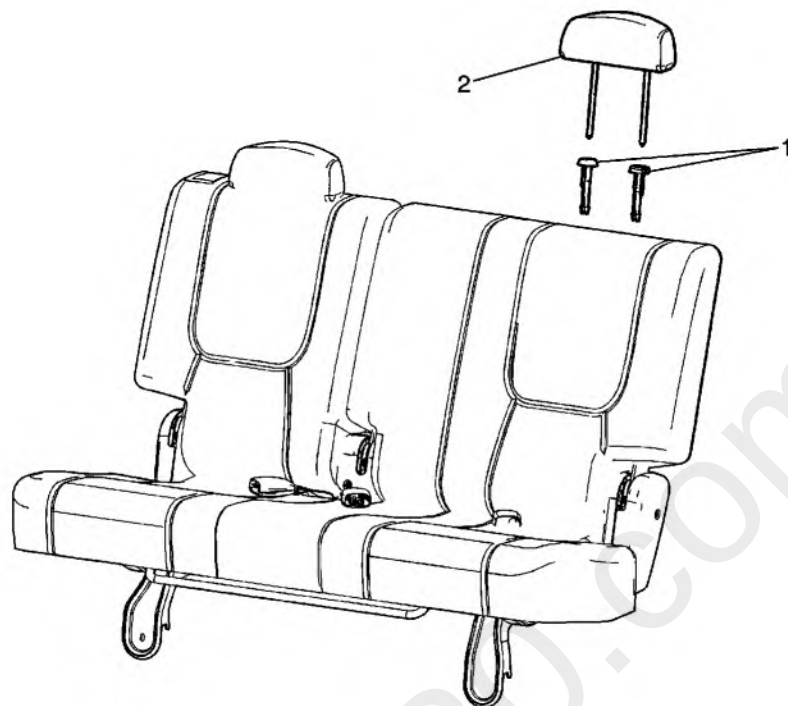

Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
Preliminary Procedure	
Remove the rear seat back cushion finish panel. Refer to Rear Seat Back Cushion Trim Panel Replacement .	
1	Rear Seat Head Restraint Tip 1. Push the button in and raise the head restraint to the full-up position. 2. Insert a small round tool into the guide hole 3. Pull up to remove the head restraint.
2	Front Seat Head Restraint Guides Tip Squeeze the bottom of the guides together and push upward to remove.

Rear Seat Cushion Cover and Pad Replacement

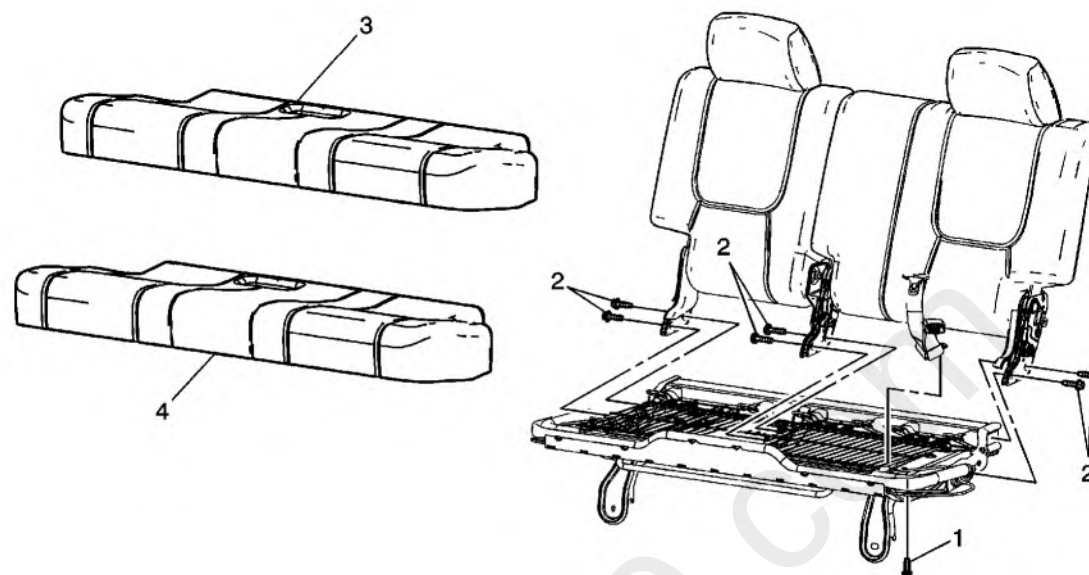


Callout	Component Name
Preliminary Procedure 1. Remove the rear seat. Refer to Rear Seat Replacement. 2. Disconnect the rear seat cushion cover retainers from the rear seat cushion frame. 3. Remove the rear seat belt buckle assembly. Refer to Rear Seat Center Belt Buckle Replacement.	
1	Rear Seat Belt Anchor Bolt Caution: Refer to Fastener Caution in the Preface section. Procedure Apply Permatex® 24200 or equivalent on all seat belt fasteners prior to installation. Tighten 45 N·m (33 lb ft)
2	Rear Seat Cushion Frame Bolt (Qty: 6) Tighten

© 2010 General Motors Corporation. All rights reserved.


	50 N·m (37 lb ft)
3	Rear Seat Cushion Cover Procedure 1. Remove the rear seat back assembly from the seat cushion assembly. 2. Pull the seat cushion cover and pad over the latch locations. 3. Remove the seat cushion cover and pad from the frame. 4. Use a small flat-bladed tool to remove the seat cushion cover from the pad by carefully disengaging the hook and loop fasteners.
4	Rear Seat Cushion Pad

Rear Seat Cushion Frame Replacement

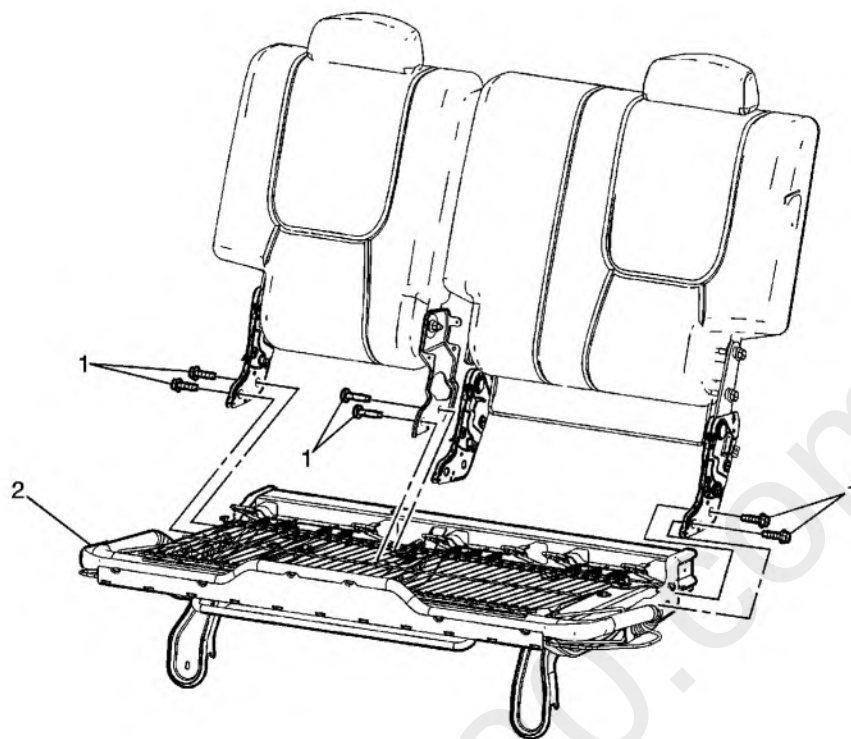

Callout	Component Name
Preliminary Procedure	
1. Remove the rear seat. Refer to Rear Seat Replacement. 2. Remove the recliner finish cover. 3. Remove the seat cushion cover and pad. Refer to Rear Seat Cushion Cover and Pad Replacement.	
1	Rear Seat Cushion Frame Bolt (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 50 N·m (37 lb ft)
2	Rear Seat Cushion Frame Tip If replacing the seat cushion frame transfer components as necessary.


Rear Seat Cushion Trim Panel Replacement

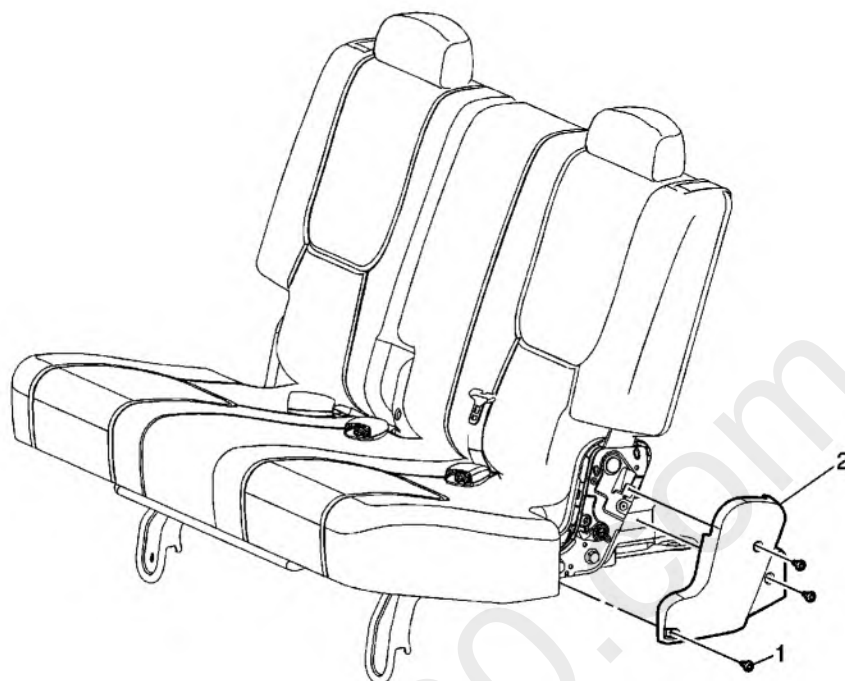


Callout	Component Name
1	Rear Seat Cushion Finish Panel Screw (Qty: 3) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Rear Seat Cushion Finish Panel

Rear Seat Back Cushion Latch Cable Replacement


Removal Procedure

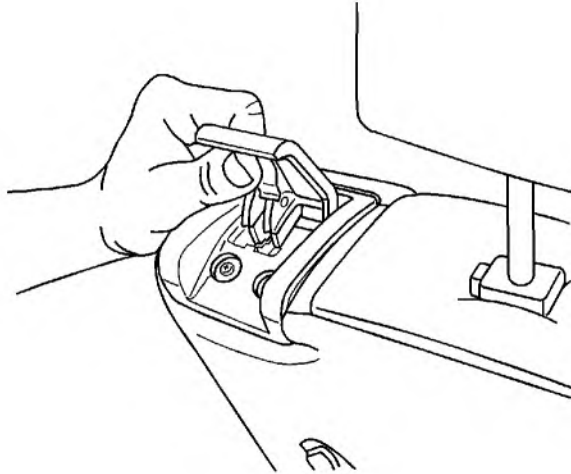


1. Remove the rear seat. Refer to [Rear Seat Replacement](#).
2. Remove the fastener from the rear seat back latch and pull the latch out from the seat back assembly.

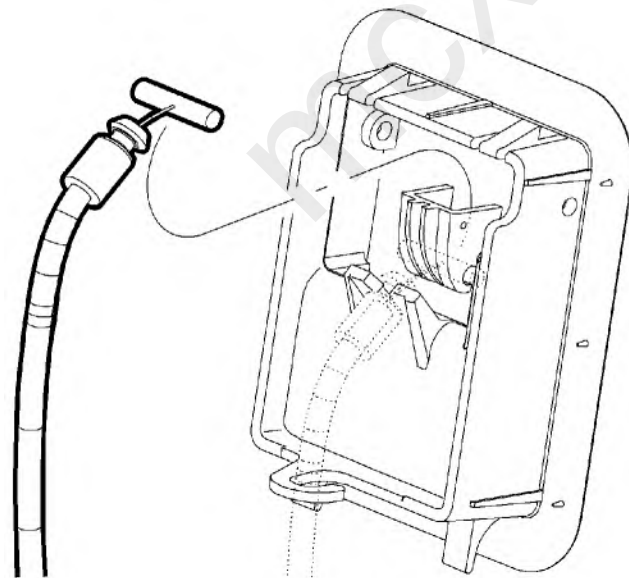


3. Detach the latch cable from the latch.

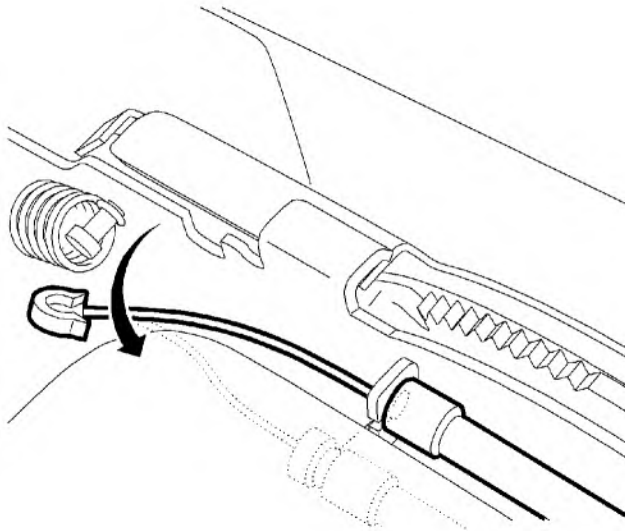

4. If you are going to replace the cable, disconnect the latch cable at the seat recliner mechanism.

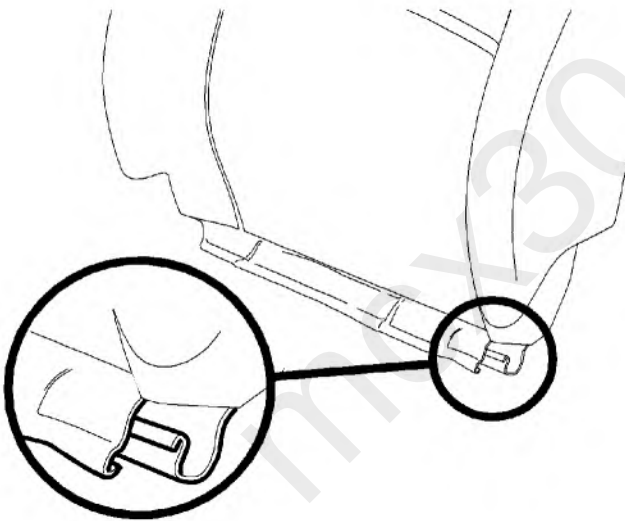


5. Open the J-strip at the bottom of the seat cover.

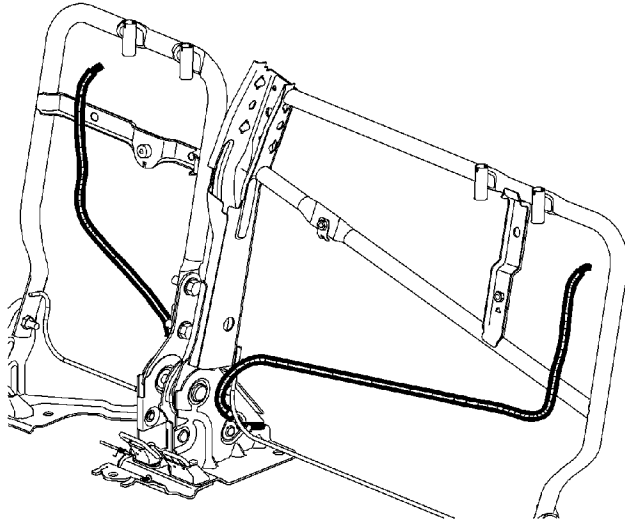


6. Pull the cable out from the seat back assembly.


Installation Procedure

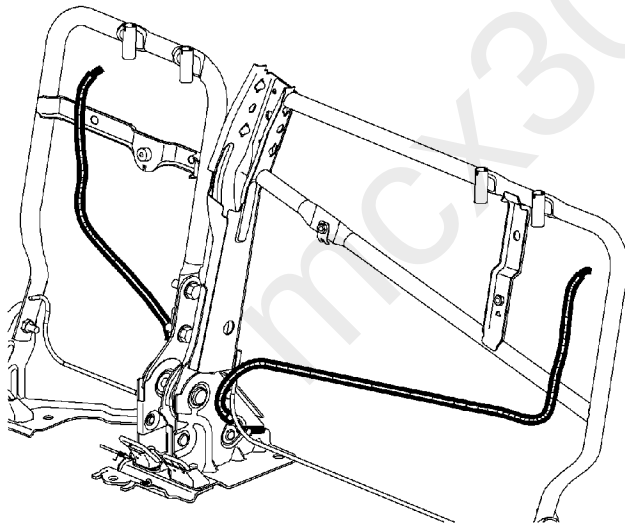

1. If you are replacing the cable, route the cable through the rear seat back.

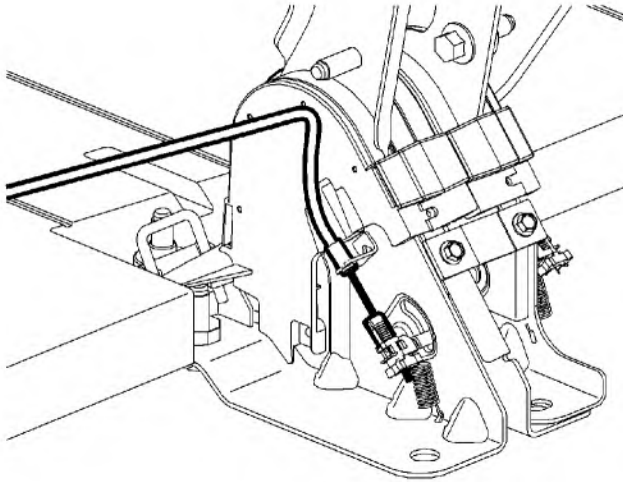


2. Connect the latch cable to the recliner mechanism.

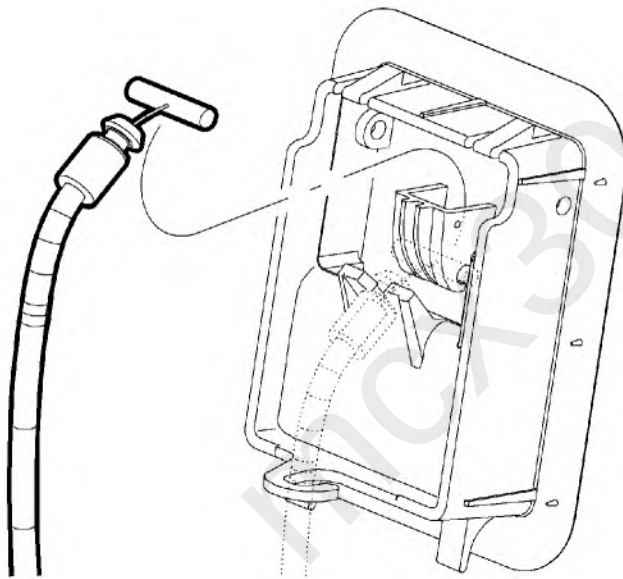


3. Connect the J-strip at the bottom of the seat cover.
4. Connect the latch cable to the latch assembly.

Caution: Refer to [Fastener Caution](#) in the Preface section.

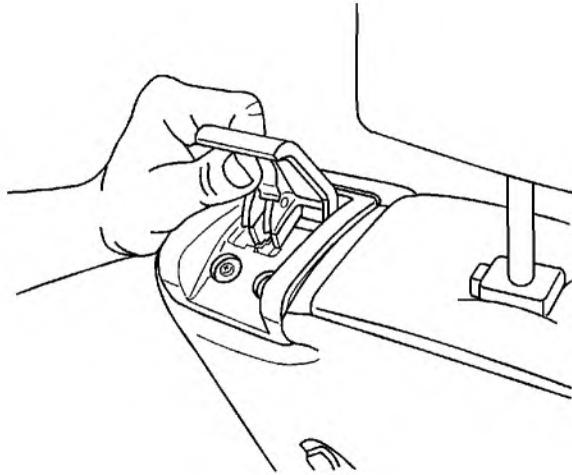

5. Install the latch to the seat back with a fastener and tighten to **2.5 N·m (22 lb in)**.
6. Install the rear seat. Refer to [Rear Seat Replacement](#).

Rear Seat Back Cushion Cover and Pad Replacement

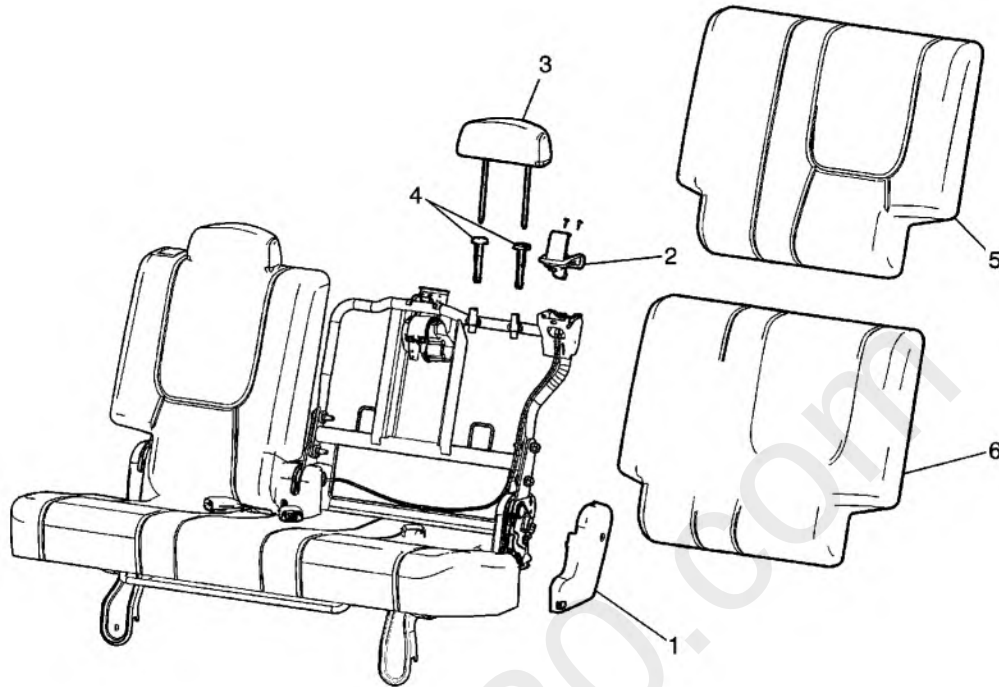


Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
Preliminary Procedure	
1. Remove the rear seat. Refer to Rear Seat Replacement .	
2. Remove the rear seat back finish panel. Refer to Rear Seat Back Cushion Trim Panel Replacement .	
1	Rear Seat Cushion Finish Panel Refer to Rear Seat Cushion Trim Panel Replacement .
2	Rear Seat Back Cushion Release Handle Refer to Rear Seat Latch Release Handle Replacement .
3	Rear Seat Head Restraint Refer to Rear Seat Head Restraint Replacement .
4	Rear Seat Head Restraint Guides Refer to Rear Seat Head Restraint Guide Replacement .

© 2010 General Motors Corporation. All rights reserved.

5	Rear Seat Back Cushion Cover Tip 1. Remove the shoulder belt bezel from the rear seat back. Slide the bezel outboard away from the seat back. 2. Remove the shoulder belt fastener and remove the shoulder belt from the cushion. 3. Release the seat back cover by disengaging the bottom J-strip. 4. Lift the seat back trim cover off of the rear seat back frame. 5. Feed the seat belt webbing and the escutcheon through the trim cover.
6	Rear Seat Back Cushion Pad

mcx30.com

Rear Seat Back Cushion Frame Replacement

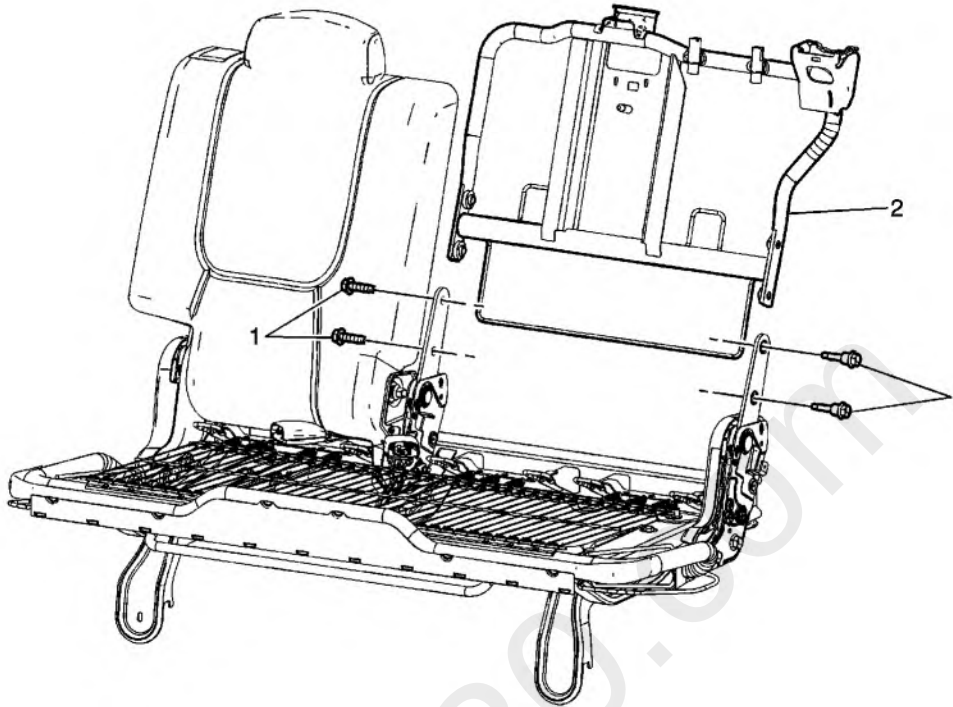


Callout	Component Name
Preliminary Procedure 1. Remove the rear seat. Refer to Rear Seat Replacement. 2. Remove the recliner finish cover. 3. Remove the seat back cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement.	
1	Rear Seat Back Cushion Frame Bolt (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 50 N·m (37 lb ft)
2	Rear Seat Back Cushion Frame Procedure 1. Remove the rear seat center retractor. Refer to Seat Belt Replacement - Center Rear. 2. Disconnect the seat recliner cable from the recliner mechanism on the seat

back.

mcx30.com

Rear Seat Recliner Replacement

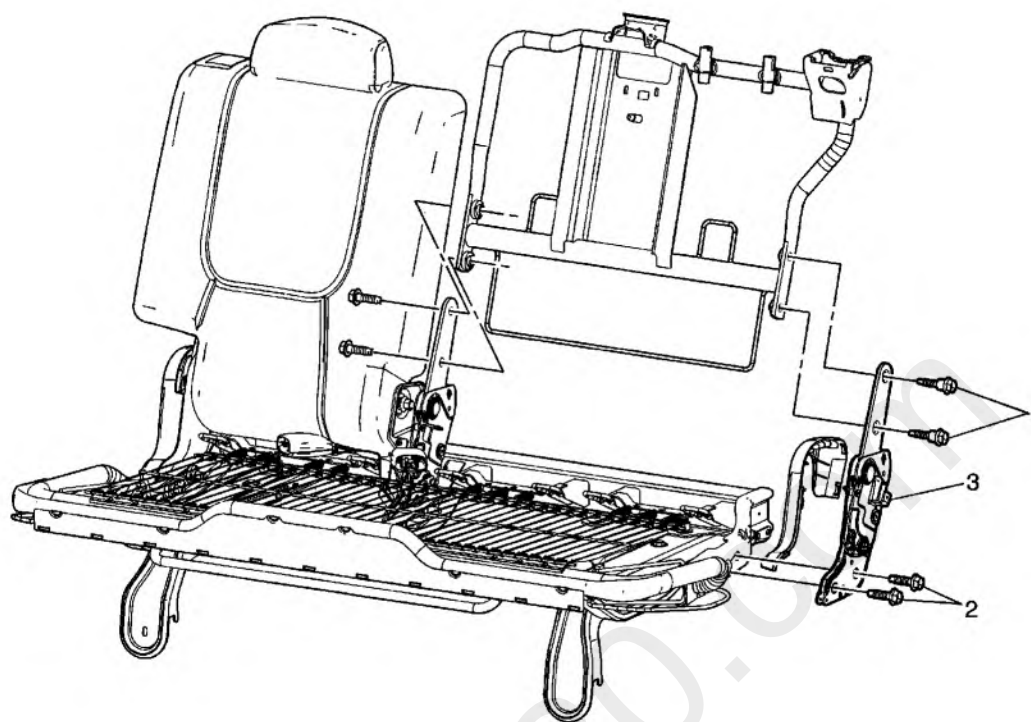

Callout	Component Name
Preliminary Procedure	
1. Remove the rear seat. Refer to Rear Seat Replacement. 2. Remove the recliner finish cover. 3. Remove the seat cushion cover and pad. Refer to Rear Seat Cushion Cover and Pad Replacement. 4. Remove the seat back cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement.	
1	Rear Seat Back Cushion Frame Bolt (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 50 N·m (37 lb ft)
2	Rear Seat Cushion Frame Bolt (Qty: 2) Tighten 50 N·m (37 lb ft)
	Rear Seat Recliner Assembly

3


Tip

Disconnect the seat recliner cable from the recliner mechanism on the seat back.


mcx30.com

Rear Seat Floor Filler Trim Panel Mounting Rod Replacement


Removal Procedure

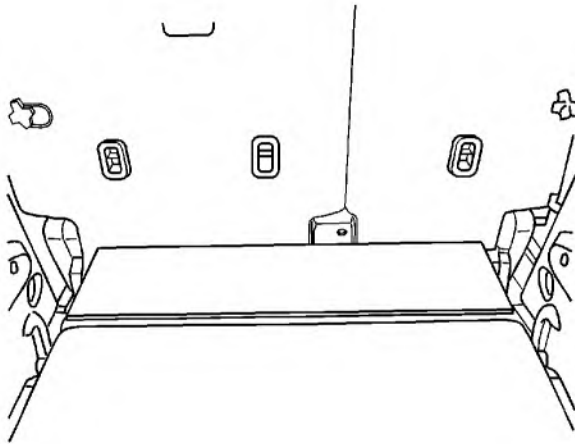

1. Fold down the rear seat to expose the rear seat floor filler trim panel

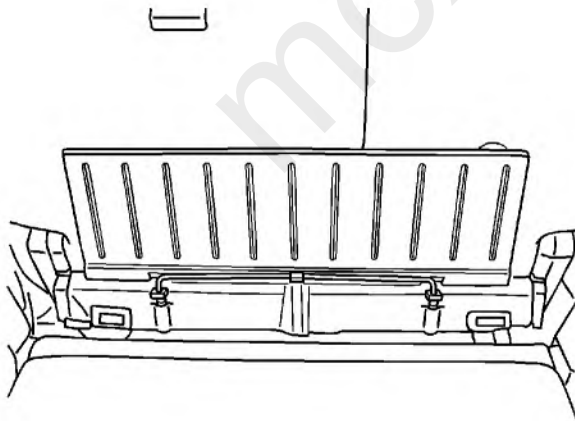


2. Lift the filler trim panel. Pull the the filler trim panel to remove from the mounting rod

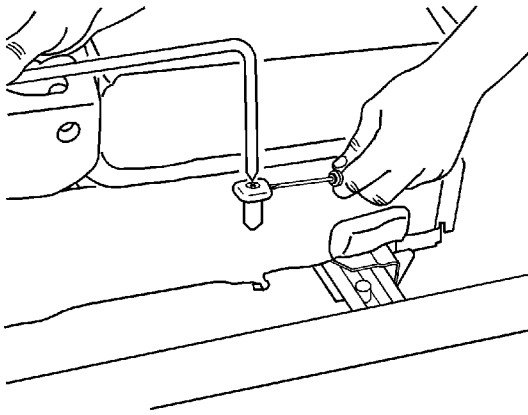


3. Use a small tool to release the mounting rod from the rear seat.


Installation Procedure

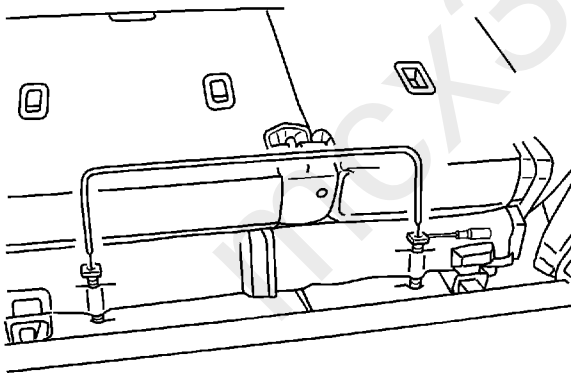

1. Push the rod into the guide until locked.

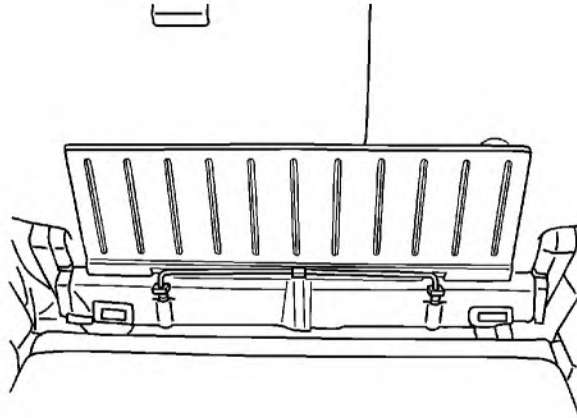

- 
2. Install the filler trim panel to the rod.

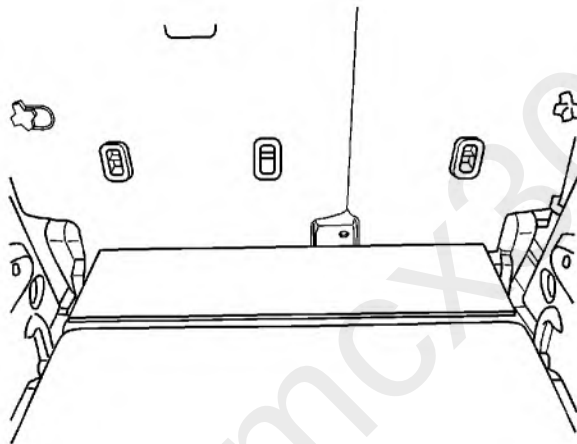

- 
3. Raise the seat back to the upright position.