


Fastener Tightening Specifications


Application	Specification	
	Metric	English
Back Body Opening Side Finish Panel Bolt	9 N·m	80 lb in
Cargo Hook Bolts	25 N·m	18 lb ft
Center Pillar Assist Handle Bolt	25 N·m	18 lb ft
Coat Hook Screw	2.5 N·m	22 lb in
Front Side Door Handle Bezel Screw	2.5 N·m	22 lb in
Front Side Door Trim Panel Retainer Screw	2.5 N·m	22 lb in
Liftgate Lower Trim Panel Screw	2 N·m	18 lb in
Rear Seat Anchor Plate Bezel Screw	2 N·m	18 lb in
Rear Side Door Handle Bezel Screw	2.5 N·m	22 lb in
Rear Side Door Trim Panel Retainer Screw	2.5 N·m	22 lb in
Sunshade Anchor Support Screw	2.5 N·m	22 lb in
Sunshade Screws	2.5 N·m	22 lb in
Quarter Window Trim Finish Panel Bolt	9 N·m	80 lb in
Windshield Garnish Molding-to-Pillar Screws	9 N·m	80 lb in

Body Rear Corner Garnish Molding Replacement

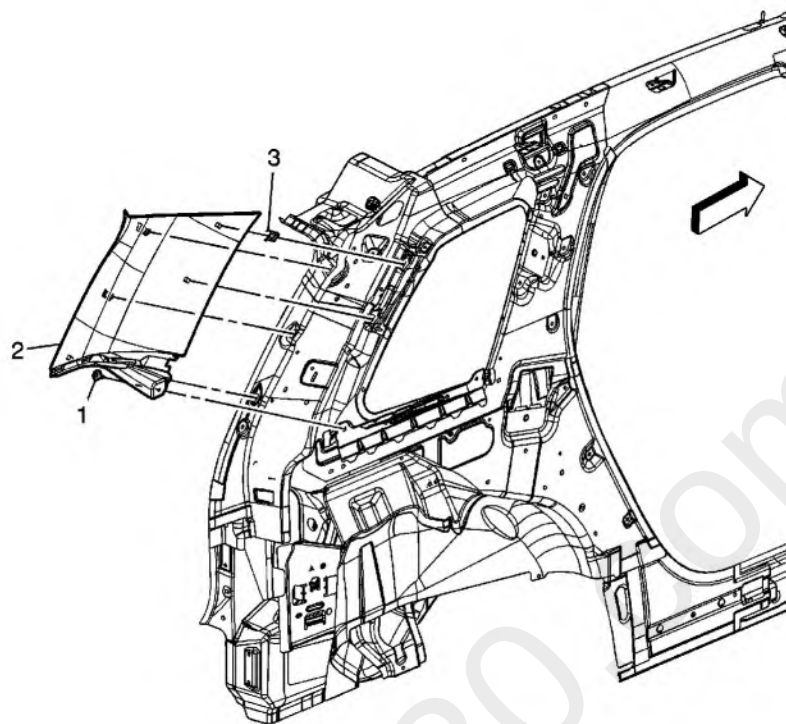


Callout	Component Name
Preliminary Procedures	
1. Remove the rear door sill. Refer to Liftgate Door Sill Plate Replacement .	
2. Remove the rear quarter trim. Refer to Quarter Lower Rear Trim Panel Replacement .	
1	Back Body Opening Side Finish Panel Bolt Notice: Refer to Fastener Notice in the Preface section. Tighten 9 N·m (80 lb in)
2	Back Body Opening Side Finish Panel
3	Back Body Opening Side Finish Panel Retainer Clip (Qty: 5)

Center Pillar Lower Garnish Molding Replacement

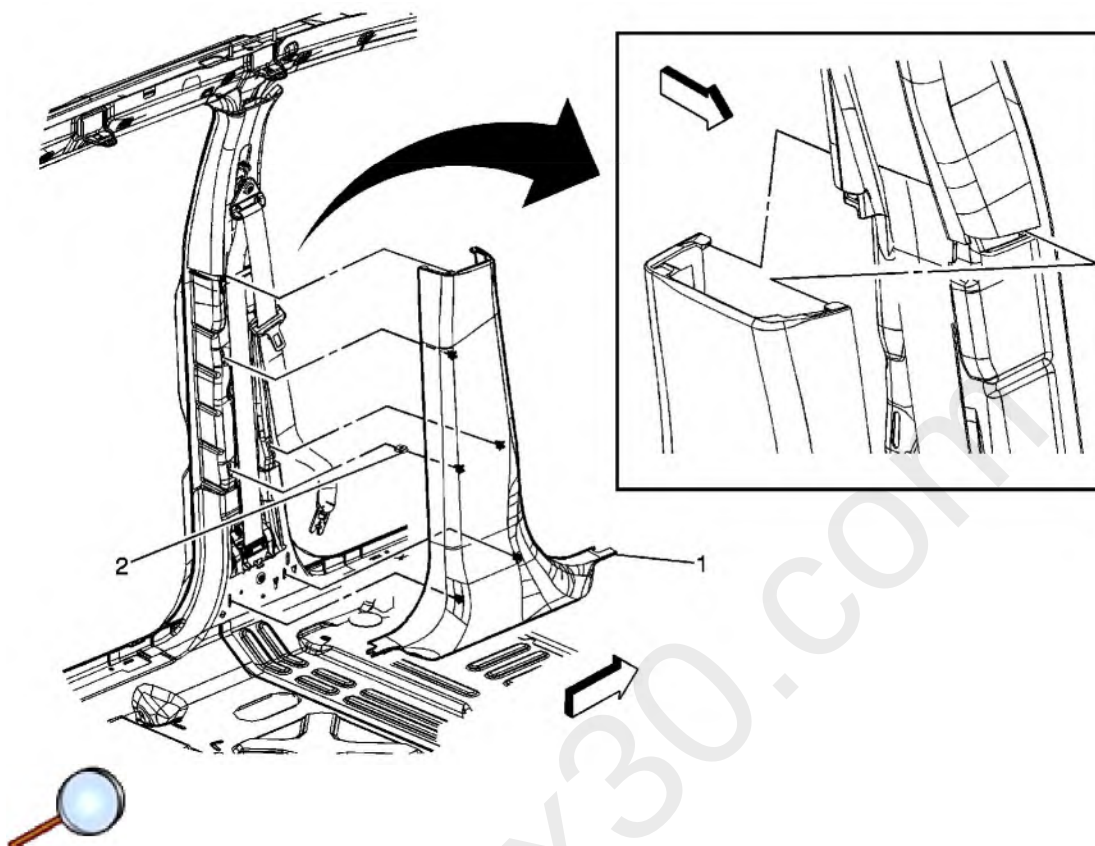


Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
Preliminary Procedure	
1. Disable the SIR. Refer to SIR Disabling and Enabling . 2. Remove the center pillar upper garnish molding. Refer to Center Pillar Upper Garnish Molding Replacement . 3. Remove the rear carpet retainer. Refer to Rear Carpet Retainer Replacement . 4. Lift up the rear of the front carpet retainer. Refer to Front Carpet Retainer Replacement .	
1	Center Pillar Lower Trim Panel Tip Start at the top of the lower garnish molding, pull at the clip locations to disengage the clips.
2	Center Pillar Lower Trim Panel Retainer Clip (Qty: 5)

Center Pillar Upper Garnish Molding Replacement

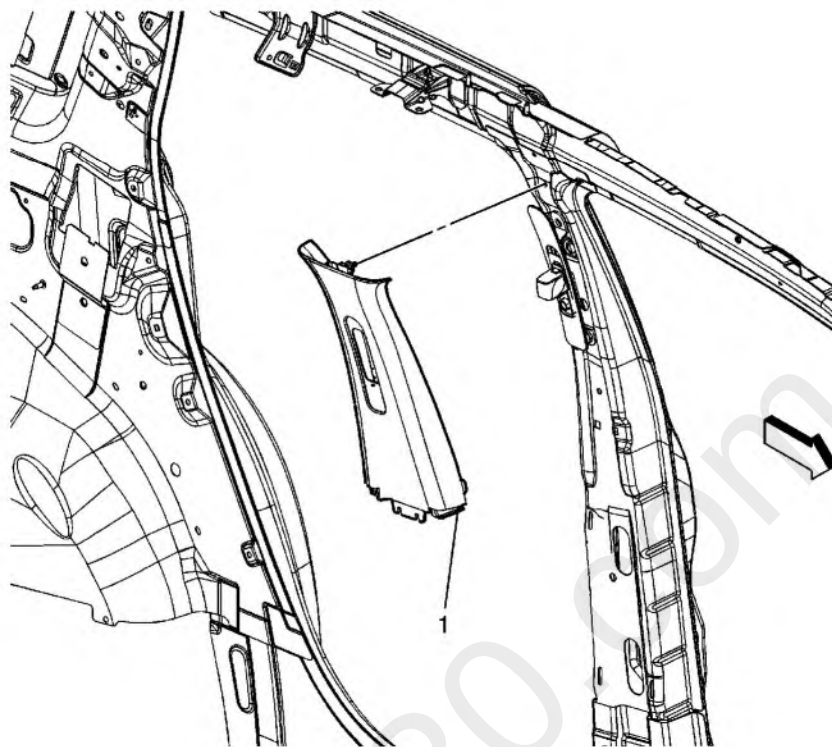


Callout	Component Name
Preliminary Procedure	
1. Remove the front seat belt adjuster cover, bolt and guide ONLY, from the center pillar. Refer to Seat Belt Retractor Pretensioner Replacement - Front. 2. Remove the center pillar lower garnish molding. Refer to Center Pillar Lower Garnish Molding Replacement.	
1	Center Pillar Upper Trim Panel Tip Starting at the top, gently pull on the garnish molding to disengage the attaching clips.

Child Restraint Tether Anchor Bezel Replacement

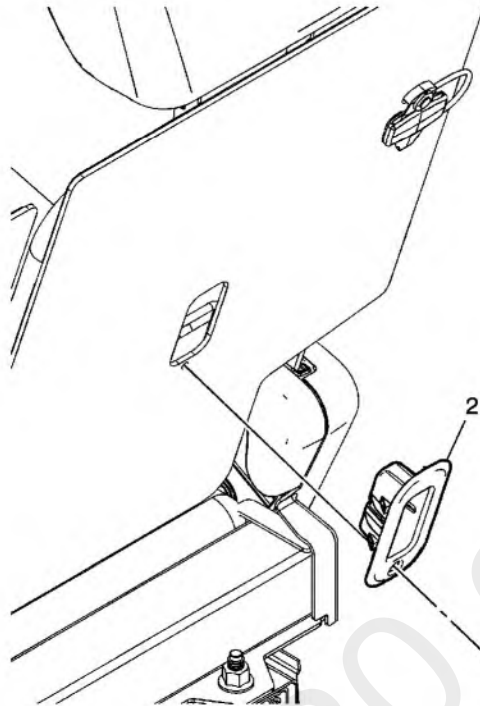


Callout	Component Name
Notice: Refer to Fastener Notice in the Preface section.	
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Rear Seat Anchor Plate Bezel Screw Tighten 2 N·m (18 lb in)
2	Rear Seat Anchor Plate Bezel

Coat Hook Replacement

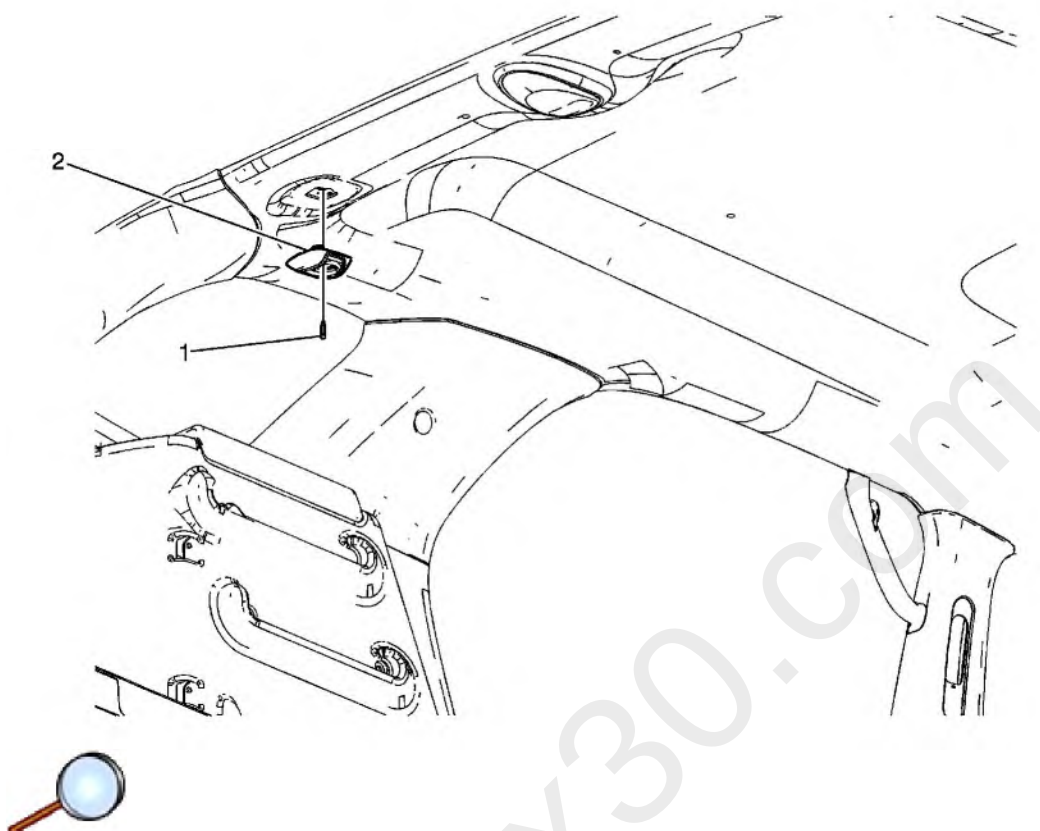



Callout	Component Name
Notice: Refer to Fastener Notice in the Preface section.	
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Coat Hook Screw Tighten 2.5 N·m (22 lb in)
2	Coat Hook Assembly

Door Handle Bezel Replacement (Front Side Door)

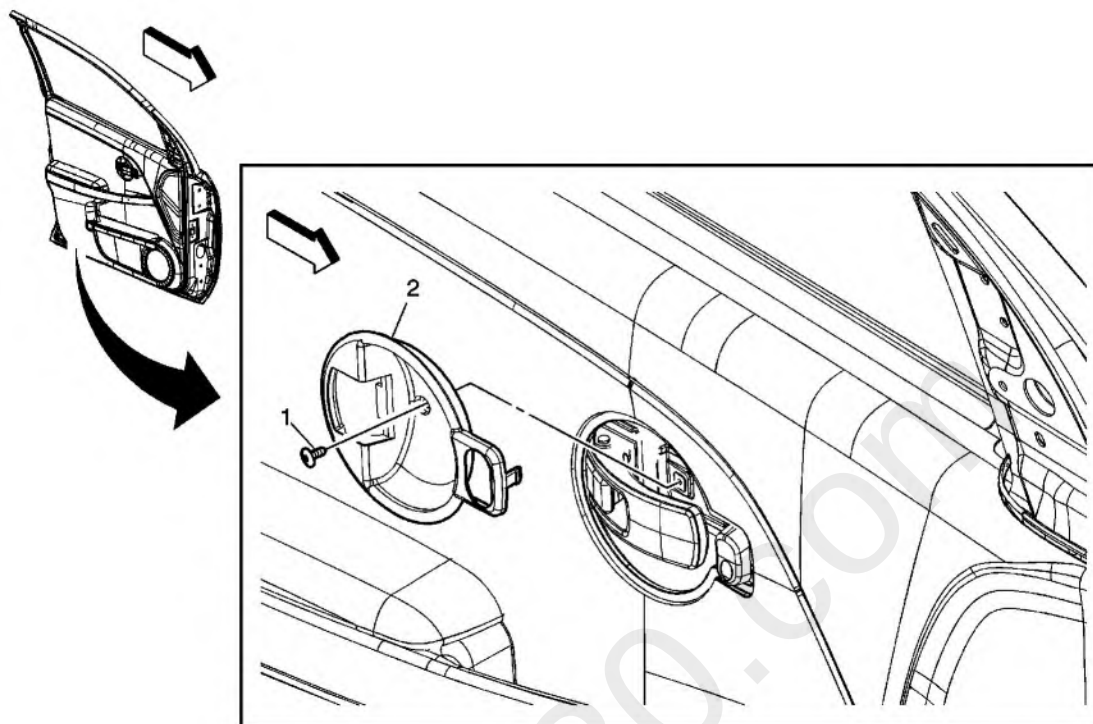

Callout	Component Name
1	Front Side Door Handle Bezel Screw (Qty: 2) Notice: Refer to Fastener Notice in the Preface section. Tighten 2.5 N·m (22 lb in)
2	Front Side Door Handle Bezel Assembly


Door Handle Bezel Replacement (Rear Side Door)

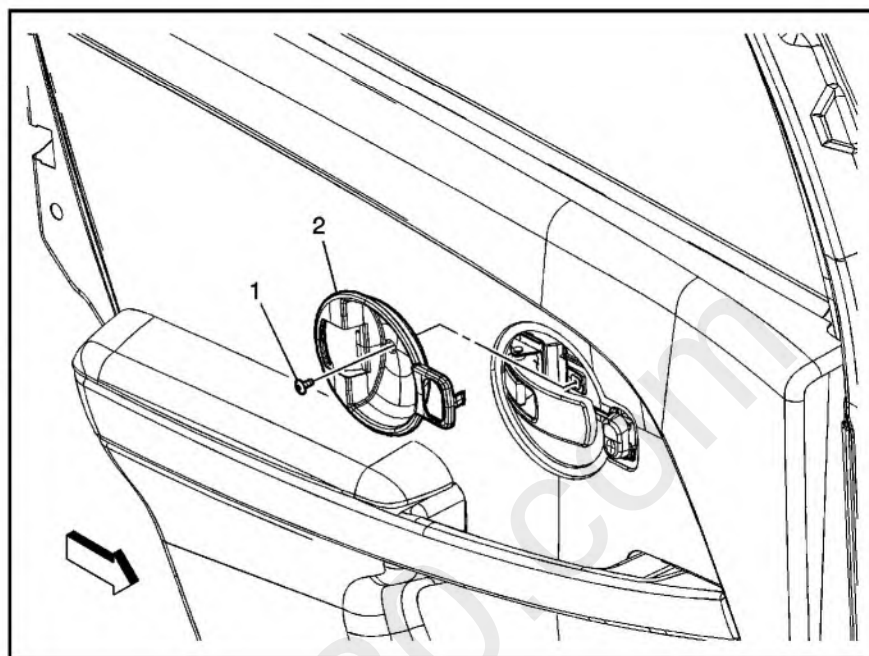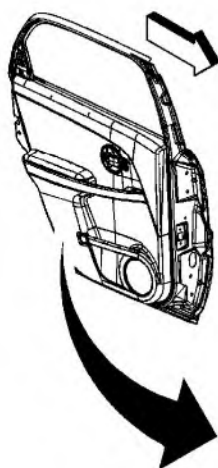


Callout	Component Name
1	Rear Side Door Handle Bezel Screw (Qty: 2) Notice: Refer to Fastener Notice in the Preface section. Tighten 2.5 N·m (22 lb in)
2	Rear Side Door Handle Bezel Assembly

Front Floor Console Front Cup Holder Replacement

Removal Procedure

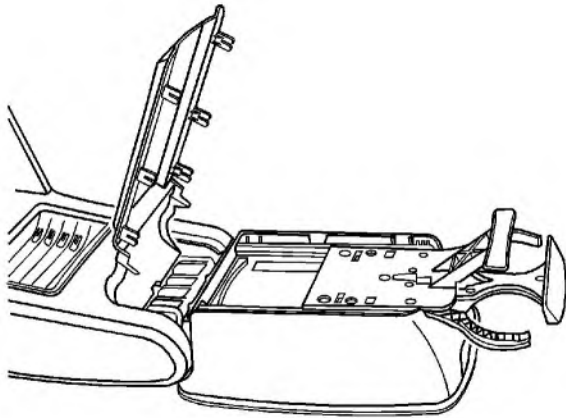


1. Open the arm rest on the console.
2. Remove the cupholder cover.
3. Remove the screws from the cup holder track.
4. Remove the cup holder and the track from the console.

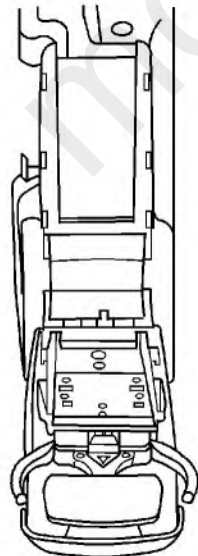

5. Pull to separate the cup holder from the track.

© 2012 General Motors Corporation. All rights reserved.

Installation Procedure

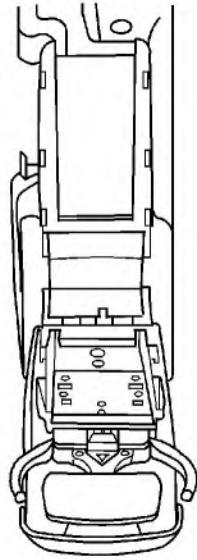

1. Install the cup holder to the track.
2. Position the track in the console assembly.

Notice: Refer to [Fastener Notice](#) in the Preface section.

3. Install the console track screws.

Tighten


Tighten the screw to 2.5 N·m (22 lb in).

4. Snap the cupholder cover in place.
5. Inspect the cupholder for correct operation.

Front Floor Console Rear Cup Holder Replacement

Removal Procedure


1. Pull all the way out on the cup holder.
2. Remove the screws from the cup holder track.

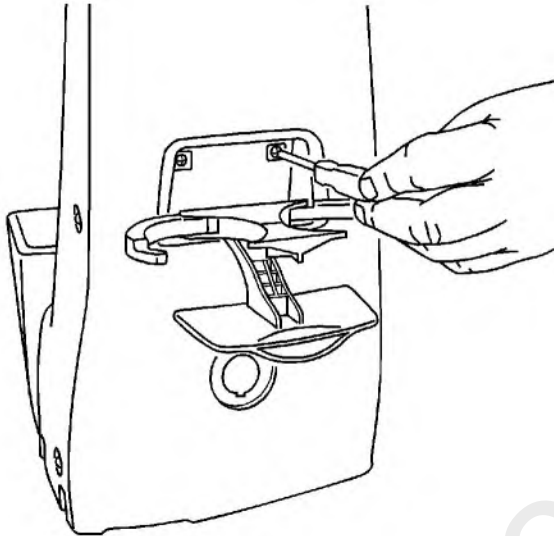

3. Remove the cup holder and the track from the console.

Installation Procedure

Notice: Refer to [Fastener Notice](#) in the Preface section.

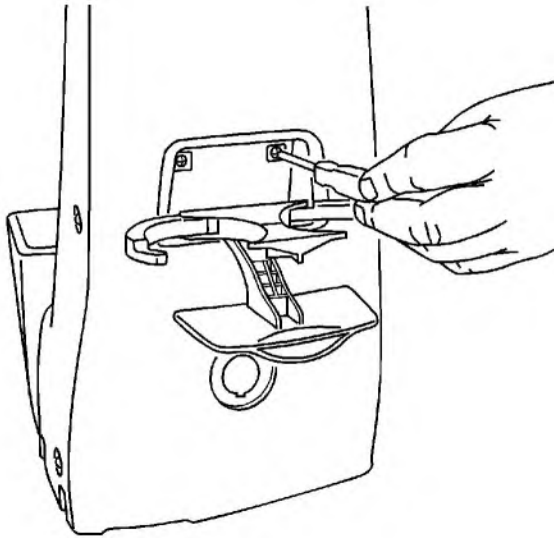


1. Install the console track screws.

Tighten

Tighten the screw to 2.5 N·m (22 lb in).


2. Verify the rear cup holder for correct operation.

Front Side Door Trim Panel Replacement

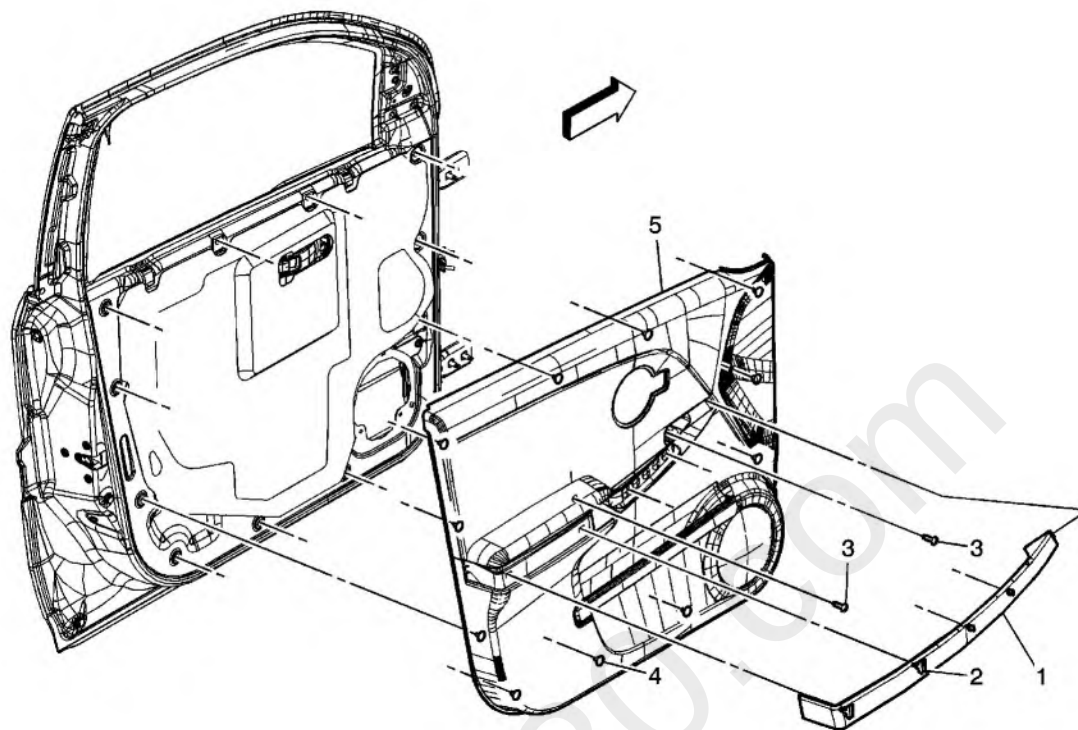


Callout	Component Name
Preliminary Procedures 1. Remove upper extension trim panel. Refer to Upper Extension Trim Panel Replacement. 2. Remove door handle bezel. Refer to Door Handle Bezel Replacement.	
1	Front Side Door Trim Panel Insert Assembly
2	Front Side Door Trim Panel Insert Retainer (Qty: 7)
3	Front Side Door Trim Panel Retainer Screw (Qty: 2) Notice: Refer to Fastener Notice in the Preface section. Tighten 2.5 N·m (22 lb in)
4	Front Side Door Trim Panel Retainer (Qty: 11)
5	Front Side Door Trim Panel Assembly

Front Side Door Water Deflector Replacement

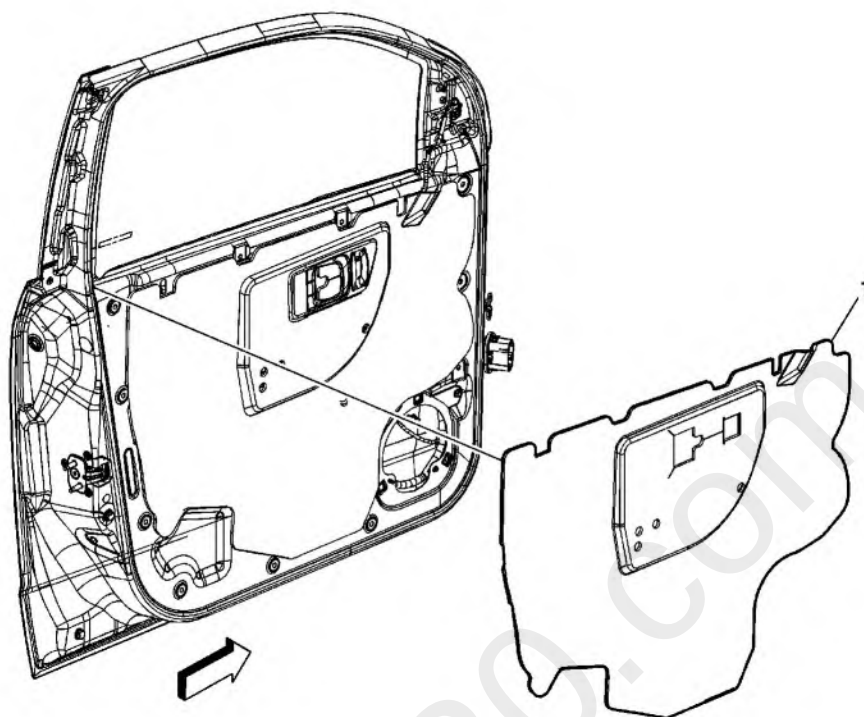


Callout	Component Name
Preliminary Procedure	
Remove front door trim panel. Refer to Front Side Door Trim Panel Replacement .	
1	Front Side Door Trim Panel Seal Assembly
	Tip 1. To remove door seal, start at top left corner and pull downward. 2. When re-installing door seal, align locating tabs near top edge of both the seal and door structure. 3. Stretch door seal tight across top edge and set in place. 4. Wet-out adhesive around entire perimeter to ensure a proper seal.

Liftgate Door Sill Plate Replacement

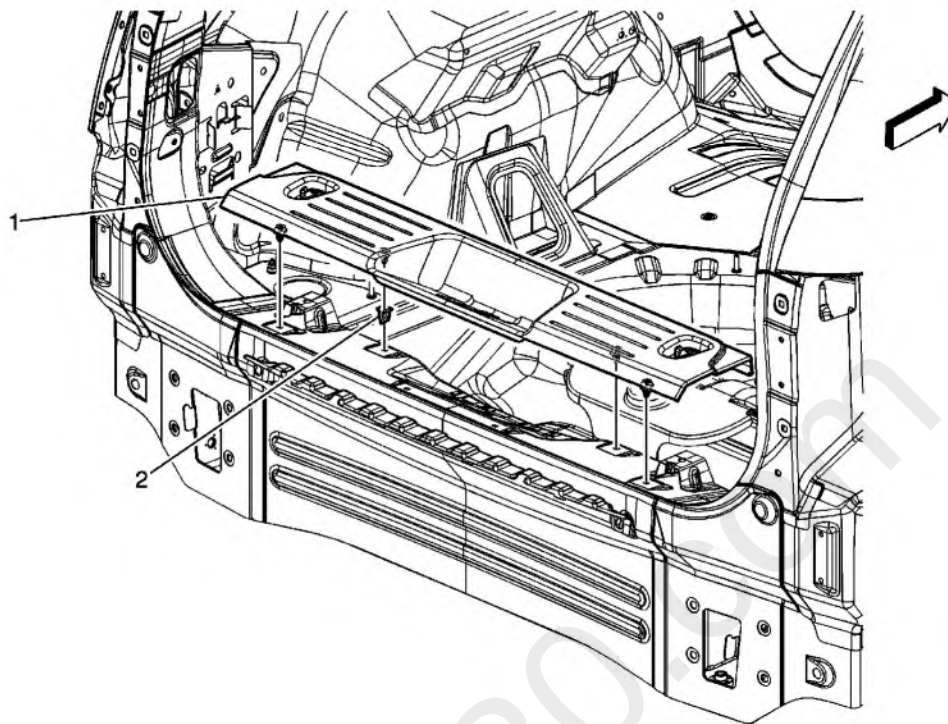

Callout	Component Name
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
Preliminary Procedure	
1. Remove the cargo hooks from the rear end trim finish panel. 2. Remove the rear load floor.	
1	Rear End Trim Finish Panel Assembly
2	Rear End Trim Finish Panel Retainer Clip (Qty: 4)


Liftgate Trim Panel Replacement

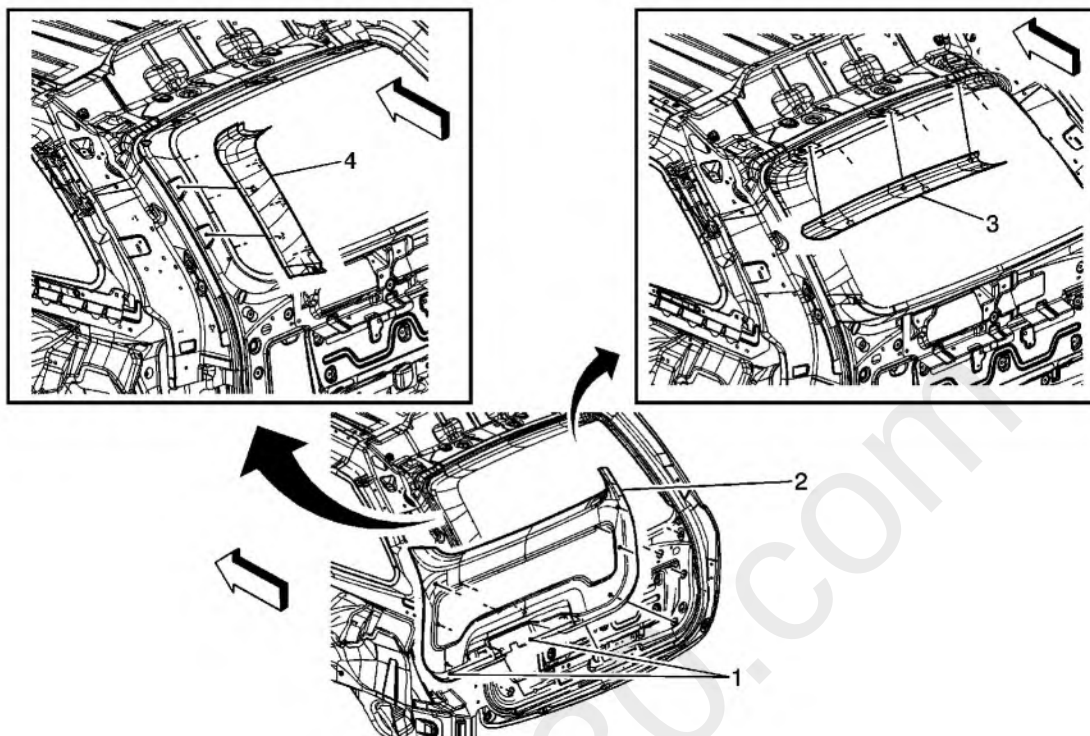

Callout	Component Name
Notice: Refer to Fastener Notice in the Preface section.	
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Liftgate Lower Trim Panel Screw (Qty: 2) Tighten 2 N·m (18 lb in)
2	Liftgate Lower Trim Finish Panel Tip Pull away from the liftgate to release the retainers.
3	Liftgate Upper Trim Finish Panel Tip Pull away from the liftgate to release the retainers.
4	Liftgate Trim Finish Panel (Qty: 2) Tip Pull away from the liftgate to release the retainers.


© 2012 General Motors Corporation. All rights reserved.

Lock Pillar Upper Garnish Molding Replacement

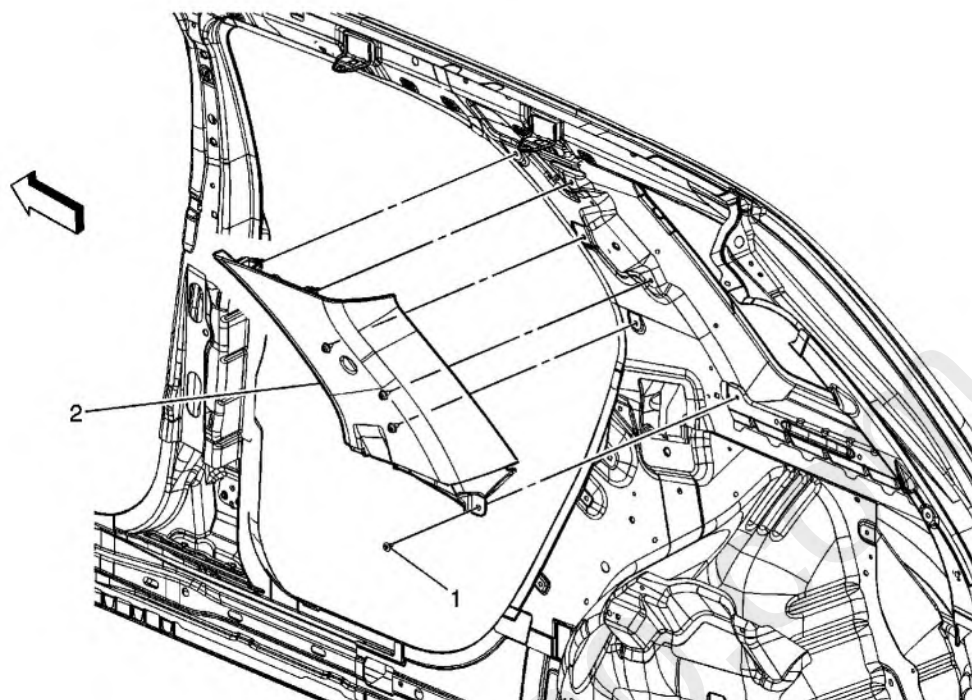


Callout	Component Name
Preliminary Procedures	
1. Remove the rear quarter lower trim panel. Refer to Quarter Lower Rear Trim Panel Replacement. 2. Remove the outboard rear seat shoulder belt guide. Refer to Rear Seat Belt Replacement.	
1	Quarter Window Trim Finish Panel Bolt Notice: Refer to Fastener Notice in the Preface section. Tighten 9 N·m (80 lb in)
2	Quarter Window Trim Finish Panel

Quarter Lower Rear Trim Panel Replacement

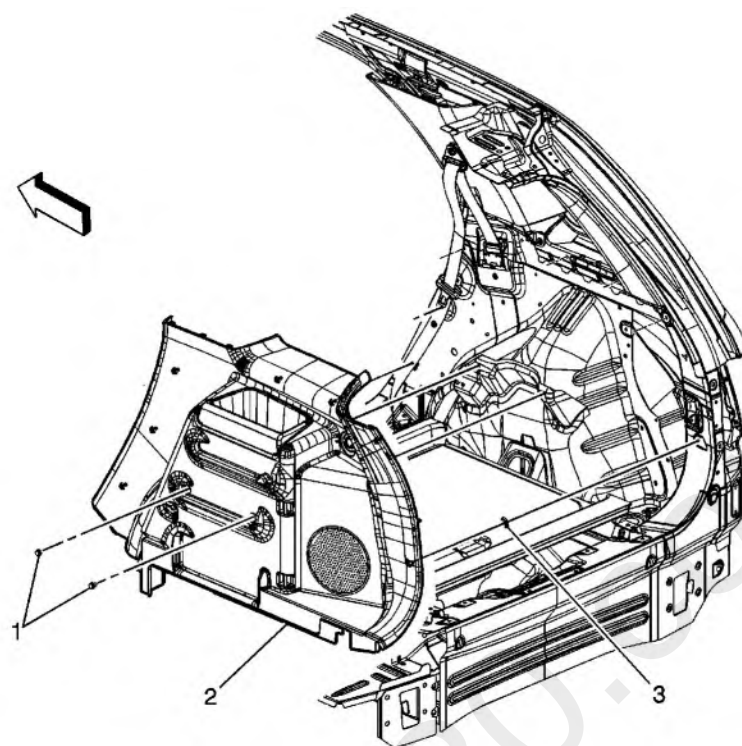


Callout	Component Name
Preliminary Procedures	
1. Remove the rear sill plate. Refer to Liftgate Door Sill Plate Replacement . 2. Move the rear seat forward. 3. Remove the load floor.	
1	Rear Quarter Lower Trim Panel Push in Retainer (Qty: 2)
2	Rear Quarter Lower Trim Panel Tip 1. Disconnect the cargo hooks from the trim panel. 2. If necessary, remove the jack to access the driver side rear side trim panel.
3	Rear Quarter Lower Trim Panel Retainer Clip (Qty: 7)

Rear Side Door Trim Panel Replacement

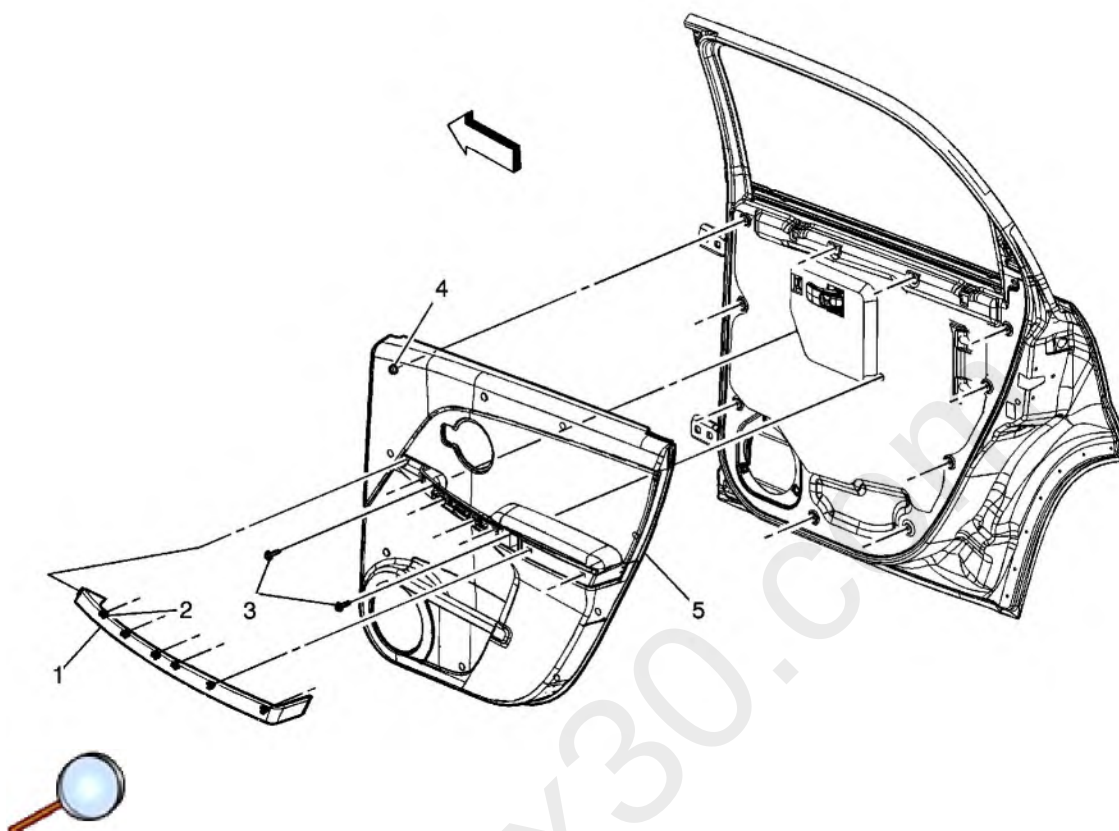


Callout	Component Name
Preliminary Procedures	
1. Remove upper extension trim panel. Refer to Upper Extension Trim Panel Replacement .	
2. Remove door handle bezel. Refer to Door Handle Bezel Replacement .	
1	Rear Side Door Trim Panel Insert Assembly
2	Rear Side Door Trim Panel Insert Retainer (Qty: 6)
3	Rear Side Door Trim Panel Retainer Screw (Qty: 2)
	Notice: Refer to Fastener Notice in the Preface section. Tighten 2.5 N·m (22 lb in)
4	Rear Side Door Trim Panel Retainer (Qty: 10)
5	Rear Side Door Trim Panel Assembly

Rear Side Door Water Deflector Replacement

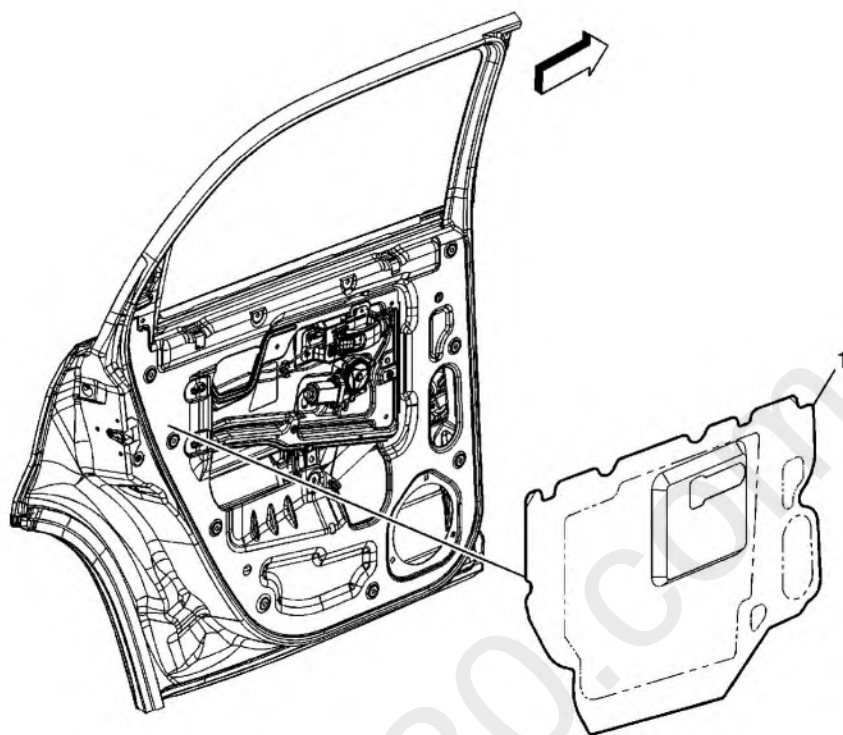


Callout	Component Name
Preliminary Procedure	
Remove front door trim panel. Refer to Front Side Door Trim Panel Replacement .	
	Rear Side Door Trim Panel Seal Assembly
1	Tip 1. To remove door seal, start at top left corner and pull downward. 2. When re-applying door seal, align top trimline to door features, then adhere top surface. 3. Adhere bottom center first and then continue outward and upward. 4. Wet-out adhesive around entire perimeter to ensure a proper seal.

Sunshade Anchor Replacement

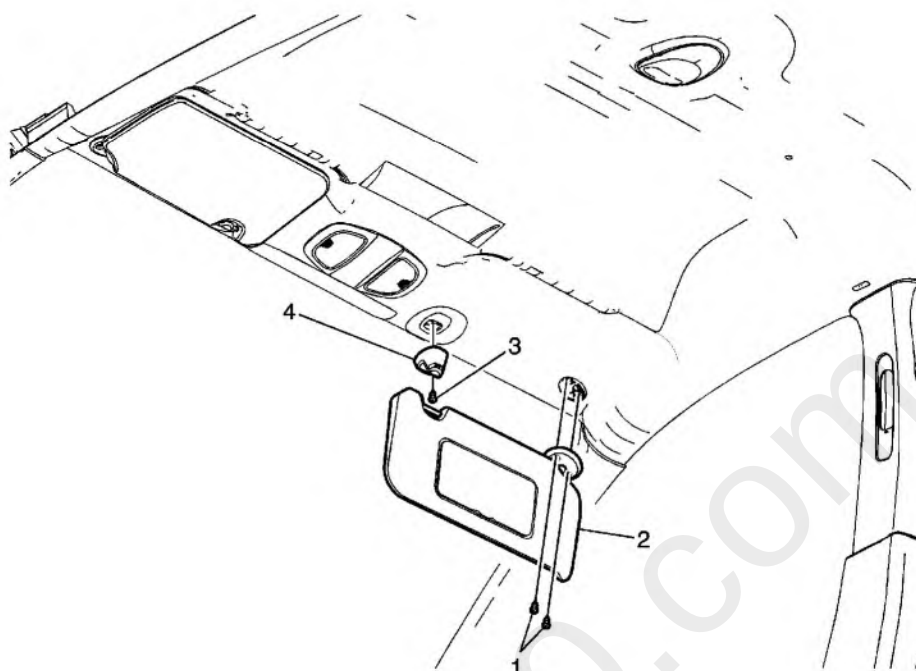


Callout	Component Name
Notice: Refer to Fastener Notice in the Preface section.	
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Sunshade Screw (Qty: 2) Tighten 2.5 N·m (22 lb in)
2	Sunshade Assembly Tip Disconnect the electrical connector, if equipped.
3	Sunshade Support Screw Tighten 2.5 N·m (22 lb in)
4	Sunshade Support

Sunshade Replacement

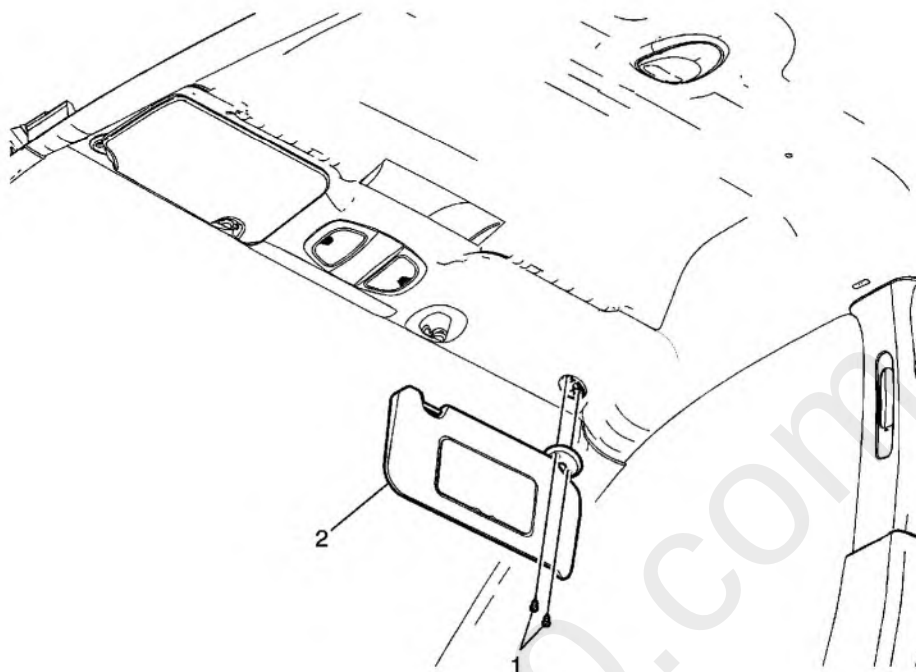


Callout	Component Name
Notice: Refer to Fastener Notice in the Preface section.	
<i>Fastener Tightening Specifications:</i> Refer to Fastener Tightening Specifications .	
1	Sunshade Screw (Qty: 2) Tighten 2.5 N·m (22 lb in)
2	Sunshade Assembly Tip Disconnect the electrical connector, if equipped.

Upper Extension Trim Panel Replacement (Front Side Door)

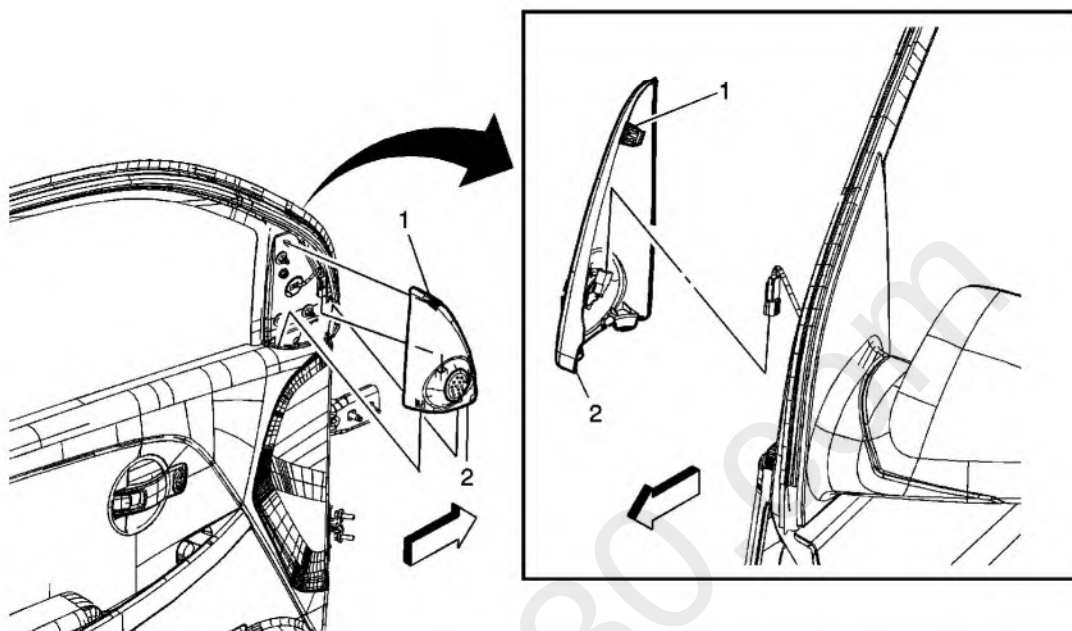


Callout	Component Name
1	Front Side Door Upper Trim Panel Retainer (Qty: 1)
2	Front Side Door Upper Trim Panel Assembly
	Procedures
	1. Pull on the top end of extension panel to disengage attaching clip. 2. Lift extension panel out from behind the door trim panel. 3. Use care to ensure sound deadener is in correct position when installing trim to door. 4. Disconnect electrical connectors.

Upper Extension Trim Panel Replacement (Rear Side Door)

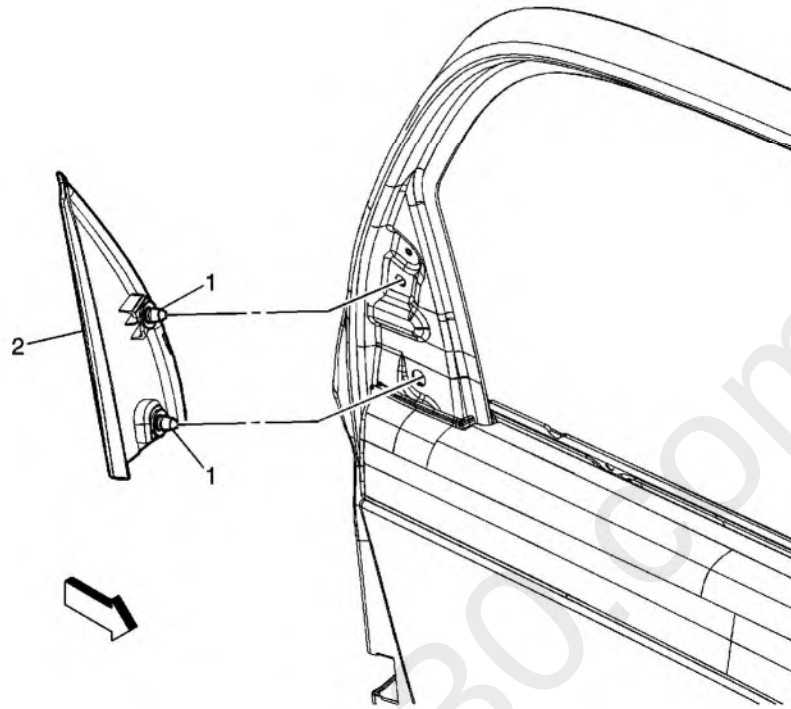

Callout	Component Name
1	Rear Side Door Stationary Window Inner Trim Cover Retainer (Qty: 2)
2	Rear Side Door Stationary Window Inner Trim Cover Assembly

Windshield Upper Garnish Molding Replacement

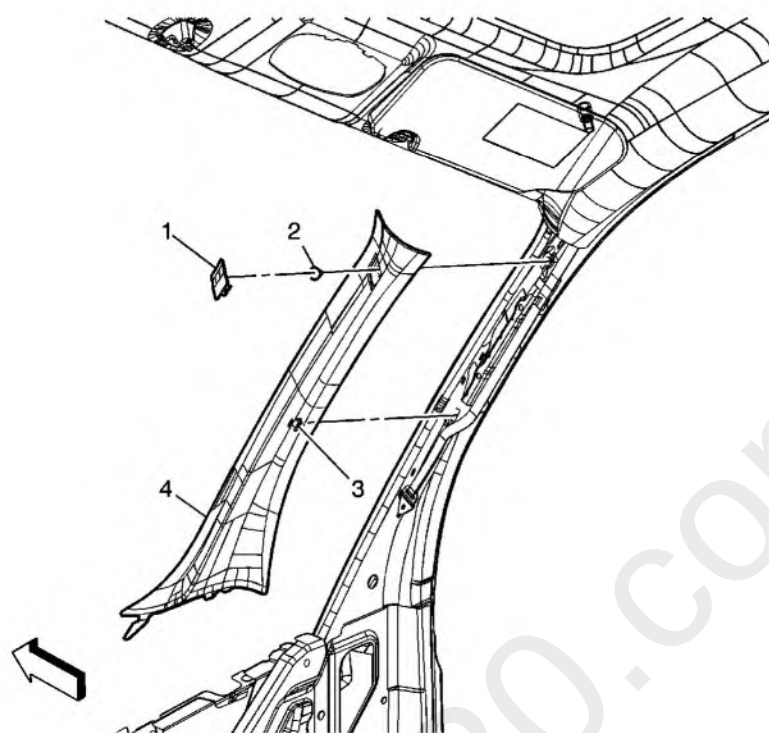

Callout	Component Name
Preliminary Procedure	
Disable the roof rail SIR system. Refer to SIR Disabling and Enabling .	
1	Windshield Side Garnish Molding Cover
2	Windshield Side Garnish Screw Notice: Refer to Fastener Notice in the Preface section. Tighten 9 N·m (80 lb in)
3	Windshield Garnish Molding Clip Retainer
4	Windshield Garnish Molding Assembly Tip Starting at the top, gently pull on the garnish molding to disengage the clips.