

2010 DTC INDEX

Equinox & Terrain

ORDERED DIAGNOSTIC TROUBLE CODES

EQUINOX & TERRAIN DIAGNOSTIC TROUBLE CODE (DTC) LIST

DTC	DTC Descriptor	Diagnostic Procedure
B0000	Vehicle Speed Information Circuit Not Plausible	<u>DTC B0000</u>
B0012	Driver Frontal Deployment Loop Stage 1	<u>DTC B0012 or B0013</u>
B0013	Driver Frontal Deployment Loop Stage 2	<u>DTC B0012 or B0013</u>
B0014	Driver Side Deployment Loop	<u>DTC B0014-B0045</u>
B0015	Driver Seat Belt Pretensioner Deployment Loop	<u>DTC B0014-B0045</u>
B0016	Left Roof Rail Deployment Loop 1	<u>DTC B0014-B0045</u>
B0018	Left Roof Rail Deployment Loop 2	<u>DTC B0014-B0045</u>
B0019	Passenger Frontal Deployment Loop Stage 1	<u>DTC B0014-B0045</u>
B001A	Driver Pretensioner Deployment Loop 2	<u>DTC B001A or B001B</u>
B001B	Passenger Seat Belt Pretensioner Deployment Loop 2	<u>DTC B001A or B001B</u>
B0020	Passenger Frontal Deployment Loop Stage 2	<u>DTC B0014-B0045</u>
B0021	Passenger Side Deployment Loop	<u>DTC B0014-B0045</u>
B0022	Passenger Seat Belt Pretensioner Deployment Loop	<u>DTC B0014-B0045</u>
B0023	Right Roof Rail Deployment Loop 1	<u>DTC B0014-B0045</u>
B0025	Right Roof Rail Deployment Loop 2	<u>DTC B0014-B0045</u>
B0052	Deployment Commanded	<u>DTC B0052</u>
B0074	Passenger Occupant Classification Sensor Circuit	<u>DTC B0074</u>
B0081	Passenger Presence System	<u>DTC B0081 (SDM) or DTC B0081 (Passenger Presence Detection Module)</u>
B0083	Front End Impact Sensor 1	<u>DTC B0083-B0088</u>
B0084	Front End Impact Sensor 2	<u>DTC B0083-B0088</u>
B0158	Outside Air Temperature Sensor Circuit	<u>DTC B0158</u>
B0163	Passenger Compartment Temperature Sensor Circuit	<u>DTC B0163 or B0183</u>
B0173	Upper Left Duct Air Temperature Sensor Circuit	<u>DTC B0173, B0178, or B3933</u>