

2010 ELECTRICAL

Wiring Systems and Power Management - Equinox & Terrain

DIAGNOSTIC INFORMATION AND PROCEDURES

DIAGNOSTIC CODE INDEX

DIAGNOSTIC CODE INDEX

DTC	Description
<u>DTC B1370-B1379, B1380-B1389, or B1440-B1443</u>	B1370 01: Control Module Ignition On and Start Circuit Short to Battery B1370 04: Control Module Ignition On and Start Circuit Open B1380 01: Control Module Ignition Accessory Circuit Short to Battery B1380 04: Control Module Ignition Accessory Circuit Open B1441 01: Control Module Ignition Off, Run, and Start Circuit Short to Battery B1441 04: Control Module Ignition Off, Run, and Start Circuit Open
<u>DTC B1445</u>	B1445 02: Control Module Voltage Output Circuit Short to Ground
<u>DTC B144A</u>	B144A 02: RUN Power Relay Circuit Short to Ground
<u>DTC B144B</u>	B144B 02: RUN/CRNK Relay Circuit Short to Ground
<u>DTC B147E</u>	B147E 02: Battery Saver Relay Set Secondary Circuit Short to Ground
<u>DTC B147F</u>	B147F 02: Battery Saver Relay Reset Secondary Circuit Short to Ground

DTC B1370-B1379, B1380-B1389, OR B1440-B1443

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptors

DTC B1370 01

Control Module Ignition On and Start Circuit Short to Battery

DTC B1370 04

Control Module Ignition On and Start Circuit Open

DTC B1380 01

Control Module Ignition Accessory Circuit Short to Battery

DTC B1380 04