

2010 GENERAL INFORMATION

Squeaks and Rattles - Equinox & Terrain

DIAGNOSTIC INFORMATION AND PROCEDURES

SQUEAKS AND RATTLES

Special Tools

- **CH-39570:** Chassis Ear
- **GE-41416:** Ultrasonic Leak Detector

For equivalent regional tools, refer to Special Tools .


DIAGNOSIS


NOTE: Squeaks and rattles are caused by improperly controlled relative motion between vehicle components. There are 4 ways to prevent squeaks and rattles.
To aid in diagnosing, use CH-39570: ear or GE-41416: detector.

- Attach the component that squeaks or rattles securely.
- Separate the components that squeak or rattle to prevent contact.
- Insulate the components that squeak or rattle.
- Insulate low uniform friction surfaces to eliminate stickslip motion.

SPECIAL TOOLS AND EQUIPMENT

SPECIAL TOOLS

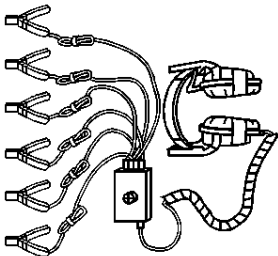Illustration	Tool Number/ Description
	CH-39570 J 39570 Chassis Ear

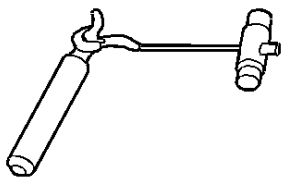

GE-41416
J 41416
Ultrasonic Leak Detector

mcx30.com