

2010 ELECTRICAL

Wiring Systems and Power Management - Component Locator/Connector Views - Equinox & Terrain

MASTER ELECTRICAL COMPONENT LIST

NOTE: Identify desired connector in the table below based upon the alpha/numeric connector ID and then proceed to the **COMPONENT CONNECTOR END VIEWS - INDEX** for locator view, see appropriate Component Locator View article based upon the general physical location of the component as listed in the LOCATION column of the table below.

For:

COMPONENT CONNECTOR END VIEWS - INDEX, click here

INLINE HARNESS CONNECTOR END VIEWS, click here

SPLICE PACK CONNECTOR END VIEWS, click here

HARNESS ROUTING VIEWS, click here

GROUND VIEWS, click here

Code	Name	Option	Location	For Locator View See Appropriate Component View Article	Connector End View Name	Link
A3L	Sunshade - Left	-	In the passenger compartment, at the upper left corner of the windshield	Headliner Components	A3L Sunshade - Left Front	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
A3R	Sunshade - Right	-	In the passenger compartment, at the upper right corner of the windshield	Headliner Components	A3R Sunshade - Right Front	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
A6C	Fuel Pump and Level Sensor Assembly - Primary	-	Under the rear of the vehicle, on top of the fuel tank	Fuel System Components	A6C Fuel Pump and Level Sensor Assembly - Primary	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
A9A	Outside Rearview	-	On the outside of the driver	Driver Door	A9A Outside Rearview Mirror -	<u>COMPONENT CONNECTOR</u>

	Mirror - Driver		door	Components	Driver	<u>END VIEWS</u> <u>(INDEX)</u>
A9B	Outside Rearview Mirror - Passenger	-	On the outside of the passenger door	Passenger Door Components	A9B Outside Rearview Mirror - Passenger	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
A10	Inside Rearview Mirror	-	In the passenger compartment, at the top center of the windshield	Headliner Components	A10 Inside Rearview Mirror (UVC with UYS or PCJ or without UVC or UYS or PCJ) or A10 Inside Rearview Mirror (UVC without UYS or PCJ)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
A11	Radio	-	In the passenger compartment, in the center of the instrument panel, behind the radio/HVAC controls	Left Side of the Instrument Panel Components	• A11 Radio X1 • A11 Radio X3 (UWG) • A11 Radio X4 (UYS or PCJ)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
A20	Radio/HVAC Controls	-	In the passenger compartment, below the info display module	Left Side of the Instrument Panel Components	A20 Radio/HVAC Controls	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
A23C	Liftgate Latch Assembly	-	In the rear of the passenger compartment, inside the lower middle of the liftgate	Liftgate Components	A23C Liftgate Latch Assembly (TB5) or A23C Liftgate Latch Assembly (TB4)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
A23D	Door Latch Assembly - Driver	-	In the left front of the passenger compartment, at the rear of the driver door	Driver Door Components	A23D Door Latch Assembly - Driver	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
A23LR	Door Latch Assembly - Left Rear	-	In the left rear of the passenger compartment, at the rear of the left rear	Left Rear Door Components	A23LR Door Latch Assembly - Left Rear	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

			door			
A23P	Door Latch Assembly - Passenger	-	In the right front of the passenger compartment, at the rear of the passenger door	Passenger Door Components	A23P Door Latch Assembly - Passenger	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
A23RR	Door Latch Assembly - Right Rear	-	In the right rear of the passenger compartment, at the rear of the right rear door	Right Rear Door Components	A23RR Door Latch Assembly - Right Rear	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
B1	A/C Refrigerant Pressure Sensor	LAF	In the engine compartment, at the right front corner of the engine, on the high-pressure A/C line	Front Engine Components (LAF 2 of 2)	B1 A/C Refrigerant Pressure Sensor	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
B1	A/C Refrigerant Pressure Sensor	LF1	In the engine compartment, at the right front corner of the engine, on the high-pressure A/C line	Left Front of the Engine Components (LF1)	B1 A/C Refrigerant Pressure Sensor	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
B5LF	Wheel Speed Sensor - Left Front	-	Under the left front of the vehicle, mounted to the left front steering knuckle assembly	Wheel Components	B5LF Wheel Speed Sensor - Left Front	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
B5LR	Wheel Speed Sensor - Left Rear	-	Under the left rear of the vehicle, mounted to the left rear upper control arm	Wheel Components	B5LR Wheel Speed Sensor - Left Rear	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
			Under the right front of the			<u>COMPONENT CONNECTOR</u>

B5RF	Wheel Speed Sensor - Right Front	-	vehicle, mounted to the right front steering knuckle assembly	Wheel Components	B5RF Wheel Speed Sensor - Right Front	<u>END VIEWS</u> <u>(INDEX)</u>
B5RR	Wheel Speed Sensor - Right Rear	-	Under the right rear of the vehicle, mounted to the right rear upper control arm	Wheel Components	B5RR Wheel Speed Sensor - Right Rear	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B7E	Air Temperature Sensor - Duct Right Lower	C68	In the front center of the passenger compartment, at the right center of the HVAC module, near the air temperature door actuator	Right Side of Instrument Panel - Center Console and HVAC System	B7E Air Temperature Sensor - Duct Right Lower (C68)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B7J	Air Temperature Sensor - Duct Right Upper	C68	In the front center of the passenger compartment, at the right center of the HVAC module, above the air temperature door actuator	Right Side of Instrument Panel - Center Console and HVAC System	B7J Air Temperature Sensor - Duct Right Upper (C68)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B9	Ambient Air Temperature Sensor	-	In the right front of the vehicle, at the bottom of the right radiator support, in front of the A/C condenser	Front of the Engine Compartment Components	B9 Ambient Air Temperature Sensor	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B10	Ambient Light Sensor	C67	In the center front of the passenger compartment, at the top center of the instrument	Left Side of the Instrument Panel Components	B10 Ambient Light Sensor (C67)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

			panel			
B10B	Ambient Light/Sunload Sensor	C68	In the center front of the passenger compartment, at the top center of the instrument panel	Left Side of the Instrument Panel Components	B10B Ambient Light/Sunload Sensor (C68)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
B12A	Transmission Fluid Pressure Manual Valve Position Switch	-	In the left side of the engine compartment, inside the transmission	-	-	
B13	Transmission Fluid Temperature Sensor	-	In the left side of the engine compartment, inside the transmission	-	-	
B14A	Transmission Output Shaft Speed Sensor	-	In the left side of the engine compartment, inside the transmission	Automatic Transmission Electronic Components	-	
B14C	Transmission Input Shaft Speed Sensor	-	In the left side of the engine compartment, inside the transmission	Automatic Transmission Electronic Components	-	
B15	Transmission Internal Mode Switch	-	In the engine compartment, inside the transmission, at the shift select shaft	Automatic Transmission Electronic Components	-	
B17	Barometric Pressure Sensor	LF1	In the left front of the engine compartment, mounted on top of the air cleaner housing cover	Front of the Engine Compartment Components	B17 Barometric Pressure Sensor (LF1)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
B18	Battery Current Sensor	-	In the left side of the engine compartment, mounted to the negative	Front of the Engine Compartment	B18 Battery Current Sensor	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>

			battery cable, behind the battery	Components		
B19B	Brake Booster Vacuum Sensor	-	In the left rear of the engine compartment, to the right of the brake master cylinder, in the vacuum brake booster	Engine Compartment Components (Chevrolet) or Engine Compartment Components (GMC)	B19B Brake Booster Vacuum Sensor	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B20	Brake Fluid Level Switch	-	In the left rear of the engine compartment, mounted to the left side of the master cylinder fluid reservoir	Engine Compartment Components (Chevrolet) or Engine Compartment Components (GMC)	B20 Brake Fluid Level Switch	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B22	Brake Pedal Position Sensor	-	In the lower left rear of the passenger compartment, below the instrument panel, in the driver side footwell, near the top of the brake pedal assembly	Lower Left of the Instrument Panel Components	B22 Brake Pedal Position Sensor	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B23A	Camshaft Position Sensor - Bank 1 Exhaust	LF1	Right rear of the engine, at the right of the bank 1 cylinder head	Right Rear of the Engine Components (LF1)	B23A Camshaft Position Sensor - Bank 1 Exhaust (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B23B	Camshaft Position Sensor - Bank 1 Intake	LF1	Right rear of the engine, at the right of the bank 1 cylinder head	Right Rear of the Engine Components (LF1)	B23B Camshaft Position Sensor - Bank 1 Intake (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B23C	Camshaft Position Sensor - Bank 2	LF1	Right front of the engine, at the right of the bank 2 cylinder	Right Rear of the Engine Components	B23C Camshaft Position Sensor - Bank 2 Exhaust	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

	Exhaust		head	(LF1)	(LF1)	
B23D	Camshaft Position Sensor - Bank 2 Intake	LF1	Right front of the engine, at the right of the bank 2 cylinder head	Right Rear of the Engine Components (LF1)	B23D Camshaft Position Sensor - Bank 2 Intake (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B23E	Camshaft Position Sensor - Exhaust	LAF	In the left rear of the engine compartment, at the left rear of the engine, below the camshaft cover	Left Rear Engine Components (LAF)	B23E Camshaft Position Sensor - Exhaust (LAF)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B23F	Camshaft Position Sensor - Intake	LAF	In the left rear of the engine compartment, at the left rear of the engine, below the high pressure fuel pump	Front Engine Components (LAF 1 of 2)	B23F Camshaft Position Sensor - Intake (LAF)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B24	Cellular Phone Microphone	UE1	In the front center of the passenger compartment, mounted to the right front corner of the roof console	Headliner Components	B24 Cellular Phone Microphone (UE1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B26	Crankshaft Position Sensor	LAF	In the left front of the engine compartment, at the left front of the engine, above the starter motor	Front Engine Components (LAF 1 of 2)	B26 Crankshaft Position Sensor	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B26	Crankshaft Position Sensor	LF1	In the left rear of the engine compartment, at the rear of the engine block	Right Rear of the Engine Components (LF1)	B26 Crankshaft Position Sensor	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B34	Engine Coolant Temperature	LAF	In the left rear of the engine compartment, at the left rear of the engine,	Left Rear Engine Components	B34 Engine Coolant Temperature Sensor	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

	Sensor		behind the exhaust manifold	(LAF)	(LAF)	
B34	Engine Coolant Temperature Sensor	LF1	In the left front of the engine compartment, above the starter motor, in the cylinder head at cylinder #6	Left Front of the Engine Components (LF1)	B34 Engine Coolant Temperature Sensor (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B37	Engine Oil Pressure Switch	LAF	In the left front of the engine compartment, at the front of the engine, above the starter motor	Front Engine Components (LAF 1 of 2)	B37 Engine Oil Pressure Switch (LAF)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B37	Engine Oil Pressure Switch	LF1	In the right front of the engine compartment, on the front of the engine, behind the A/C compressor	Left Front of the Engine Components (LF1)	B37 Engine Oil Pressure Switch (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B39	A/C Evaporator Temperature Sensor	-	In the lower right of the passenger compartment, on the right center of the HVAC module, behind the air temperature actuator	Right Side of Instrument Panel - Center Console and HVAC System	B39 A/C Evaporator Temperature Sensor	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B46B	Fuel Level Sensor - Secondary	-	Under the rear of the vehicle, on top of the fuel tank	Fuel System Components	B46B Fuel Level Sensor - Secondary	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B47	Fuel Pressure Sensor	-	In the left rear of the engine compartment, behind the engine, on the fuel line near the left front	Fuel System Components	B47 Fuel Pressure Sensor	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

			wheel area			
B47B	Fuel Rail Pressure Sensor	LAF	In the center of the engine compartment, under the intake manifold, on the fuel rail between cylinders #2 and #3	Front Engine Components (LAF 2 of 2)	B47B Fuel Rail Pressure Sensor	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B47B	Fuel Rail Pressure Sensor	LF1	In the left front of the engine compartment, under the intake manifold, on the fuel rail near cylinder #6	Top of the Engine Components (LF1)	B47B Fuel Rail Pressure Sensor	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B52A	Heated Oxygen Sensor 1	LAF	In the upper rear of the engine compartment, on the exhaust manifold	Left Rear Engine Components (LAF)	B52A Heated Oxygen Sensor 1 (LAF)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B52B	Heated Oxygen Sensor 2	LAF	In the right rear of the engine compartment, on the exhaust manifold, behind the catalytic converter	Left Rear Engine Components (LAF)	B52B Heated Oxygen Sensor 2 (LAF)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B52C	Heated Oxygen Sensor - Bank 1 Sensor 1	LF1	In the rear of the engine compartment, on the bank 1 exhaust manifold	Front of the Exhaust System Components (LF1)	B52C Heated Oxygen Sensor - Bank 1 Sensor 1 (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B52D	Heated Oxygen Sensor - Bank 1 Sensor 2	LF1	In the engine compartment, on the exhaust manifold, behind the catalytic converter	Front of the Exhaust System Components (LF1)	B52D Heated Oxygen Sensor - Bank 1 Sensor 2 (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

B52E	Heated Oxygen Sensor - Bank 2 Sensor 1	LF1	In the front of the engine compartment, in front of the engine, in the bank 2 exhaust manifold	Front of the Exhaust System Components (LF1)	B52E Heated Oxygen Sensor - Bank 2 Sensor 1 (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B52F	Heated Oxygen Sensor - Bank 2 Sensor 2	LF1	In the engine compartment, on the exhaust manifold, behind the catalytic converter	Front of the Exhaust System Components (LF1)	B52F Heated Oxygen Sensor - Bank 2 Sensor 2 (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B55	Hood Ajar Switch	BTV	In the engine compartment, at the upper center of the radiator support, part of the hood latch assembly	Engine Compartment Components (Chevrolet) or Engine Compartment Components (GMC)	B55 Hood Ajar Switch (BTV)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B59L	Front Impact Sensor - Left	-	In the left front of the engine compartment, at the upper left front of the radiator support	Front of the Engine Compartment Components	B59L Front Impact Sensor - Left	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B59R	Front Impact Sensor - Right	-	In the right front of the engine compartment, at the upper right front of the radiator support	Front of the Engine Compartment Components	B59R Front Impact Sensor - Right	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B63LF	Side Impact Sensor - Left Front	-	In the left front of the passenger compartment, in the driver door, mounted to the support beam	Driver Door Components	B63LF Side Impact Sensor - Left Front	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
			In the left rear of the			<u>COMPONENT CONNECTOR</u>

B63LR	Side Impact Sensor - Left Rear	-	passenger compartment, in the left rear door, mounted to the support beam	Left Rear Door Components	B63LR Side Impact Sensor - Left Rear	<u>END VIEWS</u> <u>(INDEX)</u>
B63RF	Side Impact Sensor - Right Front	-	In the right front of the passenger compartment, in the passenger door, mounted to the support beam	Passenger Door Components	B63RF Side Impact Sensor - Right Front	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B63RR	Side Impact Sensor - Right Rear	-	In the right rear of the passenger compartment, in the right rear door, mounted to the support beam	Right Rear Door Components	B63RR Side Impact Sensor - Right Rear	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B68	Knock Sensor	LAF	In the left front of the engine compartment, in the front center of the engine block, above the starter motor	Front Engine Components (LAF 1 of 2)	B68 Knock Sensor (LAF)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B68A	Knock Sensor 1	LF1	In the rear of the engine compartment, on the lower rear of the engine block	Right Rear of the Engine Components (LF1)	B68A Knock Sensor 1 (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B68B	Knock Sensor 2	LF1	In the front of the engine compartment, on the front of the engine block, behind the starter motor	Left Front of the Engine Components (LF1)	B68B Knock Sensor 2 (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
			In the rear of the passenger compartment,			<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u>

B70	Liftgate Close Switch	TB5	inside the lower right of the liftgate trim panel	Liftgate Components	B70 Liftgate Close Switch (TB5)	<u>(INDEX)</u>
B71L	Liftgate Object Sensor - Left	TB5	In the rear of the passenger compartment, inside the liftgate upper frame outer edge, to the left of the rear window	Liftgate Components	B71L Liftgate Object Sensor - Left (TB5)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B71R	Liftgate Object Sensor - Right	TB5	In the rear of the passenger compartment, inside the liftgate upper frame outer edge, to the right of the rear window	Liftgate Components	B71R Liftgate Object Sensor - Right (TB5)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B74	Manifold Absolute Pressure Sensor	LAF	In the front of the engine compartment, at the center front of the engine, on top of the intake manifold	Front Engine Components (LAF 2 of 2)	B74 Manifold Absolute Pressure Sensor	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B74	Manifold Absolute Pressure Sensor	LF1	In the upper rear center of the engine compartment, on top of the intake manifold	Right Rear of the Engine Components (LF1)	B74 Manifold Absolute Pressure Sensor	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B75B	Mass Air Flow/Intake Air Temperature Sensor	-	In the right front of the engine compartment, in the air inlet hose	Front of the Engine Compartment Components	B75B Mass Air Flow/Intake Air Temperature Sensor	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B77F	Radio Volume Compensator Interior Noise Microphone -	VQN	In the front of the passenger compartment, in the front of the headliner,	Headliner Components	B77F Radio Volume Compensator Interior Noise Microphone -	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

	Front		near the left sunshade		Front (VQN)	
B77R	Radio Volume Compensator Interior Noise Microphone - Rear	VQN	In the front of the passenger compartment, in the front of the headliner, near the rear dome/reading lamps	Headliner Components	B77R Radio Volume Compensator Interior Noise Microphone - Rear (VQN)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B78E	Rear Object Sensor - Left Middle	UD7	Outside the vehicle, in the left center of the bumper fascia	Rear of Vehicle Components (Chevrolet) or Rear of Vehicle Components (GMC)	B78E Rear Object Sensor - Left Middle (UD7)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B78F	Rear Object Sensor - Right Middle	UD7	Outside the vehicle, in the right center of the bumper fascia	Rear of Vehicle Components (Chevrolet) or Rear of Vehicle Components (GMC)	B78F Rear Object Sensor - Right Middle (UD7)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B78G	Rear Object Sensor - Left Outer	UD7	Outside the vehicle, in the left rear corner of the bumper fascia	Rear of Vehicle Components (Chevrolet) or Rear of Vehicle Components (GMC)	B78G Rear Object Sensor - Left Outer (UD7)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B78H	Rear Object Sensor - Right Outer	UD7	Outside the vehicle, in the right rear corner of the bumper fascia	Rear of Vehicle Components (Chevrolet) or Rear of Vehicle Components (GMC)	B78H Rear Object Sensor - Right Outer (UD7)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
			In the left front			<u>COMPONENT</u>

B80	Park Brake Switch	-	of the passenger compartment, under the driver side of the instrument panel mounted to the park brake pedal assembly	Lower Left of the Instrument Panel Components	B80 Park Brake Switch	<u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B87	Rearview Camera	UVC	On the outside center rear of the vehicle, above the license plate	Rear of Vehicle Components (Chevrolet) or Rear of Vehicle Components (GMC)	B87 Rearview Camera (UVC)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B88D	Seat Belt Switch - Driver	-	In the left front of the passenger compartment, part of the driver seat belt buckle, attached to the lower right side of the driver seat	Driver Seat Components	B88D Seat Belt Switch - Driver	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B88P	Seat Belt Switch - Passenger	-	In the right front of the passenger compartment, part of the passenger seat belt buckle, attached to the lower left side of the passenger seat	Passenger Seat Components	B88P Seat Belt Switch - Passenger	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
B99	Steering Wheel Angle Sensor	-	In the left front of the passenger compartment, in the steering column, behind	Steering Column Components	B99 Steering Wheel Angle Sensor	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

			the steering wheel air bag coil			
B101	Immobilizer Antenna	-	In the left front of the passenger compartment, at the bottom of the steering column, next to the ignition switch	Steering Column Components	B101 Immobilizer Antenna	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
B107	Accelerator Pedal Position Sensor	-	In the passenger compartment, below the instrument panel on the driver side, mounted to the top of the accelerator pedal assembly	Lower Left of the Instrument Panel Components	B107 Accelerator Pedal Position Sensor	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
B119	Multi-axis Acceleration Sensor	-	In the front center passenger compartment, on the floorboard, between the front seats	Left Side of the Passenger Compartment Components	B119 Multi-axis Acceleration Sensor	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
B150	Fuel Tank Pressure Sensor	-	Under the rear of the vehicle, on top of the fuel pump and primary fuel level sensor	Fuel System Components	B150 Fuel Tank Pressure Sensor	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
C1	Battery	-	At the left front of the engine compartment, below the engine control module	Engine Compartment Components (Chevrolet) or Engine Compartment Components (GMC)	• C1 Battery - • C1 Battery - • C1 Battery +	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
			In the left front			<u>COMPONENT</u>

E1C	Accent Lamp - Driver Door Handle	TSQ	of the passenger compartment, in the driver door trim panel, below the armrest	Driver Door Components	E1C Accent Lamp - Driver Door Handle (LTZ/SLT)	<u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E1D	Accent Lamp - Driver Door	TSQ	In the left front of the passenger compartment, in the driver door trim panel, near the inside door handle	Driver Door Components	E1D Accent Lamp - Driver Door (LTZ/SLT)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E1J	Accent Lamp - Left Lower Instrument Panel	-	In the center front of the passenger compartment, on the left side of the CD slot, below the radio/HVAC controls	Right Side of the Instrument Panel Components	E1J Accent Lamp - Left Lower Instrument Panel	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E1K	Accent Lamp - Right Lower Instrument Panel	-	In the center front of the passenger compartment, on the right side of the CD slot, below the radio/HVAC controls	Right Side of the Instrument Panel Components	E1K Accent Lamp - Right Lower Instrument Panel	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E1L	Accent Lamp - Overhead Console	TSP	In the center front of the passenger compartment, near the front of the overhead console	Headliner Components	E1L Accent Lamp - Overhead Console (LT/LTZ/SLE2/SLT)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E1M	Accent Lamp - Passenger Door Handle	TSQ	In the right front of the passenger compartment, in the passenger door	Passenger Door Components	E1M Accent Lamp - Passenger Door Handle (LTZ/SLT)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

			trim panel, below the armrest			
E1P	Accent Lamp - Passenger Door	TSQ	In the right front of the passenger compartment, in the passenger door trim panel, near the inside door handle	Passenger Door Components	E1P Accent Lamp - Passenger Door (LTZ/SLT)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
E1S	Accent Lamp - Console Cupholder Right	-	In the front of the passenger compartment, in the right of the center console, between the cup holders	Right Side of the Instrument Panel Components	E1S Accent Lamp - Console Cupholder Right	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
E2LF	Side Marker Lamp - Left Front	-	Front left side of the vehicle, in the headlamp assembly, the outside upper bulb	Front of Vehicle Components (Chevrolet) or Front of Vehicle Components (GMC)	E2LF Side Marker Lamp - Left Front	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
E2LR	Side Marker Lamp - Left Rear	-	Rear left side of the vehicle, in the tail lamp assembly, the outer bulb	Rear of Vehicle Components (Chevrolet) or Rear of Vehicle Components (GMC)	E2LR Side Marker Lamp - Left Rear	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
E2RF	Side Marker Lamp - Right Front	-	Front right side of the vehicle, in the headlamp assembly, the outside upper bulb	Front of Vehicle Components (Chevrolet) or Front of Vehicle Components (GMC)	E2RF Side Marker Lamp - Right Front	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>

E2RR	Side Marker Lamp - Right Rear	-	Rear right side of the vehicle, in the tail lamp assembly, the outer bulb	Rear of Vehicle Components (Chevrolet) or Rear of Vehicle Components (GMC)	E2RR Side Marker Lamp - Right Rear	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E4E	Head Lamp - Left High Beam	-	Front left side of the vehicle, the lower inside bulb in the headlamp assembly	Front of Vehicle Components (Chevrolet) or Front of Vehicle Components (GMC)	E4E Head Lamp - Left High Beam	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E4F	Head Lamp - Right High Beam	-	Front right side of the vehicle, the lower inside bulb in the headlamp assembly	Front of Vehicle Components (Chevrolet) or Front of Vehicle Components (GMC)	E4F Head Lamp - Right High Beam	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E4G	Head Lamp - Left Low Beam	-	Front left side of the vehicle, the lower outside light bulb in the headlamp assembly	Front of Vehicle Components (Chevrolet) or Front of Vehicle Components (GMC)	E4G Head Lamp - Left Low Beam	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E4H	Head Lamp - Right Low Beam	-	Front right side of the vehicle, the lower outside light bulb in the headlamp assembly	Front of Vehicle Components (Chevrolet) or Front of Vehicle Components (GMC)	E4H Head Lamp - Right Low Beam	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
			Front left side	Front of Vehicle		<u>COMPONENT CONNECTOR</u>

E4N	Park/Turn Signal Lamp - Left	-	of the vehicle, the upper inside bulb in the headlamp assembly	Components (Chevrolet) or Front of Vehicle Components (GMC)	E4N Park/Turn Signal Lamp - Left	<u>END VIEWS (INDEX)</u>
E4P	Park/Turn Signal Lamp - Right	-	Front right side of the vehicle, the upper inside bulb in the headlamp assembly	Front of Vehicle Components (Chevrolet) or Front of Vehicle Components (GMC)	E4P Park/Turn Signal Lamp - Right	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
E5A	Backup Lamp - Left	Chevrolet	Outside left rear of the vehicle, the upper bulb in the tail lamp assembly	Rear of Vehicle Components (Chevrolet)	E5A Backup Lamp - Left	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
E5A	Backup Lamp - Left	GMC	Outside left rear of the vehicle, inner bulb in the left liftgate tail lamp assembly	Rear of Vehicle Components (GMC)	E5A Backup Lamp - Left	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
E5AC	Tail/Turn Signal Lamp - Left	Chevrolet	Rear left side of the vehicle, the lower bulb in the tail lamp assembly	Rear of Vehicle Components (Chevrolet)	E5AC Tail/Turn Signal Lamp - Left	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
E5AC	Tail/Turn Signal Lamp - Left	GMC	Rear left side of the vehicle, in the middle of the D pillar	Rear of Vehicle Components (GMC)	E5AC Tail/Turn Signal Lamp - Left	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
E5AD	Tail/Turn Signal Lamp - Right	Chevrolet	Rear right side of the vehicle, the lower bulb in the tail lamp assembly	Rear of Vehicle Components (Chevrolet)	E5AD Tail/Turn Signal Lamp - Right	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
E5AD	Tail/Turn Signal Lamp - Right	GMC	Rear right side of the vehicle, in the middle of the D pillar	Rear of Vehicle Components (GMC)	E5AD Tail/Turn Signal Lamp - Right	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
			Outside right			<u>COMPONENT</u>

E5B	Backup Lamp - Right	Chevrolet	rear of the vehicle, the upper bulb in the tail lamp assembly	Rear of Vehicle Components (Chevrolet)	E5B Backup Lamp - Right	<u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E5B	Backup Lamp - Right	GMC	Outside right rear of the vehicle, inner bulb in the left liftgate tail lamp assembly	Rear of Vehicle Components (GMC)	E5B Backup Lamp - Right	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E5J	Tail Lamp - Left Lower	GMC	Outside left center of the liftgate, lower bulb in the left liftgate tail lamp assembly	Rear of Vehicle Components (GMC)	E5J Tail Lamp - Left Lower (GMC)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E5K	Tail Lamp - Right Lower	GMC	Outside right center of the liftgate, lower bulb in the right liftgate tail lamp assembly	Rear of Vehicle Components (GMC)	E5K Tail Lamp - Right Lower (GMC)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E5M	Tail Lamp - Left Upper	GMC	Outside left center of the liftgate, upper bulb in the left liftgate tail lamp assembly	Rear of Vehicle Components (GMC)	E5M Tail Lamp - Left Upper (GMC)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E5N	Tail Lamp - Right Upper	GMC	Outside right center of the liftgate, upper bulb in the right liftgate tail lamp assembly	Rear of Vehicle Components (GMC)	E5N Tail Lamp - Right Upper (GMC)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E6	Center High Mounted Stop Lamp	-	Outside the rear of the vehicle, at the top center of the liftgate	Rear of Vehicle Components (Chevrolet) or Rear of Vehicle Components (GMC)	E6 Center High Mounted Stop Lamp	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
				Rear of		<u>COMPONENT</u>

E7L	License Plate Lamp - Left	-	On the outside center rear of the vehicle, above the license plate	Vehicle Components (Chevrolet) or Rear of Vehicle Components (GMC)	E7L License Plate Lamp - Left	<u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E7R	License Plate Lamp - Right	-	On the outside center rear of the vehicle, above the license plate	Rear of Vehicle Components (Chevrolet) or Rear of Vehicle Components (GMC)	E7R License Plate Lamp - Right	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E8J	Instrument Panel Courtesy Lamp - Left	-	In the left front of the passenger compartment, in the left kick panel	Left Side of the Instrument Panel Components	E8J Instrument Panel Courtesy Lamp - Left (LTZ/SLT)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E8K	Instrument Panel Courtesy Lamp - Right	-	In the right front of the passenger compartment, in the right kick panel	Right Side of the Instrument Panel Components	E8K Instrument Panel Courtesy Lamp - Right (LTZ/SLT)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E14A	Seat Heating Element - Driver Back	KA1 or SPO Accessory	In the left front of the passenger compartment, below the driver seat back cushion cover	Driver Seat Components	E14A Seat Heating Element - Driver Back (KA1 or SPO Accessory)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E14B	Seat Heating Element - Driver Cushion	KA1 or SPO Accessory	In the left front of the passenger compartment, below the driver seat cushion cover	Driver Seat Components	E14B Seat Heating Element - Driver Cushion (KA1 or SPO Accessory)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
	Seat Heating	KA1 or	In the right front of the passenger compartment,	Passenger	E14C Seat Heating Element - Passenger	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

E14C	Element - Passenger Back	SPO Accessory	below the passenger seat back cushion cover	Seat Components	Back (KA1 or SPO Accessory)	
E14D	Seat Heating Element - Passenger Cushion	KA1 or SPO Accessory	In the right front of the passenger compartment, below the passenger seat cushion cover	Passenger Seat Components	E14D Seat Heating Element - Passenger Cushion (KA1 or SPO Accessory)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E18	Rear Defogger Grid	-	In the rear of the passenger compartment, on the inside of the rear window	Liftgate Components	E18 Rear Defogger Grid X1 or E18 Rear Defogger Grid X2	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E28	Center Console Compartment Lamp	TSP or TSQ	In the center front of the passenger compartment, inside the center console compartment	Right Side of Instrument Panel - Center Console and HVAC System	E28 Center Console Compartment Lamp (LT/LTZ/SLE2/SLT)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E29LF	Fog Lamp - Left Front	T96	Outside left front of the vehicle, on the left side of the front bumper	Front of Vehicle Components (Chevrolet) or Front of Vehicle Components (GMC)	E29LF Fog Lamp - Left Front (T96)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E29RF	Fog Lamp - Right Front	T96	Outside right front of the vehicle, on the right side of the front bumper	Front of Vehicle Components (Chevrolet) or Front of Vehicle Components (GMC)	E29RF Fog Lamp - Right Front (T96)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
E37EL	Dome/Reading Lamps - Front Overhead Console Left	-	In the front of the passenger compartment, in the overhead console	Headliner Components	E37EL Dome/Reading Lamps - Front Overhead Console Left	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

E37ER	Dome/Reading Lamps - Front Overhead Console Right	-	In the front of the passenger compartment, in the overhead console	Headliner Components	E37ER Dome/Reading Lamps - Front Overhead Console Right	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
E37M	Dome/Reading Lamps - Middle	-	In the center of the passenger compartment, in the center of the headliner	Headliner Components	E37M Dome/Reading Lamps - Middle	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
E37R	Dome/Reading Lamps - Rear	-	In the rear of the passenger compartment, near the rear of the headliner	Headliner Components	E37R Dome/Reading Lamps - Rear	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
F105	Passenger Instrument Panel Air Bag	-	In the right front of the passenger compartment, in the right side of the instrument panel, above the instrument panel compartment	Lower Right of the Instrument Panel Components	F105 Passenger Instrument Panel Air Bag X1 or F105 Passenger Instrument Panel Air Bag X2	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
F105L	Roof Rail Air Bag - Left	-	In the left front of the passenger compartment, on the left side of the roof, above the driver and left rear door openings	Left Side of the Passenger Compartment Components	F105L Roof Rail Air Bag - Left	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
F105R	Roof Rail Air Bag - Right	-	In the right front of the passenger compartment, on the right side of the roof, above the passenger and right rear door openings	Left Side of the Passenger Compartment Components	F105R Roof Rail Air Bag - Right	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
			In the left front			<u>COMPONENT</u>

F106L	Side Air Bag - Left	-	of the passenger compartment, mounted in the left side of the driver seat	Driver Seat Components	F106L Side Air Bag - Left	<u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
F106R	Side Air Bag - Right	-	In the right front of the passenger compartment, mounted in the right side of the passenger seat back	Passenger Seat Components	F106R Side Air Bag - Right	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
F107	Steering Wheel Air Bag	-	In the left front of the passenger compartment, in the center of the steering wheel	Right Side of the Instrument Panel Components	F107 Steering Wheel Air Bag X1 or F107 Steering Wheel Air Bag X2	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
F112D	Seat Belt Retractor Pretensioner - Driver	-	In the left front of the passenger compartment, at the bottom of the left B-pillar	Left Side of the Passenger Compartment Components	F112D Seat Belt Retractor Pretensioner - Driver	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
F112P	Seat Belt Retractor Pretensioner - Passenger	-	In the right front of the passenger compartment, at the bottom of the right B-pillar	Left Side of the Passenger Compartment Components	F112P Seat Belt Retractor Pretensioner - Passenger	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
F113D	Seat Belt Anchor Pretensioner - Driver	-	In the passenger compartment, on the lower left side of the driver seat, mounted to the seat rack	Driver Seat Components	F113D Seat Belt Anchor Pretensioner - Driver	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
F113P	Seat Belt Anchor	-	In the left front of the passenger compartment, on the lower	Passenger Seat	F113P Seat Belt Anchor Pretensioner	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

	Pretensioner - Passenger		left side of the passenger seat, mounted to the seat rack	Components	- Passenger	
G6	Brake Booster Pump - Auxiliary	LAF	In the front of the engine compartment, to the left of the A/C compressor	Front of the Engine Compartment Components	G6 Brake Booster Pump - Auxiliary	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
G6	Brake Booster Pump - Auxiliary	LF1	In the left rear of the engine compartment, at the left rear of the engine, below the brake master cylinder	Front of the Engine Compartment Components	G6 Brake Booster Pump - Auxiliary	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
G10	Cooling Fan Motor	LAF	In the right front of the engine compartment, mounted to the cooling fan shroud, on the rear of the radiator assembly	Front of the Engine Compartment Components	G10 Cooling Fan Motor (LAF)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
G10L	Cooling Fan Motor - Left	LF1	In the engine compartment, mounted to the cooling fan shroud, on the left rear of the radiator assembly	Front of the Engine Compartment Components	G10L Cooling Fan Motor - Left (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
G10R	Cooling Fan Motor - Right	LF1	In the engine compartment, mounted to the upper right of the cooling fan shroud, on the right rear of the radiator assembly	Front of the Engine Compartment Components	G10R Cooling Fan Motor - Right (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
			In the right front of the			<u>COMPONENT CONNECTOR</u>

G13	Generator	LAF	engine compartment, right front corner of the engine, above the A/C compressor	Front Engine Components (LAF 1 of 2)	G13 Generator X1 or G13 Generator X2	<u>END VIEWS</u> <u>(INDEX)</u>
G13	Generator	LF1	In the right front of the engine compartment, right front corner of the engine, above the A/C compressor	Left Front of the Engine Components (LF1)	G13 Generator X1 or G13 Generator X2	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
G18	High Pressure Fuel Pump	LAF	In the left front of the engine compartment, behind the camshaft cover near cylinder #4	Front Engine Components (LAF 1 of 2)	G18 High Pressure Fuel Pump	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
G18	High Pressure Fuel Pump	LF1	In the left front of the engine compartment, at the left side of the engine, near G112	Left Front of the Engine Components (LF1)	G18 High Pressure Fuel Pump	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
G24	Windshield Washer Pump	-	In the lower left front corner of the vehicle, behind the front bumper	Engine Compartment Components (Chevrolet) or Engine Compartment Components (GMC)	G24 Windshield Washer Pump	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
K8	Blower Motor Control Module	-	In the right front of the passenger compartment, below the instrument panel, on the bottom of the blower unit	Right Side of Instrument Panel - Center Console and HVAC System	K8 Blower Motor Control Module X1 or K8 Blower Motor Control Module X2	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

K9	Body Control Module	-	In the left front of the passenger compartment, at the lower left of the instrument panel	Lower Left of the Instrument Panel Components	• K9 Body Control Module X1 • K9 Body Control Module X2 • K9 Body Control Module X3 • K9 Body Control Module X4 • K9 Body Control Module X5 • K9 Body Control Module X6 • K9 Body Control Module X7	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
K17	Electronic Brake Control Module	-	Left rear of the engine compartment, below the underhood fuse block	Engine Compartment Components (Chevrolet) or Engine Compartment Components (GMC)	K17 Electronic Brake Control Module	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
K20	Engine Control Module	-	At the left front of the engine compartment, in front of the underhood fuse block, above	Front of the Engine Compartment Components	• K20 Engine Control Module X1 (LAF) • K20 Engine Control Module X1 (LF1) • K20 Engine Control Module X2 (LAF) • K20 Engine Control	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>

			the battery		Module X2 (LF1) • K20 Engine Control Module X3 (LAF) • K20 Engine Control Module X3 (LF1)	
K27	Fuel Pump Control Module	-	In the left rear corner of the passenger compartment, behind the trim panel	Left Side of the Luggage Compartment Components	K27 Fuel Pump Control Module	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
K29	Seat Heating Control Module	KA1 without LTZ or SLT	In the left front of the passenger compartment, below the left front corner of the driver seat	Driver Seat Components	• K29 Seat Heating Control Module X1 (KA1) • K29 Seat Heating Control Module X2 (KA1) • K29 Seat Heating Control Module X3 (KA1)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
K29	Seat Heating Control Module	SPO Accessory	In the center front of the passenger compartment, inside the center console compartment,	-	• K29 Seat Heating Control Module X1 (SPO Accessory) • K29 Seat Heating Control Module X3 (SPO Accessory) • K29 Seat Heating	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>

			in front of the cup holder		Control Module X4 (SPO Accessory) • K29 Seat Heating Control Module X5 (SPO Accessory)	
K33	HVAC Control Module	-	In the front of the passenger compartment, in the center of the instrument panel, behind the HVAC and radio controls	Lower Right of the Instrument Panel Components	• K33 HVAC Control Module X1 (C68) • K33 HVAC Control Module X2 • K33 HVAC Control Module X3	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
K36	Inflatable Restraint Sensing and Diagnostic Module	-	In the front center of the passenger compartment, below the center console, on the floor pan under the shift lever	Left Side of the Passenger Compartment Components	K36 Inflatable Restraint Sensing and Diagnostic Module X1 or K36 Inflatable Restraint Sensing and Diagnostic Module X2	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
K39	Liftgate Control Module	TB5	In the rear of the passenger compartment, inside the lower middle of the liftgate, above the liftgate latch assembly	Liftgate Components	• K39 Liftgate Control Module X1 (TB5) • K39 Liftgate Control Module X2 (TB5) • K39 Liftgate Control Module X3 (TB5)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
					• K40 Seat Memory Control Module X1	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

K40	Seat Memory Control Module	LTZ or SLT	In the left front of the passenger compartment, below the front center of the driver seat	Driver Seat Components	(LTZ or SLT) • K40 Seat Memory Control Module X2 (LTZ or SLT) • K40 Seat Memory Control Module X3 (LTZ or SLT) • K40 Seat Memory Control Module X4 (LTZ or SLT) • K40 Seat Memory Control Module X5 (LTZ or SLT)	
K41	Parking Assist Control Module	UD7	In the left rear corner of the passenger compartment, in the cargo area, behind the trim panel	Left Side of the Luggage Compartment Components	• K41 Parking Assist Control Module X1 (UD7) • K41 Parking Assist Control Module X2 (UD7)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
K43	Power Steering Control Module	LAF	In the right rear of the engine compartment, inboard and behind the right front wheel	Front of the Engine Compartment Components	• K43 Power Steering Control Module X1 (LAF) • K43 Power Steering Control Module X2 (LAF) • K43 Power Steering Control Module X3 (LAF)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
			Under the rear			<u>COMPONENT</u>

K47	Rear Differential Clutch Control Module	F46	of the vehicle, behind and to the right of the rear axle	Rear of Underbody Components	K47 Rear Differential Clutch Control Module (F46)	<u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
K73	Telematics Communication Interface Control Module	UE1	In the front center of the passenger compartment, in the center of the instrument panel	Lower Left of the Instrument Panel Components	K73 Telematics Communication Interface Control Module X1 (UE1) or K73 Telematics Communication Interface Control Module X2 (UE1)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
K77	Remote Control Door Lock Receiver	-	In the front passenger compartment, above the inside rearview mirror	Headliner Components	K77 Remote Control Door Lock Receiver	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
K85	Passenger Presence Detection Module	-	In the right front of the passenger compartment, below the passenger seat cushion cover	Passenger Seat Components	K85 Passenger Presence Detection Module	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
K96L	Mirror Control Module - Left	LTZ or SLT	In the left front of the passenger compartment, in the driver door trim panel, above the speaker	Driver Door Components	K96 Mirror Control Module (LTZ or SLT)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
K108	Active Noise Cancellation Module	VQN	In the front of the passenger compartment, center of the instrument panel, near the center speaker	Left Side of the Instrument Panel Components	K108 Active Noise Cancellation Module (VQN)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
M6	Air Temperature Door Actuator	-	In the front of the passenger compartment, at the center of the HVAC	Right Side of Instrument Panel - Center Console and HVAC	M6 Air Temperature Door Actuator	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

			module	System		
M8	Blower Motor	-	In the right front of the passenger compartment, below the instrument panel, to the right of the HVAC module	Right Side of Instrument Panel - Center Console and HVAC System	M8 Blower Motor	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
M17	Liftgate Motor Assembly	TB5	In the rear of the passenger compartment, in the left rear of the cargo area, above the fuel pump control module	Left Side of the Luggage Compartment Components	M17 Liftgate Motor Assembly	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
M37	Mode Door Actuator	-	In the front of the passenger compartment, below the instrument panel, mounted to the left side of the HVAC module	Right Side of Instrument Panel - Center Console and HVAC System	M37 Mode Door Actuator	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
M45	Rear Wiper Motor	-	In the rear of the passenger compartment, inside the center of the liftgate, below the rear window	Liftgate Components	M45 Rear Wiper Motor	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
M46	Air Recirculation Door Motor	-	In the front of the passenger compartment, in the center left of the instrument panel, mounted to the center of the HVAC module	Right Side of Instrument Panel - Center Console and HVAC System	M46 Air Recirculation Door Motor	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
			In the left front of the			<u>COMPONENT CONNECTOR</u>

M50D	Seat Front Vertical Motor - Driver	AE8	passenger compartment, below the right front corner of the driver seat	Driver Seat Components	M50D Seat Front Vertical Motor - Driver (AE8)	<u>END VIEWS</u> <u>(INDEX)</u>
M51D	Seat Horizontal Motor - Driver	AE8	In the left front of the passenger compartment, below the center of the driver seat	Driver Seat Components	M51D Seat Horizontal Motor - Driver (AE8)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
M52D	Seat Lumbar Support Horizontal Motor - Driver	-	In the left front of the passenger compartment, in the driver seat back	Driver Seat Components	M52D Seat Lumbar Support Horizontal Motor - Driver	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
M55D	Seat Rear Vertical Motor - Driver	-	In the left front of the passenger compartment, below the center of the driver seat	Driver Seat Components	M55D Seat Rear Vertical Motor - Driver	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
M56D	Seat Recline Motor - Driver	AE8	In the left front of the passenger compartment, in the lower right side of the driver seat back	Driver Seat Components	M56D Seat Recline Motor - Driver (AE8)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
M64	Starter Motor	LAF	In the lower left front of the engine compartment, at the lower left front of the engine front	Front Engine Components (LAF 1 of 2)	• M64 Starter Motor X1 • M64 Starter Motor X2 (Positive Battery Cable) (LAF) • M64 Starter Motor X2 (Generator Harness) (LAF)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
					• M64 Starter Motor X1	<u>COMPONENT CONNECTOR</u>

M64	Starter Motor	LF1	In the lower right front of the engine compartment, at the lower right front of the engine block	Left Front of the Engine Components (LF1)	• M64 Starter Motor X2 (Positive Battery Cable) (LF1) • M64 Starter Motor X2 (Generator Harness) (LF1)	<u>END VIEWS (INDEX)</u>
M69	Sunroof Motor	CF5	In the center of the passenger compartment, above the headliner, behind the sunroof	Headliner Components	M69 Sunroof Motor (CF5)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
M74D	Window Motor - Driver	-	In the left front of the passenger compartment, in the driver door	Driver Door Components	M74D Window Motor - Driver	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
M74LR	Window Motor - Left Rear	-	In the left rear of the passenger compartment, in the left rear door	Left Rear Door Components	M74LR Window Motor - Left Rear	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
M74P	Window Motor - Passenger	-	In the right front of the passenger compartment, in the passenger door	Passenger Door Components	M74P Window Motor - Passenger	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
M74RR	Window Motor - Right Rear	-	In the right rear of the passenger compartment, in the right rear door	Right Rear Door Components	M74RR Window Motor - Right Rear	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
M75	Windshield Wiper Motor	-	In the left rear of the engine compartment, under the	Engine Compartment Components (Chevrolet) or	M75 Windshield Wiper Motor	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>

			cowling, below the air inlet grill panel	Engine Compartment Components (GMC)		
M93	Ignition Cylinder Lock Control Solenoid Actuator	-	In the left front passenger compartment, on the right side of the steering column, next to the ignition switch	Steering Column Components	M93 Ignition Cylinder Lock Control Solenoid Actuator	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
P2	Transmission Shift Lever Position Indicator	-	In the passenger compartment, in the center console, below the transmission shift lever	Left Side of the Instrument Panel Components	P2 Transmission Shift Lever Position Indicator	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
P12A	Horn - High Note	-	In the engine compartment, in the lower right front corner of the vehicle, behind the front bumper	Engine Compartment Components (Chevrolet) or Engine Compartment Components (GMC)	P12A Horn - High Note	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
P12B	Horn - Low Note	-	In the engine compartment, in the lower left front corner of the vehicle, behind the front bumper	Engine Compartment Components (Chevrolet) or Engine Compartment Components (GMC)	P12B Horn - Low Note	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
P14	Passenger Air Bag Disable Indicator	-	In the front of the passenger compartment, at the front of the overhead console	Headliner Components	P14 Passenger Air Bag Disable Indicator	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
			In the rear of the passenger			<u>COMPONENT CONNECTOR</u>

P15	Rear Parking Assist Rear Indicators	UD7	compartment, in the rear center of the headliner	Headliner Components	P15 Rear Parking Assist Rear Indicators (UD7)	<u>END VIEWS (INDEX)</u>
P16	Instrument Cluster	-	In the left front of the passenger compartment, driver side of the instrument panel, above the steering column	Left Side of the Instrument Panel Components	P16 Instrument Cluster	<u>COMPONENT CONNECTOR</u> <u>END VIEWS (INDEX)</u>
P17	Info Display Module	-	In the front of the passenger compartment, center of the instrument panel, above the radio/HVAC controls	Left Side of the Instrument Panel Components	P17 Info Display Module (UYS or PCJ) or P17 Info Display Module (without UYS or PCJ)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS (INDEX)</u>
P19AC	Speaker - Subwoofer	UZ8	In the rear of the passenger compartment, in the right rear of the cargo area	Right Side of the Luggage Compartment Components	P19AC Speaker - Subwoofer (UZ8)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS (INDEX)</u>
P19B	Speaker - Center Instrument Panel	UZ8	In the front of the passenger compartment, in the center of the instrument panel cover	Left Side of the Instrument Panel Components	P19B Speaker - Center Instrument Panel (UZ8)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS (INDEX)</u>
P19G	Speaker - Left Front	-	In the left front of the passenger compartment, behind the left front door trim panel	Driver Door Components	P19G Speaker - Left Front (UW6) or P19G Speaker - Left Front (UZ8)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS (INDEX)</u>
P19H	Speaker - Left Front Tweeter	-	In the left front of the passenger compartment, behind the left A-pillar trim	Right Side of the Instrument Panel Components	P19H Speaker - Left Front Tweeter	<u>COMPONENT CONNECTOR</u> <u>END VIEWS (INDEX)</u>

			panel			
P19K	Speaker - Left Rear	-	In the left rear of the passenger compartment, behind the left rear door trim panel	Left Rear Door Components	P19K Speaker - Left Rear (UW6) or P19K Speaker - Left Rear (UZ8)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
P19U	Speaker - Right Front	-	In the right front of the passenger compartment, behind the right front door trim panel	Passenger Door Components	P19U Speaker - Right Front (UW6) or P19U Speaker - Right Front (UZ8)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
P19V	Speaker - Right Front Tweeter	-	In the right front of the passenger compartment, behind the left A-pillar trim panel	Left Side of the Instrument Panel Components	P19V Speaker - Right Front Tweeter	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
P19X	Speaker - Right Rear	-	In the right rear of the passenger compartment, behind the right rear door trim panel	Right Rear Door Components	P19X Speaker - Right Rear (UW6) or P19X Speaker - Right Rear (UZ8)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
P22E	Video Display - Driver Seatback	UWG	In the left front of the passenger compartment, mounted in the rear of the driver seat back, below the headrest	Driver Seat Components	P22E Video Display - Driver Seatback (UWG)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
P22F	Video Display - Passenger Seatback	UWG	In the right front of the passenger compartment, mounted in the rear of the passenger seat back, below the headrest	Passenger Seat Components	P22F Video Display - Passenger Seatback (UWG)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>

Q2	A/C Compressor Clutch	-	In the right front of the engine compartment, at the right front corner of the engine, attached to the A/C Compressor	Front Engine Components (LAF 1 of 2)	Q2 A/C Compressor Clutch	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
Q2	A/C Compressor Clutch	-	In the right front of the engine compartment, at the right front corner of the engine, attached to the A/C Compressor	Left Front of the Engine Components (LF1)	Q2 A/C Compressor Clutch	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
Q6A	Camshaft Position Actuator Solenoid Valve - Bank 1 Exhaust	LF1	Right rear of the engine, to the right of the bank 1 intake camshaft position actuator solenoid valve	Right Rear of the Engine Components (LF1)	Q6A Camshaft Position Actuator Solenoid Valve - Bank 1 Exhaust (LF1)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
Q6B	Camshaft Position Actuator Solenoid Valve - Bank 1 Intake	LF1	Right rear of the engine, to the left of the bank 1 exhaust camshaft position actuator solenoid valve	Right Rear of the Engine Components (LF1)	Q6B Camshaft Position Actuator Solenoid Valve - Bank 1 Intake (LF1)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
Q6C	Camshaft Position Actuator Solenoid Valve - Bank 2 Exhaust	LF1	Right front of the engine, to the left of the bank 2 intake camshaft actuator solenoid valve	Right Rear of the Engine Components (LF1)	Q6C Camshaft Position Actuator Solenoid Valve - Bank 2 Exhaust (LF1)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
Q6D	Camshaft Position Actuator	LF1	Right front of the engine, to the right of the bank 2 exhaust	Right Rear of the Engine Components	Q6D Camshaft Position Actuator Solenoid Valve -	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>

	Solenoid Valve - Bank 2 Intake		camshaft actuator solenoid valve	(LF1)	Bank 2 Intake (LF1)	
Q6E	Camshaft Position Actuator Solenoid Valve - Exhaust	LAF	In the right front of the engine compartment, at the top of the engine, near ignition coil 1	Left Rear Engine Components (LAF)	Q6E Camshaft Position Actuator Solenoid Valve - Exhaust (LAF)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
Q6F	Camshaft Position Actuator Solenoid Valve - Intake	LAF	In the right front of the engine compartment, at the top of the engine, near ignition coil 1	Left Rear Engine Components (LAF)	Q6F Camshaft Position Actuator Solenoid Valve - Intake (LAF)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
Q8	Control Solenoid Valve Assembly	-	In the left front of the engine compartment, inside the transmission	Automatic Transmission Electronic Components	• Q8 Control Solenoid Valve Assembly X1 (MH7 or MHC) • Q8 Control Solenoid Valve Assembly X1 (MH2 or MH4) • Q8 Control Solenoid Valve Assembly X2 • Q8 Control Solenoid Valve Assembly X3 • Q8 Control Solenoid Valve Assembly X4	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
Q12	Evaporative Emission Purge Solenoid Valve	LAF	In the left side of the engine compartment, at the upper left of the engine,	Left Rear Engine Components	Q12 Evaporative Emission Purge Solenoid Valve	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>

			behind the camshaft cover	(LAF)	(LAF)	
Q12	Evaporative Emission Purge Solenoid Valve	LF1	In the right rear of the engine compartment, on the intake manifold, near the throttle body assembly	Right Rear of the Engine Components (LF1)	Q12 Evaporative Emission Purge Solenoid Valve (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
Q13	Evaporative Emission Vent Solenoid Valve	-	Under the vehicle, in front of the fuel tank, mounted the evaporative emission canister	Fuel System Components	Q13 Evaporative Emission Vent Solenoid Valve	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
Q17A	Fuel Injector 1	LAF	In the right front of the engine compartment, at the upper front of the engine, below the fuel rail, near cylinder #1	Front Engine Components (LAF 2 of 2)	Q17A Fuel Injector 1 (LAF)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
Q17A	Fuel Injector 1	LF1	In the right rear of the engine compartment, on top of the engine, below the intake manifold, near cylinder #1	Top of the Engine Components (LF1)	Q17A Fuel Injector 1 (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
Q17B	Fuel Injector 2	LAF	In the front of the engine compartment, at the upper front of the engine, below the fuel rail, near cylinder #2	Front Engine Components (LAF 2 of 2)	Q17B Fuel Injector 2 (LAF)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
			In the right rear of the engine compartment, on top of the	Top of the Engine	Q17B Fuel Injector 2	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

Q17B	Fuel Injector 2	LF1	engine, below the intake manifold, near cylinder #2	Components (LF1)	(LF1)	
Q17C	Fuel Injector 3	LAF	In the front of the engine compartment, at the upper front of the engine, below the fuel rail, near cylinder #3	Front Engine Components (LAF 2 of 2)	Q17C Fuel Injector 3 (LAF)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
Q17C	Fuel Injector 3	LF1	In the rear of the engine compartment, on top of the engine, below the intake manifold, near cylinder #3	Top of the Engine Components (LF1)	Q17C Fuel Injector 3 (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
Q17D	Fuel Injector 4	LAF	In the left front of the engine compartment, at the upper front of the engine, below the fuel rail, near cylinder #4	Front Engine Components (LAF 2 of 2)	Q17D Fuel Injector 4 (LAF)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
Q17D	Fuel Injector 4	LF1	In the rear of the engine compartment, on top of the engine, below the intake manifold, near cylinder #4	Top of the Engine Components (LF1)	Q17D Fuel Injector 4 (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
Q17E	Fuel Injector 5	LF1	In the left rear of the engine compartment, on top of the engine, below the intake manifold, near cylinder #5	Top of the Engine Components (LF1)	Q17E Fuel Injector 5 (LF1)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
			In the left rear			<u>COMPONENT</u>

Q17F	Fuel Injector 6	LF1	of the engine compartment, on top of the engine, below the intake manifold, near cylinder #6	Top of the Engine Components (LF1)	Q17F Fuel Injector 6 (LF1)	<u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
Q38	Throttle Body	LAF	In the right rear of the engine compartment, on top of the intake manifold	Front Engine Components (LAF 1 of 2)	Q38 Throttle Body	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
Q38	Throttle Body	LF1	In the engine compartment, at the right rear of the intake manifold	Right Rear of the Engine Components (LF1)	Q38 Throttle Body	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
R6	Data Link Resistor	-	Under the rear of the vehicle, to the right of the rear axle	Rear of Underbody Components	R6 Data Link Resistor	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
R10	Cooling Fan Motor Resistor	LAF	In the front of the engine compartment, mounted to the cooling fan shroud, on the rear of the radiator assembly	Front of the Engine Compartment Components	R10 Cooling Fan Resistor	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S3	Transmission Shift Lever	-	In the front of the passenger compartment, mounted to the floor under the center console	Left Side of the Instrument Panel Components	S3 Transmission Shift Lever	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S12	Dome Lamp Switch	-	In the front of the passenger compartment, in the center of the overhead console	Headliner Components	S12 Dome Lamp Switch	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S32D	Seat Heating Switch - Driver	SPO Accessory	In the center front of the passenger compartment, at the bottom of	-	S32D Seat Heating Switch - Driver	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

			the center stack, below the CD slot		(SPO Accessory)	
S33	Horn Switch	-	In the left front of the passenger compartment, in the steering wheel behind the steering wheel module	Steering Wheel Components	S33 Horn Switch	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S36	Instrument Panel Dimmer Switch	-	In the left front of the passenger compartment, on the instrument panel to the left of the steering wheel	Left Side of the Instrument Panel Components	S36 Instrument Panel Dimmer Switch	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S39	Ignition Switch	-	In the left front of the passenger compartment, on the right side of the steering column	Steering Column Components	S39 Ignition Switch	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S45B	Liftgate Control Switch - Interior	TB5	In the front of the passenger compartment, at the rear of the overhead console	Headliner Components	S45B Liftgate Control Switch - Interior (TB5)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S46	Liftgate Handle Switch	-	On the outside center rear of the vehicle, above the license plate	Rear of Vehicle Components (Chevrolet) or Rear of Vehicle Components (GMC)	S46 Liftgate Handle Switch	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S47D	Seat Memory	LTZ or	In the left front of the passenger compartment,	Driver Seat	S47D Seat Memory Switch - Driver	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

	Switch - Driver	SLT	on the left side of the driver seat	Components	(LTZ or SLT)	
S52	Outside Rearview Mirror Switch	-	In the left front of the passenger compartment, mounted in the driver door trim next to the power window switch assembly	Driver Door Components	S52 Outside Rearview Mirror Switch	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S64D	Seat Adjuster Switch - Driver	-	In the left front of the passenger compartment, on the left side of the driver seat	Driver Seat Components	S64D Seat Adjuster Switch - Driver (AE8 or LTZ or SLT) or S64D Seat Adjuster Switch - Driver (without AE8 or LTZ or SLT)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S65D	Seat Lumbar Support Switch - Driver	-	In the left front of the passenger compartment, on the left side of the driver seat	Driver Seat Components	S65D Seat Lumbar Support Switch - Driver	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S70L	Steering Wheel Controls Switch - Left	-	In the left front of the passenger compartment, left center of the steering wheel to the left of the steering wheel air bag	Steering Wheel Components	S70L Steering Wheel Controls Switch - Left	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S70R	Steering Wheel Controls Switch - Right	UK3	In the left front of the passenger compartment, right center of the steering wheel to the right of the	Steering Wheel Components	S70R Steering Wheel Controls Switch - Right	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

			steering wheel air bag			
S72	Sunroof Switch	CF5	In the front of the passenger compartment, in the left rear of the overhead console, to the left of the sunroof tilt switch	Headliner Components	S72 Sunroof Switch (CF5)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S75	Traction Control Switch	-	In the front of the passenger compartment, in the center console, behind the shift lever	Right Side of the Instrument Panel Components	S75 Traction Control Switch	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S78	Turn Signal/Multi-Function Switch	-	In the left front of the passenger compartment, on the left side of the steering column	Steering Column Components	S78 Turn Signal/Multifunction Switch	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S79D	Window Switch - Driver	-	In the left front of the passenger compartment, in the driver door armrest	Driver Door Components	S79D Window Switch - Driver	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S79LR	Window Switch - Left Rear	-	In the left rear of the passenger compartment, in the left rear door armrest	Left Rear Door Components	S79LR Window Switch - Left Rear	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S79P	Window Switch - Passenger	-	In the right front of the passenger compartment, in the passenger door armrest	Passenger Door Components	S79P Window Switch - Passenger X1 or S79P Window Switch - Passenger X2 (LTZ or SLT)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S79RR	Window Switch - Right	-	In the right rear of the passenger compartment,	Right Rear Door	S79RR Window Switch - Right Rear	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>

	Rear		in the right rear door armrest	Components		
S82	Windshield Wiper/Washer Switch	-	In the left front of the passenger compartment, mounted to the steering column to the right of the steering wheel	Steering Column Components	S82 Windshield Wiper/Washer Switch	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S88	Sunroof Tilt Switch	CF5	In the front of the passenger compartment, in the right rear of the overhead console, to the right of the sunroof switch	Headliner Components	S88 Sunroof Tilt Switch (CF5)	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
S112	Fuel Economy Mode Switch	LAF	In the front of the passenger compartment, at the front of the center console, in front of the transmission shift lever	Right Side of the Instrument Panel Components	S112 Fuel Economy Mode Switch	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
T3	Audio Amplifier	-	In the left front of the passenger compartment, at the lower left of the instrument panel	Lower Left of the Instrument Panel Components	• T3 Audio Amplifier X1 • T3 Audio Amplifier X2 • T3 Audio Amplifier X3	<u>COMPONENT CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
T4G	Cellular Phone, Navigation, and Digital Radio Antenna	UE1	Outside the vehicle, at the rear center of the roof	Rear of Vehicle Components (Chevrolet) or Rear of Vehicle Components (GMC)	-	-
			In the center front of the			-

T4S	Wireless Communication Antenna - Bluetooth	UE1 with UPF	passenger compartment, mounted to the right rear corner of the vehicle communication interface module	Lower Left of the Instrument Panel Components	-	
T8A	Ignition Coil 1	LAF	In the right center of the engine compartment, on top of the engine, above cylinder number 1	Left Rear Engine Components (LAF)	T8A Ignition Coil 1 (LAF)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
T8A	Ignition Coil 1	LF1	In the right rear of the engine compartment, on top of the engine, above cylinder number 1	Right Rear of the Engine Components (LF1)	T8A Ignition Coil 1 (LF1)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
T8B	Ignition Coil 2	LAF	In the center of the engine compartment, on top of the engine, above cylinder number 2	Left Rear Engine Components (LAF)	T8B Ignition Coil 2 (LAF)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
T8B	Ignition Coil 2	LF1	In the right front of the engine compartment, on top of the engine, above cylinder number 2	Left Front of the Engine Components (LF1)	T8B Ignition Coil 2 (LF1)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
T8C	Ignition Coil 3	LAF	In the center of the engine compartment, on top of the engine, above cylinder number 3	Left Rear Engine Components (LAF)	T8C Ignition Coil 3 (LAF)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
			In the center of			<u>COMPONENT</u>

T8C	Ignition Coil 3	LF1	the engine compartment, on top of the engine, above cylinder number 3	Right Rear of the Engine Components (LF1)	T8C Ignition Coil 3 (LF1)	<u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
T8D	Ignition Coil 4	LAF	In the center of the engine compartment, on top of the engine, above cylinder number 4	Left Rear Engine Components (LAF)	T8D Ignition Coil 4 (LAF)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
T8D	Ignition Coil 4	LF1	In the center of the engine compartment, on top of the engine, above cylinder number 4	Left Front of the Engine Components (LF1)	T8D Ignition Coil 4 (LF1)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
T8E	Ignition Coil 5	LF1	In the left rear of the engine compartment, on top of the engine, above cylinder number 5	Left Front of the Engine Components (LF1)	T8E Ignition Coil 5 (LF1)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
T8F	Ignition Coil 6	LF1	In the left front of the engine compartment, on top of the engine, above cylinder number 6	Left Front of the Engine Components (LF1)	T8F Ignition Coil 6 (LF1)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
T11	Multimedia Player Interface Module	KTA	In the front of the passenger compartment, near the front of the center console	Left Side of the Instrument Panel Components	T11 Multimedia Player Interface Module (KTA)	<u>COMPONENT</u> <u>CONNECTOR</u> <u>END VIEWS</u> <u>(INDEX)</u>
X50A	Fuse Block - Underhood	-	At the left rear of the engine compartment, behind the battery	Engine Compartment Components (Chevrolet) or Engine Compartment	<u>Electrical Center</u> <u>Identification Views</u>	-

				Components (GMC)		
X51A	Fuse Block - Instrument Panel	-	In the right front of the passenger compartment, in the left side of the passenger footwell	Lower Right of the Instrument Panel Components	<u>Electrical Center Identification Views</u>	-
X80A	Accessory Power Receptacle - Center Console 1	-	In the front of the passenger compartment, inside the center console compartment	Right Side of Instrument Panel - Center Console and HVAC System	X80A Accessory Power Receptacle - Center Console 1	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
X80B	Accessory Power Receptacle - Center Console 2	-	In the center of the passenger compartment, at the rear of the center console	Right Side of the Instrument Panel Components	X80B Accessory Power Receptacle - Center Console 2	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
X80G	Accessory Power Receptacle - Instrument Panel	-	In the front of the passenger compartment, at the front of the center console, below the radio/HVAC controls	Right Side of the Instrument Panel Components	X80G Accessory Power Receptacle - Instrument Panel	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
X80R	Accessory Power Receptacle - Rear Compartment	-	In the rear of the passenger compartment, at the left rear of the cargo area	Left Side of the Luggage Compartment Components	X80R Accessory Power Receptacle - Rear Compartment	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
X82	Audio/Video Input Adapter	UWG	In the center of the passenger compartment, at the rear of the center console	Right Side of Instrument Panel - Center Console and HVAC System	X82 Audio/Video Input Adapter (UWG)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
			In the	Right Side of Instrument	X82 Audio/Video Input Adapter	<u>COMPONENT CONNECTOR</u>

X83	Auxiliary Audio Input	-	passenger compartment, inside the center console compartment	Panel - Center Console and HVAC System	(UWG) or X83 Auxiliary Audio Input (without UWG)	<u>END VIEWS (INDEX)</u>
X84	Data Link Connector	-	In the front of the passenger compartment, at the lower left of the instrument panel	Lower Left of the Instrument Panel Components	X84 Data Link Connector	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
X85	Steering Wheel Air Bag Coil	-	In the left front of the passenger compartment, on the steering column behind the steering wheel	Steering Column Components	• X85 Steering Wheel Air Bag Coil X1 • X85 Steering Wheel Air Bag Coil X2 • X85 Steering Wheel Air Bag Coil X3	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
X88	Trailer Connector	V92	Outside the rear of the vehicle, next to the trailer hitch	Rear of Vehicle Components (Chevrolet) or Rear of Vehicle Components (GMC)	X88 Trailer Connector (V92)	<u>COMPONENT CONNECTOR END VIEWS (INDEX)</u>
X97	Fuse Holder - Generator	-	In the front of the engine compartment, near the generator, part of the generator harness	-	-	-
X108	Engine Harness To Fuel Injector Bank 1 Harness (6 Cavities)	LF1	In the engine compartment, at the left side of the engine, near cylinder #5	Engine Harness Routing - Right Rear (LF1)	X108 Engine Harness to Fuel Injector Bank 1 Harness (LF1)	<u>INLINE HARNESS CONNECTOR END VIEWS</u>
X109	Engine Harness To Fuel Injector Bank 2	LF1	In the engine compartment, at the left side	Engine Harness Routing -	X109 Engine Harness to Fuel	<u>INLINE HARNESS CONNECTOR</u>

	Harness (12 Cavities)		of the engine, near cylinder #5	Right Rear (LF1)	Injector Bank 2 Harness (LF1)	<u>END VIEWS</u>
X110	Forward Lamp Harness To Left Front Lamp Harness (5 Cavities)	-	In the left front of the engine compartment, behind the headlamp assembly	Front of Vehicle Harness Routing	X110 Forward Lamp Harness to Left Front Lamp Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X112	Engine Harness To Body Harness (24 Cavities)	-	In the right rear of the engine compartment, inside the right front strut tower	Front of Vehicle Harness Routing	X112 Engine Harness to Body Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X115	Forward Lamp Harness To Body Harness (16 Cavities)	-	In the left rear of the engine compartment, below the underhood fuse block	Front of Vehicle Harness Routing	X115 Forward Lamp Harness to Body Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X116	Forward Lamp Harness To Engine Fan Harness (4 Cavities)	LAF	In the right front of the engine compartment, behind the radiator shroud	Front of Vehicle Harness Routing	X116 Forward Lamp Harness to Engine Cooling Fan Harness (LAF)	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X116	Forward Lamp Harness To Right Engine Fan Harness (2 Cavities)	LF1	In the right front of the engine compartment, behind the radiator shroud	Front of Vehicle Harness Routing	X116 Forward Lamp Harness to Engine Cooling Fan Harness (LF1)	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X120	Forward Lamp Harness To Right Front Lamp Harness (5 Cavities)	-	In the engine compartment, at the right front of the vehicle, behind the headlamp assembly	Front of Vehicle Harness Routing	X120 Forward Lamp Harness to Right Front Lamp Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X121	Body Harness To Negative Battery Cable Harness (2 Cavities)	-	In the left rear of the engine compartment, below X115	Front of Vehicle Harness Routing	X121 Body Harness to Negative Battery Cable Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
	Engine Harness		In the engine compartment,	Engine	X136 Engine	<u>INLINE HARNESS</u>

X136	To Fuel Injector Harness (12 Cavities)	LAF	at the right front of the engine, above the generator	Harness Routing - Top (LAF)	Harness to Fuel Injector Harness (LAF)	<u>CONNECTOR</u> <u>END VIEWS</u>
X203	Air Bag Extension Harness To Instrument Panel Harness (4 Cavities)	-	In the right front of the passenger compartment, to the right of the instrument panel air bag	Instrument Panel Harness Routing - Rear	X203 Airbag Extension Harness to Instrument Panel Harness	<u>INLINE</u> <u>HARNESS</u> <u>CONNECTOR</u> <u>END VIEWS</u>
X206	Body Harness To Instrument Panel Harness (43 Cavities)	-	In the left front of the passenger compartment, below the left side of the instrument panel	Instrument Panel Harness Routing - Front	X206 Body Harness to Instrument Panel Harness	<u>INLINE</u> <u>HARNESS</u> <u>CONNECTOR</u> <u>END VIEWS</u>
X209	Instrument Panel Harness To Headliner Harness (10 Cavities)	-	In the right front of the passenger compartment, in the right A-pillar	Instrument Panel Harness Routing - Front	X209 Instrument Panel Harness to Headliner Harness	<u>INLINE</u> <u>HARNESS</u> <u>CONNECTOR</u> <u>END VIEWS</u>
X210	Instrument Panel Harness To Body Harness (26 Cavities)	-	In the right front of the passenger compartment, behind the right kick panel	Instrument Panel Harness Routing - Front	X210 Instrument Panel Harness to Body Harness	<u>INLINE</u> <u>HARNESS</u> <u>CONNECTOR</u> <u>END VIEWS</u>
X211	Console Harness To Instrument Panel Harness (38 Cavities)	-	In the front passenger compartment, under the front of the center console	Instrument Panel Harness Routing - Front	X211 Console Harness to Instrument Panel Harness	<u>INLINE</u> <u>HARNESS</u> <u>CONNECTOR</u> <u>END VIEWS</u>
X213	Instrument Panel Harness To HVAC Extension Harness (16 Cavities)	-	In the right front of the passenger compartment, below the instrument panel, at the right side of the HVAC module	Instrument Panel Harness Routing - Rear	X213 Instrument Panel Harness to POA HVAC Extension Harness	<u>INLINE</u> <u>HARNESS</u> <u>CONNECTOR</u> <u>END VIEWS</u>
			In the front of			<u>INLINE</u>

X214	Console Harness To CD Slot Pigtail Harness (2 Cavities)	-	the passenger compartment, at the front of the center console	Instrument Panel Harness Routing - Front	X214 Console Harness to CD Slot Extension Harness	<u>HARNESS CONNECTOR END VIEWS</u>
X215	Console Harness to SPO Seat Heating Power Extension Harness (3 Cavities)	SPO Accessory	In the front of the passenger compartment, inside the front of the center console, below the radio/HVAC controls	-	X215 Console Harness to SPO Seat Heating Power Extension Harness (SPO Accessory)	<u>INLINE HARNESS CONNECTOR END VIEWS</u>
X300	Headliner Harness To Body Harness (4 Cavities)	-	In the left front of the passenger compartment, in the left A-pillar	Front of Vehicle Harness Routing	X300 Headliner Harness to Body Harness	<u>INLINE HARNESS CONNECTOR END VIEWS</u>
X302	Driver Seat Cushion Harness To Driver Seat Back Harness (14 Cavities)	-	In the left front of the passenger compartment, under the driver seat cushion	-	X302 Driver Seat Cushion Harness to Driver Seat Back Harness	<u>INLINE HARNESS CONNECTOR END VIEWS</u>
X303	Passenger Seat Back Harness To Passenger Seat Cushion Harness (4 Cavities)	-	In the right front of the passenger compartment, under the passenger seat cushion	-	X303 Passenger Seat Back Harness to Passenger Seat Cushion Harness	<u>INLINE HARNESS CONNECTOR END VIEWS</u>
X304	Driver Seat Back Harness To Driver Seat Cushion Harness (4 Cavities)	-	In the left front of the passenger compartment, under the driver seat cushion	-	X304 Driver Seat Back Harness to Driver Seat Cushion Harness	<u>INLINE HARNESS CONNECTOR END VIEWS</u>
X307	Driver Seat Back Harness To Instrument Panel Harness (20 Cavities)	UWG	In the left front of the passenger compartment, on the floor under the	Instrument Panel Harness Routing - Front	X307 Driver Seat Back Harness to Instrument Panel Harness (UWG)	<u>INLINE HARNESS CONNECTOR END VIEWS</u>

			driver seat			
X308	Body Harness To Driver Seat Cushion Harness (16 Cavities)	-	In the left front of the passenger compartment, on the floor under the driver seat	Passenger Compartment Harness Routing	X308 Body Harness to Driver Seat Cushion Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X309	Passenger Seat Back Harness To Instrument Panel Harness (16 Cavities)	UWG	In the right front of the passenger compartment, on the floor under the passenger seat	Instrument Panel Harness Routing - Rear	X309 Passenger Seat Back Harness to Instrument Panel Harness (UWG)	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X310	Body Harness To Passenger Seat Cushion Harness (16 Cavities)	-	In the right front of the passenger compartment, on the floor under the passenger seat	Passenger Compartment Harness Routing	X310 Body Harness to Passenger Seat Cushion Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X315	Headliner Harness To Overhead Console Harness (4 Cavities)	-	In the front of the passenger compartment, at the front of the headliner	Passenger Compartment Harness Routing	X315 Headliner Harness to Overhead Console Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X316	Overhead Console Harness to Dome/Reading Lamps Harness (4 Cavities)	-	In the front of the passenger compartment, in the overhead console	Passenger Compartment Harness Routing	X316 Overhead Console Harness to Dome/Reading Lamps Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X401	Headliner Harness To Body Harness (38 Cavities)	-	In the right rear of the passenger compartment, in the right D-pillar	Passenger Compartment Harness Routing	X401 Headliner Harness to Body Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X405	Body Harness To Fuel Tank Harness (14 Cavities)	-	Under the vehicle, near the left rear wheel	Rear of Vehicle Harness Routing (Chevrolet)	X405 Body Harness to POA Fuel Tank Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
	Body Harness To Rear		Under the left rear of the	Passenger	X406 Body Harness	<u>INLINE HARNESS</u>

X406	Bumper Harness (6 Cavities)	UD7	vehicle, below the left tail lamp assembly	Compartment Harness Routing	to Rear Bumper Harness (UD7)	<u>CONNECTOR</u> <u>END VIEWS</u>
X407	Body Harness To Left Rear Lamp Harness (4 Cavities)	-	Outside the left rear of the vehicle, behind the tail lamp assembly	Passenger Compartment Harness Routing	X407 Body Harness to Left Rear Lamp Harness	<u>INLINE</u> <u>HARNES</u> <u>CONNECTOR</u> <u>END VIEWS</u>
X408	Body Harness To Right Rear Lamp Harness (4 Cavities)	-	Outside the right rear of the vehicle, behind the tail lamp assembly	Passenger Compartment Harness Routing	X408 Body Harness to Right Rear Lamp Harness	<u>INLINE</u> <u>HARNES</u> <u>CONNECTOR</u> <u>END VIEWS</u>
X411	Body Harness To Chassis Harness (14 Cavities)	-	Under the rear of the vehicle, behind and to the left of the fuel tank	Rear of Vehicle Harness Routing (Chevrolet)	X411 Body Harness to Chassis Harness	<u>INLINE</u> <u>HARNES</u> <u>CONNECTOR</u> <u>END VIEWS</u>
X416	Headliner Harness To Sunroof Harness (14 Cavities)	CF5	In the right rear of the passenger compartment, in the right D-pillar	-	X416 Headliner Harness to POA Sunroof Harness (CF5)	<u>INLINE</u> <u>HARNES</u> <u>CONNECTOR</u> <u>END VIEWS</u>
X444	Trailer Extension Harness To Body Harness (4 Cavities)	V92	In the left rear of the passenger compartment, in the left rear of the cargo area, next to the fuel pump control module	Passenger Compartment Harness Routing	X444 Trailer Extension Harness to Body Harness (V92)	<u>INLINE</u> <u>HARNES</u> <u>CONNECTOR</u> <u>END VIEWS</u>
X450	Trailer Pigtail Harness To Trailer Extension Harness (4 Cavities)	V92	Under the center rear of the vehicle, behind the rear bumper	Rear of Vehicle Harness Routing (Chevrolet)	X450 Trailer Pigtail Harness to Trailer Extension Harness (V92)	<u>INLINE</u> <u>HARNES</u> <u>CONNECTOR</u> <u>END VIEWS</u>
X500	Body Harness To Driver Door Harness (28 Cavities)	-	In the left front of the passenger compartment, near the left front door hinge	Passenger Compartment Harness Routing	X500 Body Harness to Driver Door Harness	<u>INLINE</u> <u>HARNES</u> <u>CONNECTOR</u> <u>END VIEWS</u>
			In the left front			<u>INLINE</u>

X505	Driver Door Harness To Driver Door Trim Harness (22 Cavities)	-	of the passenger compartment, inside the front of the driver door trim panel	Driver Door Harness Routing	X505 Driver Door Harness to Driver Door Trim Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X600	Body Harness To Passenger Door Harness (28 Cavities)	-	In the right front of the passenger compartment, near the right front door hinge	Passenger Door Harness Routing	X600 Body Harness to Passenger Door Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X605	Passenger Door Harness To Passenger Door Trim Harness (22 Cavities)	-	In the right front of the passenger compartment, inside the front of the passenger door trim panel	Passenger Door Harness Routing	X605 Passenger Door Harness to Passenger Door Trim Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X700	Body Harness To Left Rear Door Harness (21 Cavities)	-	In the left rear of the passenger compartment, in the left B-pillar	Passenger Compartment Harness Routing	X700 Body Harness to Left Rear Door Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X800	Body Harness To Right Rear Door Harness (21 Cavities)	-	In the right rear of the passenger compartment, in the right B-pillar	Right Rear Door Harness Routing	X800 Body Harness to Right Rear Door Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X900	Body Harness To Liftgate Harness (14 Cavities)	-	In the rear of the vehicle, top of liftgate behind the liftgate glass upper trim panel, just to the right of X901	Passenger Compartment Harness Routing	X900 Body Harness to Liftgate Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X901	Body Harness To Liftgate Harness (14	-	In the rear of the vehicle, top of liftgate behind the liftgate glass	Passenger Compartment Harness	X901 Body Harness to Liftgate Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>

	Cavities)		upper trim panel, just to the left of X900	Routing		
X902	Liftgate Harness To Left Rear Lamp Harness (3 Cavities)	GMC	In the rear of the vehicle, behind the liftgate trim panel, below the lower left corner of the rear window	Liftgate Harness Routing (GMC)	X902 Liftgate Harness to Left Rear Lamp Harness (GMC)	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X903	Liftgate Harness To Right Rear Lamp Harness (3 Cavities)	GMC	In the rear of the vehicle, behind the liftgate trim panel, below the lower right corner of the rear window	Liftgate Harness Routing (GMC)	X903 Liftgate Harness to Right Rear Lamp Harness (GMC)	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
X904	License Lamp Harness To Liftgate Harness (10 Cavities)	-	In the rear of the vehicle, behind the liftgate trim panel, below the lower left middle of the rear window	Luggage Compartment Harness Routing	X904 License Lamp Harness to Liftgate Harness	<u>INLINE HARNESS CONNECTOR</u> <u>END VIEWS</u>
G101	Forward Lamp Harness	-	In the left front of the engine compartment, on the frame behind the left headlamp	G101 and G102	-	<u>GROUND VIEWS</u>
G102	Forward Lamp Harness	-	In the right front of the engine compartment, on the frame behind the right headlamp	G101 and G102	-	<u>GROUND VIEWS</u>
G103	Negative Battery Cable Harness	-	In the left front of the engine compartment, beneath the battery	G101 and G102	-	<u>GROUND VIEWS</u>
			In the right rear corner of the	G101 and		<u>GROUND VIEWS</u>

G104	EPS Harness	LAF	engine compartment	G102	-	
G105	Negative Battery Cable Harness	LAF	In the left front engine compartment, at the left of the engine, below the evaporative emission purge solenoid valve	G109 and G112 (LAF)	-	<u>GROUND VIEWS</u>
G105	Negative Battery Cable Harness	LF1	In the left front of the engine compartment, at the left corner of the engine, below G112	G109, G110, and G112 (LF1)	-	<u>GROUND VIEWS</u>
G109	Engine Harness	LAF	In the left rear of the engine compartment, at the left rear corner of the engine, below the camshaft cover, near ignition coil 4	G109 and G112 (LAF)	-	<u>GROUND VIEWS</u>
G109	Engine Harness	LF1	In the right rear engine compartment, at the right rear corner of the engine, near cylinder #1	G109, G110, and G112 (LF1)	-	<u>GROUND VIEWS</u>
G110	Engine Harness	LF1	In the right rear of the engine compartment, at the right rear corner of the engine, near cylinder #5	G109, G110, and G112 (LF1)	-	<u>GROUND VIEWS</u>
G112	Engine Harness	LAF	In the right front of the engine compartment, at the right front corner of the engine,	G109 and G112 (LAF)	-	<u>GROUND VIEWS</u>

			beneath the generator			
G112	Engine Harness	LF1	In the left front of the engine compartment, at the left front corner of the engine, near cylinder #6	G109, G110, and G112 (LF1)	-	<u>GROUND VIEWS</u>
G203	Instrument Panel Harness	-	In the passenger compartment, in the lower center of the instrument panel	G203, G207, and G210	-	<u>GROUND VIEWS</u>
G205	Body Harness	-	In the lower left of the passenger compartment, below the instrument panel, above the park brake switch	G205, G301, G311, G401, and G403	-	<u>GROUND VIEWS</u>
G207	Instrument Panel Harness	-	In the right front of the passenger compartment, near the right side of the instrument panel, inside the right kick panel	G203, G207, and G210	-	<u>GROUND VIEWS</u>
G210	Instrument Panel Harness	-	In the left front of the passenger compartment, below the instrument panel, to the right of the steering column	G203, G207, and G210	-	<u>GROUND VIEWS</u>
			In the left front of the			<u>GROUND VIEWS</u>

G301	Body Harness	-	passenger compartment, on the floor below the driver seat	G205, G301, G311, G401, and G403	-	
G311	Body Harness	-	In the right front of the passenger compartment, on the floor below the passenger seat	G205, G301, G311, G401, and G403	-	<u>GROUND VIEWS</u>
G401	Body Harness	-	In the left rear of the passenger compartment, at the left rear of the cargo area, near the fuel pump flow control module	G205, G301, G311, G401, and G403	-	<u>GROUND VIEWS</u>
G403	Body Harness	-	In the right rear of the passenger compartment, at the right rear of the cargo area, near the subwoofer	G205, G301, G311, G401, and G403	-	<u>GROUND VIEWS</u>
J101	Engine Harness	LAF	Right rear of the engine, approximately 3.5 cm (1.4 in) from the ignition coil 4 takeout	Engine Harness Routing - Top (LAF)	-	<u>HARNESS ROUTING VIEWS</u>
J101	Engine Harness	LF1	Left front of the engine, approximately 3.0 cm (1.2 in) from the ignition coil 2 takeout	Engine Harness Routing - Left Front (LF1)	-	<u>HARNESS ROUTING VIEWS</u>
J102	Engine Harness	LF1	Right rear of the engine, approximately 5.5 cm (2.2 in)	Engine Harness Routing -	-	<u>HARNESS ROUTING</u>

			from the ignition coil 3 takeout	Right Rear (LF1)		<u>VIEWS</u>
J103	Engine Harness	-	Left side of the engine, approximately 17.0 cm (6.7 in) from G112	Engine Harness Routing - Left Front (LF1)	-	<u>HARNES ROUTING VIEWS</u>
J104	Engine Harness	-	Right side of the engine, approximately 3.0 cm (1.2 in) from the ignition coil 3 takeout	Engine Harness Routing - Top (LAF)	-	<u>HARNES ROUTING VIEWS</u>
J105	Engine Harness	LF1	Left side of the engine, approximately 3.0 cm (1.2 in) from the ignition coil 4 takeout	Engine Harness Routing - Left Front (LF1)	-	<u>HARNES ROUTING VIEWS</u>
J106	Engine Harness	LAF	Right front of the engine, approximately 3.0 cm (1.2 in) from the ignition coil 2 takeout	Engine Harness Routing - Top (LAF)	-	<u>HARNES ROUTING VIEWS</u>
J106	Engine Harness	LF1	Right rear of the engine, approximately 5.0 cm (2.0 in) from the ignition coil 5 takeout	Engine Harness Routing - Right Rear (LF1)	-	<u>HARNES ROUTING VIEWS</u>
J107	Engine Harness	LAF	Right rear of the engine, approximately 3.0 cm (1.2 in) from the G109 takeout	Engine Harness Routing - Top (LAF)	-	<u>HARNES ROUTING VIEWS</u>
J107	Engine Harness	LF1	Left rear of the engine, approximately 8.5 cm (3.4 in) from the	Engine Harness Routing - Left Front	-	<u>HARNES ROUTING VIEWS</u>

			ignition coil 6 takeout	(LF1)		
J108	Engine Harness	LAF	Rear of the engine, approximately 4.0 cm (1.6 in) from the underhood fuse block	Engine Harness Routing - Top (LAF)	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J108	Engine Harness	LF1	Left side of the engine, approximately 3.0 cm (1.2 in) from the ignition coil 4 takeout	Engine Harness Routing - Left Front (LF1)	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J109	Engine Harness	LF1	Left side of the engine, approximately 8.0 cm (3.2 in) from the ignition coil 2 takeout	Engine Harness Routing - Left Front (LF1)	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J110	Engine Cooling Fan Harness	LAF	Front of the engine compartment, near the cooling fan motor	-	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J111	Forward Lamp Harness	T96	Left rear of the engine compartment, approximately 15 cm (5.9 in) from the X115 takeout	Front of Vehicle Harness Routing	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J113	Left Front Lamp Harness	-	In the left front lamp assembly	-	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J114	Right Front Lamp Harness	-	In the right front lamp assembly	-	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J117	Body Harness	-	Left rear of the engine compartment, approximately 8.0 cm (3.2 in)	Passenger Compartment Splice	-	<u>HARNES</u> <u>ROUTING</u>

			from the windshield wiper motor	Routing		<u>VIEWS</u>
J201	Instrument Panel Harness	TSQ	Left side of the instrument panel, approximately 3.5 cm (1.4 in) from the takeouts leading to the instrument cluster and steering column	Instrument Panel Harness Routing - Rear	-	<u>HARNESS ROUTING VIEWS</u>
J202	Instrument Panel Harness	C68	Right side of the instrument panel, approximately 4.5 cm (1.8 in) from the X213 and blower motor takeouts	Instrument Panel Harness Routing - Rear	-	<u>HARNESS ROUTING VIEWS</u>
J203	Instrument Panel Harness	-	Center of the instrument panel, approximately 10.5 cm (4.1 in) from the HVAC module takeouts	Instrument Panel Harness Routing - Rear	-	<u>HARNESS ROUTING VIEWS</u>
J204	Instrument Panel Harness	UWG	Under the center console, approximately 16.0 cm (6.3 in) from the X211 takeout	Instrument Panel Harness Routing - Front	-	<u>HARNESS ROUTING VIEWS</u>
J205	Instrument Panel Harness	-	Left side of the instrument panel, approximately 25.0 cm (9.8 in) from the instrument panel dimmer switch, multifunction	Instrument Panel Harness Routing - Rear	-	<u>HARNESS ROUTING VIEWS</u>

			switch and air bag coil takeouts			
J206	Instrument Panel Harness	-	Center of the instrument panel, approximately 4.5 cm (1.8 in) from the HVAC module takeouts	Instrument Panel Harness Routing - Rear	-	<u>HARNESS ROUTING VIEWS</u>
J210	HVAC Harness	-	In the HVAC harness, near the HVAC module	-	-	<u>HARNESS ROUTING VIEWS</u>
J211	HVAC Harness	-	In the HVAC harness, near the HVAC module	-	-	<u>HARNESS ROUTING VIEWS</u>
J212	HVAC Harness	-	In the HVAC harness, near the HVAC module	-	-	<u>HARNESS ROUTING VIEWS</u>
J215	Body Harness	TSP or TSQ	Left side of the instrument panel, approximately 5.5 cm (2.2 in) from the body control module takeouts	Passenger Compartment Splice Routing	-	<u>HARNESS ROUTING VIEWS</u>
J216	Body Harness	-	Left side of the instrument panel, approximately 6.0 cm (2.4 in) from the X206 takeout	Passenger Compartment Splice Routing	-	<u>HARNESS ROUTING VIEWS</u>
J217	Body Harness	-	Left side of the instrument panel, approximately 12.0 cm (4.7 in) from the X206 takeout	Passenger Compartment Splice Routing	-	<u>HARNESS ROUTING VIEWS</u>
			Left side of the instrument			

J218	Body Harness	-	panel, approximately 2.0 cm (0.8 in) from the X500 takeout	Passenger Compartment Splice Routing	-	<u>HARNESS ROUTING VIEWS</u>
J219	Body Harness	-	Left side of the instrument panel, approximately 8.0 cm (3.2 in) from the X500 takeout	Passenger Compartment Splice Routing	-	<u>HARNESS ROUTING VIEWS</u>
J220	SPO Seat Heating Power Extension Harness	SPO Accessory	In the front of the passenger compartment, inside the front of the center console, below the radio/HVAC controls	-	-	<u>HARNESS ROUTING VIEWS</u>
J221	SPO Seat Heating Power Extension Harness	SPO Accessory	In the front of the passenger compartment, inside the front of the center console, below the radio/HVAC controls	-	-	<u>HARNESS ROUTING VIEWS</u>
J222	SPO Seat Heating Power Extension Harness	SPO Accessory	In the front of the passenger compartment, inside the front of the center console, below the radio/HVAC controls	-	-	<u>HARNESS ROUTING VIEWS</u>
J223	SPO Seat Heating Power Extension Harness	SPO Accessory	In the front of the passenger compartment, inside the front of the center console, below the radio/HVAC	-	-	<u>HARNESS ROUTING VIEWS</u>

			controls			
J302	Body Harness	-	Right side of the passenger compartment, approximately 35.0 cm (13.8 in) from the right B-pillar takeout	Passenger Compartment Splice Routing	-	<u>HARNESS ROUTING VIEWS</u>
J303	Body Harness	-	Right side of the passenger compartment, approximately 55.0 cm (21.7 in) from the right B-pillar takeout	Passenger Compartment Splice Routing	-	<u>HARNESS ROUTING VIEWS</u>
J307	Body Harness	-	Left front of the passenger compartment, approximately 45.0 cm (17.7 in) from the X500 takeout	Passenger Compartment Splice Routing	-	<u>HARNESS ROUTING VIEWS</u>
J308	Body Harness	-	Right side of the passenger compartment, approximately 25.0 cm (10.0 in) from the right B-pillar takeout	Passenger Compartment Splice Routing	-	<u>HARNESS ROUTING VIEWS</u>
J309	Body Harness	-	Right side of the passenger compartment, approximately 45.0 cm (17.7 in) from the right B-pillar takeout	Passenger Compartment Splice Routing	-	<u>HARNESS ROUTING VIEWS</u>
J310	Body Harness	-	Right side of the passenger compartment, approximately 65.0 cm (25.6 in) from the right B-pillar	Passenger Compartment Splice Routing	-	<u>HARNESS ROUTING VIEWS</u>

			takeout			
J311	Body Harness	-	Left front of the passenger compartment, approximately 26.0 cm (10.2 in) from the X500 takeout	Passenger Compartment Splice Routing	-	<u>HARNESS ROUTING VIEWS</u>
J313	Body Harness	-	Left front of the passenger compartment, approximately 14.0 cm (5.5 in) from the X500 takeout	Passenger Compartment Splice Routing	-	<u>HARNESS ROUTING VIEWS</u>
J315	Body Harness	LTZ or SLT	Left front of the passenger compartment, approximately 39.0 cm (15.4 in) from the X500 takeout	Passenger Compartment Splice Routing	-	<u>HARNESS ROUTING VIEWS</u>
J316	Body Harness	TSQ	Left front of the passenger compartment, approximately 20.0 cm (7.9 in) from the X500 takeout	Passenger Compartment Splice Routing	-	<u>HARNESS ROUTING VIEWS</u>
J317	Console Harness	-	In the rear of the center console, approximately 60.5 cm (23.8 in) from the takeout to the rearmost accessory power receptacle	Instrument Panel Harness Routing - Front	-	<u>HARNESS ROUTING VIEWS</u>
J318	Console Harness	-	In the center console, approximately 8.5 cm (3.4 in) from the fuel economy mode switch takeout	Instrument Panel Harness Routing - Front	-	<u>HARNESS ROUTING VIEWS</u>

J319	Fuel Tank Harness	-	On top of the fuel tank	-	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J321	Headliner Harness	-	Center of the headliner, approximately 6.0 cm (2.4 in) from the inside rearview mirror takeout	-	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J322	Headliner Harness	-	Center of the headliner, approximately 8.0 cm (3.2 in) from the front noise compensation microphone takeout	-	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J323	Headliner Harness	TB5 or CF5	Left front of the headliner, approximately 82 cm (32.3 in) from X300	-	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J324	Headliner Harness	-	Right side of the headliner, approximately 20.5 cm (8.1 in) from the middle dome/reading lamp takeout	-	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J325	Headliner Harness	-	Right front of the headliner, halfway between the remote control door lock receiver and right sunshade takeouts	-	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J327	Driver Seat Back Harness	UWG	In the driver seat back, approximately 10.0 cm (3.9 in) from the left side air bag,	-	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>

			lumbar motor and recline motor takeouts			
J328	Passenger Seat Back Harness	UWG	In the passenger seat back, approximately 48.5 cm (19.1 in) from the X303 takeout	-	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J329	Driver Seat Cushion Harness	-	In the driver seat back, approximately 19.0 cm (7.5 in) from the driver seat belt switch	-	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J330	Driver Seat Cushion Harness	LTZ or SLT	In the driver seat back, approximately 29.0 cm (11.4 in) from the driver seat belt switch	-	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J404	Rear Bumper Harness	UD7	Middle of the rear bumper, approximately 10 cm (3.9 in) from the right middle object sensor takeout	Rear of Vehicle Harness Routing (Chevrolet)	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J405	Rear Bumper Harness	UD7	Left side of the rear bumper, approximately 56 cm (22.0 in) from X406	Rear of Vehicle Harness Routing (Chevrolet)	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J406	Left Rear Lamp Harness	Chevrolet	In the left rear lamp assembly	Liftgate Harness Routing (GMC)	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J407	Right Rear Lamp Harness	Chevrolet	In the right rear lamp assembly	Liftgate Harness Routing (GMC)	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
			Right rear of the headliner, approximately			<u>HARNES</u>

J408	Headliner Harness	-	45.0 cm (17.7 in) from the X401 and X416 takeouts	-	-	<u>ROUTING VIEWS</u>
J501	Driver Door Trim Harness	-	In the driver door trim panel, approximately 12.0 cm (4.7 in) from the mirror control module takeout	Driver Door Harness Routing	-	<u>HARNESS ROUTING VIEWS</u>
J502	Driver Door Harness	-	In the driver door, approximately 20.0 cm (7.9 in) from the outside rearview mirror and X505 takeouts	Driver Door Harness Routing	-	<u>HARNESS ROUTING VIEWS</u>
J601	Passenger Door Harness	-	In the passenger door, approximately 20.0 cm (7.9 in) from the outside rearview mirror and X605 takeouts	Passenger Door Harness Routing	-	<u>HARNESS ROUTING VIEWS</u>
J602	Passenger Door Trim Harness	TSQ	In the passenger door trim panel, approximately 55.0 cm (21.6 in) from X605	Passenger Door Harness Routing	-	<u>HARNESS ROUTING VIEWS</u>
J701	Left Rear Door Harness	-	In the left rear door, approximately 37.5 cm (14.8 in) from X700	Left Rear Door Harness Routing	-	<u>HARNESS ROUTING VIEWS</u>
J702	Left Rear Door Harness	-	In the left rear door, approximately 11 cm (4.3 in) from the left rear door latch	Left Rear Door Harness Routing	-	<u>HARNESS ROUTING VIEWS</u>

			assembly			
J801	Right Rear Door Harness	-	In the right rear door, approximately 37.5 cm (14.8 in) from X800	Right Rear Door Harness Routing	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J802	Right Rear Door Harness	-	In the right rear door, approximately 11 cm (4.3 in) from the right rear door latch assembly	Right Rear Door Harness Routing	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J901	License Lamp Harness	-	In the liftgate trim panel, approximately 11.5 cm (4.5 in) from X904	Rear of Vehicle Harness Routing (Chevrolet)	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J902	License Lamp Harness	-	In the liftgate trim panel, between the left and right license plate lamp takeouts	Rear of Vehicle Harness Routing (Chevrolet)	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J903	Liftgate Harness	GMC	In the liftgate trim panel, approximately 12.5 cm (4.9 in) from the X904 takeout	Liftgate Harness Routing (GMC)	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J904	Liftgate Harness	-	In the liftgate trim panel, approximately 14.5 cm (5.7 in) from the rear wiper motor takeout	Luggage Compartment Harness Routing	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
J905	Liftgate Harness	-	In the liftgate trim panel, approximately 4.5 cm (1.8 in) from the liftgate control module X2 takeout	Luggage Compartment Harness Routing	-	<u>HARNES</u> <u>ROUTING</u> <u>VIEWS</u>
	Left Rear Lamp		In the left rear	Liftgate Harness		<u>HARNES</u>

J906	Harness	GMC	lamp assembly	Routing (GMC)	-	<u>ROUTING VIEWS</u>
J907	Right Rear Lamp Harness	GMC	In the right rear lamp assembly	Liftgate Harness Routing (GMC)	-	<u>HARNESS ROUTING VIEWS</u>
JX201	Instrument Panel Harness	-	In the left front of the passenger compartment, at the left side of the instrument panel, near the data link connector	Instrument Panel Harness Routing - Front	JX201	<u>JX201</u>
JX202	Body Harness	-	In the left front of the passenger compartment, at the left side of the instrument panel, taped to the body harness near the brake pedal	Passenger Compartment Splice Routing	JX202	<u>JX202</u>