

2010 ENGINE

Engine Mechanical - 2.8L, 3.0L, 3.2L, or 3.6L - Repair Instructions - Off Vehicle - Equinox & Terrain

DRIVE BELT TENSIONER REMOVAL

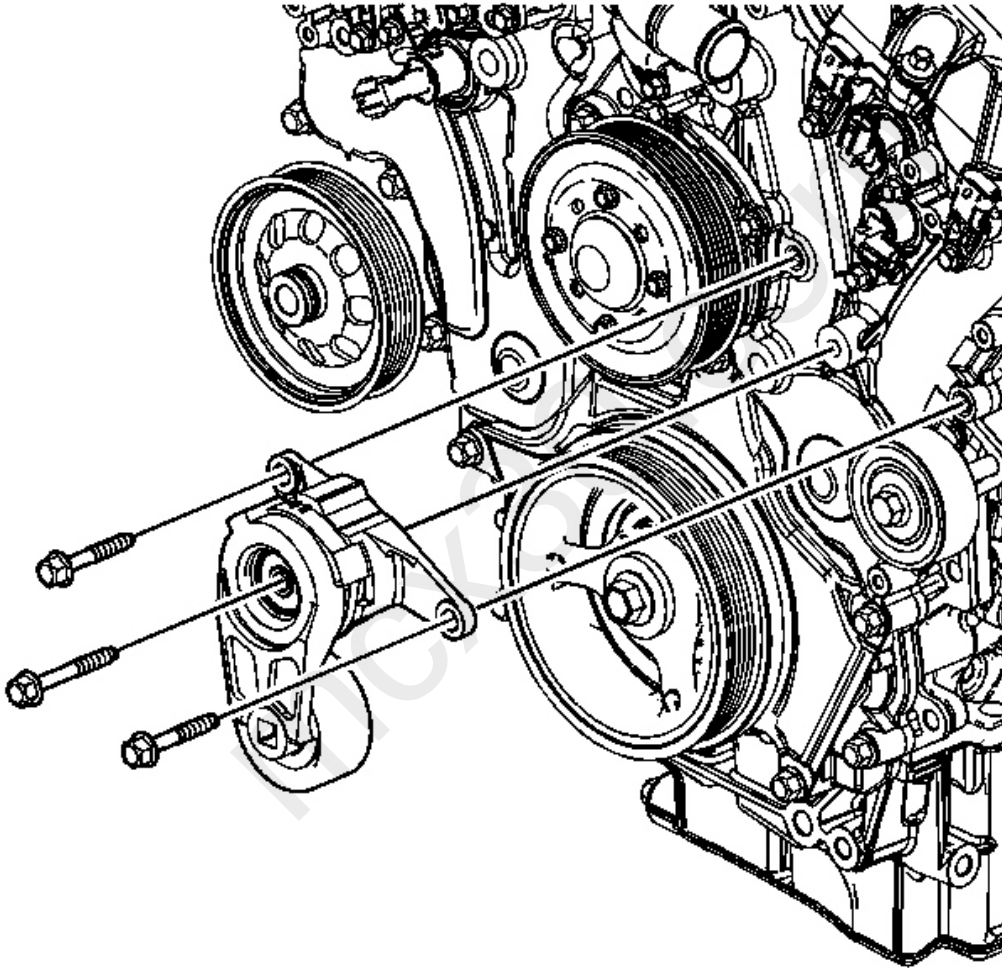


Fig. 1: View Of Left Drive Belt Tensioner
Courtesy of GENERAL MOTORS CORP.

1. Remove the drive belt tensioner bracket bolts.
2. Remove the drive belt tensioner assembly.