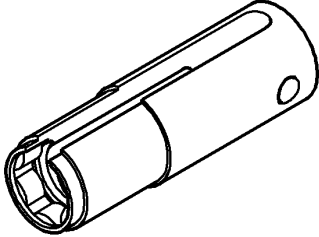 
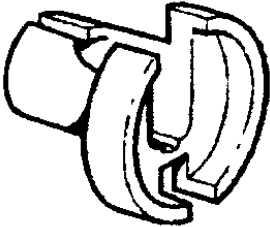 
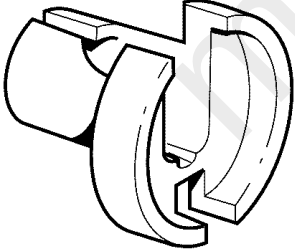 
 



2010 ENGINE PERFORMANCE

Engine Controls and Fuel - 2.8L, 3.0L, 3.2L, or 3.6L - Equinox & Terrain


SPECIAL TOOLS AND EQUIPMENT

SPECIAL TOOLS


Illustration	Tool Number/Description
	CH 39194-C Oxygen Sensor Remover/Installer
	CH 41769-1 Fuel Line Quick Connect Separator 3/8
	CH 41769-2 Fuel Line Quick Connect Separator 5/16
	CH 42242 Fuel Pressure Test Hose Adapter

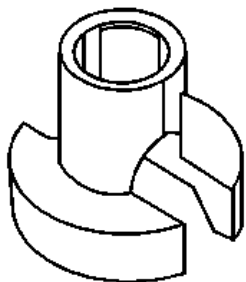 

CH 47831
Fuel Line Disconnect Tool


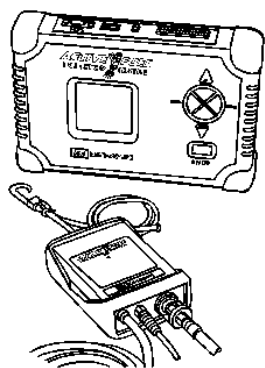 


CH 47976
Active Fuel Injector Tester

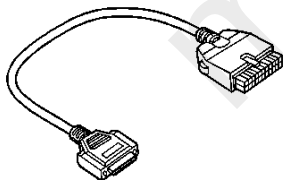 


CH 47976-60
AFIT Harness Adapter

  
CH 47976-75
Fuel Injector Harness Adapter

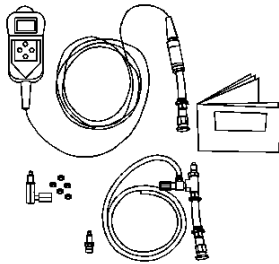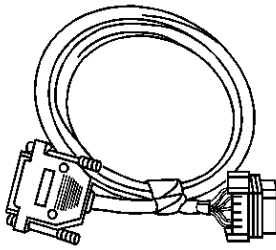


CH 48027
Digital Pressure Gauge

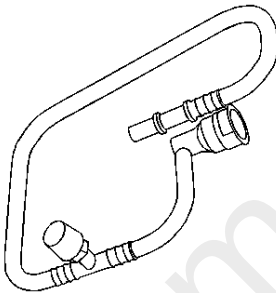 


CH 48096
EVAP Service Access Port Tool

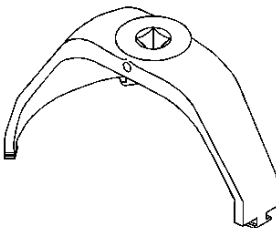 


CH 48482
Fuel Sender Lock Ring Wrench

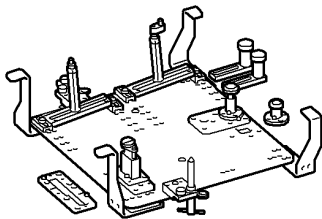 


Centering Adapter Engine Subframe

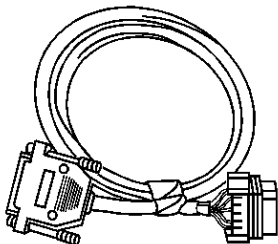 


EL 39021-460
Fuel Injector Test Adapter

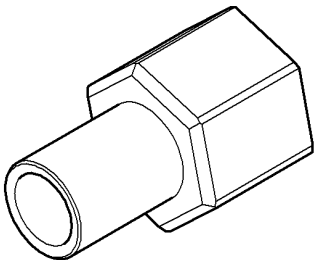 


EN 32 025 012
Sliding Hammer Adapter

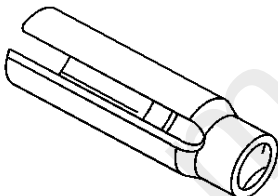 


EN 46577
Oxygen Sensor Remover/Installer

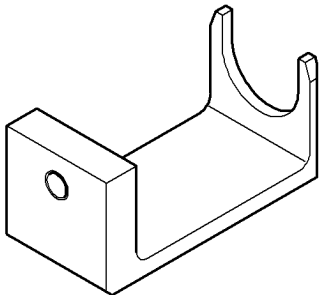 

 
EN 46786 (32 025 013)
Injector Removal Tool

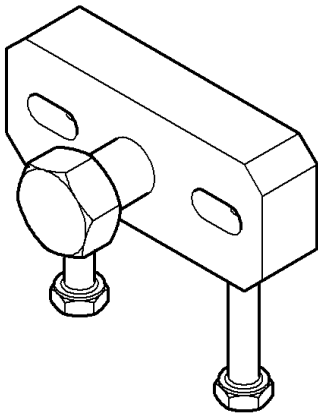


EN 46790 (32 025 005)
Puller

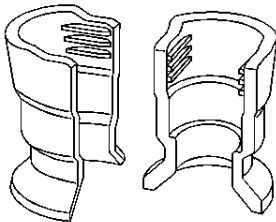 


EN 46843
Quick Connect Release Tool

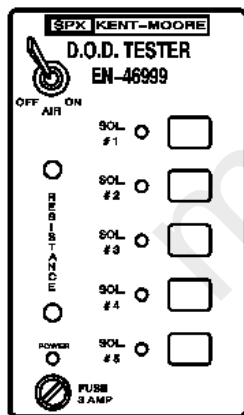 


EN 46999
Displacement On Demand Electric Tool

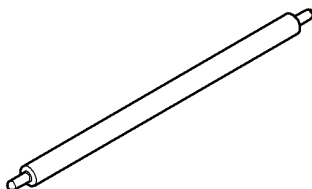 


EN 47632 (32 025 010)
Cleaning Tool

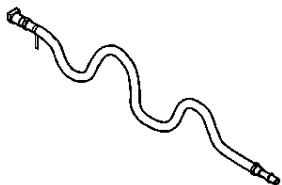 


EN 47969
Fuel Supply Diagnostic Hose

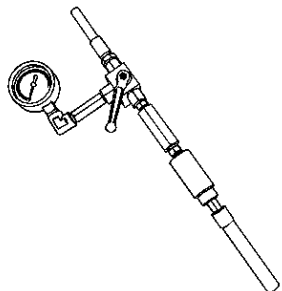 

EN 48248
Cylinder Compression Pressure Gauge

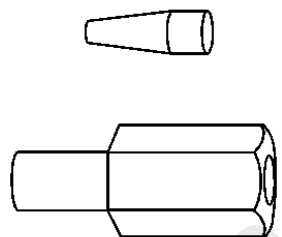 


EN 48266
Injector Seal Installer/Sizer

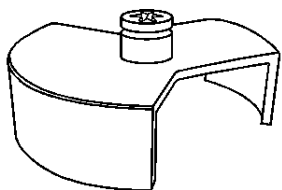 


EN 48278
Sub Fuel Pump Locking Ring Remover/Installer

 
EN 48279
Main Fuel Pump Locking Ring Remover/Installer

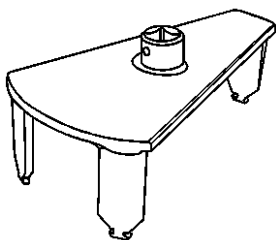


EN 48303
Fuel Filter Housing Holder

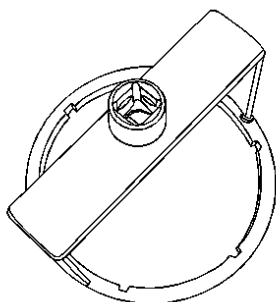 




EN 48304
Fuel Filter Locker Installer/Remover

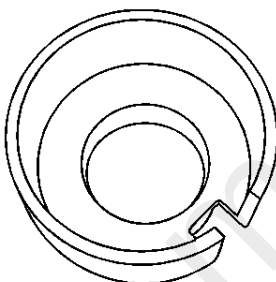 

EN 48357
Injector Remover

 

EN 48536
Frame Support Tool (Engine Lower 65 mm Kit)

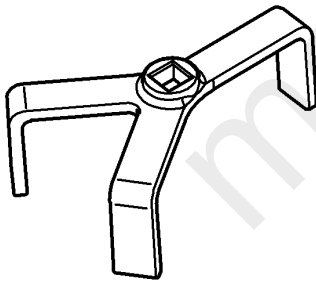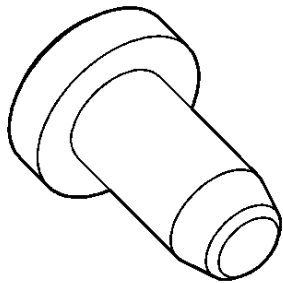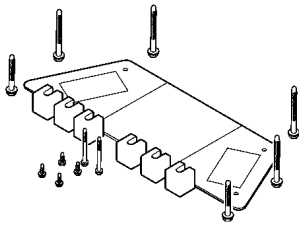   


EN 48565
EGR Test Harness


EN 48896
HP Fuel Pump Installation Alignment Gauge

EN 49232
Fuel Pump Lock Ring Remover

 
EN 49774
Fuel Injector Remover

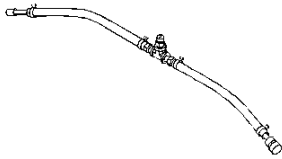


EN 49799
Fuel Pressure Gauge Adapter

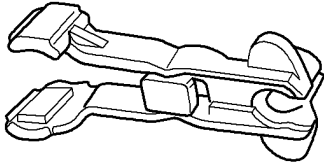 


EN 83 95 261
Fuel Line Tool

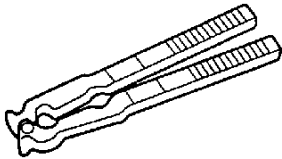 


J 22610
Keystone Clamp Pliers

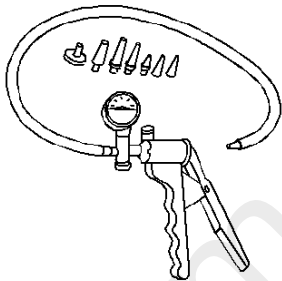 

J 23738-A (GE 23738-A)
Vacuum Pump

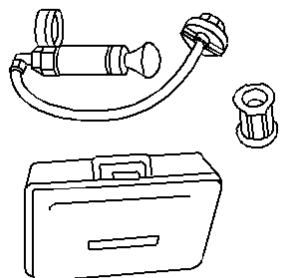 

 
J 24460-A
Cooling System Pressure Tester

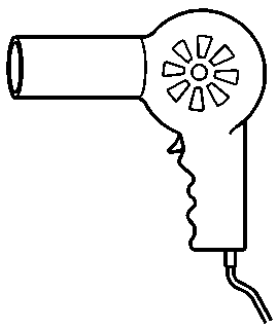

J 25070
Heat Gun 260-399°C (500-750°F)



 J 2619-01 (DT 2619-01)
Slide Hammer


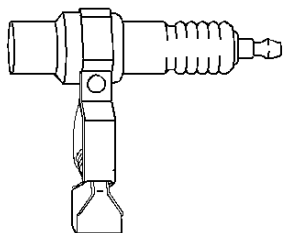


J 26792 (EL 26792)
HEI Spark Tester




J 34730-262 (CH 34730-262)
Fuel Pressure Test Gauge Adapter

  J 34730-375
Injector Test Lamp

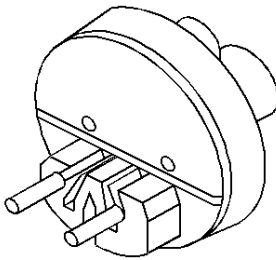
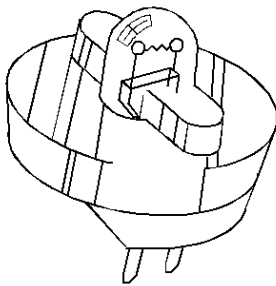


 J 34730-405 (EL 34730-405)
Injector Test Lamp

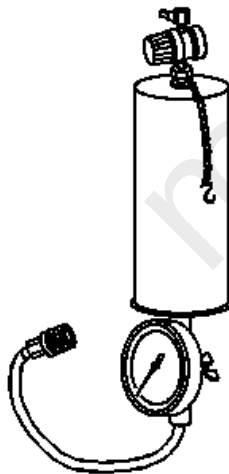


J 35800-A (CH 35800-A)
Fuel Injector Cleaner

  
J 36012-A
Ignition System Diagnostic Harness

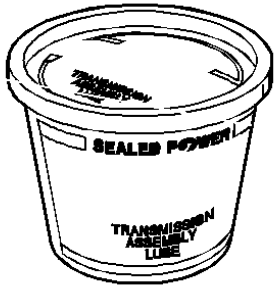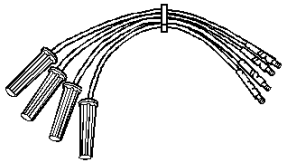


J 36850 (DT 36850)
Transjell Lubricant

 


J 37281-A (EN 37281-A)
Injector Remover

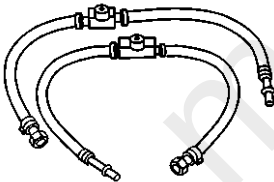 

 J 37287 (EN 37287)
Fuel Line Shut-Off Adaptors (Flex Fuel)




J 38491
Spark Plug Boot Removal Tool

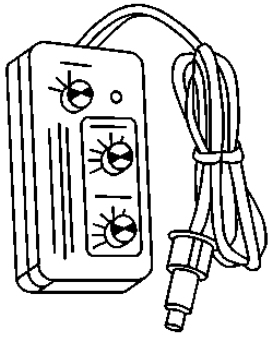 


J 38522 (EN 38522)
Variable Signal Generator



 
J 38641-B (CH 38641-C)
Diesel Fuel Quality Tester

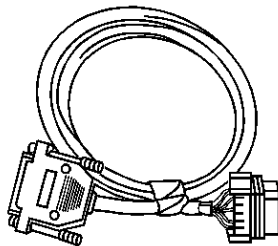

 
J 39021 (EL 39021)
Fuel Injector Coil and Balancer Tester

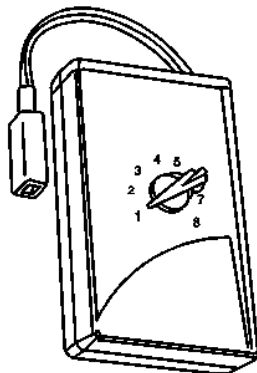

 
J 39021-210 (EL 39021-210)
Injector Tester Adapter Box

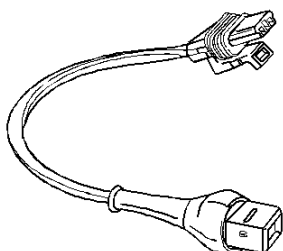

 J 39021-380 (CH 39021-380)
Fuel Injector Harness Adapter


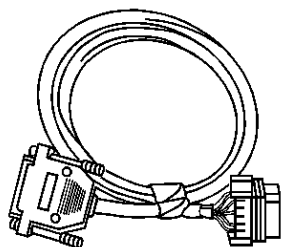


 J 39021-450 (CH 39021-450)
Fuel Injector Harness Adapter

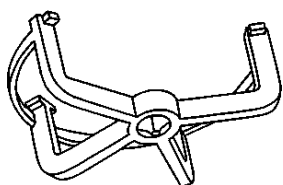


J 39765
Fuel Sender Locknut Wrench

  
J 41413-200 (GE 41413-200)
Evaporative Emissions System Tester (EEST)

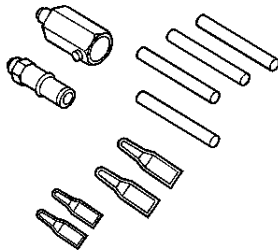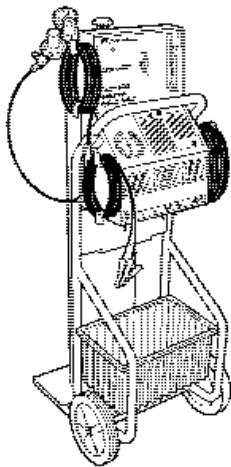

 J 41413-300 (GE 41413-300)
EVAP Cap and Plug Kit

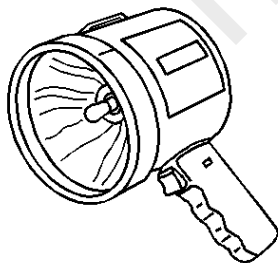

 J 41413-SPT (GE 41413-SPT)
High Intensity White Light



J 41413-VLV (EN 41413-VLV)
EVAP Service Port Vent Fitting



 
J 41415-30
Fuel Tank Cap Adapter




J 41415-40 (GE 41415-40)
Fuel Tank Cap Adapter




J 41415-50 (GE 41415-50)
Fuel Tank Cap Adapter

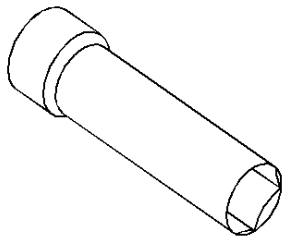

J 41515-A
Glow Plug Socket





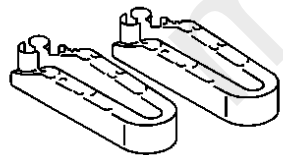 



 
J 41769 (EN 41769) (KM J 41769)
Fuel Line Disconnect Tool Set

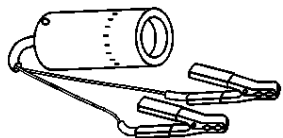


J 42220 (CH 42220)
Universal 12-Volt Leak Detection Lamp

     J 42242 (CH 42242)

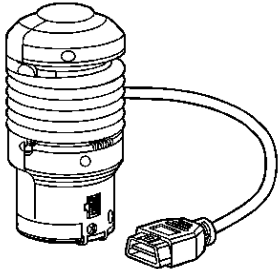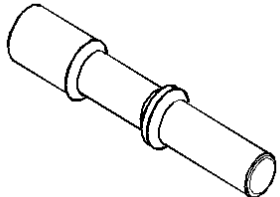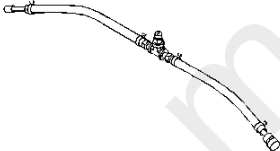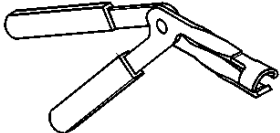
	Fuel Pressure Gauge Adapter
	J 42598-B Vehicle Data Recorder
	J 42960-2 (CH 42960-2) Fuel Flapper Door Holder
	J 42982 (CH 42982) Fuel Pressure Gauge Adapter
	J 43094 Spark Plug Boot Puller
	J 43178 (CH 43178) Fuel Line Disconnect Tool

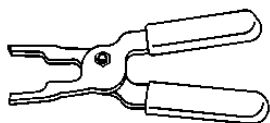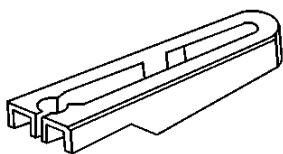  


J 43244 (EL 43244)
Relay Puller Pliers

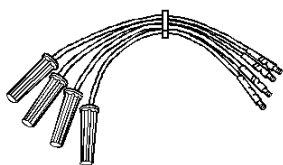 

 
J 43883
Ignition System Diagnosis Harness

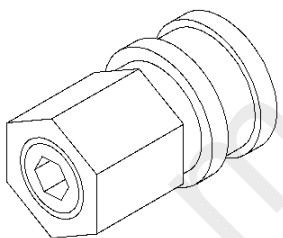

 
J 43936 (EN 43936)
Fuel Pressure Adapter Cap

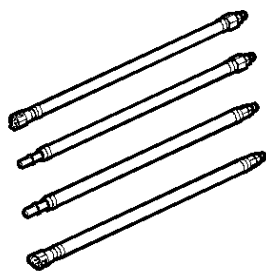

 J 43937 (EN 43937)
Fuel Pressure Adapter Lines

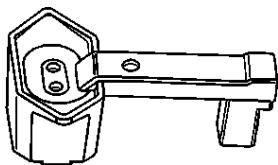

 
J 44175 (CH 44175)
Fuel Composition Tester

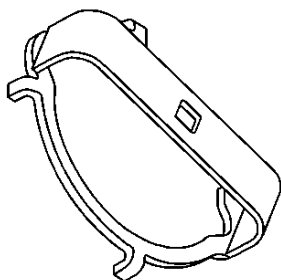


J 44402
Fuel Tank Sending Unit Wrench



 
J 44581 (CH 44581)
Fuel Line Disconnect Tool

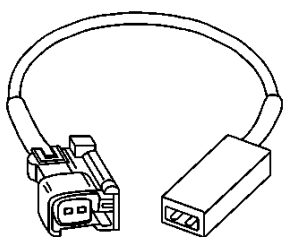

 
J 44602 (EN 44602)
Injector Test Adapter

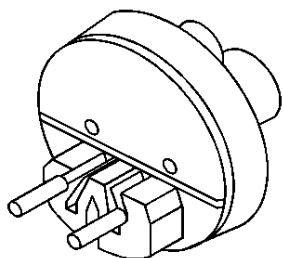


J 44603 (CH 44603)
Injector Test Lamp

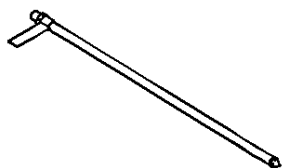 


J 45004 (CH 45004)
Fuel Tank Drain Hose

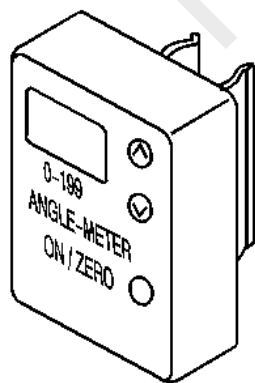 


J 45059
Angle Meter

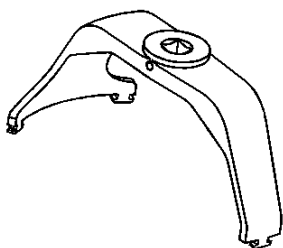 

 
J 45722 (CH 45722)
Fuel Sender Lock Ring Wrench

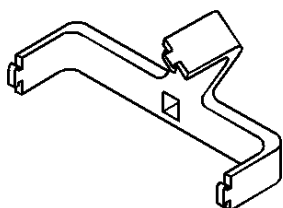

 J 45747 (CH 45747)
Wrench, Fuel Sending Unit


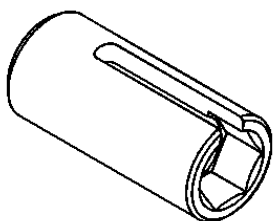


J 45861 (CH 45861)
ECT Sensor Socket

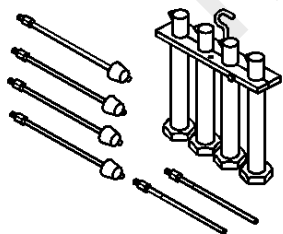 


J 45873 (CH 45873)
Fuel Return Volume Test Kit

  J 45873-30 (EN 45873-30)
Injector Flow Test Adapter

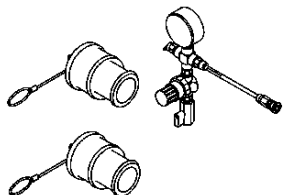
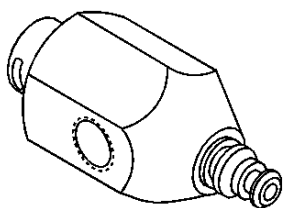


 J 46091 (EN 46091)
Charge Air Cooler Tester

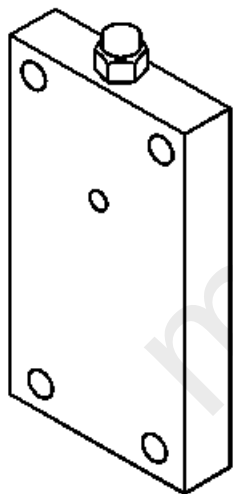


J 46091-5 (EN 46091-5)
Charge Air Cooler Tester Adapter

  
J 46091-15 (EN 46091-15)
Engine Pressure Test Adapter

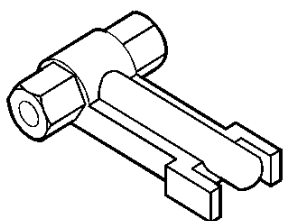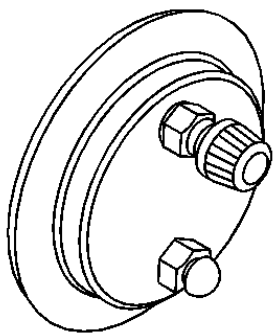

J 46594 (EN 46594)
Fuel Injector Puller

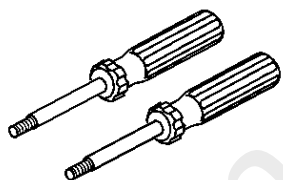 

KM 6009
Remover/Installer

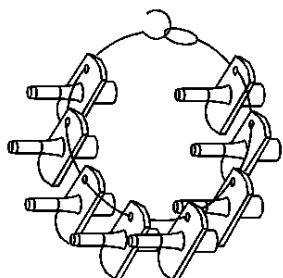 

KM 807
Closure Plugs