

2010 GENERAL INFORMATION

Maintenance and Lubrication - Equinox & Terrain

SPECIFICATIONS

APPROXIMATE FLUID CAPACITIES

The following approximate capacities are given in US English and metric conversions. See **Fluid and Lubricant Recommendations (USA and Canada)** for more information. All capacities are approximate. When adding, be sure to fill to the approximate level, as recommended in this manual. Recheck fluid level after filling.

Application	Specification	
	Metric	US English
Engine Cooling System		
• 2.4L L4 Engine	7.8 liters	8.2 quarts
• 3.0L V6 Engine	10.2 liters	10.8 quarts
Engine Oil with Filter		
• 2.4L L4 Engine	4.7 liters	5.0 quarts
• 3.0L V6 Engine	5.7 liters	6.0 quarts
Fuel Tank		
• 2.4L L4 Engine	71.1 liters	18.8 gallons
• 3.0L V6 Engine	79.1 liters	20.9 gallons
Transaxle - 6T40/6T45		
• Valve Body Cover Removal - Approximate Capacity	5.0-7.0 liters	5.3-7.4 quarts
• Fluid Change-Drain Plug - Approximate Capacity	4.0-6.0 liters	4.2-6.3 quarts
• Overhaul - Approximate Capacity	8.0-8.5 liters	8.5-9.0 quarts
Transaxle - 6T70/6T75		
• Valve Body Cover Removal	5.0-7.0 liters	5.3-7.4 quarts
• Fluid Change - Drain Plug	4.0-6.0 liters	4.2-6.3 quarts
• Overhaul - Approximate Capacity	7.0-9.0 liters	7.4-9.5 quarts
Transfer Case	1.0 liter	1.06 quart

FLUID AND LUBRICANT RECOMMENDATIONS (USA AND CANADA)

The Recommended Fluids and Lubricants information will be found in the Owner's Manual. Refer to the Maintenance Schedule subsection of the Owner's Manual.

You may be able to use the Search information function using the words Fluids or Lubricants.