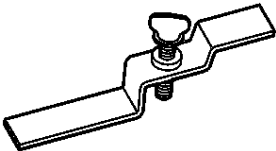
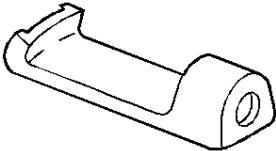
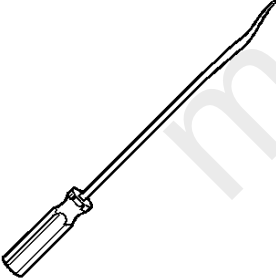




2010 Transmission

Automatic Transmission - 6T30/6T40/6T45 - Equinox & Terrain


SPECIAL TOOLS AND EQUIPMENT

SPECIAL TOOLS

Illustration	Tool Number/Description
	DT 21366 J 21366 Converter Holding Strap
	DT 23129 J 23129 KM-586 Universal Seal Remover
	DT 28585 J 28585 KM-J-28585 Snap Ring Remover
	DT 39890 J 39890 Transmission Holding Fixture Adapter

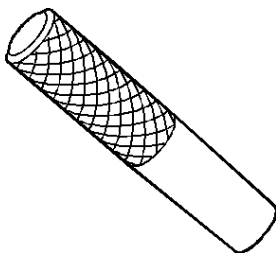
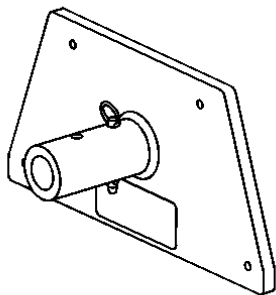


DT 41229
J 41229
Manual Shaft Pin Installer

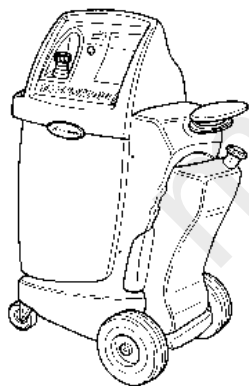


DT 45096
J 45096
Transmission Oil Cooling System Flush and Flow
Test Tool


DT 45096-50
J 45096-50
Transmission Cooling Flush Adapter

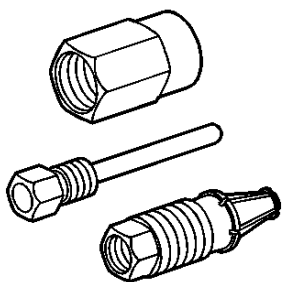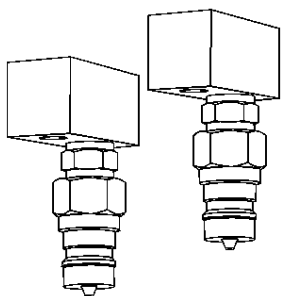


DT 45201
DT 48203
J 45201
Cooler Line Seal Remover

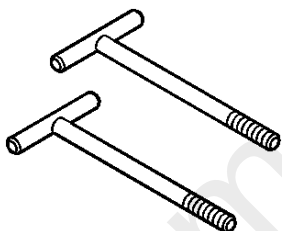


DT 46409
J 46409
KM-922
Torque Converter Lifting Handles

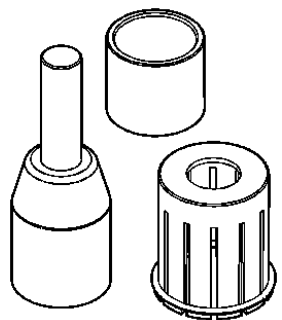


DT 46620
J 46620
Seal Installer

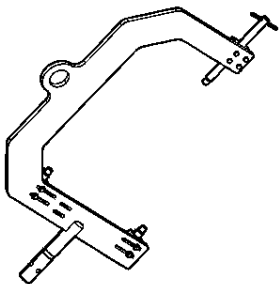

DT 46625
J 46625
Holding Fixture


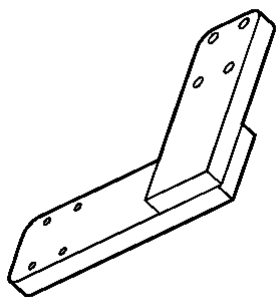


DT 46625-10
J 46625-10
Holding Fixture Adapter

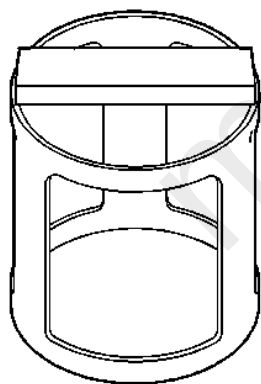


DT 47694
Spring Compressor


DT 47790
Seal Installer

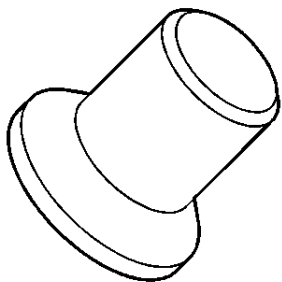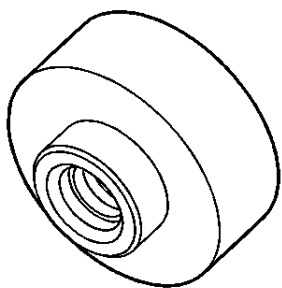


DT 47791-A
Seal Installer

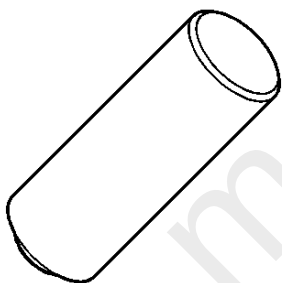


DT 47792
Seal Installer

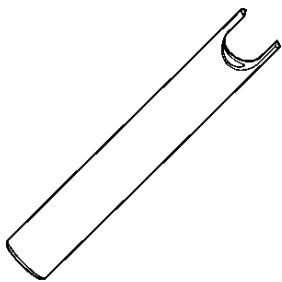


DT 47793
Differential Rotating Tool

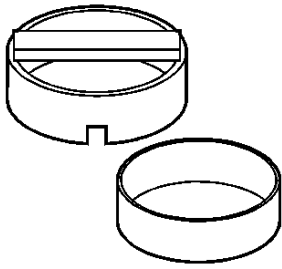


DT 47794
Spring Compressor

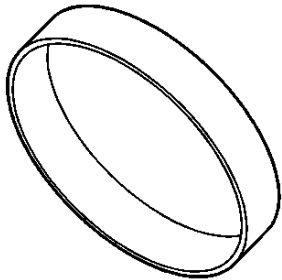


DT 47796
Seal Protector

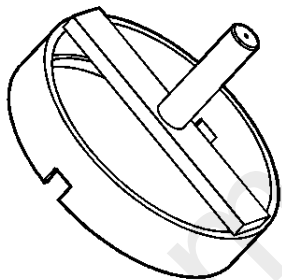


DT 47797
Spring Installer

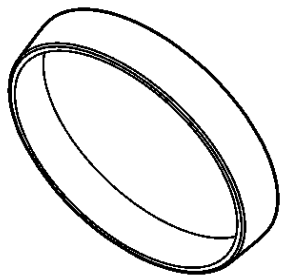


DT 47798
Seal Protector

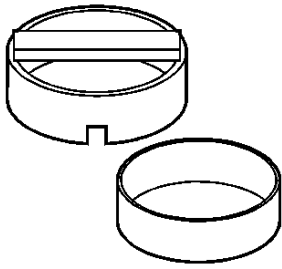


DT 47799
Clutch Piston Spring Compressor

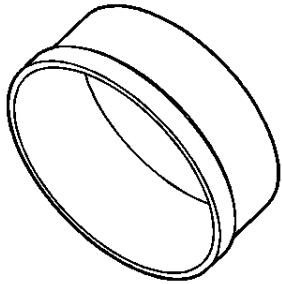


DT 47805
Seal Protector

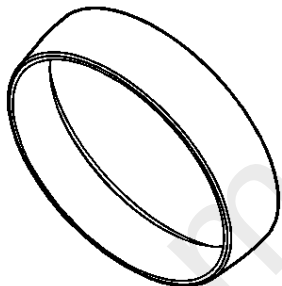


DT 47807
Clutch Piston Seal Installer

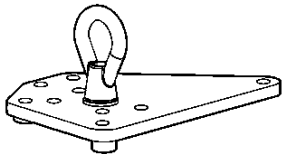


DT 47811-A
Lift Plate

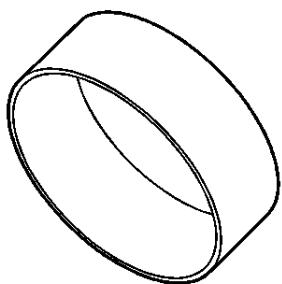


DT 47951-1
Seal Protector

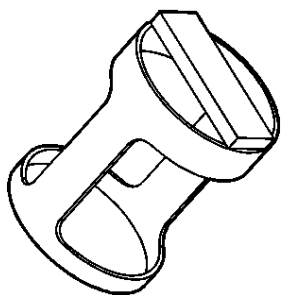


DT 47951-2
Spring Compressor

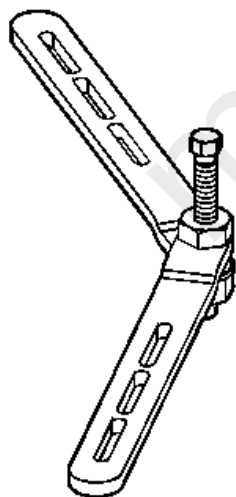


DT 48056
Spring Compressor Bridge

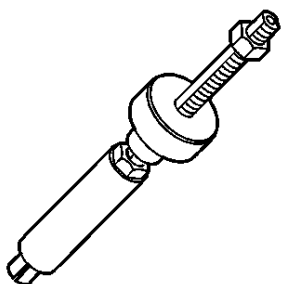


DT 48550
Detent Lever Pin Remover

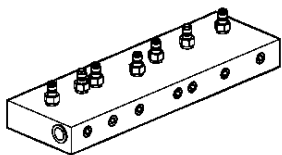

DT 48616
Control Solenoid Test Plate


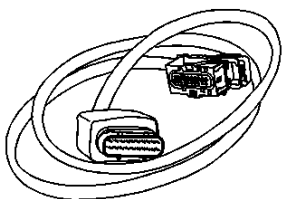


DT 48616-10
Adapter Harness

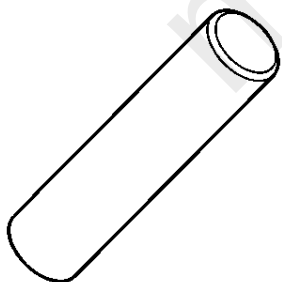


DT 49101
Seal Installer


DT 49131
Seal Staking Tool

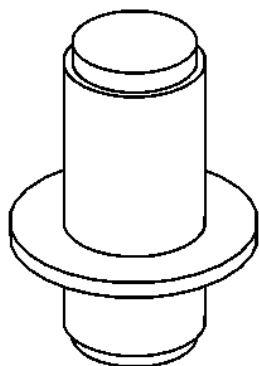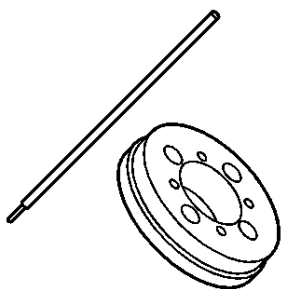


DT 49831
Differential Bearing Remover/Installer (2 Pinion
Blue)

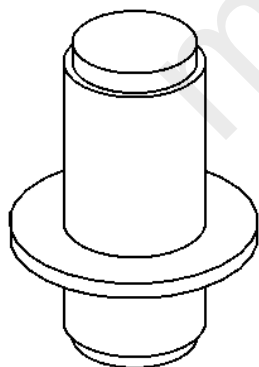

DT 50087
Differential Bearing Remover/Installer (4 Pinion
Red)

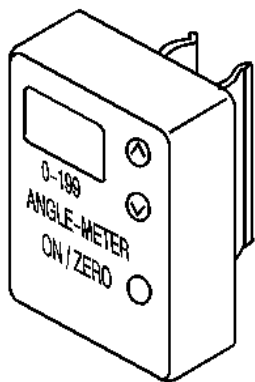


EN 45059
J 45059
Angle Meter

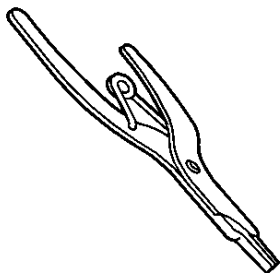

GE 5586-A
J 5586-A
Snap Ring Pliers




GE 6125-1B
J 6125-1B
KM-J-7004
Slide Hammer

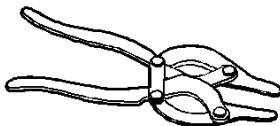


GE 8059
J 8059
KM-396
Snap Ring Pliers-Parallel Jaw

GE 8092
J 8092

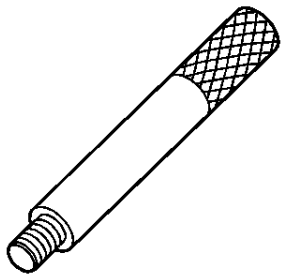

KM-J-8092
Driver Handle

 

GE 34673
J 34673
Flat Gauge Bar

mcx30.com