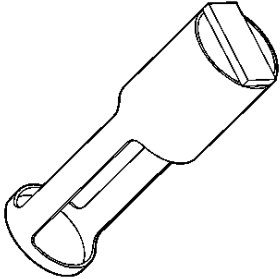
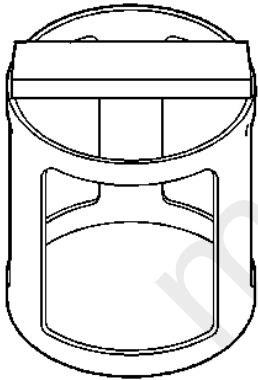




2010 Transmission

Automatic Transmission - 6T70/6T75 - Equinox & Terrain


SPECIAL TOOLS AND EQUIPMENT

SPECIAL TOOLS


Illustration	Tool Number/Description
	DT 47693 Dam Protector
	DT 47694 Piston Spring Compressor
	DT 47734 Speed Sensor Harness Tether

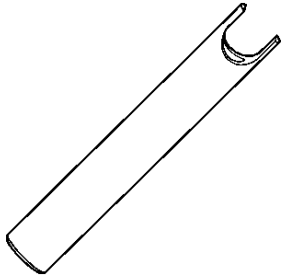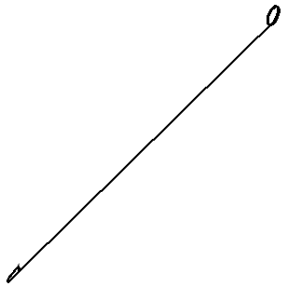


DT 47793
Differential Rotating Tool

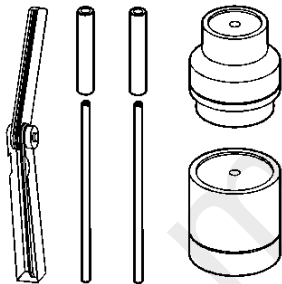


DT 47800
Shim Selection Gauge

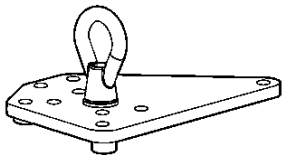


DT 47811-A
Lift Plate

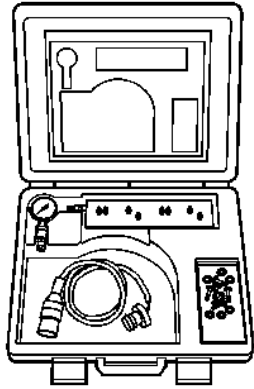


DT 47825
Control Solenoid Test Plate

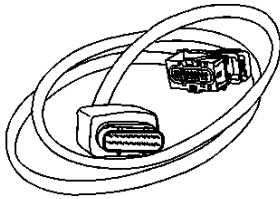


DT 47825-20
Adapter Harness

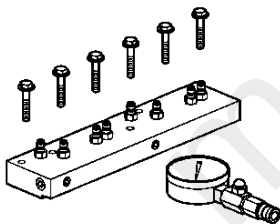


DT 47825-100
Solenoid Test Plate

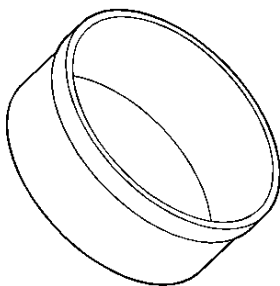


DT 47859
Piston Outer Seal Protector

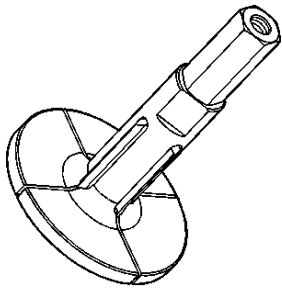

DT 47927
Bearing Cup Remover



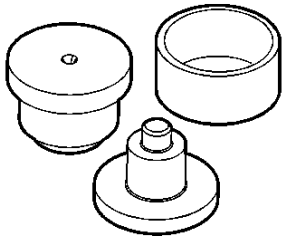


DT 47928
Bearing Installer

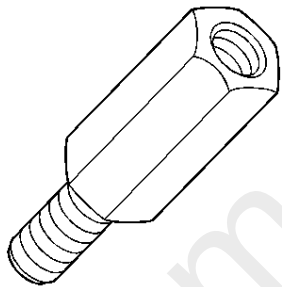


DT 48055
Lube Dam Remover

DT 48056
Spring Compressor Bridge

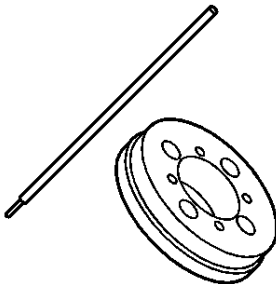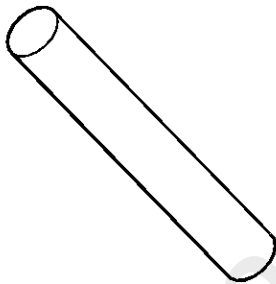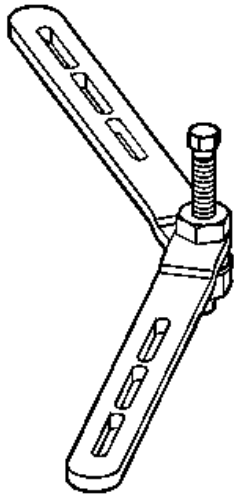


DT 48551
Reaction Hub Bushing Protector


DT 49131
Seal Staking Tool

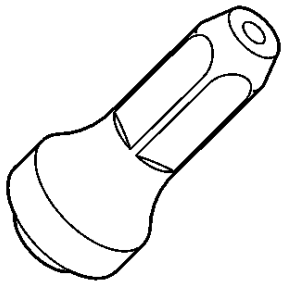


DT 49861
Seal Installer

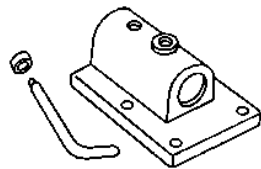

J 3289-20
Holding Fixture


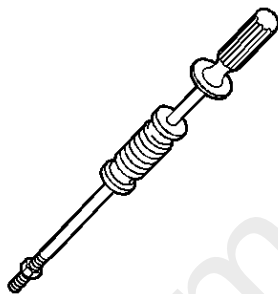


J 6125-1B
Slide Hammer with Adapter

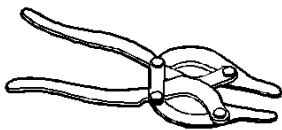


J 8059
Snap Ring Plier-Parallel Jaw


J 8092
Driver Handle

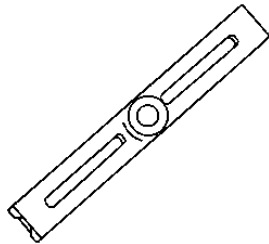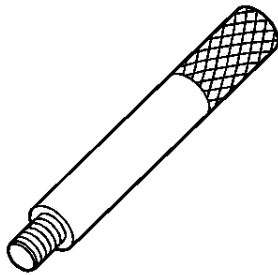

J 8433-1
Puller Bar

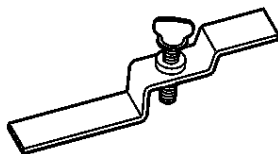


J 21366
Converter Holding Strap

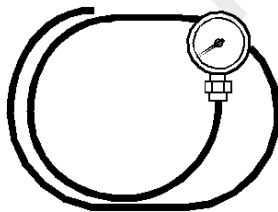


J 21867
Pressure Gauge


J 22912-01
Split Plate Bearing Remover

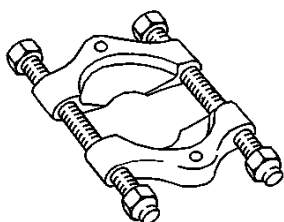


J 23129
Universal Seal Remover

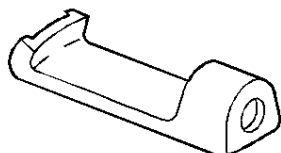

 J 23444-A
Extreme Press Lubricant-1/4 Ounce Tube




J 28585
Snap Ring Remover

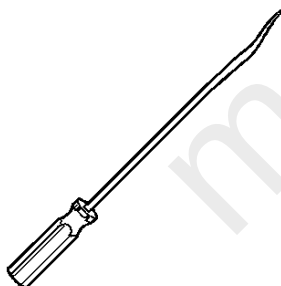


J 35616
GM-Approved Terminal Test Kit




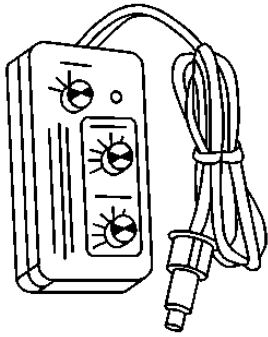


J 38522
Variable Signal Generator

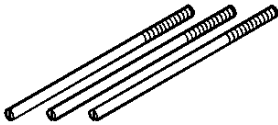


J 39068
Valve Body Guide Pins (3)

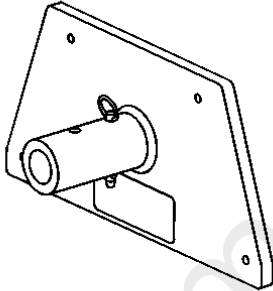


J 39890
Holding Fixture Adapter

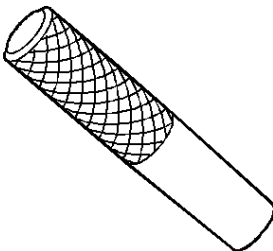


J 41229
Manual Shaft Pin Installer

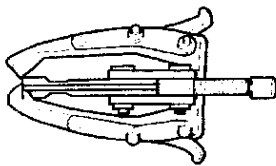

J 41816
Three Legged Puller

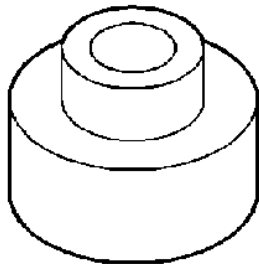


J 41816-2
Crankshaft End Protector

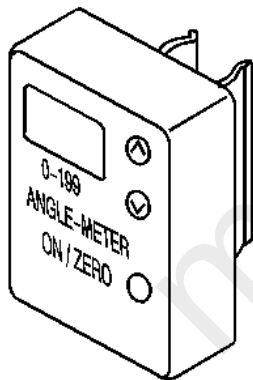


J 45059
Angle Meter

J 45087
Bearing Cup Installer


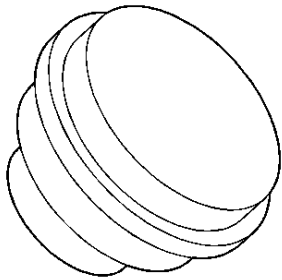


J 45094
Bearing Cup Remover

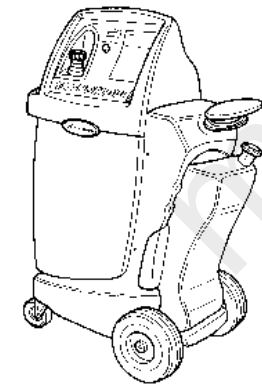


J 45096
Transmission Oil Cooling System Flush and Flow
Test Tool


J 45096-50
Transmission Cooler Flush Adapter

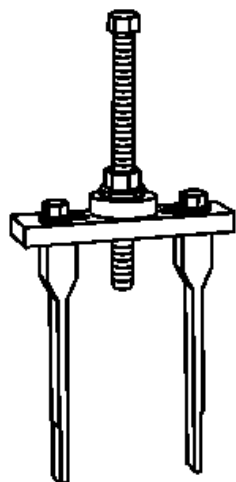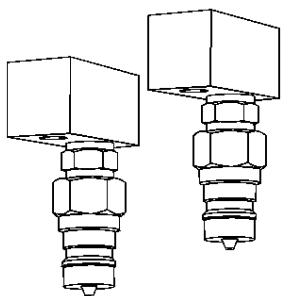


J 45124
Removal Bridge

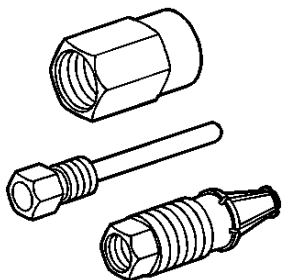


J 45201
Cooler Line Seal Remover

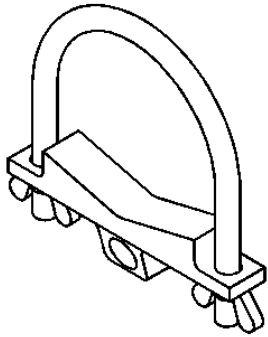

J 45341
Rear Wheel Drive Shaft Removal Tool


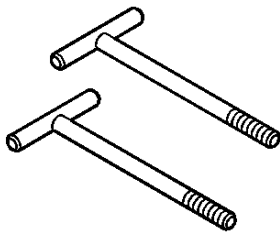


J 46409
Torque Converter Lifting Handles

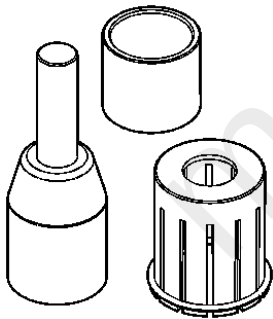


J 46620
Seal Installer


J 46621
Piston Seal Protector

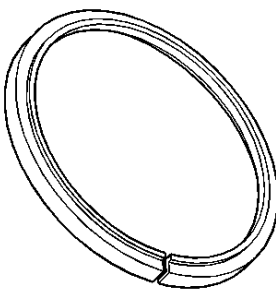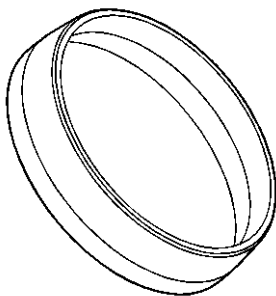


J 46622
Piston Seal Protector

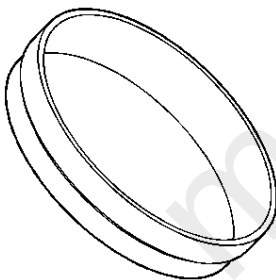


J 46623
Piston Seal Protector

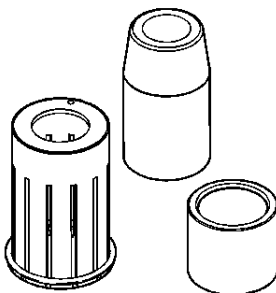


J 46624
Seal Installer

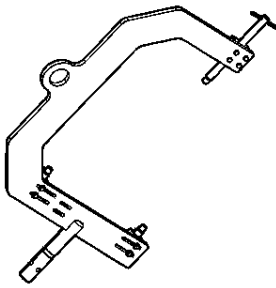


J 46625
Transmission Holding Fixture

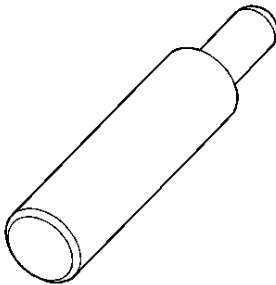


J 46626
Seal Installer

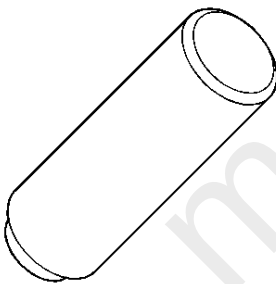


J 46627-A
Seal Installer

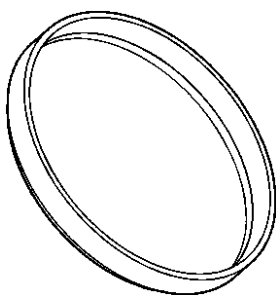


J 46628-1
Piston Seal Protector

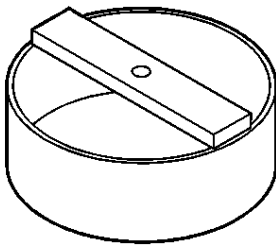


J 46628-2
Spring Compressor

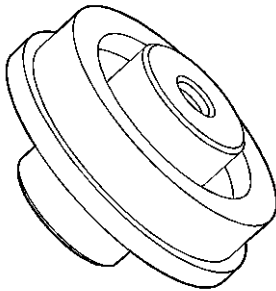

J 46629-A
Seal Installer

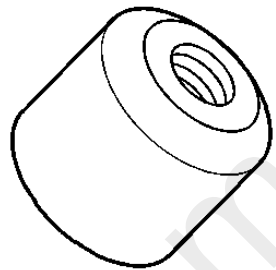

J 46630
Lube Dam Installer

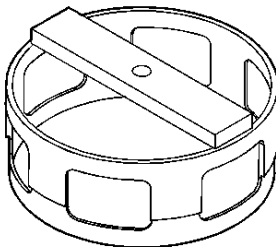

J 46632
Spring Compressor