

## 2018 ELECTRICAL

## Component Connector End Views - Index - Equinox, Terrain

**COMPONENT CONNECTOR END VIEWS - INDEX**

## Component Connector End Views

| Description                                                              |
|--------------------------------------------------------------------------|
| <a href="#">A3L Sunshade - Left</a>                                      |
| <a href="#">A3R Sunshade - Right</a>                                     |
| <a href="#">A7 Fuel Pump and Level Sensor Assembly_(LH7+F48)</a>         |
| <a href="#">A7 Fuel Pump and Level Sensor Assembly_(LH7+F48)</a>         |
| <a href="#">A7 Fuel Pump and Level Sensor Assembly_(LTG/LYX)</a>         |
| <a href="#">A7 Fuel Pump and Level Sensor Assembly_(LTG/LYX+NTB/NUB)</a> |
| <a href="#">A10 Inside Rearview Mirror (DD8)</a>                         |
| <a href="#">A11 Radio X1 (IO5/IO6)</a>                                   |
| <a href="#">A11 Radio X1 (IOB)</a>                                       |
| <a href="#">A11 Radio X2 (IO5/IO6)</a>                                   |
| <a href="#">A11 Radio X3 (IO5/IO6)</a>                                   |
| <a href="#">A11 Radio X4 (IO5/IO6)</a>                                   |
| <a href="#">A11 Radio X5 (IO5/IO6+U2K)</a>                               |
| <a href="#">A11 Radio X2 (IOB)</a>                                       |
| <a href="#">A11 Radio X4 (IOB)</a>                                       |
| <a href="#">A11 Radio X7 (IOB)</a>                                       |
| <a href="#">A11 Radio X3 (IOB+MCY)</a>                                   |
| <a href="#">A11 Radio X5 (IOB+U2K)</a>                                   |
| <a href="#">A11 Radio X1 (IOR)</a>                                       |
| <a href="#">A11 Radio X2 (IOR)</a>                                       |
| <a href="#">A11 Radio X3 (IOR)</a>                                       |
| <a href="#">A11 Radio X4 (IOR)</a>                                       |
| <a href="#">A11 Radio X5 (IOR)</a>                                       |
| <a href="#">A11 Radio X6 (IOR+UE1)</a>                                   |
| <a href="#">A11 Radio X1 (IOS/IOT/IOU)</a>                               |
| <a href="#">A11 Radio X2 (IOS/IOT/IOU)</a>                               |
| <a href="#">A11 Radio X3 (IOS/IOT/IOU)</a>                               |
| <a href="#">A11 Radio X6 (IOS/IOT/IOU)</a>                               |
| <a href="#">A11 Radio X7 (IOS/IOT/IOU)</a>                               |
| <a href="#">A11 Radio X4 (IOS/IOT/IOU+U2K)</a>                           |
| <a href="#">A11 Radio X5 (IOS/IOT/IOU+U2K)</a>                           |
| <a href="#">A11 Radio X4 (IOS/IOT/IOU-UE1)</a>                           |
| <a href="#">A22 Radio Controls (IOB/IOB)</a>                             |
| <a href="#">A23C Liftgate Latch Assembly_(TB5/TC2)</a>                   |
| <a href="#">A23D Door Latch Assembly - Driver</a>                        |
| <a href="#">A23LR Door Latch Assembly - Left Rear</a>                    |
| <a href="#">A23P Door Latch Assembly - Passenger</a>                     |
| <a href="#">A23RR Door Latch Assembly - Right Rear</a>                   |
| <a href="#">A24D Door Handle Assembly - Driver Exterior</a>              |
| <a href="#">A24LR Door Handle Assembly - Left Rear Exterior</a>          |
| <a href="#">A24P Door Handle Assembly - Passenger Exterior</a>           |
| <a href="#">A24RR Door Handle Assembly - Right Rear Exterior</a>         |
| <a href="#">A26 HVAC Controls</a>                                        |

| Description                                                                   |
|-------------------------------------------------------------------------------|
| <u>A39 Reductant Fluid Reservoir Assembly (LH7).</u>                          |
| <u>A97 Transmission Range Selector Controls (EPH).</u>                        |
| <u>A98 Front Overhead Console Assembly.</u>                                   |
| <u>B1 A/C Refrigerant Pressure Sensor</u>                                     |
| <u>B5LF Wheel Speed Sensor - Left Front</u>                                   |
| <u>B5LR Wheel Speed Sensor - Left Rear ().</u>                                |
| <u>B5RF Wheel Speed Sensor - Right Front</u>                                  |
| <u>B5RR Wheel Speed Sensor - Right Rear ().</u>                               |
| <u>B7D Air Temperature Sensor - Duct Left Lower (CJ2/C4P).</u>                |
| <u>B7E Air Temperature Sensor - Duct Right Lower (CJ2).</u>                   |
| <u>B7H Air Temperature Sensor - Duct Left Upper (CJ2/C4P).</u>                |
| <u>B7J Air Temperature Sensor - Duct Right Upper (CJ2).</u>                   |
| <u>B9 Ambient Air Temperature Sensor</u>                                      |
| <u>B10B Ambient Light/Sunload Sensor</u>                                      |
| <u>B14A Transmission Output Shaft Speed Sensor (M3D/M3H/M3U).</u>             |
| <u>B14A Transmission Output Shaft Speed Sensor (M3D/M3H/M3U).</u>             |
| <u>B14E Transmission Input/Intermediate Shaft Speed Sensor (M3D/M3H/M3U).</u> |
| <u>B15 Transmission Internal Mode Switch (M3D).</u>                           |
| <u>B18 Battery Current Sensor (-KL9).</u>                                     |
| <u>B19B Brake Booster Vacuum Sensor ().</u>                                   |
| <u>B20 Brake Fluid Level Switch</u>                                           |
| <u>B22 Brake Pedal Position Sensor</u>                                        |
| <u>B23 Camshaft Position Sensor (LH7).</u>                                    |
| <u>B23E Camshaft Position Sensor - Exhaust (LTG).</u>                         |
| <u>B23E Camshaft Position Sensor - Exhaust (LYX).</u>                         |
| <u>B23F Camshaft Position Sensor - Intake (LTG).</u>                          |
| <u>B23F Camshaft Position Sensor - Intake (LYX).</u>                          |
| <u>B24LF Mobile Telephone Microphone - Left Front</u>                         |
| <u>B24RF Mobile Telephone Microphone - Right Front (IOS/IOT/IOU).</u>         |
| <u>B26 Crankshaft Position Sensor (LH7).</u>                                  |
| <u>B26 Crankshaft Position Sensor (LTG).</u>                                  |
| <u>B26 Crankshaft Position Sensor (LYX).</u>                                  |
| <u>B34 Engine Coolant Temperature Sensor (LH7/LYX).</u>                       |
| <u>B34 Engine Coolant Temperature Sensor (LTG).</u>                           |
| <u>B35 Engine Oil Level Switch (LH7).</u>                                     |
| <u>B35 Engine Oil Level Switch (LTG).</u>                                     |
| <u>B37B Engine Oil Pressure Sensor (LH7/LYX).</u>                             |
| <u>B37B Engine Oil Pressure Sensor (LTG).</u>                                 |
| <u>B39 AC Evaporator Temperature Sensor</u>                                   |
| <u>B47 Fuel Pressure Sensor ().</u>                                           |
| <u>B47B Fuel Rail Pressure Sensor (LH7).</u>                                  |
| <u>B51F Suspension Height Sensor - Front (TR7).</u>                           |
| <u>B51R Suspension Height Sensor - Rear (TR7).</u>                            |
| <u>B52A Heated Oxygen Sensor 1 (LTG).</u>                                     |
| <u>B52A Heated Oxygen Sensor 1 (LYX).</u>                                     |
| <u>B52B Heated Oxygen Sensor 2 (LTG).</u>                                     |
| <u>B52B Heated Oxygen Sensor 2 (LYX).</u>                                     |
| <u>B55 Engine Hood Switch</u>                                                 |
| <u>B59L Front Impact Sensor - Left</u>                                        |
| <u>B59R Front Impact Sensor - Right</u>                                       |
| <u>B60 Passenger Presence Sensor (UHH-AL0).</u>                               |
| <u>B61P Seat Belt Tension Sensor - Passenger (AL0).</u>                       |
|                                                                               |

| Description                                                                         |
|-------------------------------------------------------------------------------------|
| <u>B63LF Side Impact Sensor - Left Front</u>                                        |
| <u>B63LR Side Impact Sensor - Left Rear</u>                                         |
| <u>B63RF Side Impact Sensor - Right Front</u>                                       |
| <u>B63RR Side Impact Sensor - Right Rear</u>                                        |
| <u>B65 Intake Manifold Pressure and Air Temperature Sensor (LH7/LYX)</u>            |
| <u>B68A Knock Sensor 1 (LTG/LYX)</u>                                                |
| <u>B68B Knock Sensor 2 (LTG/LYX)</u>                                                |
| <u>B70 Liftgate Close Switch (TB5/TC2)</u>                                          |
| <u>B71L Liftgate Object Sensor - Left (TB5/TC2)</u>                                 |
| <u>B71R Liftgate Object Sensor - Right (TB5/TC2)</u>                                |
| <u>B74 Manifold Absolute Pressure Sensor (LTG)</u>                                  |
| <u>B75C Multifunction Intake Air Sensor</u>                                         |
| <u>B77LF Radio Volume Compensator Interior Noise Microphone - Left Front (NKC)</u>  |
| <u>B77LR Radio Volume Compensator Interior Noise Microphone - Left Rear (NKC)</u>   |
| <u>B77RF Radio Volume Compensator Interior Noise Microphone - Right Front (NKC)</u> |
| <u>B77RR Radio Volume Compensator Interior Noise Microphone - Right Rear (NKC)</u>  |
| <u>B80 Park Brake Switch (EPH)</u>                                                  |
| <u>B80 Park Brake Switch (-EPH)</u>                                                 |
| <u>B87 Rearview Camera (UVC+X88)</u>                                                |
| <u>B87 Rearview Camera (UVC+Z88)</u>                                                |
| <u>B87 Rearview Camera (UVH+X88)</u>                                                |
| <u>B87 Rearview Camera (UVH+Z88)</u>                                                |
| <u>B107 Accelerator Pedal Position Sensor</u>                                       |
| <u>B110 Battery Sensor Module X1 (KL9)</u>                                          |
| <u>B110 Battery Sensor Module X2 (KL9)</u>                                          |
| <u>B111 Turbocharger Boost Sensor (LYX)</u>                                         |
| <u>B111B Turbocharger Boost/Intake Air Temperature Sensor (LTG)</u>                 |
| <u>B112 Turbocharger Vane Position Sensor (LH7)</u>                                 |
| <u>B116 Water in Fuel Sensor (LH7)</u>                                              |
| <u>B118B Windshield Washer Fluid Level Switch</u>                                   |
| <u>B130A Exhaust Gas Recirculation Temperature Sensor 1 (LH7)</u>                   |
| <u>B130B Exhaust Gas Recirculation Temperature Sensor 2 (LH7)</u>                   |
| <u>B131A Exhaust Temperature Sensor 1 (LH7)</u>                                     |
| <u>B131B Exhaust Temperature Sensor 2 (LH7)</u>                                     |
| <u>B131C Exhaust Temperature Sensor 3 (LH7)</u>                                     |
| <u>B136 Exhaust Particulate Matter Sensor (LH7)</u>                                 |
| <u>B150 Fuel Tank Pressure Sensor (LTG/LYX+NTB/NUB)</u>                             |
| <u>B153D Seat Belt Buckle - Driver</u>                                              |
| <u>B153LR Seat Belt Buckle - Left Rear (UH5)</u>                                    |
| <u>B153P Seat Belt Buckle - Passenger</u>                                           |
| <u>B153RM Seat Belt Buckle - Rear Middle (UH5)</u>                                  |
| <u>B153RR Seat Belt Buckle - Right Rear (UH5)</u>                                   |
| <u>B154 Diesel Particulate Filter Exhaust Differential Pressure Sensor (LH7)</u>    |
| <u>B160 Windshield Temperature and Inside Moisture Sensor (ASV)</u>                 |
| <u>B174G Frontview Camera - Grille (UVH)</u>                                        |
| <u>B177 Rain/Ambient Light Sensor Module (CE1)</u>                                  |
| <u>B193A Charge Air Cooler Inlet Temperature Sensor (LH7)</u>                       |
| <u>B193B Charge Air Cooler Outlet Temperature Sensor (LH7)</u>                      |
| <u>B195A Nitrogen Oxides Sensor 1 (LH7)</u>                                         |
| <u>B195B Nitrogen Oxides Sensor 2 (LH7)</u>                                         |
| <u>B203 Radiator Coolant Temperature Sensor (LH7)</u>                               |
| <u>B218L Side Object Sensor Module - Left (UKC)</u>                                 |
|                                                                                     |

| Description                                                                            |
|----------------------------------------------------------------------------------------|
| <u>B218R Side Object Sensor Module - Right (UKC).</u>                                  |
| <u>B267 Piston Cooling Oil Pressure Switch (LH7).</u>                                  |
| <u>B280 Automatic Transmission Accumulator Solenoid Valve (KL9+M3D/M3H/M3U).</u>       |
| <u>B280 Automatic Transmission Accumulator Solenoid Valve (KL9+MHG/MNH).</u>           |
| <u>B295 Reductant Quality Sensor (LH7).</u>                                            |
| <u>B306A Parking Assist Sensor - Front Left Outer (UD5/UFQ).</u>                       |
| <u>B306B Parking Assist Sensor - Front Left Middle (UD5/UFQ).</u>                      |
| <u>B306C Parking Assist Sensor - Front Right Middle (UD5/UFQ).</u>                     |
| <u>B306D Parking Assist Sensor - Front Right Outer (UD5/UFQ).</u>                      |
| <u>B306E Parking Assist Sensor - Rear Left Outer (UD5/UD7/UFQ).</u>                    |
| <u>B306F Parking Assist Sensor - Rear Left Middle (UD5/UD7/UFQ).</u>                   |
| <u>B306G Parking Assist Sensor - Rear Right Middle (UD5/UD7/UFQ).</u>                  |
| <u>B306H Parking Assist Sensor - Rear Right Outer (UD5/UD7/UFQ).</u>                   |
| <u>B306K Parking Assist Sensor - Side Left Front (UFQ).</u>                            |
| <u>B306L Parking Assist Sensor - Side Right Front (UFQ).</u>                           |
| <u>B310 Fuel Pressure/Temperature Sensor (LTG/LYX).</u>                                |
| <u>B315A Transmission Range Control Valve 1 Position Switch (M3H/M3U).</u>             |
| <u>B315B Transmission Range Control Valve 2 Position Switch (M3H/M3U).</u>             |
| <u>B316 Transmission Park Valve Position Switch (M3H/M3U).</u>                         |
| <u>C3 Telematics Communication Interface Control Module Battery (UE1+IOB/IO5/IO6).</u> |
| <u>E1AC Accent Lamp - Center Console Cupholder</u>                                     |
| <u>E1C Accent Lamp - Driver Door Handle</u>                                            |
| <u>E1D Accent Lamp - Driver Door (X88+TSQ).</u>                                        |
| <u>E1D Accent Lamp - Driver Door (Z88+TSQ).</u>                                        |
| <u>E1H Accent Lamp - Right Instrument Panel (TSQ).</u>                                 |
| <u>E1M Accent Lamp - Passenger Door Handle</u>                                         |
| <u>E1P Accent Lamp - Passenger Door (X88+TSQ).</u>                                     |
| <u>E1P Accent Lamp - Passenger Door (Z88+TSQ).</u>                                     |
| <u>E4LF Turn Signal Lamp - Left Front (X88+T3U).</u>                                   |
| <u>E4LF Turn Signal Lamp - Left Front (X88-T3U/MAM).</u>                               |
| <u>E4RF Turn Signal Lamp - Right Front (X88+T3U).</u>                                  |
| <u>E4RF Turn Signal Lamp - Right Front (X88-T3U/MAM).</u>                              |
| <u>E6 Center High Mounted Stop Lamp (EPH).</u>                                         |
| <u>E6 Center High Mounted Stop Lamp (-EPH).</u>                                        |
| <u>E7L License Plate Lamp - Left (X88).</u>                                            |
| <u>E7L License Plate Lamp - Left (Z88).</u>                                            |
| <u>E7R License Plate Lamp - Right (X88).</u>                                           |
| <u>E7R License Plate Lamp - Right (Z88).</u>                                           |
| <u>E8S Rear Compartment Courtesy Lamp</u>                                              |
| <u>E11 Fuel Heater (LH7).</u>                                                          |
| <u>E12A Glow Plug 1 (LH7).</u>                                                         |
| <u>E12B Glow Plug 2 (LH7).</u>                                                         |
| <u>E12C Glow Plug 3 (LH7).</u>                                                         |
| <u>E12D Glow Plug 4 (LH7).</u>                                                         |
| <u>E14A Seat Heating Element - Driver Back (KA1).</u>                                  |
| <u>E14B Seat Heating Element - Driver Cushion (KA1).</u>                               |
| <u>E14C Seat Heating Element - Passenger Back (KA1).</u>                               |
| <u>E14D Seat Heating Element - Passenger Cushion (KA1).</u>                            |
| <u>E14E Seat Heating Element - Left Rear Back (KA6).</u>                               |
| <u>E14F Seat Heating Element - Left Rear Cushion (KA6).</u>                            |
| <u>E14G Seat Heating Element - Right Rear Back (KA6).</u>                              |
| <u>E14H Seat Heating Element - Right Rear Cushion (KA6).</u>                           |

| Description                                                   |
|---------------------------------------------------------------|
| <u>E15 Steering Wheel Heater (UVD).</u>                       |
| <u>E18 Rear Defogger Grid X1</u>                              |
| <u>E18 Rear Defogger Grid X2</u>                              |
| <u>E28 Center Console Compartment Lamp</u>                    |
| <u>E29LF Fog Lamp - Left Front (T3U).</u>                     |
| <u>E29R Fog Lamp - Rear (T79).</u>                            |
| <u>E29RF Fog Lamp - Right Front (T3U).</u>                    |
| <u>E32 Cigarette Lighter Receptacle (SAO/U37).</u>            |
| <u>E37LR Dome/Reading Lamps - Left Rear</u>                   |
| <u>E37RR Dome/Reading Lamps - Right Rear</u>                  |
| <u>E40 Electrical Auxiliary Heater X1 (C32).</u>              |
| <u>E40 Electrical Auxiliary Heater X2 (C32).</u>              |
| <u>E40 Electrical Auxiliary Heater X3 (C32).</u>              |
| <u>E42L Tail Lamp Assembly - Left (X88+UGE).</u>              |
| <u>E42L Tail Lamp Assembly - Left X1 (X88-UGE).</u>           |
| <u>E42L Tail Lamp Assembly - Left X2 (X88-UGE).</u>           |
| <u>E42R Tail Lamp Assembly - Right (X88+UGE).</u>             |
| <u>E42R Tail Lamp Assembly - Right X1 (X88-UGE).</u>          |
| <u>E42R Tail Lamp Assembly - Right X2 (X88-UGE).</u>          |
| <u>E43L Liftgate Tail Lamp Assembly - Left X1 (X88+UGE).</u>  |
| <u>E43L Liftgate Tail Lamp Assembly - Left X2 (X88+UGE).</u>  |
| <u>E43L Liftgate Tail Lamp Assembly - Left X0 (X88-UGE).</u>  |
| <u>E43L Liftgate Tail Lamp Assembly - Left (Z88+V9V).</u>     |
| <u>E43L Liftgate Tail Lamp Assembly - Left (Z88-9V9).</u>     |
| <u>E43R Liftgate Tail Lamp Assembly - Right X1 (X88+UGE).</u> |
| <u>E43R Liftgate Tail Lamp Assembly - Right X2 (X88+UGE).</u> |
| <u>E43R Liftgate Tail Lamp Assembly - Right X0 (X88-UGE).</u> |
| <u>E43R Liftgate Tail Lamp Assembly - Right (Z88+V9V).</u>    |
| <u>E43R Liftgate Tail Lamp Assembly - Right (Z88-V9V).</u>    |
| <u>E45 Positive Crankcase Ventilation Heater (LH7).</u>       |
| <u>E52 Reductant Line Heater (LH7).</u>                       |
| <u>F101 Passenger Instrument Panel Air Bag (AJG).</u>         |
| <u>F101 Passenger Instrument Panel Air Bag X1 (AY0).</u>      |
| <u>F101 Passenger Instrument Panel Air Bag X2 (AY0).</u>      |
| <u>F105L Roof Rail Air Bag - Left (AY0).</u>                  |
| <u>F105R Roof Rail Air Bag - Right (AY0).</u>                 |
| <u>F106D Seat Side Air Bag - Driver ().</u>                   |
| <u>F106P Seat Side Air Bag - Passenger ().</u>                |
| <u>F107 Steering Wheel Air Bag (AJG).</u>                     |
| <u>F107 Steering Wheel Air Bag X1 (AY0).</u>                  |
| <u>F107 Steering Wheel Air Bag X2 (AY0).</u>                  |
| <u>F112D Seat Belt Retractor Pretensioner - Driver</u>        |
| <u>F112P Seat Belt Retractor Pretensioner - Passenger</u>     |
| <u>F113D Seat Belt Anchor Pretensioner - Driver ().</u>       |
| <u>F113P Seat Belt Anchor Pretensioner - Passenger ().</u>    |
| <u>G10 Cooling Fan Motor</u>                                  |
| <u>G13 Generator X1</u>                                       |
| <u>G13 Generator X2 (LH7/LTG).</u>                            |
| <u>G13 Generator X2 (LYX).</u>                                |
| <u>G18 High Pressure Fuel Pump (LTG/LYX).</u>                 |
| <u>G19 Rear Window Washer Pump</u>                            |
| <u>G24 Windshield Washer Pump</u>                             |
|                                                               |

| Description                                                                            |
|----------------------------------------------------------------------------------------|
| <u>G36 Auxiliary Heater Coolant Pump (KL9).</u>                                        |
| <u>K9 Body Control Module X1 ().</u>                                                   |
| <u>K9 Body Control Module X2</u>                                                       |
| <u>K9 Body Control Module X3</u>                                                       |
| <u>K9 Body Control Module X4 ().</u>                                                   |
| <u>K9 Body Control Module X5</u>                                                       |
| <u>K9 Body Control Module X6</u>                                                       |
| <u>K9 Body Control Module X7</u>                                                       |
| <u>K17 Electronic Brake Control Module ().</u>                                         |
| <u>K20 Engine Control Module X1 (LH7).</u>                                             |
| <u>K20 Engine Control Module X2 (LH7).</u>                                             |
| <u>K20 Engine Control Module X3 (LH7).</u>                                             |
| <u>K20 Engine Control Module X1 (LTG).</u>                                             |
| <u>K20 Engine Control Module X2 (LTG).</u>                                             |
| <u>K20 Engine Control Module X3 (LTG).</u>                                             |
| <u>K20 Engine Control Module X1 (LYX).</u>                                             |
| <u>K20 Engine Control Module X2 (LYX).</u>                                             |
| <u>K20 Engine Control Module X3 (LYX).</u>                                             |
| <u>K26 Headlamp Control Module (TR7).</u>                                              |
| <u>K29F Seat Heating Control Module - Front X1 (KA1).</u>                              |
| <u>K29F Seat Heating Control Module - Front X2 (KA1).</u>                              |
| <u>K29R Seat Heating Control Module - Rear X1 (KA6).</u>                               |
| <u>K29R Seat Heating Control Module - Rear X2 (KA6).</u>                               |
| <u>K32 Steering Wheel Heating Control Module (UVD).</u>                                |
| <u>K33 HVAC Control Module X1</u>                                                      |
| <u>K33 HVAC Control Module X2</u>                                                      |
| <u>K33 HVAC Control Module X3</u>                                                      |
| <u>K33 HVAC Control Module X4 (CJ2).</u>                                               |
| <u>K36 Inflatable Restraint Sensing and Diagnostic Module X1</u>                       |
| <u>K36 Inflatable Restraint Sensing and Diagnostic Module X2</u>                       |
| <u>K39 Liftgate Control Module X1 (TB5/TC2).</u>                                       |
| <u>K39 Liftgate Control Module X2 (TB5/TC2).</u>                                       |
| <u>K39 Liftgate Control Module X3 (TB5/TC2).</u>                                       |
| <u>K40D Seat Memory Control Module - Driver X1 (A45/A74).</u>                          |
| <u>K40D Seat Memory Control Module - Driver X2 (A45/A74).</u>                          |
| <u>K40D Seat Memory Control Module - Driver X3 (A45/A74).</u>                          |
| <u>K40D Seat Memory Control Module - Driver X5 (A45/A74).</u>                          |
| <u>K40D Seat Memory Control Module - Driver X6 (A45/A74).</u>                          |
| <u>K43 Power Steering Control Module X1</u>                                            |
| <u>K43 Power Steering Control Module X2</u>                                            |
| <u>K47 Rear Differential Clutch Control Module X1 (F48).</u>                           |
| <u>K47 Rear Differential Clutch Control Module X2 (F48).</u>                           |
| <u>K56 Serial Data Gateway Module X1</u>                                               |
| <u>K56 Serial Data Gateway Module X2</u>                                               |
| <u>K61 Sunroof Control Module (C3U).</u>                                               |
| <u>K62 Sunroof Sunshade Motor Module (C3U).</u>                                        |
| <u>K71 Transmission Control Module (M3D/M3H/M3U).</u>                                  |
| <u>K73 Telematics Communication Interface Control Module X5 (UE1).</u>                 |
| <u>K73 Telematics Communication Interface Control Module X7 (UE1).</u>                 |
| <u>K73 Telematics Communication Interface Control Module X1 (UE1+IOB/IO5/IO6).</u>     |
| <u>K73 Telematics Communication Interface Control Module X2 (UE1+IOB/IO5/IO6).</u>     |
| <u>K73 Telematics Communication Interface Control Module X1 (UE1+IOR/IOS/IOT/IOU).</u> |

| Description                                                                           |
|---------------------------------------------------------------------------------------|
| <u>K74 Human Machine Interface Control Module X1 (IO5/IO6)</u>                        |
| <u>K74 Human Machine Interface Control Module X2 (IO5/IO6)</u>                        |
| <u>K74 Human Machine Interface Control Module X3 (IO5/IO6)</u>                        |
| <u>K74 Human Machine Interface Control Module X4 (IO5/IO6)</u>                        |
| <u>K74 Human Machine Interface Control Module X5 (IO5/IO6)</u>                        |
| <u>K74 Human Machine Interface Control Module X7 (IO6)</u>                            |
| <u>K77 Remote Control Door Lock Receiver</u>                                          |
| <u>K84 Keyless Entry Control Module X1</u>                                            |
| <u>K84 Keyless Entry Control Module X2</u>                                            |
| <u>K85 Passenger Presence Module (AL0)</u>                                            |
| <u>K89 Immobilizer Control Module</u>                                                 |
| <u>K108 Active Noise Cancellation Module X1 (NKC+UZ6-IOR)</u>                         |
| <u>K108 Active Noise Cancellation Module X2 (NKC+UZ6-IOR)</u>                         |
| <u>K108 Active Noise Cancellation Module X3 (NKC+UZ6-IOR)</u>                         |
| <u>K109 Frontview Camera Module (UEU/UHX)</u>                                         |
| <u>K111 Fuel Pump Driver Control Module (LH7)</u>                                     |
| <u>K111 Fuel Pump Driver Control Module (LTG/LYX+X88)</u>                             |
| <u>K111 Fuel Pump Driver Control Module (LTG/LYX+Z88)</u>                             |
| <u>K115 Reductant Control Module X1 (LH7)</u>                                         |
| <u>K115 Reductant Control Module X2 (LH7)</u>                                         |
| <u>K157 Video Processing Control Module X1 (UVH)</u>                                  |
| <u>K157 Video Processing Control Module X2 (UVH)</u>                                  |
| <u>K157 Video Processing Control Module X3 (UVH)</u>                                  |
| <u>K171 Hands-Free Liftgate Sensor Control Module X1 (TC2)</u>                        |
| <u>K171 Hands-Free Liftgate Sensor Control Module X2 (TC2)</u>                        |
| <u>K171 Hands-Free Liftgate Sensor Control Module X3 (TC2)</u>                        |
| <u>K173 Transmission Range Control Module (LH7+EPH)</u>                               |
| <u>K182 Parking Assist Control Module X1 (UD5/UD7/UFQ)</u>                            |
| <u>K182 Parking Assist Control Module X2 (UD5/UD7/UFQ)</u>                            |
| <u>K182 Parking Assist Control Module X3 (UD5/UFQ)</u>                                |
| <u>K188 Human Machine Interface Control Module Bypass Module X1 (IO5/IO6+MAH/MBC)</u> |
| <u>K188 Human Machine Interface Control Module Bypass Module X2 (IO5/IO6+MAH/MBC)</u> |
| <u>K188 Human Machine Interface Control Module Bypass Module X3 (IO5/IO6+MAH/MBC)</u> |
| <u>M6 Air Temperature Door Actuator (C67)</u>                                         |
| <u>M6L Air Temperature Door Actuator - Left (CJ2/C4P)</u>                             |
| <u>M6R Air Temperature Door Actuator - Right (CJ2)</u>                                |
| <u>M8 Blower Motor</u>                                                                |
| <u>M17 Liftgate Motor Assembly (TB5/TC2)</u>                                          |
| <u>M30 Liftgate Latch (TB4)</u>                                                       |
| <u>M32 Differential Clutch Pump (F48)</u>                                             |
| <u>M35D Window Motor Module - Driver</u>                                              |
| <u>M37 Mode Door Actuator</u>                                                         |
| <u>M45 Rear Wiper Motor</u>                                                           |
| <u>M46 Air Recirculation Door Actuator</u>                                            |
| <u>M50D Seat Front Vertical Motor - Driver (A45/AG1)</u>                              |
| <u>M50P Seat Front Vertical Motor - Passenger (ADT/AG2)</u>                           |
| <u>M51D Seat Horizontal Motor - Driver (A45/AG1)</u>                                  |
| <u>M51P Seat Horizontal Motor - Passenger (ADT/AG2)</u>                               |
| <u>M53D Seat Lumbar Support Motor - Driver (AL9+X88)</u>                              |
| <u>M53D Seat Lumbar Support Motor - Driver (AL9+Z88)</u>                              |
| <u>M53P Seat Lumbar Support Motor - Passenger (AT9+X88)</u>                           |
| <u>M53P Seat Lumbar Support Motor - Passenger (AT9+Z88)</u>                           |

| Description                                                           |
|-----------------------------------------------------------------------|
| <u>M55D Seat Rear Vertical Motor - Driver (A45/AG1).</u>              |
| <u>M55P Seat Rear Vertical Motor - Passenger (ADT/AG2).</u>           |
| <u>M56D Seat Recline Motor - Driver (A45/AG1).</u>                    |
| <u>M56P Seat Recline Motor - Passenger (AG2).</u>                     |
| <u>M64 Starter Motor X2</u>                                           |
| <u>M64 Starter Motor X1 (KL9).</u>                                    |
| <u>M64 Starter Motor X1 (-KL9).</u>                                   |
| <u>M73A Seat Blower Motor - Driver Back (KU1).</u>                    |
| <u>M73B Seat Blower Motor - Passenger Back (KU3).</u>                 |
| <u>M73C Seat Blower Motor - Driver Cushion (KU1).</u>                 |
| <u>M73D Seat Blower Motor - Passenger Cushion (KU3).</u>              |
| <u>M74LR Window Motor - Left Rear</u>                                 |
| <u>M74P Window Motor - Passenger</u>                                  |
| <u>M74RR Window Motor - Right Rear</u>                                |
| <u>M75 Windshield Wiper Motor</u>                                     |
| <u>M96A Active Grille Air Shutter 1 Actuator (VTI).</u>               |
| <u>M98 Intake Manifold Runner Valve Actuator (LH7).</u>               |
| <u>M104L Park Brake Actuator - Left ().</u>                           |
| <u>M104R Park Brake Actuator - Right</u>                              |
| <u>M115 Power Transfer Unit Shift Actuator X1 (F48).</u>              |
| <u>M115 Power Transfer Unit Shift Actuator X2 (F48).</u>              |
| <u>M123 Transmission Park Valve Lock Solenoid Actuator (M3H/M3U).</u> |
| <u>P2 Transmission Shift Lever Position Indicator</u>                 |
| <u>P13 Horn Assembly.</u>                                             |
| <u>P16 Instrument Cluster X1</u>                                      |
| <u>P16 Instrument Cluster X3</u>                                      |
| <u>P17 Info Display Module X1 (IOB).</u>                              |
| <u>P17 Info Display Module X2 (IOB/IO5/IO6).</u>                      |
| <u>P17 Info Display Module X1 (IOR).</u>                              |
| <u>P17 Info Display Module X2 (IOR).</u>                              |
| <u>P17 Info Display Module X2 (IOS/IOT/IOU).</u>                      |
| <u>P17 Info Display Module X1 (IOS/IOT/IOU/IO5/IO6).</u>              |
| <u>P19AG Speaker - Left Front Door (UQA).</u>                         |
| <u>P19AG Speaker - Left Front Door (UZ6).</u>                         |
| <u>P19AH Speaker - Right Front Door (UQA).</u>                        |
| <u>P19AH Speaker - Right Front Door (UZ6).</u>                        |
| <u>P19AL Speaker - Left Rear Door (UQA).</u>                          |
| <u>P19AL Speaker - Left Rear Door (UZ6).</u>                          |
| <u>P19AM Speaker - Right Rear Door (UQA).</u>                         |
| <u>P19AM Speaker - Right Rear Door (UZ6).</u>                         |
| <u>P19B Speaker - Center Instrument Panel (UQA).</u>                  |
| <u>P19J Speaker - Left Instrument Panel (UQA).</u>                    |
| <u>P19J Speaker - Left Instrument Panel (UZ6).</u>                    |
| <u>P19W Speaker - Right Instrument Panel (IOR+UZ6).</u>               |
| <u>P19W Speaker - Right Instrument Panel (NKC+UZ6).</u>               |
| <u>P19W Speaker - Right Instrument Panel (UQA).</u>                   |
| <u>P19W Speaker - Right Instrument Panel (UZ6).</u>                   |
| <u>P43 Collision Alert Indicators (UEU).</u>                          |
| <u>P45LR Seat Haptic Movement Motor - Driver Left Rear (UEU).</u>     |
| <u>P45RR Seat Haptic Movement Motor - Driver Right Rear (UEU).</u>    |
| <u>Q2 A/C Compressor Clutch</u>                                       |
| <u>Q6E Camshaft Position Actuator Solenoid Valve - Exhaust (LTG).</u> |

**Description**

|                                                                                |
|--------------------------------------------------------------------------------|
| <u>Q6E Camshaft Position Actuator Solenoid Valve - Exhaust (LYX)</u>           |
| <u>Q6F Camshaft Position Actuator Solenoid Valve - Intake (LTG/LYX)</u>        |
| <u>Q8 Control Solenoid Valve Assembly X1 (MHG/MNH/MNK)</u>                     |
| <u>Q8 Control Solenoid Valve Assembly X2 (MHG/MNH/MNK)</u>                     |
| <u>Q8 Control Solenoid Valve Assembly X3 (MHG/MNH/MNK)</u>                     |
| <u>Q8 Control Solenoid Valve Assembly X4 (MHG/MNH/MNK)</u>                     |
| <u>Q12 Evaporative Emission Purge Solenoid Valve (LTG/LYX)</u>                 |
| <u>Q13 Evaporative Emission Vent Solenoid Valve (LTG/LYX)</u>                  |
| <u>Q14 Exhaust Gas Recirculation Valve (LH7)</u>                               |
| <u>Q17A Fuel Injector 1 (LH7)</u>                                              |
| <u>Q17A Fuel Injector 1 (LTG)</u>                                              |
| <u>Q17A Fuel Injector 1 (LYX)</u>                                              |
| <u>Q17B Fuel Injector 2 (LH7)</u>                                              |
| <u>Q17B Fuel Injector 2 (LTG)</u>                                              |
| <u>Q17B Fuel Injector 2 (LYX)</u>                                              |
| <u>Q17C Fuel Injector 3 (LH7)</u>                                              |
| <u>Q17C Fuel Injector 3 (LTG)</u>                                              |
| <u>Q17C Fuel Injector 3 (LYX)</u>                                              |
| <u>Q17D Fuel Injector 4 (LH7)</u>                                              |
| <u>Q17D Fuel Injector 4 (LTG)</u>                                              |
| <u>Q17D Fuel Injector 4 (LYX)</u>                                              |
| <u>Q18A Fuel Pressure Regulator 1 (LH7)</u>                                    |
| <u>Q18B Fuel Pressure Regulator 2 (LH7)</u>                                    |
| <u>Q38 Throttle Body (LH7)</u>                                                 |
| <u>Q38 Throttle Body (LTG/LYX)</u>                                             |
| <u>Q40 Turbocharger Bypass Solenoid Valve (LTG/LYX)</u>                        |
| <u>Q41 Turbocharger Vane Position Control Solenoid Valve (LH7)</u>             |
| <u>Q42 Turbocharger Wastegate Solenoid Valve (LTG)</u>                         |
| <u>Q42 Turbocharger Wastegate Solenoid Valve (LYX)</u>                         |
| <u>Q44 Engine Oil Pressure Control Solenoid Valve (LH7)</u>                    |
| <u>Q44 Engine Oil Pressure Control Solenoid Valve (LTG)</u>                    |
| <u>Q44 Engine Oil Pressure Control Solenoid Valve (LYX)</u>                    |
| <u>Q45 Piston Cooling Oil Jet Solenoid Valve (LH7)</u>                         |
| <u>Q46 A/C Compressor Solenoid Valve</u>                                       |
| <u>Q47 Exhaust Gas Recirculation Cooler Bypass Solenoid Valve (LH7)</u>        |
| <u>Q61 Reductant Injector (LH7)</u>                                            |
| <u>Q77A Transmission Control Solenoid Valve 1 (M3D/M3H/M3U)</u>                |
| <u>Q77B Transmission Control Solenoid Valve 2 (M3D/M3H/M3U)</u>                |
| <u>Q77C Transmission Control Solenoid Valve 3 (M3D/M3H/M3U)</u>                |
| <u>Q77D Transmission Control Solenoid Valve 4 (M3D/M3H/M3U)</u>                |
| <u>Q77E Transmission Control Solenoid Valve 5 (M3D/M3H/M3U)</u>                |
| <u>Q77F Transmission Control Solenoid Valve 6 (M3D/M3H/M3U)</u>                |
| <u>Q77G Transmission Control Solenoid Valve 7 (M3D/M3H/M3U)</u>                |
| <u>Q77H Transmission Control Solenoid Valve 8 (M3D/M3H/M3U)</u>                |
| <u>Q77J Transmission Control Solenoid Valve 9 (M3D/M3H/M3U)</u>                |
| <u>Q77K Transmission Control Solenoid Valve 10 (M3D/M3H/M3U)</u>               |
| <u>Q84C Camshaft Position Actuator Park Lock Solenoid Valve - Intake (LYX)</u> |
| <u>R6A Terminating Resistor - High Speed Bus</u>                               |
| <u>R6E Terminating Resistor - High Speed Extension Bus 1 (TR7)</u>             |
| <u>R6F Terminating Resistor - High Speed Extension Bus 2</u>                   |
| <u>S3 Transmission Shift Lever (-EPH)</u>                                      |
| <u>S13D Door Lock Switch - Driver</u>                                          |

| Description                                                |
|------------------------------------------------------------|
| <u>S13P Door Lock Switch - Passenger</u>                   |
| <u>S25 Garage Door Opener (UG1)</u>                        |
| <u>S26 Hazard Warning Switch</u>                           |
| <u>S30 Headlamp Switch</u>                                 |
| <u>S32D Seat Heating Switch - Driver (Z88+KA1)</u>         |
| <u>S32LR Seat Heating Switch - Left Rear (KA6)</u>         |
| <u>S32P Seat Heating Switch - Passenger (Z88+KA1)</u>      |
| <u>S32RR Seat Heating Switch - Right Rear (KA6)</u>        |
| <u>S33 Horn Switch X1</u>                                  |
| <u>S33 Horn Switch X2</u>                                  |
| <u>S38 Ignition Mode Switch (X88)</u>                      |
| <u>S38 Ignition Mode Switch (Z88)</u>                      |
| <u>S45B Liftgate Control Switch - Interior (TB5/TC2)</u>   |
| <u>S46B Liftgate Unlatch Switch</u>                        |
| <u>S47D Seat Memory Switch - Driver (A45/A74)</u>          |
| <u>S64D Seat Adjuster Switch - Driver (AG1)</u>            |
| <u>S64P Seat Adjuster Switch - Passenger (AG2+X88)</u>     |
| <u>S64P Seat Adjuster Switch - Passenger (AG2+Z88)</u>     |
| <u>S65D Seat Lumbar Support Switch - Driver (AL9)</u>      |
| <u>S65P Seat Lumbar Support Switch - Passenger (AT9)</u>   |
| <u>S70E Steering Wheel Controls Switch - Radio Presets</u> |
| <u>S70F Steering Wheel Controls Switch - Radio Volume</u>  |
| <u>S70L Steering Wheel Controls Switch - Left (EPH)</u>    |
| <u>S70L Steering Wheel Controls Switch - Left (-EPH)</u>   |
| <u>S70R Steering Wheel Controls Switch - Right (-EPH)</u>  |
| <u>S70R Steering Wheel Controls Switch - Right (EPH)</u>   |
| <u>S78 Turn Signal/Multifunction Switch</u>                |
| <u>S79D Window Switch - Driver ()</u>                      |
| <u>S79LR Window Switch - Left Rear (X88)</u>               |
| <u>S79LR Window Switch - Left Rear (Z88)</u>               |
| <u>S79P Window Switch - Passenger</u>                      |
| <u>S79RR Window Switch - Right Rear (X88)</u>              |
| <u>S79RR Window Switch - Right Rear (Z88)</u>              |
| <u>S82 Windshield Wiper/Washer Switch</u>                  |
| <u>S107 Parking Assist On/Off Switch (UFQ+EPH)</u>         |
| <u>S107 Parking Assist On/Off Switch (UFQ-EPH)</u>         |
| <u>S126 Drive Mode Select Switch (EPH)</u>                 |
| <u>S126 Drive Mode Select Switch (-EPH)</u>                |
| <u>T1 Accessory DC/AC Power Inverter Module (KI6)</u>      |
| <u>T1 Accessory DC/AC Power Inverter Module (KI7)</u>      |
| <u>T2RR Antenna - Roof Rear (IOB/IO5/IO6-U2Q)</u>          |
| <u>T2RR Antenna - Roof Rear X2 (U2K)</u>                   |
| <u>T2RR Antenna - Roof Rear X1 (UE1)</u>                   |
| <u>T3 Audio Amplifier X1 (UQA)</u>                         |
| <u>T3 Audio Amplifier X2 (UQA)</u>                         |
| <u>T3 Audio Amplifier X3 (UQA)</u>                         |
| <u>T3 Audio Amplifier X4 (UQA)</u>                         |
| <u>T8A Ignition Coil 1 (LTG)</u>                           |
| <u>T8A Ignition Coil 1 (LYX)</u>                           |
| <u>T8B Ignition Coil 2 (LTG)</u>                           |
| <u>T8B Ignition Coil 2 (LYX)</u>                           |
| <u>T8C Ignition Coil 3 (LTG)</u>                           |
|                                                            |

| Description                                                         |
|---------------------------------------------------------------------|
| <u>T8C Ignition Coil 3 (LYX).</u>                                   |
| <u>T8D Ignition Coil 4 (LTG).</u>                                   |
| <u>T8D Ignition Coil 4 (LYX).</u>                                   |
| <u>T10E Keyless Entry Antenna - Rear Compartment</u>                |
| <u>T10G Keyless Entry Antenna - Rear Fascia</u>                     |
| <u>T10J Keyless Entry Antenna - Center Console Front</u>            |
| <u>T10K Keyless Entry Antenna - Center Console Rear</u>             |
| <u>T12 Automatic Transmission Assembly X1 (M3D/M3H/M3U).</u>        |
| <u>T12 Automatic Transmission Assembly X2 (M3D/M3H/M3U).</u>        |
| <u>T12 Automatic Transmission Assembly X3 (M3D/M3H/M3U).</u>        |
| <u>T15 Navigation Antenna Signal Splitter X1 (IO6).</u>             |
| <u>T15 Navigation Antenna Signal Splitter X2 (IO6).</u>             |
| <u>T15 Navigation Antenna Signal Splitter X3 (IO6).</u>             |
| <u>T19 Power Supply Transformer (KL9).</u>                          |
| <u>T22 Mobile Device Wireless Charger Module (K4C+EPH).</u>         |
| <u>T22 Mobile Device Wireless Charger Module (K4C-EPH).</u>         |
| <u>X22 USB Drive Data Connector (UDD+IOS/IOT/IOU).</u>              |
| <u>X80C Accessory Power Receptacle - Cargo</u>                      |
| <u>X80G Accessory Power Receptacle - Instrument Panel (KC5).</u>    |
| <u>X80L Accessory Power Receptacle - Center Console Rear (KPA).</u> |
| <u>X81 Accessory Power Receptacle - 110V AC X1 (KI6).</u>           |
| <u>X81 Accessory Power Receptacle - 110V AC X2 (KI6).</u>           |
| <u>X81B Accessory Power Receptacle - 220V AC X1 (KI7).</u>          |
| <u>X81B Accessory Power Receptacle - 220V AC X2 (KI7).</u>          |
| <u>X83 Auxiliary Audio Input X1 (IO5/IO6+UST).</u>                  |
| <u>X83 Auxiliary Audio Input X2 (IO5/IO6+UST).</u>                  |
| <u>X83 Auxiliary Audio Input X1 (IOB+USR).</u>                      |
| <u>X83 Auxiliary Audio Input X2 (IOB+USR).</u>                      |
| <u>X83 Auxiliary Audio Input X1 (Z88).</u>                          |
| <u>X83 Auxiliary Audio Input X2 (Z88).</u>                          |
| <u>X84 Data Link Connector</u>                                      |
| <u>X85 Steering Wheel Air Bag Coil X1 ().</u>                       |
| <u>X85 Steering Wheel Air Bag Coil X2</u>                           |
| <u>X88 Trailer Connector (V92).</u>                                 |
| <u>X88 Trailer Connector (-V92).</u>                                |
| <u>X92 USB Receptacle X1 (IOB+MCY).</u>                             |
| <u>X92 USB Receptacle X2 (IOB+MCY).</u>                             |
| <u>X92 USB Receptacle X1 (MYC+IO5/IO6).</u>                         |
| <u>X92 USB Receptacle X2 (MYC+IO5/IO6).</u>                         |
| <u>X92 USB Receptacle X1 (MCZ).</u>                                 |
| <u>X92 USB Receptacle X2 (MCZ).</u>                                 |
| <u>X92 USB Receptacle X3 (MCZ).</u>                                 |
| <u>X92C USB Receptacle - Center Console Rear (USS).</u>             |

## 2018 ELECTRICAL

## Inline Harness Connector End Views - Index - Equinox, Terrain

**INLINE HARNESS CONNECTOR END VIEWS - INDEX**

## Inline Harness Connector End Views

| Description                                                                                                          |
|----------------------------------------------------------------------------------------------------------------------|
| <a href="#"><u>X100 Front Fascia Harness to Body Harness</u></a>                                                     |
| <a href="#"><u>X101 Body Harness to Forward Lamp Harness</u></a>                                                     |
| <a href="#"><u>X102 Forward Lamp Harness to Forward Lamp Extension Harness</u></a>                                   |
| <a href="#"><u>X103 Forward Lamp Harness to Cooling Fan Harness</u></a>                                              |
| <a href="#"><u>X104 Cooling Fan Harness to Forward Lamp Harness</u></a>                                              |
| <a href="#"><u>X106 Engine Harness to Body Harness ()</u></a>                                                        |
| <a href="#"><u>X107 Engine Harness to Body Harness</u></a>                                                           |
| <a href="#"><u>X108 Engine Harness to Crankshaft Position Sensor Jumper Harness (LH7)</u></a>                        |
| <a href="#"><u>X110 Forward Lamp Harness to Left Headlamp Harness (T4A)</u></a>                                      |
| <a href="#"><u>X110 Forward Lamp Harness to Left Headlamp Harness (T4F+TR6)</u></a>                                  |
| <a href="#"><u>X110 Forward Lamp Harness to Left Headlamp Harness (T4F+X88)</u></a>                                  |
| <a href="#"><u>X110 Forward Lamp Harness to Left Headlamp Harness (T4F+Z88)</u></a>                                  |
| <a href="#"><u>X110 Forward Lamp Harness to Left Headlamp Harness (T4L+TR7)</u></a>                                  |
| <a href="#"><u>X110 Forward Lamp Harness to Left Headlamp Harness (T4L+X88)</u></a>                                  |
| <a href="#"><u>X110 Forward Lamp Harness to Left Headlamp Harness (T4L+Z88)</u></a>                                  |
| <a href="#"><u>X111 Engine Harness to Engine Oil Pressure Control Solenoid Valve Harness (LYX)</u></a>               |
| <a href="#"><u>X120 Forward Lamp Harness to Right Headlamp Harness (T4A+TR6)</u></a>                                 |
| <a href="#"><u>X120 Forward Lamp Harness to Right Headlamp Harness (T4F+TR6)</u></a>                                 |
| <a href="#"><u>X120 Forward Lamp Harness to Right Headlamp Harness (T4F+X88)</u></a>                                 |
| <a href="#"><u>X120 Forward Lamp Harness to Right Headlamp Harness (T4F+Z88)</u></a>                                 |
| <a href="#"><u>X120 Forward Lamp Harness to Right Headlamp Harness (T4L+TR7)</u></a>                                 |
| <a href="#"><u>X120 Forward Lamp Harness to Right Headlamp Harness (T4L+X88)</u></a>                                 |
| <a href="#"><u>X120 Forward Lamp Harness to Right Headlamp Harness (T4L+Z88)</u></a>                                 |
| <a href="#"><u>X160 Engine Harness to Fuel Injector Harness (LTG)</u></a>                                            |
| <a href="#"><u>X160 Engine Harness to Fuel Injector Harness (LYX)</u></a>                                            |
| <a href="#"><u>X200 Instrument Panel Harness to Body Harness</u></a>                                                 |
| <a href="#"><u>X201 Instrument Panel Harness to Body Harness</u></a>                                                 |
| <a href="#"><u>X202 Instrument Panel Harness to Body Harness ()</u></a>                                              |
| <a href="#"><u>X203 Instrument Panel Harness to Body Harness (X88)</u></a>                                           |
| <a href="#"><u>X205 Antenna Jumper Harness to Instrument Panel Harness (-UE1-U2K-U2Q)</u></a>                        |
| <a href="#"><u>X205 Antenna Jumper Harness to Instrument Panel Harness ((UKS)/(IO6-U2Q-UE1))</u></a>                 |
| <a href="#"><u>X205 Antenna Jumper Harness to Instrument Panel Harness ((IOR+UE1+MAH/MVC/MCX-U2K)/(IOR+MAM))</u></a> |
| <a href="#"><u>X205 Antenna Jumper Harness to Instrument Panel Harness (UE1)</u></a>                                 |
| <a href="#"><u>X205 Antenna Jumper Harness to Instrument Panel Harness (-UE1)</u></a>                                |
| <a href="#"><u>X206 Antenna Jumper Harness to Instrument Panel Harness (UE1)</u></a>                                 |
| <a href="#"><u>X207 Instrument Panel Harness to Body Harness (UQA+IOS/IOT/IOU)</u></a>                               |
| <a href="#"><u>X208 Floor Console Harness to Instrument Panel harness ()</u></a>                                     |
| <a href="#"><u>X209 Instrument Panel Harness to Floor Console Harness</u></a>                                        |
| <a href="#"><u>X212 Instrument Panel Harness to Passenger Air Bag Harness (AJG)</u></a>                              |
| <a href="#"><u>X212 Instrument Panel Harness to Passenger Air Bag Harness (AY0)</u></a>                              |
| <a href="#"><u>X213 Body Harness to Auxiliary Heater Harness (C32)</u></a>                                           |
| <a href="#"><u>X214 Instrument Panel Harness to Floor Console Harness (MCZ)</u></a>                                  |

| Description                                                                     |
|---------------------------------------------------------------------------------|
| <u>X300 Rain/Ambient Light Sensor Module Harness to Body Harness (CE1).</u>     |
| <u>X301 Humidity Sensor Harness to Body Harness (ASV-CE1).</u>                  |
| <u>X303 Headliner Harness to Garage Door Opener Harness</u>                     |
| <u>X310 Driver Seat Harness to Body Harness ().</u>                             |
| <u>X320 Passenger Seat Harness to Body Harness ().</u>                          |
| <u>X330 Body Harness to Left Rear Seat Harness (KA6).</u>                       |
| <u>X340 Body Harness to Right Rear Seat Harness (KA6).</u>                      |
| <u>X350 Fuel Tank Harness to Body Harness ().</u>                               |
| <u>X351 Fuel Tank Harness to Particulate Filter Harness (LH7).</u>              |
| <u>X400 Rear Fascia Harness to Body Harness ().</u>                             |
| <u>X401 Body Harness to Center High Mount Stop Lamp Harness</u>                 |
| <u>X402 Body Harness to Axle Harness ().</u>                                    |
| <u>X403 Headliner Harness to Body Harness ().</u>                               |
| <u>X404 Headliner Harness to Body Harness ().</u>                               |
| <u>X405 Sunroof Harness to Body Harness (C3U).</u>                              |
| <u>X410 Tail Lamp Harness to Tail Lamp Harness (Z88-V9V).</u>                   |
| <u>X410 Tail Lamp Harness to Tail Lamp Harness (Z88+V9V).</u>                   |
| <u>X420 Tail Lamp Harness to Tail Lamp Harness (Z88+V9V).</u>                   |
| <u>X420 Tail Lamp Harness to Tail Lamp Harness (Z88-V9V).</u>                   |
| <u>X500 Driver Door Harness to Body Harness (Z88+AXG).</u>                      |
| <u>X505 Driver Door Harness to Driver Door Trim Panel Harness ().</u>           |
| <u>X506 Driver Door Harness to Driver Door Trim Panel Harness ().</u>           |
| <u>X510 Driver Door Harness to Driver Outside Rearview Mirror Harness</u>       |
| <u>X600 Passenger Door Harness to Body Harness ((Z88/X88)+AED/A45).</u>         |
| <u>X605 Passenger Door Harness to Passenger Door Trim Panel Harness ().</u>     |
| <u>X606 Passenger Door Harness to Passenger Door Trim Panel Harness</u>         |
| <u>X610 Passenger Door Harness to Passenger Outside Rearview Mirror Harness</u> |
| <u>X700 Left Rear Door Harness to Body Harness ().</u>                          |
| <u>X800 Right Rear Door Harness to Body Harness ().</u>                         |
| <u>X900 Body Harness to Liftgate Harness</u>                                    |
| <u>X901 Body Harness to Liftgate Harness</u>                                    |
| <u>X902 License Lamp Harness to Liftgate Harness (Z88).</u>                     |
| <u>X903 Body Harness to Center High Mount Stop Lamp Harness (Z88).</u>          |