

2018 ELECTRICAL

Wiring Systems And Power Management - Component Locator - Door Component Views - Equinox & Terrain

DOOR COMPONENT VIEWS

DRIVER DOOR TRIM PANEL

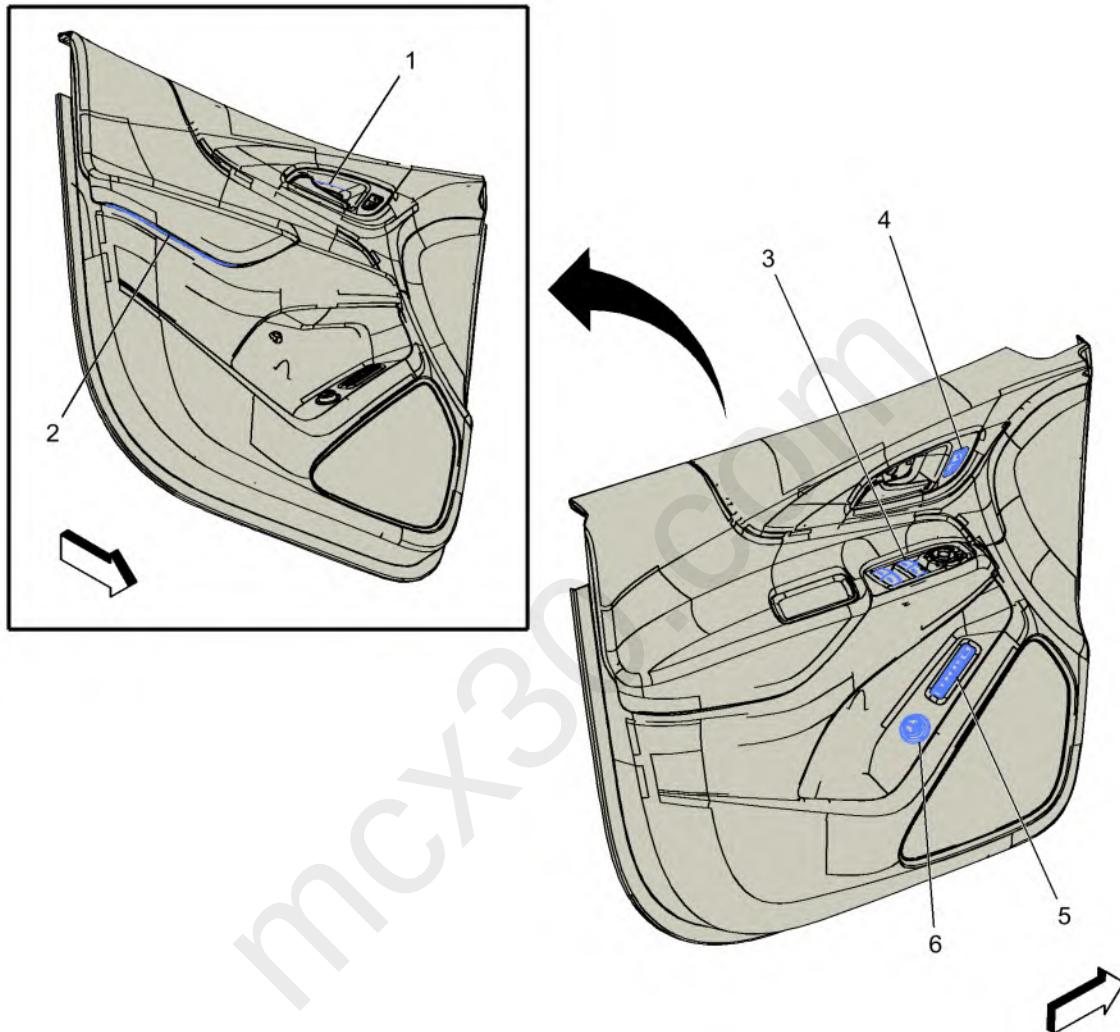


Fig. 1: Driver Door Trim Panel

Courtesy of GENERAL MOTORS COMPANY

Items

1. E1C Accent Lamp - Driver Door Handle [E1C Accent Lamp - Driver Door Handle](#)
2. E1D Accent Lamp - Driver Door (TSQ) [E1D Accent Lamp - Driver Door \(X88+TSQ\)](#), [E1D Accent Lamp - Driver Door \(Z88+TSQ\)](#)
3. S79D Window Switch - Driver [S79D Window Switch - Driver](#)
4. S13D Door Lock Switch - Driver [S13D Door Lock Switch - Driver](#)
5. S47D Seat Memory Switch - Driver (A45/A74) [S47D Seat Memory Switch - Driver \(A45/A74\)](#)
6. S45B Liftgate Control Switch - Interior (TB5/TC2) [S45B Liftgate Control Switch - Interior \(TB5/TC2\)](#)

DRIVER DOOR

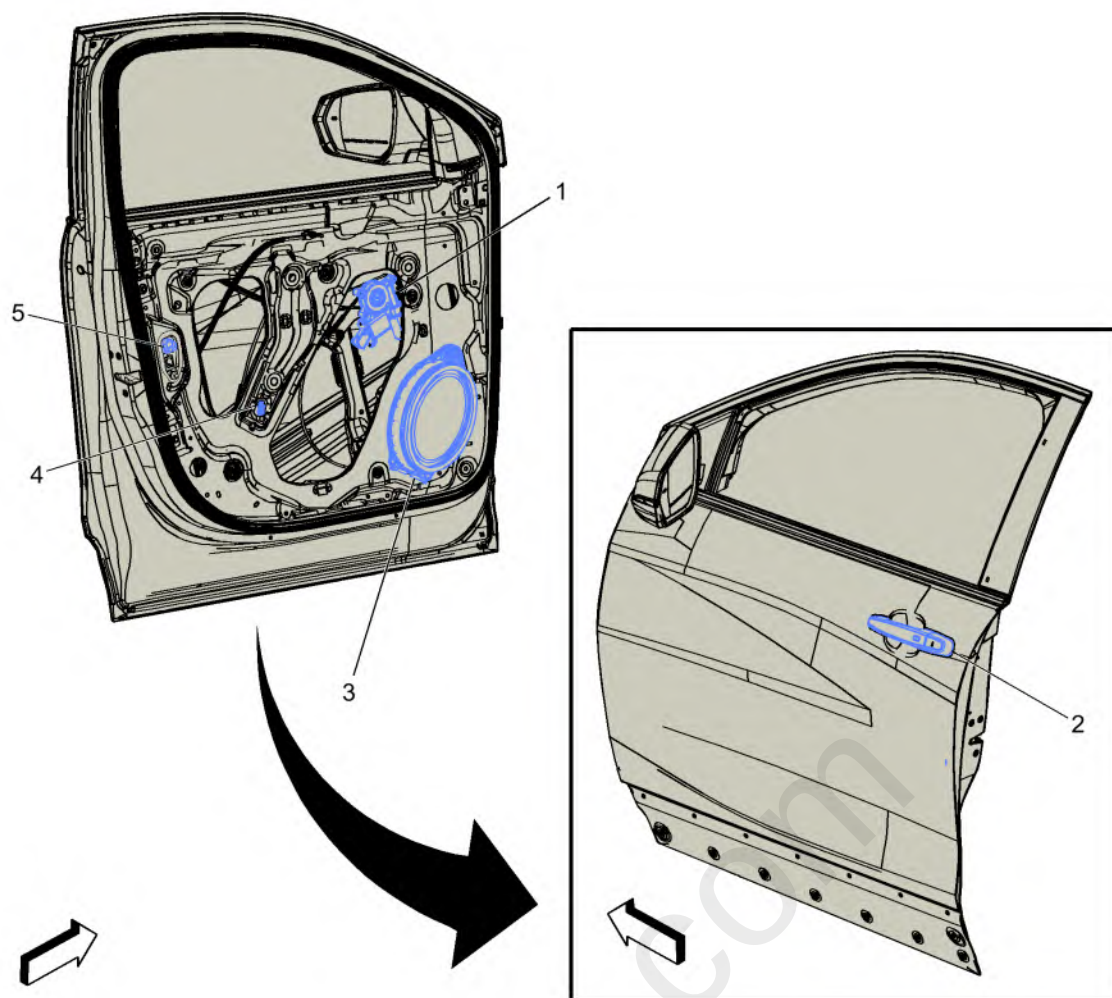


Fig. 2: Driver Door

Courtesy of GENERAL MOTORS COMPANY

Items

1. M35D Window Motor Module - Driver **M35D Window Motor Module - Driver**
2. A24D Door Handle Assembly - Driver Exterior **A24D Door Handle Assembly - Driver Exterior**
3. P19AG Speaker - Left Front Door **P19AG Speaker - Left Front Door (UQA), P19AG Speaker - Left Front Door (UZ6)**
4. B63LF Side Impact Sensor - Left Front **B63LF Side Impact Sensor - Left Front**
5. A23D Door Latch Assembly - Driver **A23D Door Latch Assembly - Driver**

PASSENGER DOOR TRIM PANEL

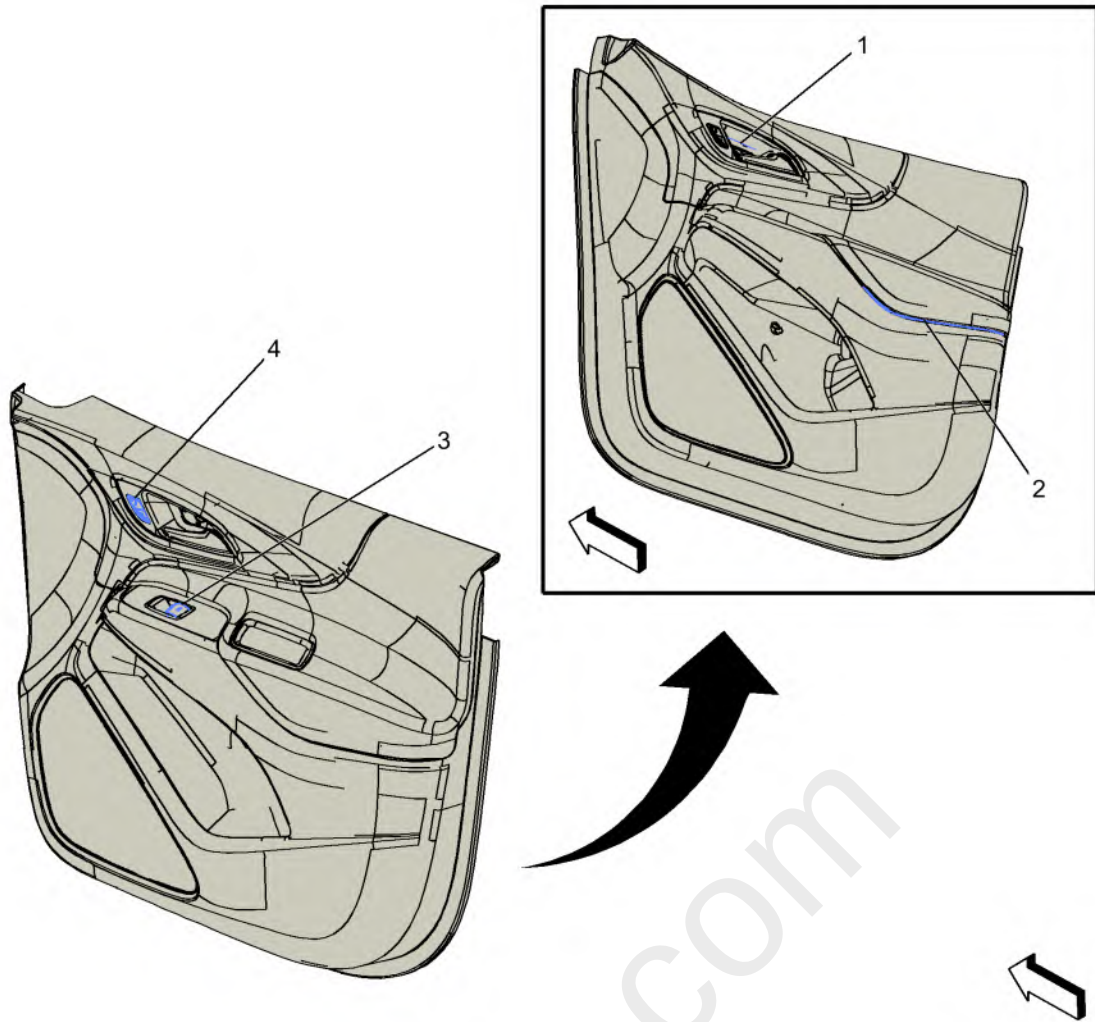


Fig. 3: Passenger Door Trim Panel

Courtesy of GENERAL MOTORS COMPANY

Items

1. E1M Accent Lamp - Passenger Door Handle [E1M Accent Lamp - Passenger Door Handle](#)
2. E1P Accent Lamp - Passenger Door (TSQ) [E1P Accent Lamp - Passenger Door \(X88+TSQ\)](#), [E1P Accent Lamp - Passenger Door \(Z88+TSQ\)](#)
3. S79P Window Switch - Passenger [S79P Window Switch - Passenger](#)
4. S13P Door Lock Switch - Passenger [S13P Door Lock Switch - Passenger](#)

PASSENGER DOOR

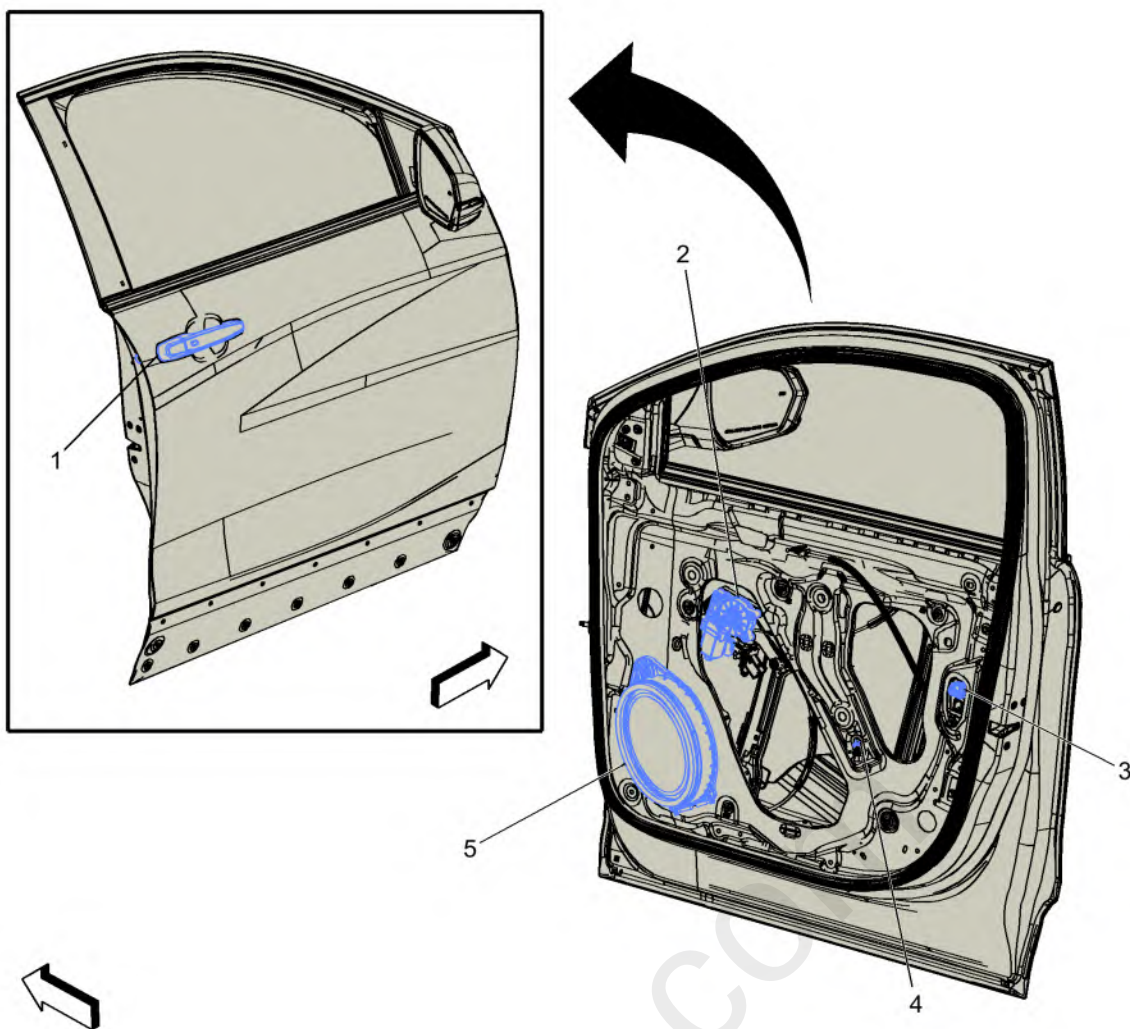


Fig. 4: Passenger Door

Courtesy of GENERAL MOTORS COMPANY

Items

1. A24P Door Handle Assembly - Passenger Exterior **A24P Door Handle Assembly - Passenger Exterior**
2. M74P Window Motor - Passenger **M74P Window Motor - Passenger**
3. A23P Door Latch Assembly - Passenger **A23P Door Latch Assembly - Passenger**
4. B63RF Side Impact Sensor - Right Front **B63RF Side Impact Sensor - Right Front**
5. P19AH Speaker - Right Front Door **P19AH Speaker - Right Front Door (UQA) P19AH Speaker - Right Front Door (UZ6)**

LEFT REAR DOOR TRIM PANEL

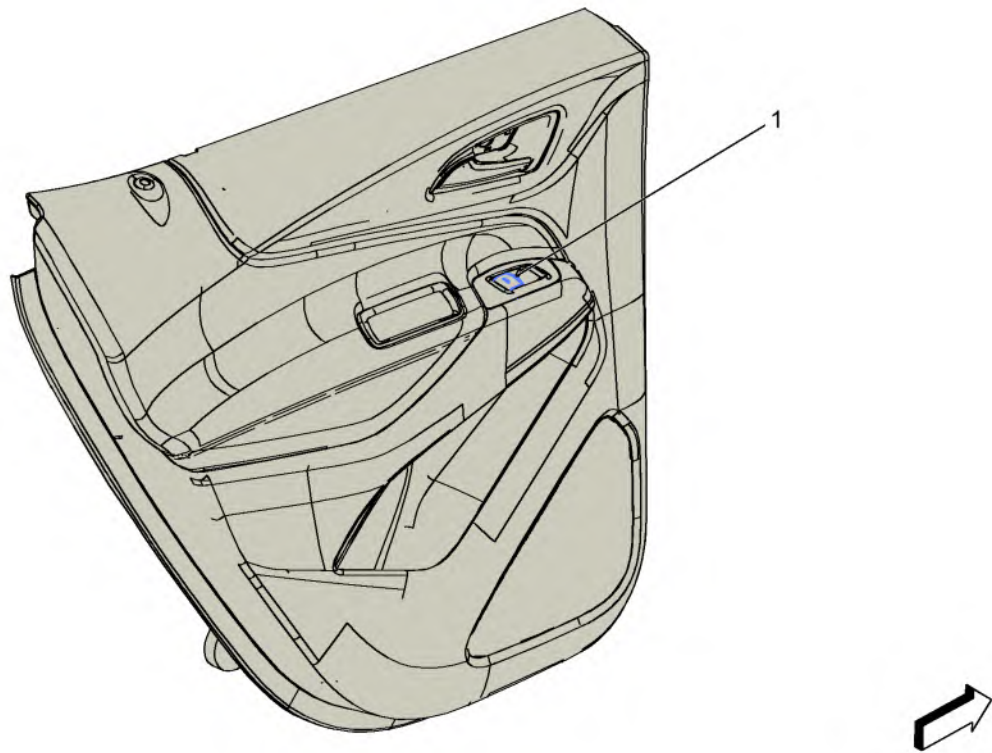


Fig. 5: Left Rear Door Trim Panel

Courtesy of GENERAL MOTORS COMPANY

Items
1. S79LR Window Switch - Left Rear <u>S79LR Window Switch - Left Rear (X88)</u> <u>S79LR Window Switch - Left Rear (Z88)</u> .

LEFT REAR DOOR

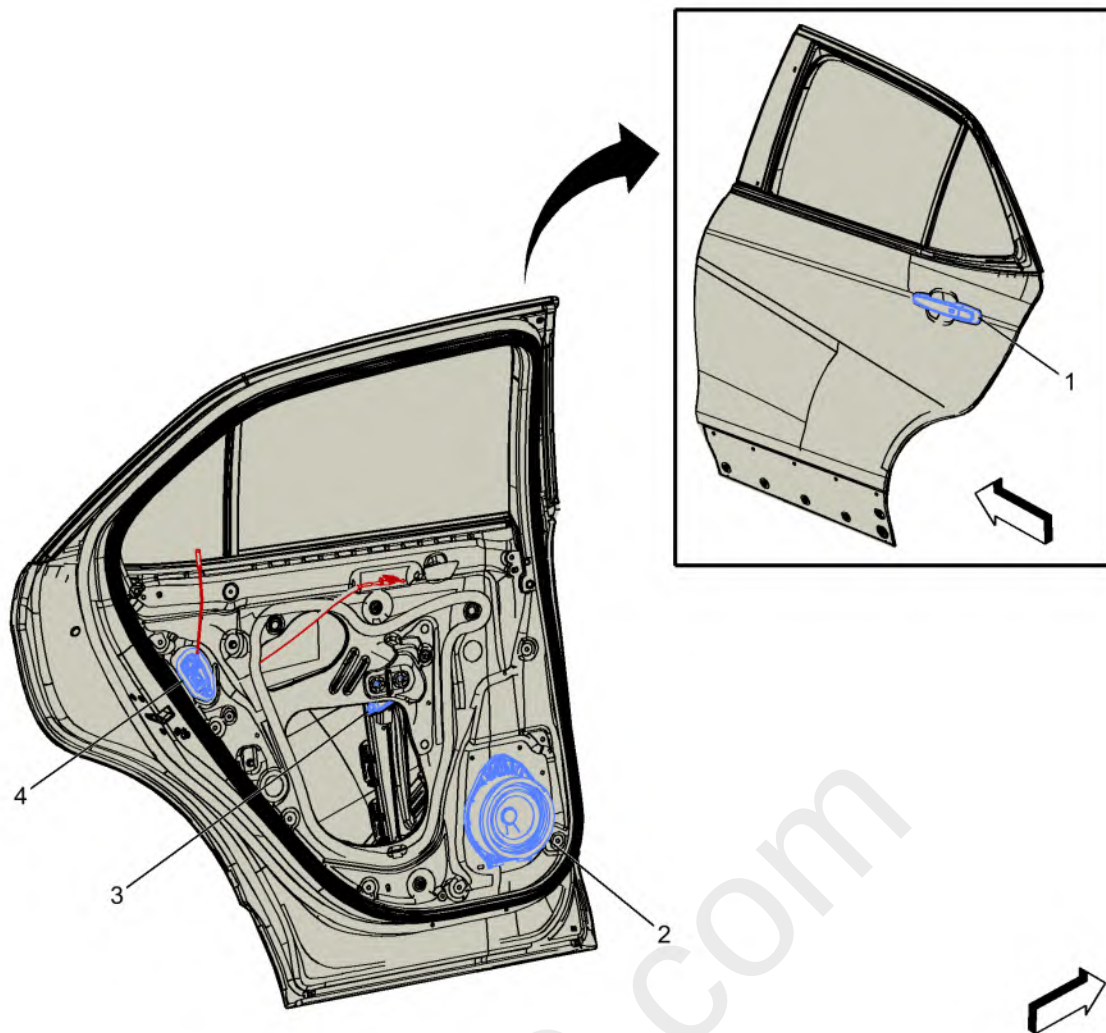


Fig. 6: Left Rear Door

Courtesy of GENERAL MOTORS COMPANY

Items

1. A24LR Door Handle Assembly - Left Rear Exterior [A24LR Door Handle Assembly - Left Rear Exterior](#)
2. P19AL Speaker - Left Rear Door [P19AL Speaker - Left Rear Door \(UQA\)](#), [P19AL Speaker - Left Rear Door \(UZ6\)](#)
3. M74LR Window Motor - Left Rear [M74LR Window Motor - Left Rear](#)
4. A23LR Door Latch Assembly - Left Rear [A23LR Door Latch Assembly - Left Rear](#)

RIGHT REAR DOOR TRIM PANEL

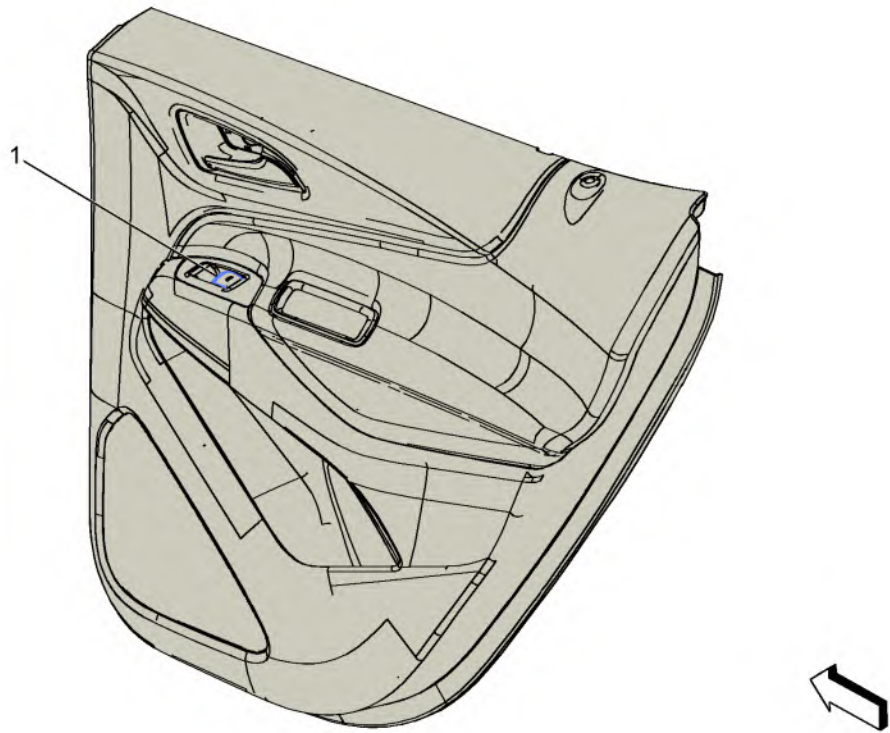


Fig. 7: Right Rear Door Trim Panel

Courtesy of GENERAL MOTORS COMPANY

Items
1. S79RR Window Switch - Right Rear <u>S79RR Window Switch - Right Rear (X88)</u> <u>S79RR Window Switch - Right Rear (Z88)</u>

RIGHT REAR DOOR

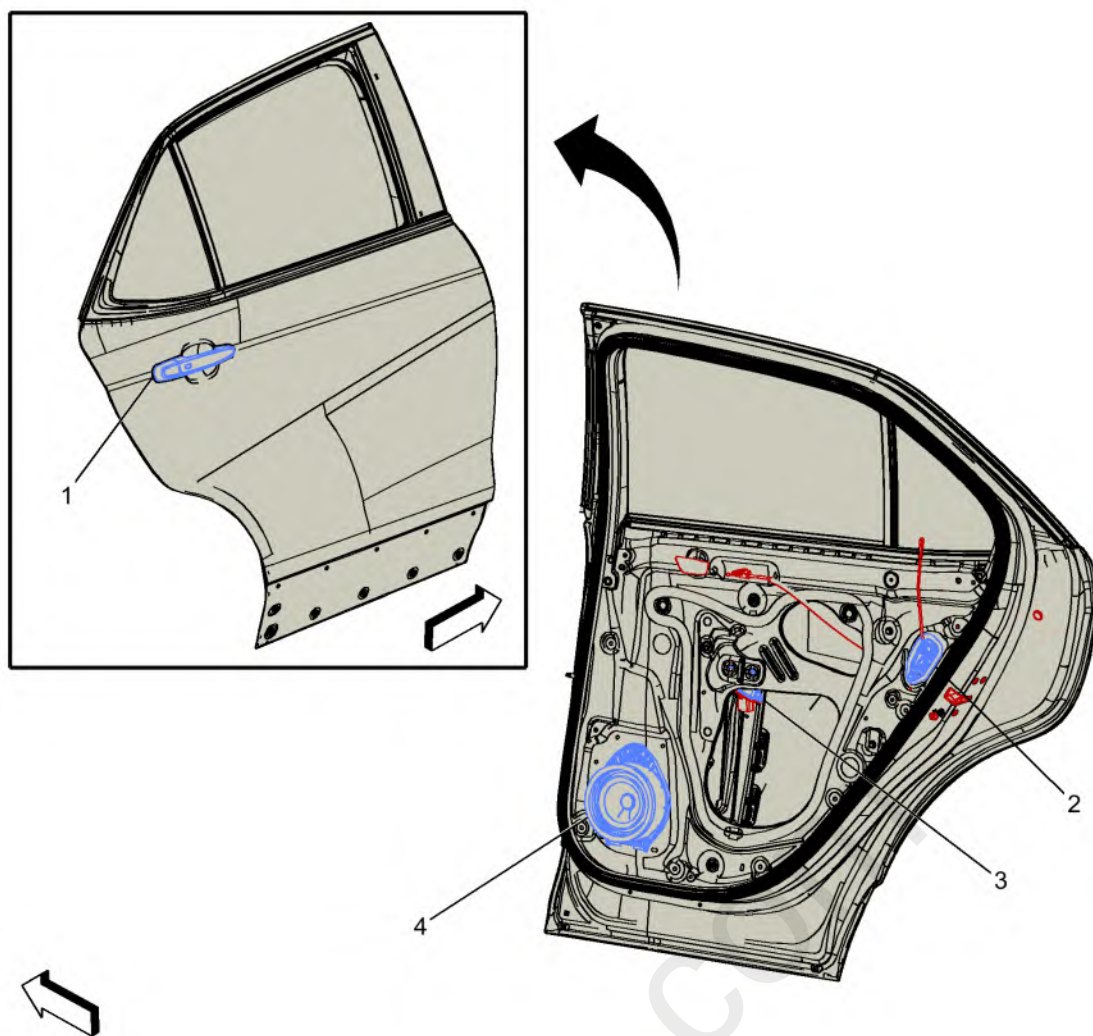


Fig. 8: Right Rear Door

Courtesy of GENERAL MOTORS COMPANY

Items

1. A24RR Door Handle Assembly - Right Rear Exterior [A24RR Door Handle Assembly - Right Rear Exterior](#)
2. A23RR Door Latch Assembly - Right Rear [A23RR Door Latch Assembly - Right Rear](#)
3. M74RR Window Motor - Right Rear [M74RR Window Motor - Right Rear](#)
4. P19AM Speaker - Right Rear Door [P19AM Speaker - Right Rear Door \(UQA\)](#), [P19AM Speaker - Right Rear Door \(UZ6\)](#)