

2018 ELECTRICAL

Wiring Systems And Power Management - Component Locator - Passenger Compartment/Roof Component Views - Equinox & Terrain

PASSENGER COMPARTMENT/ROOF COMPONENT VIEWS

FRONT OF THE PASSENGER COMPARTMENT

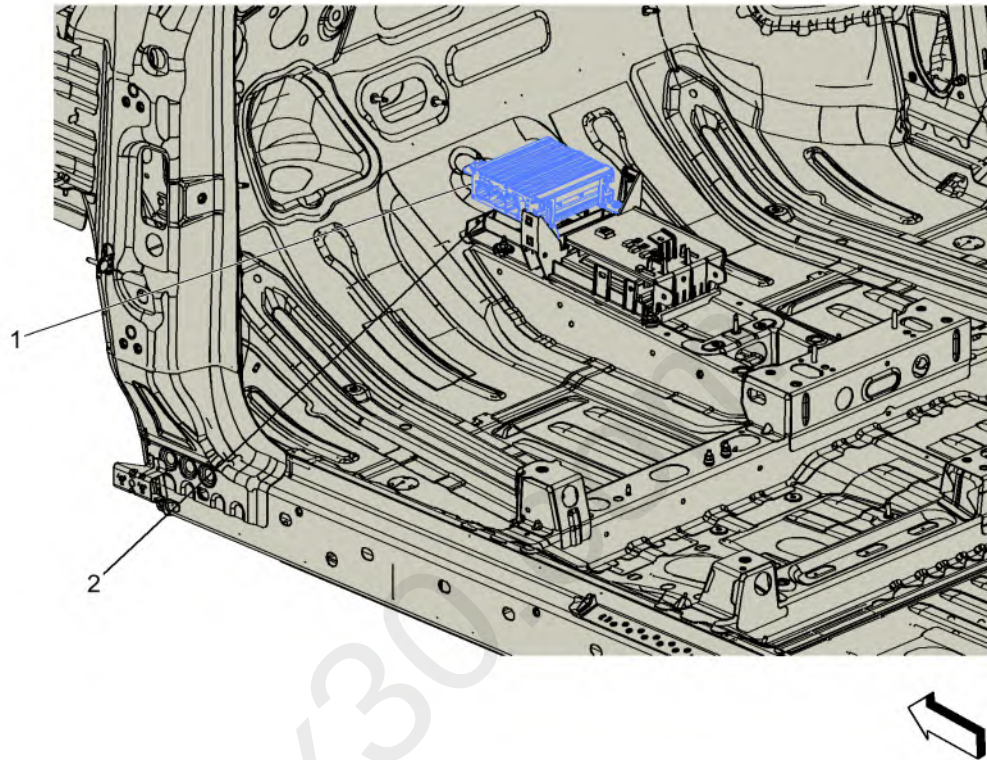


Fig. 1: Passenger Compartment - Front
Courtesy of GENERAL MOTORS COMPANY

Items

1. T3 Audio Amplifier (UQA) T3 Audio Amplifier X1 (UQA), T3 Audio Amplifier X2 (UQA), T3 Audio Amplifier X3 (UQA), T3 Audio Amplifier X4 (UQA).
2. K108 Active Noise Cancellation Module K108 Active Noise Cancellation Module X1 (NKC+UZ6-IOR), K108 Active Noise Cancellation Module X2 (NKC+UZ6-IOR), K108 Active Noise Cancellation Module X3 (NKC+UZ6-IOR).

LEFT FRONT OF THE PASSENGER COMPARTMENT (1 OF 2)

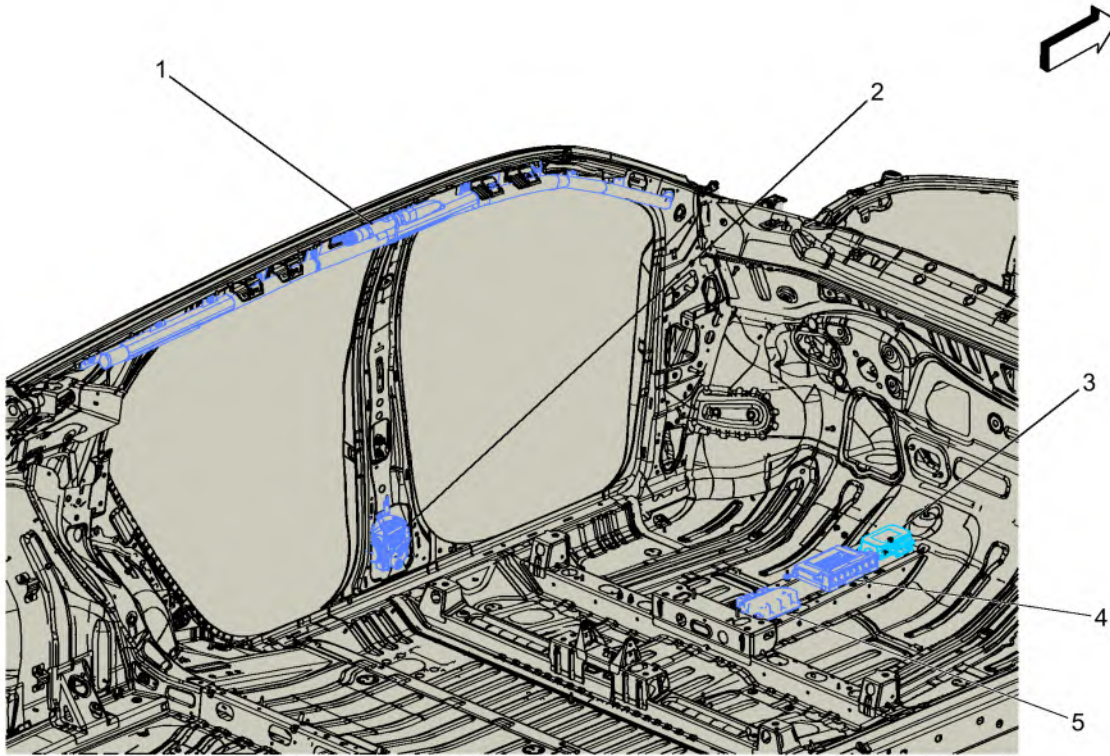


Fig. 2: Passenger Compartment - Left Front (1 of 2).

Courtesy of GENERAL MOTORS COMPANY

Items

1. F105L Roof Rail Air Bag - Left (AY0) **F105L Roof Rail Air Bag - Left (AY0).**
2. F112D Seat Belt Retractor Pretensioner - Driver **F112D Seat Belt Retractor Pretensioner - Driver**
3. T19 Power Supply Transformer (KL9) **T19 Power Supply Transformer (KL9)**
4. K9 Body Control Module **K9 Body Control Module X1 K9 Body Control Module X2 K9 Body Control Module X3 K9 Body Control Module X4 K9 Body Control Module X5 K9 Body Control Module X6 K9 Body Control Module X7**
5. K36 Inflatable Restraint Sensing and Diagnostic Module **K36 Inflatable Restraint Sensing and Diagnostic Module X1 K36 Inflatable Restraint Sensing and Diagnostic Module X2**

LEFT FRONT OF THE PASSENGER COMPARTMENT (2 OF 2)

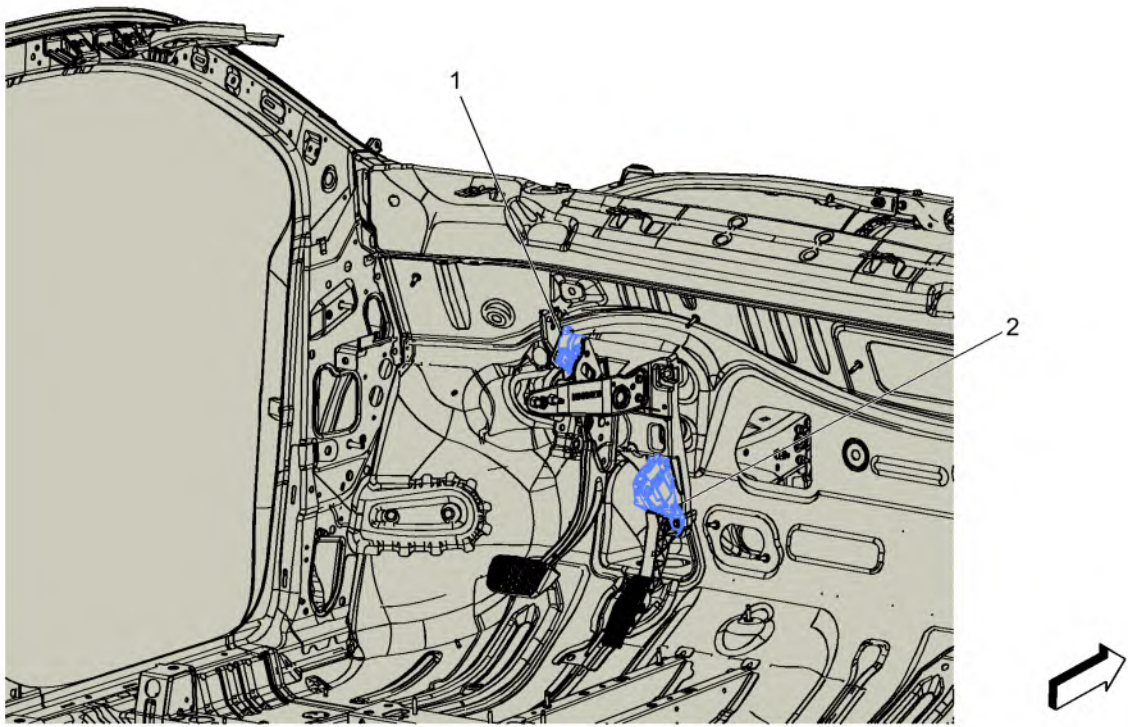


Fig. 3: Passenger Compartment - Left Front (2 of 2).

Courtesy of GENERAL MOTORS COMPANY

Items

1. B22 Brake Pedal Position Sensor **B22 Brake Pedal Position Sensor**
2. B107 Accelerator Pedal Position Sensor **B107 Accelerator Pedal Position Sensor**

INSIDE REARVIEW MIRROR

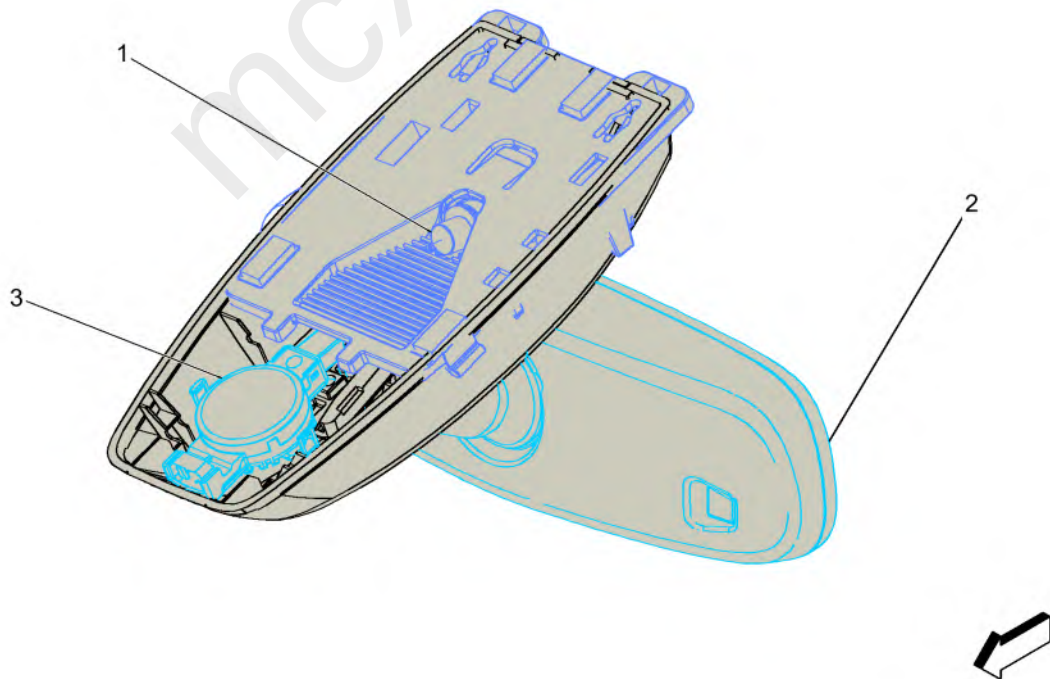


Fig. 4: Inside Rearview Mirror

Courtesy of GENERAL MOTORS COMPANY

Items

Items

1. B174W Frontview Camera - Windshield (UEU/UHX)
2. A10 Inside Rearview Mirror (DD8) [A10 Inside Rearview Mirror \(DD8\)](#)
3. B160 Windshield Temperature and Inside Moisture Sensor (ASV) [B160 Windshield Temperature and Inside Moisture Sensor \(ASV\)](#)

RAIN/AMBIENT LIGHT SENSOR MODULE (CE1)

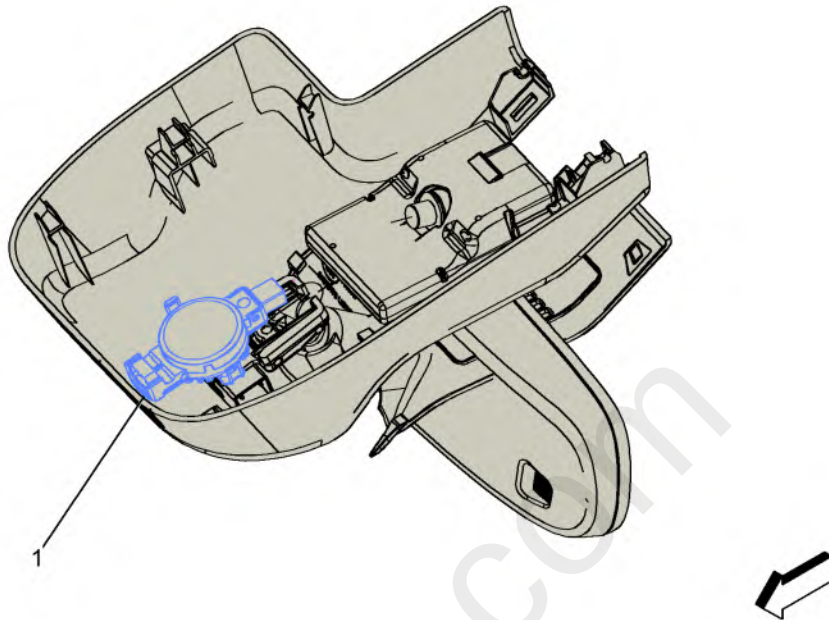


Fig. 5: Rain/Ambient Light Sensor Module (CE1)

Courtesy of GENERAL MOTORS COMPANY

Items

1. B177 Rain/Ambient Light Sensor Module (CE1) [B177 Rain/Ambient Light Sensor Module \(CE1\)](#)

UNDER THE CENTER CONSOLE/KEYLESS ENTRY ANTENNA

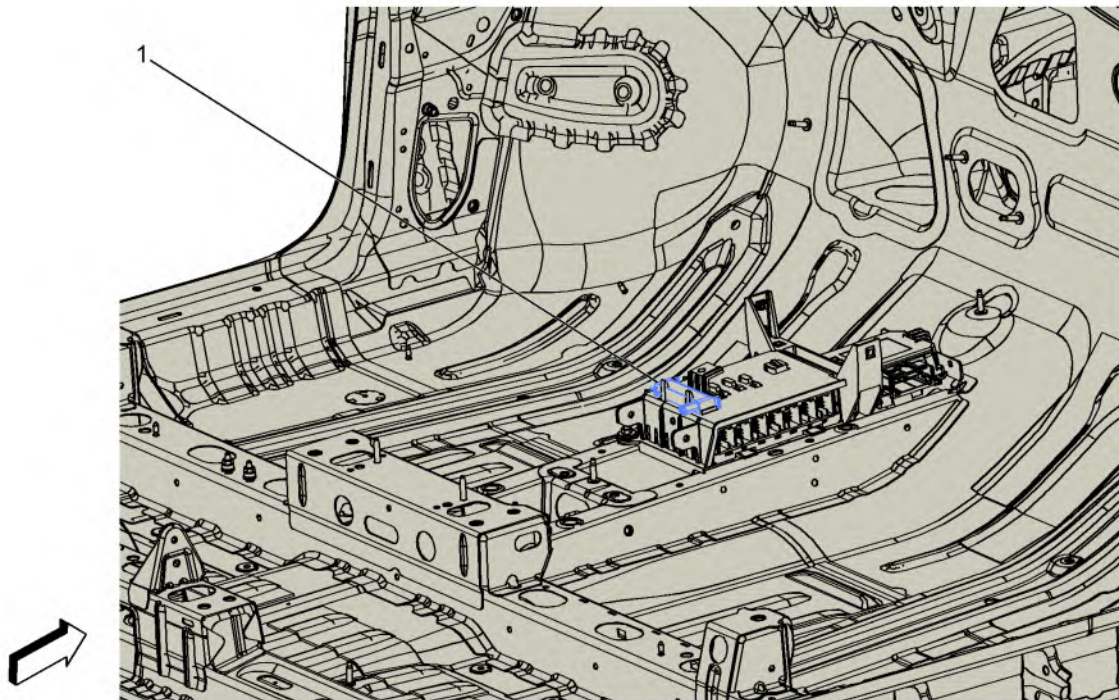


Fig. 6: Under Center Console/Keyless Entry Antenna
 Courtesy of GENERAL MOTORS COMPANY

Items

1. T10J Keyless Entry Antenna - Center Console Front **T10J Keyless Entry Antenna - Center Console Front**

UNDER THE CENTER CONSOLE/INFLATABLE RESTRAINT AND BODY CONTROL MODULE

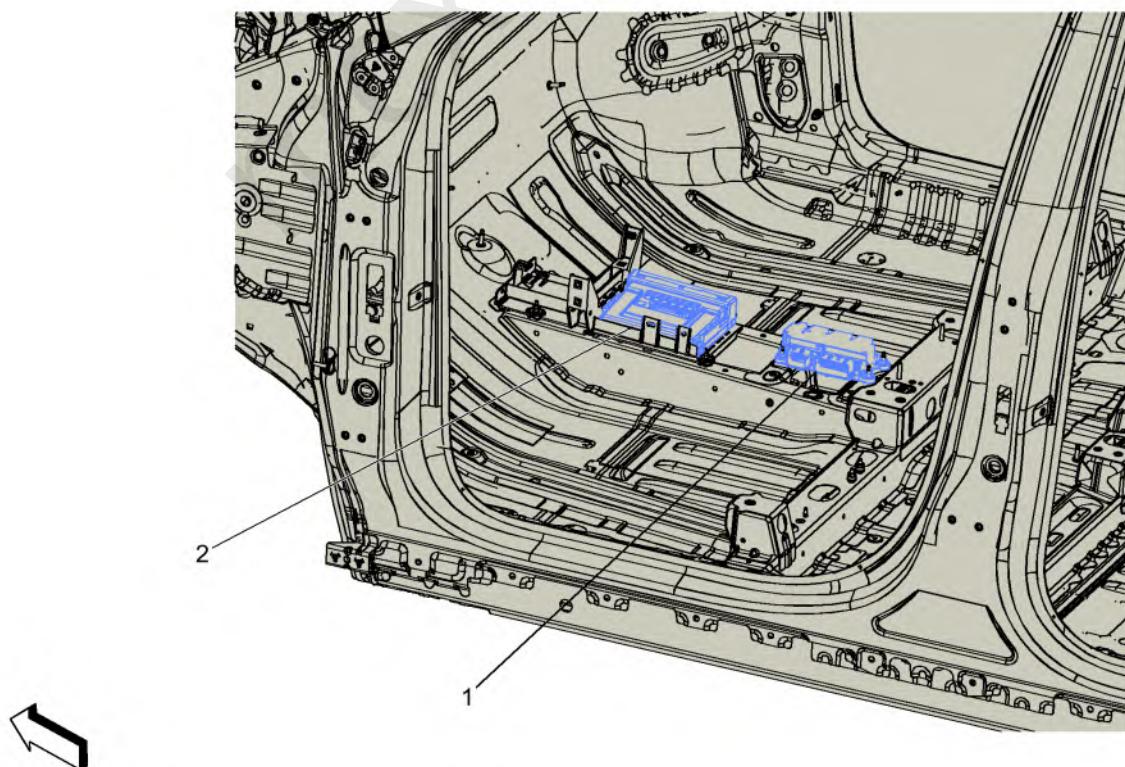


Fig. 7: Under Center Console/Inflatable Restraint and Body Control Module
 Courtesy of GENERAL MOTORS COMPANY

Items

1. K36 Inflatable Restraint Sensing and Diagnostic Module [K36 Inflatable Restraint Sensing and Diagnostic Module X1](#) [K36 Inflatable Restraint Sensing and Diagnostic Module X2](#)
2. K9 Body Control Module [K9 Body Control Module X1](#) [K9 Body Control Module X2](#) [K9 Body Control Module X3](#) [K9 Body Control Module X4](#) [K9 Body Control Module X5](#) [K9 Body Control Module X6](#) [K9 Body Control Module X7](#)

RIGHT SIDE OF THE PASSENGER COMPARTMENT

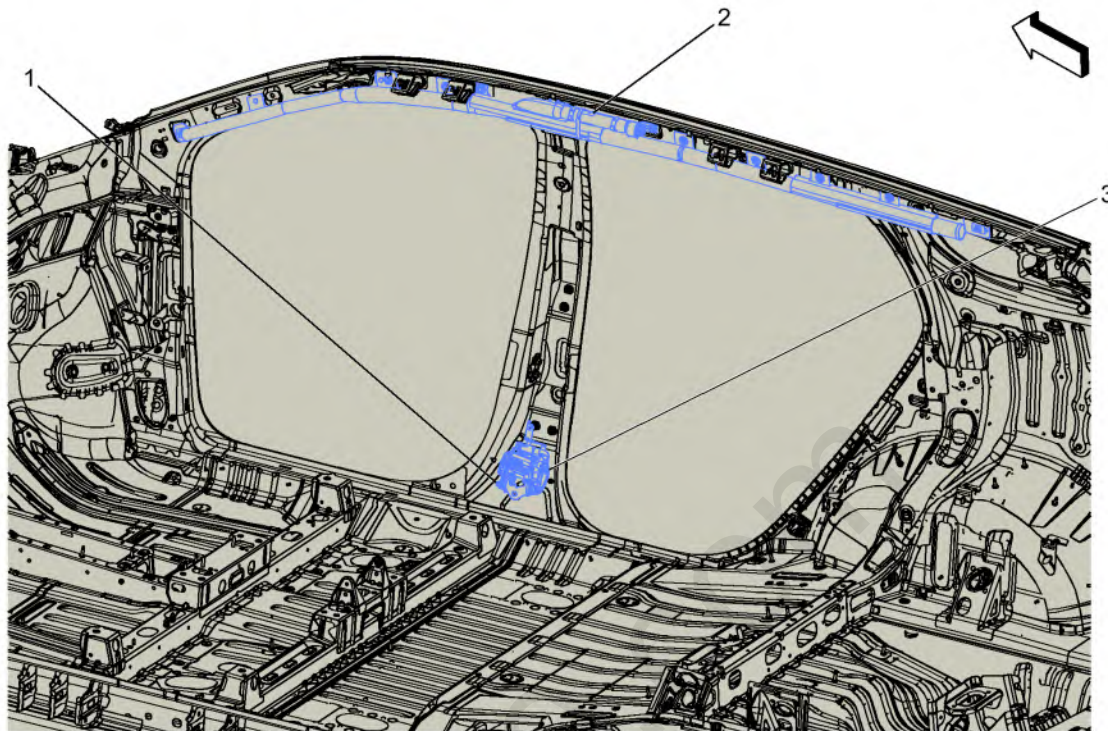


Fig. 8: Right Side of Passenger Compartment
Courtesy of GENERAL MOTORS COMPANY

Items

1. B61P Seat Belt Tension Sensor - Passenger (AL0) [B61P Seat Belt Tension Sensor - Passenger \(AL0\)](#)
2. F105R Roof Rail Air Bag - Right (AY0) [F105R Roof Rail Air Bag - Right \(AY0\)](#)
3. F112P Seat Belt Retractor Pretensioner - Passenger [F112P Seat Belt Retractor Pretensioner - Passenger](#)

DRIVER SEAT (1 OF 3)

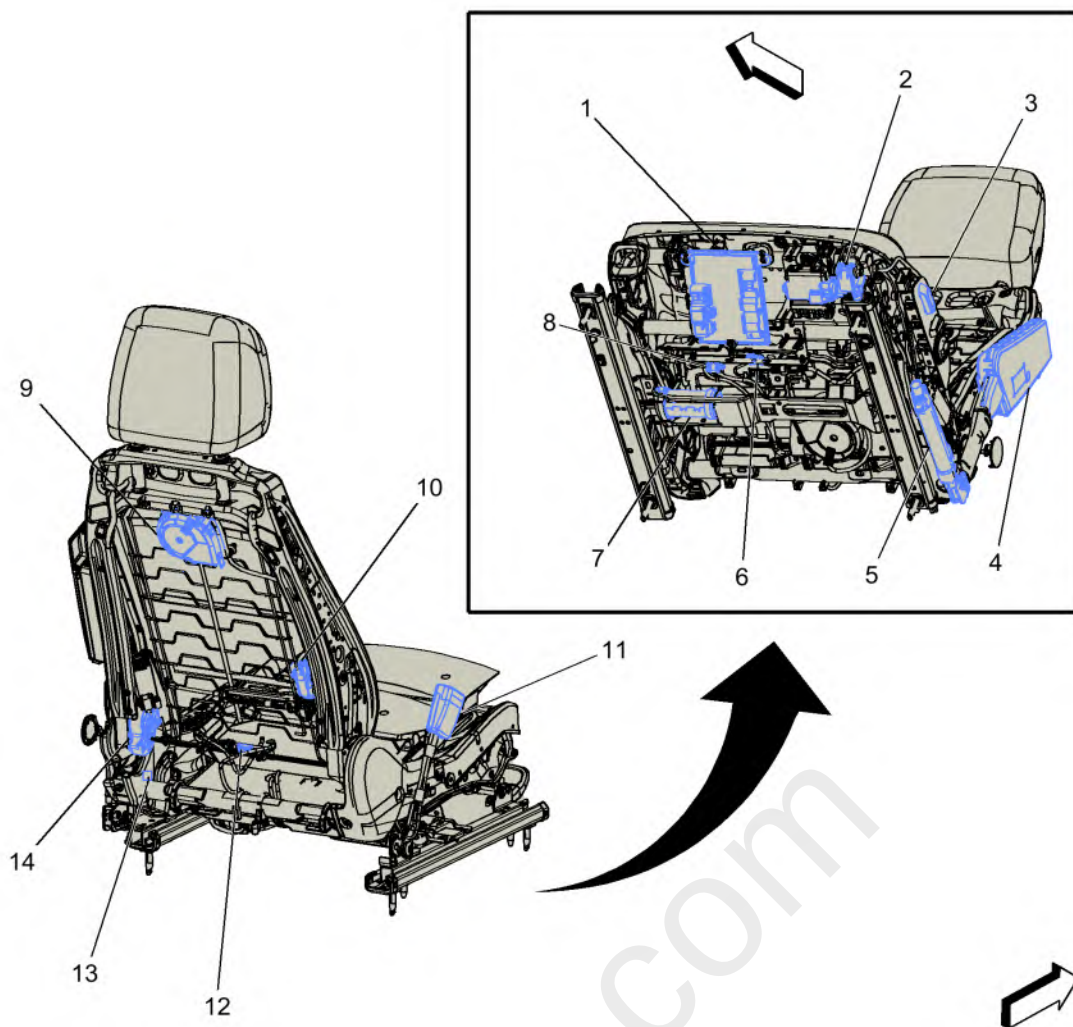


Fig. 9: Identifying Driver Seat (1 of 3)

Courtesy of GENERAL MOTORS COMPANY

Items

1. K40D Seat Memory Control Module - Driver (A45/A74) **K40D Seat Memory Control Module - Driver X1 (A45/A74) K40D Seat Memory Control Module - Driver X2 (A45/A74) K40D Seat Memory Control Module - Driver X3 (A45/A74) K40D Seat Memory Control Module - Driver X5 (A45/A74) K40D Seat Memory Control Module - Driver X6 (A45/A74)**
2. M50D Seat Front Vertical Motor - Driver (A45/AG1) **M50D Seat Front Vertical Motor - Driver (A45/AG1)**
3. S64D Seat Adjuster Switch - Driver (AG1) **S64D Seat Adjuster Switch - Driver (AG1)**
4. F106D Seat Side Air Bag - Driver **F106D Seat Side Air Bag - Driver**
5. F113D Seat Belt Anchor Pretensioner - Driver **F113D Seat Belt Anchor Pretensioner - Driver**
6. E14B Seat Heating Element - Driver Cushion (KA1) **E14B Seat Heating Element - Driver Cushion (KA1)**
7. M51D Seat Horizontal Motor - Driver (A45/AG1) **M51D Seat Horizontal Motor - Driver (A45/AG1)**
8. P45RR Seat Haptic Movement Motor - Driver Right Rear (UEU) **P45RR Seat Haptic Movement Motor - Driver Right Rear (UEU)**
9. M73A Seat Blower Motor - Driver Back (KU1) **M73A Seat Blower Motor - Driver Back (KU1)**
10. M53D Seat Lumbar Support Motor - Driver (AL9) **M53D Seat Lumbar Support Motor - Driver (AL9+X88) M53D Seat Lumbar Support Motor - Driver (AL9+Z88)**
11. B153D Seat Belt Buckle - Driver **B153D Seat Belt Buckle - Driver**
12. E14A Seat Heating Element - Driver Back (KA1) **E14A Seat Heating Element - Driver Back (KA1)**
13. M55D Seat Rear Vertical Motor - Driver (A45/AG1) **M55D Seat Rear Vertical Motor - Driver (A45/AG1)**

Items

14. M56D Seat Recline Motor - Driver (A45/AG1) [M56D Seat Recline Motor - Driver \(A45/AG1\)](#)

DRIVER SEAT (2 OF 3)

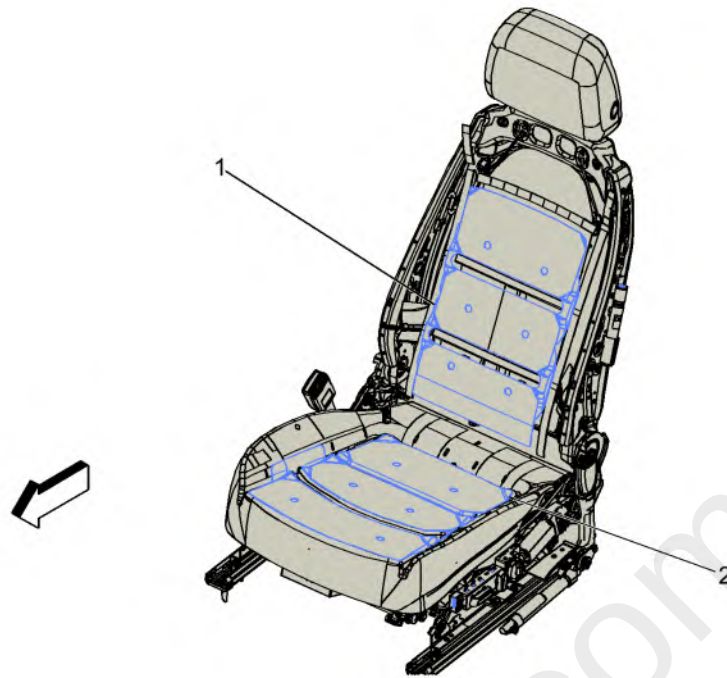


Fig. 10: Identifying Driver Seat (2 of 3)

Courtesy of GENERAL MOTORS COMPANY

Items

1. E14A Seat Heating Element - Driver Back (KA1) [E14A Seat Heating Element - Driver Back \(KA1\)](#)
2. E14B Seat Heating Element - Driver Cushion (KA1) [E14B Seat Heating Element - Driver Cushion \(KA1\)](#)

DRIVER SEAT (3 OF 3)

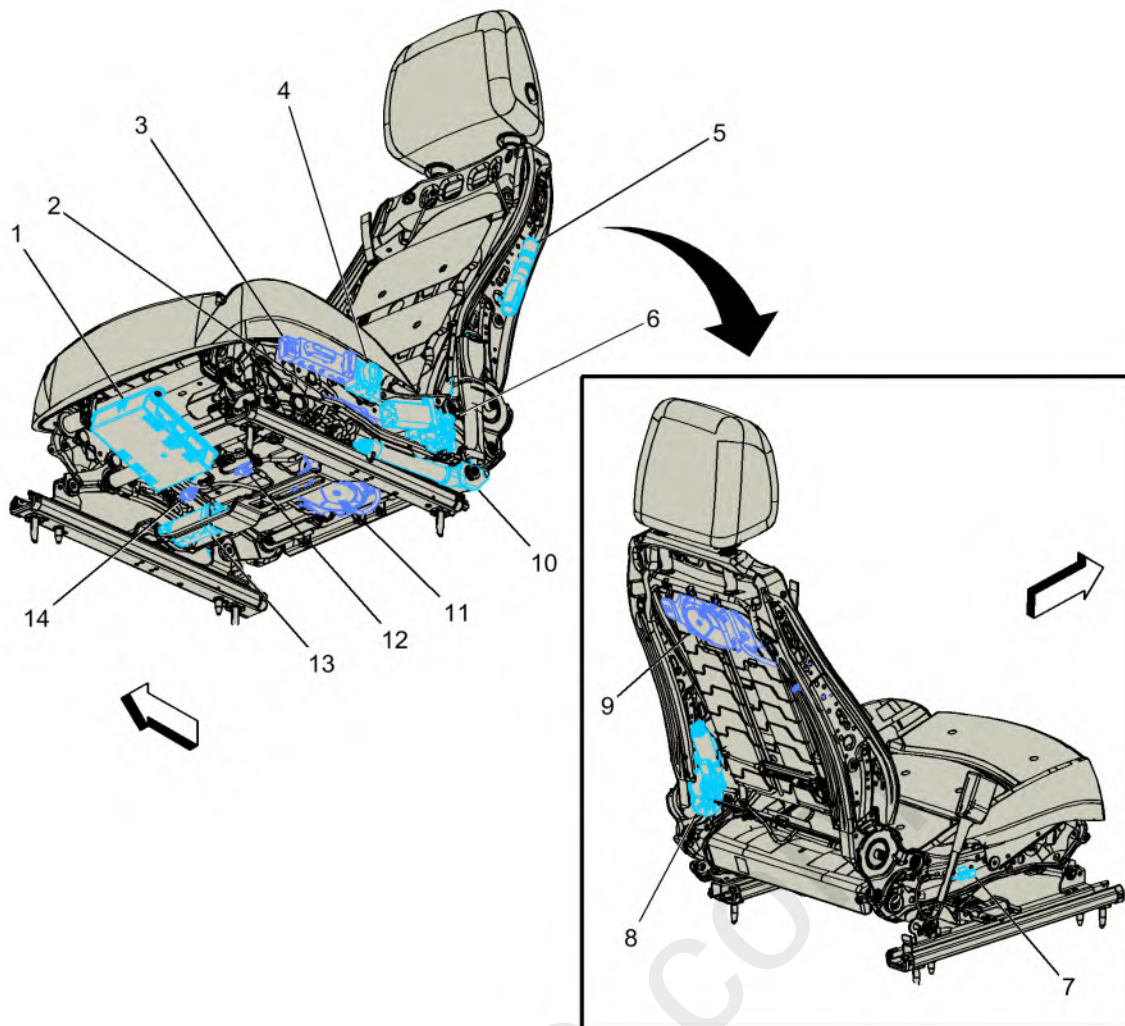


Fig. 11: Identifying Driver Seat (3 of 3)

Courtesy of GENERAL MOTORS COMPANY

Items

1. K40D Seat Memory Control Module - Driver (A45/A74) [K40D Seat Memory Control Module - Driver X1 \(A45/A74\)](#) [K40D Seat Memory Control Module - Driver X2 \(A45/A74\)](#) [K40D Seat Memory Control Module - Driver X3 \(A45/A74\)](#) [K40D Seat Memory Control Module - Driver X5 \(A45/A74\)](#) [K40D Seat Memory Control Module - Driver X6 \(A45/A74\)](#)
2. M53D Seat Lumbar Support Motor - Driver (AL9) [M53D Seat Lumbar Support Motor - Driver \(AL9+X88\)](#) [M53D Seat Lumbar Support Motor - Driver \(AL9+Z88\)](#)
3. S64D Seat Adjuster Switch - Driver (AG1) [S64D Seat Adjuster Switch - Driver \(AG1\)](#)
4. S65D Seat Lumbar Support Switch - Driver (AL9) [S65D Seat Lumbar Support Switch - Driver \(AL9\)](#)
5. F106D Seat Side Air Bag - Driver [F106D Seat Side Air Bag - Driver](#)
6. M56D Seat Recline Motor - Driver (A45/AG1) [M56D Seat Recline Motor - Driver \(A45/AG1\)](#)
7. B153D Seat Belt Buckle - Driver [B153D Seat Belt Buckle - Driver](#)
8. M55D Seat Rear Vertical Motor - Driver (A45/AG1) [M55D Seat Rear Vertical Motor - Driver \(A45/AG1\)](#)
9. M73A Seat Blower Motor - Driver Back (KU1) [M73A Seat Blower Motor - Driver Back \(KU1\)](#)
10. F113D Seat Belt Anchor Pretensioner - Driver [F113D Seat Belt Anchor Pretensioner - Driver](#)
11. M73C Seat Blower Motor - Driver Cushion (KU1) [M73C Seat Blower Motor - Driver Cushion \(KU1\)](#)
12. P45LR Seat Haptic Movement Motor - Driver Left Rear (UEU) [P45LR Seat Haptic Movement Motor - Driver Left Rear \(UEU\)](#)
13. M51D Seat Horizontal Motor - Driver (A45/AG1) [M51D Seat Horizontal Motor - Driver \(A45/AG1\)](#)

Items

14. P45RR Seat Haptic Movement Motor - Driver Right Rear (UEU) [P45RR Seat Haptic Movement Motor - Driver Right Rear \(UEU\)](#)

PASSENGER SEAT (1 OF 4)

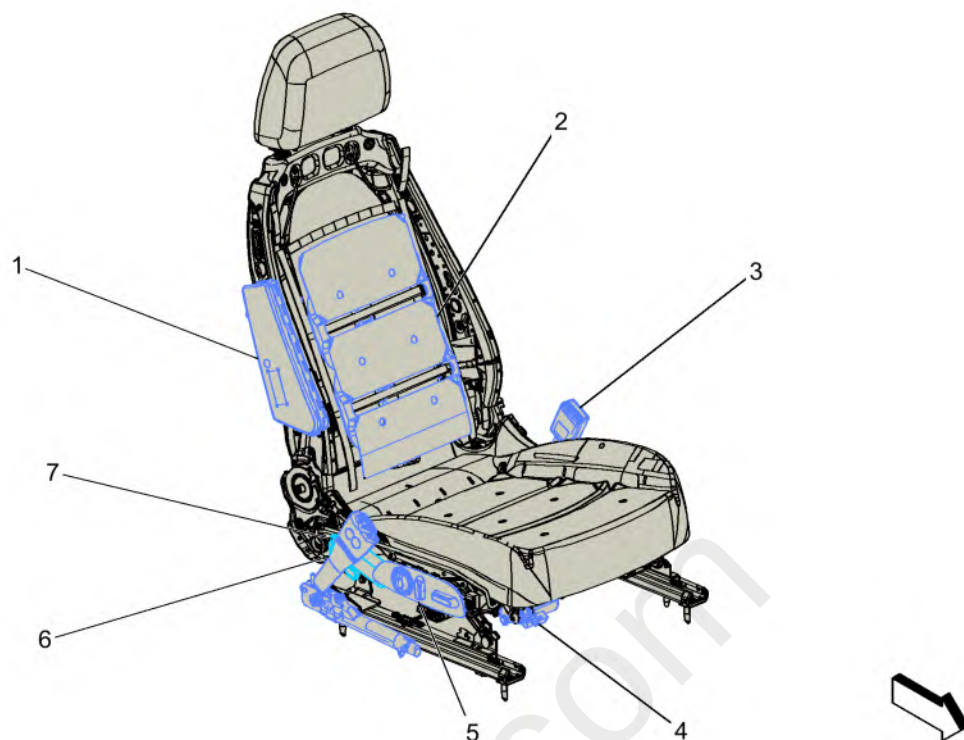


Fig. 12: Identifying Passenger Seat (1 of 4)

Courtesy of GENERAL MOTORS COMPANY

Items

1. F106P Seat Side Air Bag - Passenger [F106P Seat Side Air Bag - Passenger](#)
2. E14C Seat Heating Element - Passenger Back (KA1) [E14C Seat Heating Element - Passenger Back \(KA1\)](#)
3. B153P Seat Belt Buckle - Passenger [B153P Seat Belt Buckle - Passenger](#)
4. M50P Seat Front Vertical Motor - Passenger (ADT/AG2) [M50P Seat Front Vertical Motor - Passenger \(ADT/AG2\)](#)
5. M51P Seat Horizontal Motor - Passenger (ADT/AG2) [M51P Seat Horizontal Motor - Passenger \(ADT/AG2\)](#)
6. F113P Seat Belt Anchor Pretensioner - Passenger [F113P Seat Belt Anchor Pretensioner - Passenger](#)
7. M55P Seat Rear Vertical Motor - Passenger (ADT/AG2) [M55P Seat Rear Vertical Motor - Passenger \(ADT/AG2\)](#)

PASSENGER SEAT (2 OF 4)

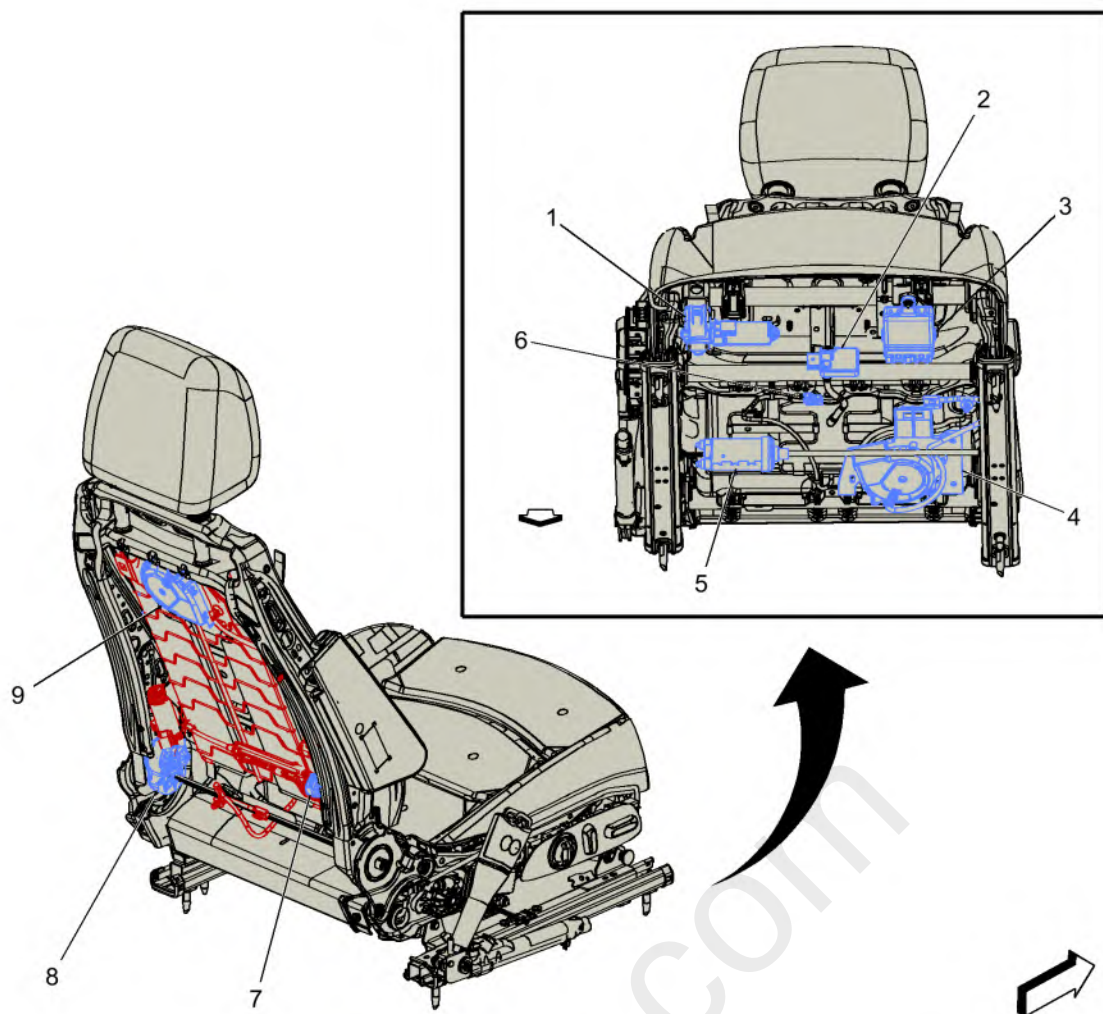


Fig. 13: Identifying Passenger Seat (2 of 4)
 Courtesy of GENERAL MOTORS COMPANY

Items

1. M50P Seat Front Vertical Motor - Passenger (ADT/AG2) **M50P Seat Front Vertical Motor - Passenger (ADT/AG2)**
2. K85 Passenger Presence Module (AL0) **K85 Passenger Presence Module (AL0)**
3. K29F Seat Heating Control Module - Front (KA1) **K29F Seat Heating Control Module - Front X1 (KA1), K29F Seat Heating Control Module - Front X2 (KA1)**
4. M73D Seat Blower Motor - Passenger Cushion (KU3) **M73D Seat Blower Motor - Passenger Cushion (KU3)**
5. M51P Seat Horizontal Motor - Passenger (ADT/AG2) **M51P Seat Horizontal Motor - Passenger (ADT/AG2)**
6. E14D Seat Heating Element - Passenger Cushion (KA1) **E14D Seat Heating Element - Passenger Cushion (KA1)**
7. M53P Seat Lumbar Support Motor - Passenger (AT9) **M53P Seat Lumbar Support Motor - Passenger (AT9+X88), M53P Seat Lumbar Support Motor - Passenger (AT9+Z88)**
8. M56P Seat Recline Motor - Passenger (AG2) **M56P Seat Recline Motor - Passenger (AG2)**
9. M73B Seat Blower Motor - Passenger Back (KU3) **M73B Seat Blower Motor - Passenger Back (KU3)**

PASSENGER SEAT (3 OF 4)

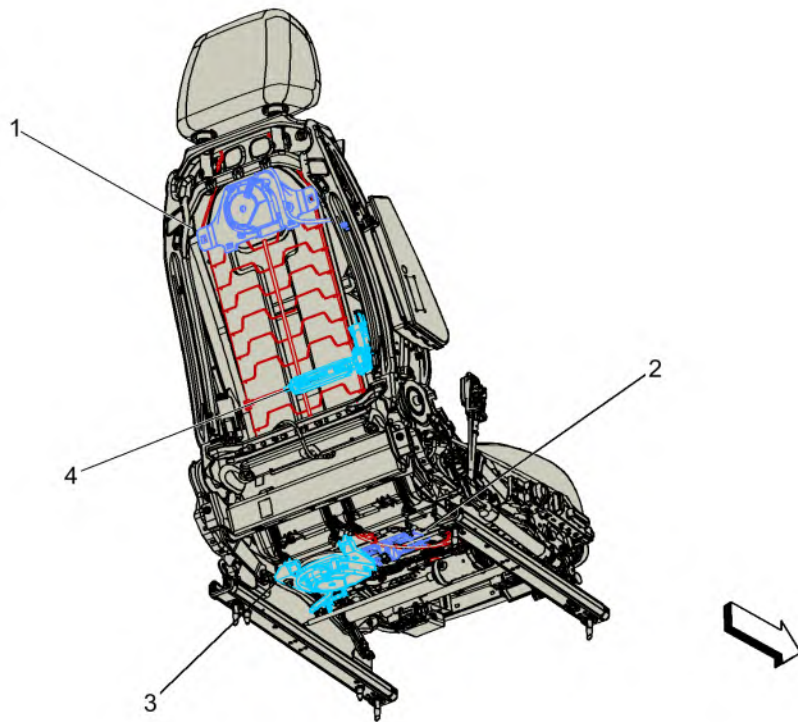


Fig. 14: Identifying Passenger Seat (3 of 4)

Courtesy of GENERAL MOTORS COMPANY

Items
1. M73B Seat Blower Motor - Passenger Back (KU3) <u>M73B Seat Blower Motor - Passenger Back (KU3)</u>
2. K85 Passenger Presence Module (AL0) <u>K85 Passenger Presence Module (AL0)</u>
3. M73D Seat Blower Motor - Passenger Cushion (KU3) <u>M73D Seat Blower Motor - Passenger Cushion (KU3)</u>
4. M53P Seat Lumbar Support Motor - Passenger (AT9) <u>M53P Seat Lumbar Support Motor - Passenger (AT9+X88)</u> , <u>M53P Seat Lumbar Support Motor - Passenger (AT9+Z88)</u>

PASSENGER SEAT (4 OF 4)

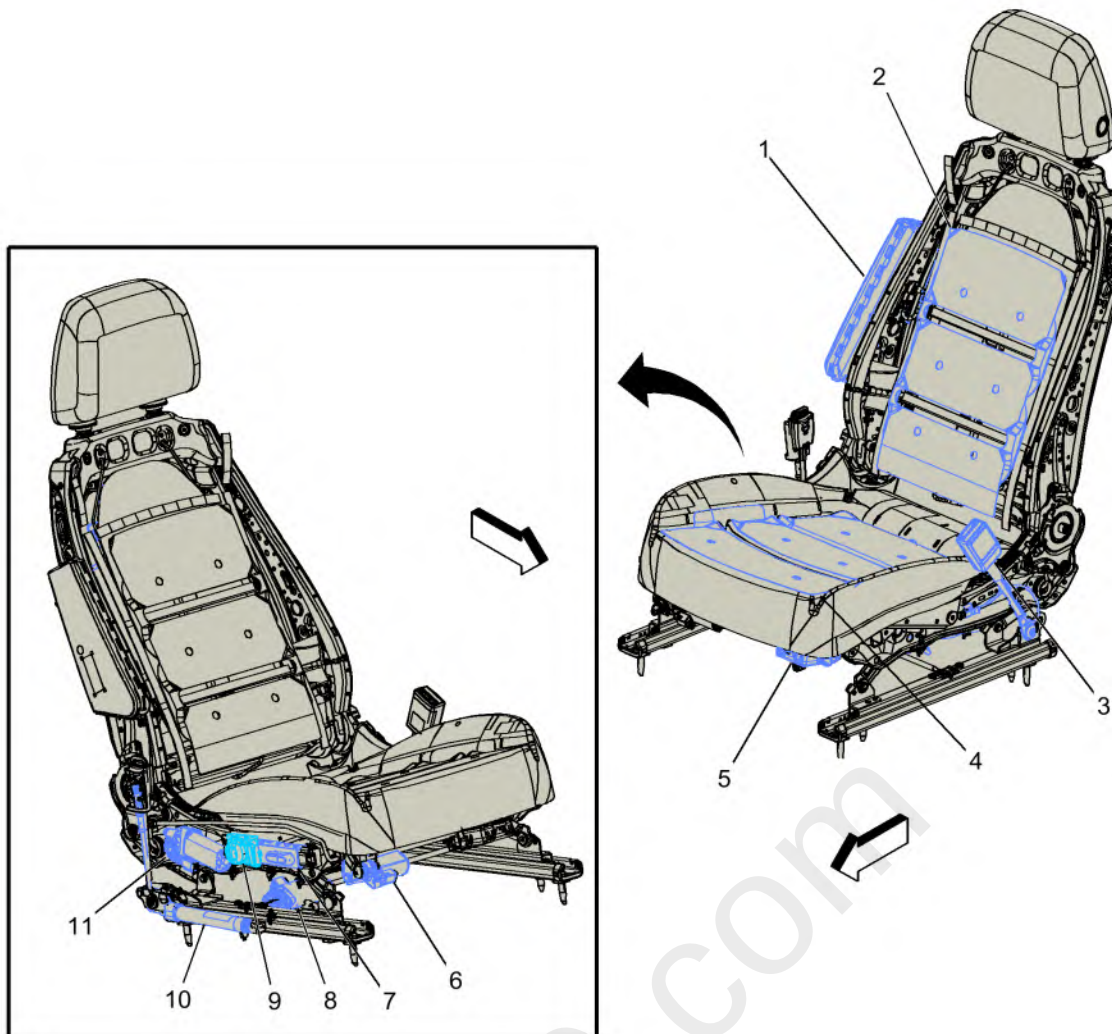


Fig. 15: Identifying Passenger Seat (4 of 4)
 Courtesy of GENERAL MOTORS COMPANY

Items

1. F106P Seat Side Air Bag - Passenger **F106P Seat Side Air Bag - Passenger**
2. E14C Seat Heating Element - Passenger Back (KA1) **E14C Seat Heating Element - Passenger Back (KA1)**
3. B153P Seat Belt Buckle - Passenger **B153P Seat Belt Buckle - Passenger**
4. E14D Seat Heating Element - Passenger Cushion (KA1) **E14D Seat Heating Element - Passenger Cushion (KA1)**
5. K29F Seat Heating Control Module - Front (KA1) **K29F Seat Heating Control Module - Front X1 (KA1)**, **K29F Seat Heating Control Module - Front X2 (KA1)**
6. M50P Seat Front Vertical Motor - Passenger (ADT/AG2) **M50P Seat Front Vertical Motor - Passenger (ADT/AG2)**
7. S64P Seat Adjuster Switch - Passenger (AG2) **S64P Seat Adjuster Switch - Passenger (AG2+X88)**, **S64P Seat Adjuster Switch - Passenger (AG2+Z88)**
8. M51P Seat Horizontal Motor - Passenger (ADT/AG2) **M51P Seat Horizontal Motor - Passenger (ADT/AG2)**
9. S65P Seat Lumbar Support Switch - Passenger (AT9) **S65P Seat Lumbar Support Switch - Passenger (AT9)**
10. F113P Seat Belt Anchor Pretensioner - Passenger **F113P Seat Belt Anchor Pretensioner - Passenger**
11. M55P Seat Rear Vertical Motor - Passenger (ADT/AG2) **M55P Seat Rear Vertical Motor - Passenger (ADT/AG2)**

LEFT REAR SEAT

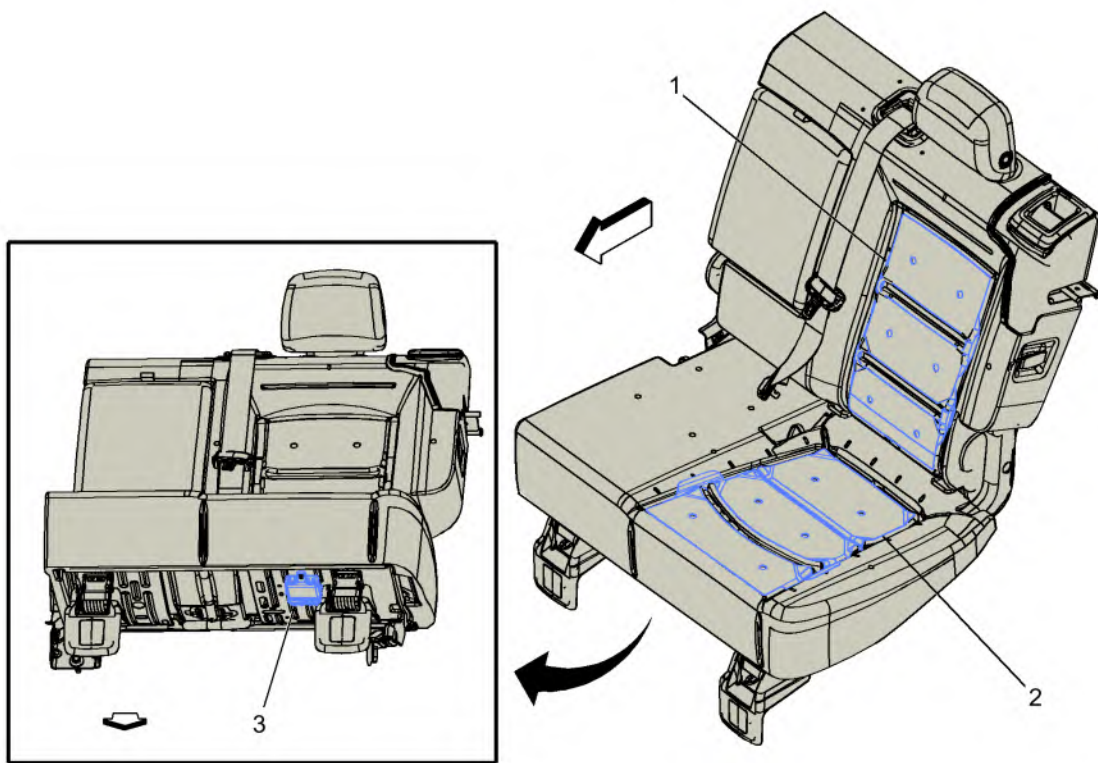


Fig. 16: Identifying Left Rear Seat

Courtesy of GENERAL MOTORS COMPANY

Items

1. E14E Seat Heating Element - Left Rear Back (KA6) [E14E Seat Heating Element - Left Rear Back \(KA6\)](#)
2. E14F Seat Heating Element - Left Rear Cushion (KA6) [E14F Seat Heating Element - Left Rear Cushion \(KA6\)](#)
3. K29R Seat Heating Control Module - Rear (KA6) [K29R Seat Heating Control Module - Rear X1 \(KA6\)](#), [K29R Seat Heating Control Module - Rear X2 \(KA6\)](#)

RIGHT REAR SEAT

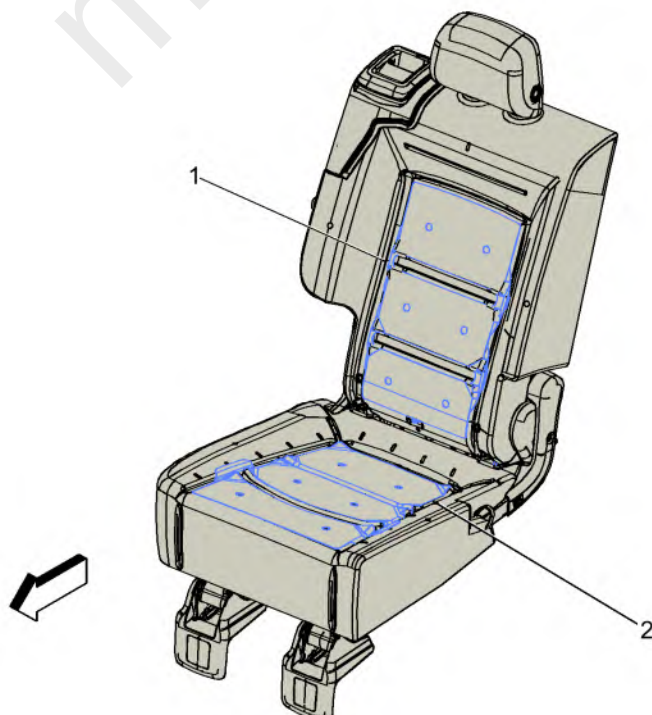


Fig. 17: Right Rear Seat

Courtesy of GENERAL MOTORS COMPANY

Items	
1. E14G Seat Heating Element - Right Rear Back (KA6)	E14G Seat Heating Element - Right Rear Back (KA6)
2. E14H Seat Heating Element - Right Rear Cushion (KA6)	E14H Seat Heating Element - Right Rear Cushion (KA6)

HEADLINER (C3U)

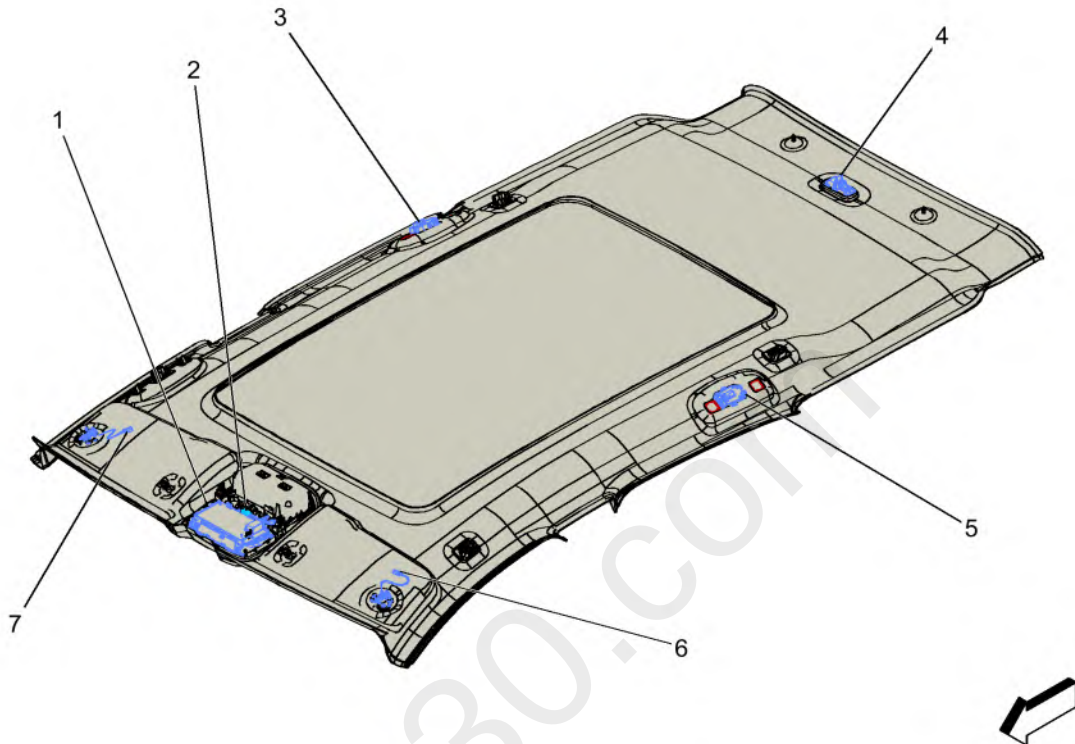


Fig. 18: Identifying Headliner (C3U)

Courtesy of GENERAL MOTORS COMPANY

Items	
1. A98 Front Overhead Console Assembly	A98 Front Overhead Console Assembly
2. B24LF Mobile Telephone Microphone - Left Front	B24LF Mobile Telephone Microphone - Left Front
3. E37RR Dome/Reading Lamps - Right Rear	E37RR Dome/Reading Lamps - Right Rear
4. E8S Rear Compartment Courtesy Lamp	E8S Rear Compartment Courtesy Lamp
5. E37LR Dome/Reading Lamps - Left Rear	E37LR Dome/Reading Lamps - Left Rear
6. A3L Sunshade - Left	A3L Sunshade - Left
7. A3R Sunshade - Right	A3R Sunshade - Right

HEADLINER (EXCEPT C3U)

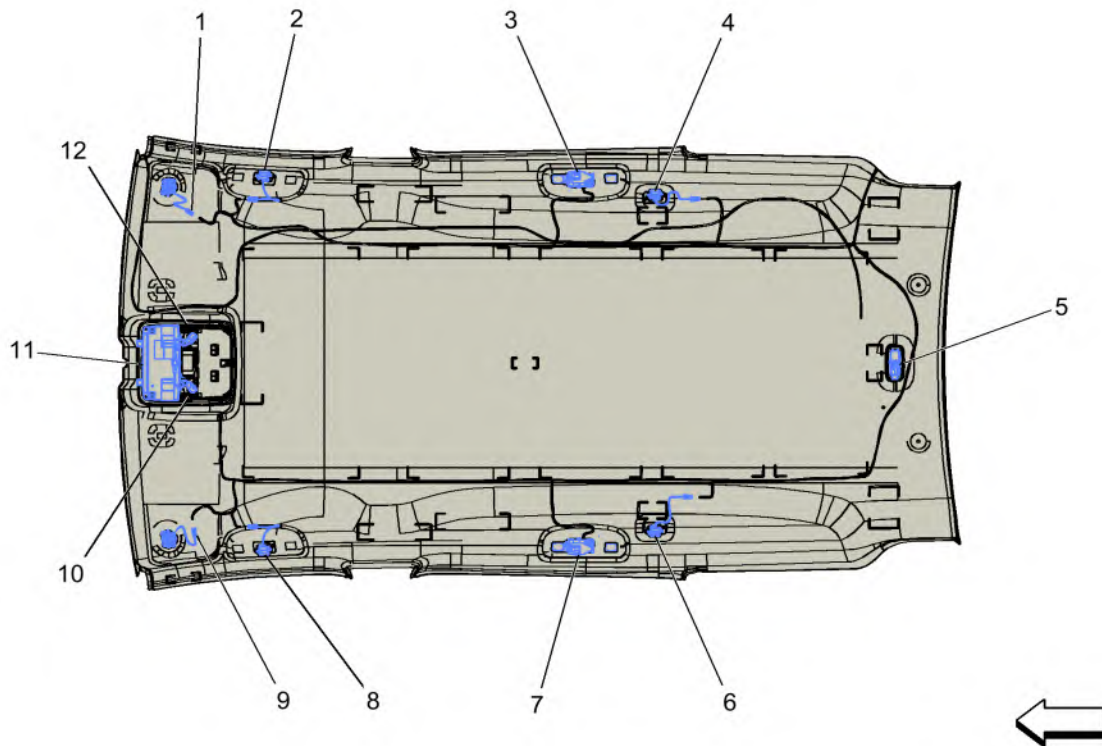


Fig. 19: Identifying Headliner (except C3U)
 Courtesy of GENERAL MOTORS COMPANY

Items

1. A3R Sunshade - Right [A3R Sunshade - Right](#)
2. B77RF Radio Volume Compensator Interior Noise Microphone - Right Front (NKC) [B77RF Radio Volume Compensator Interior Noise Microphone - Right Front \(NKC\)](#)
3. E37RR Dome/Reading Lamps - Right Rear [E37RR Dome/Reading Lamps - Right Rear](#)
4. B77RR Radio Volume Compensator Interior Noise Microphone - Right Rear (NKC) [B77RR Radio Volume Compensator Interior Noise Microphone - Right Rear \(NKC\)](#)
5. E8S Rear Compartment Courtesy Lamp [E8S Rear Compartment Courtesy Lamp](#)
6. B77LR Radio Volume Compensator Interior Noise Microphone - Left Rear (NKC) [B77LR Radio Volume Compensator Interior Noise Microphone - Left Rear \(NKC\)](#)
7. E37LR Dome/Reading Lamps - Left Rear [E37LR Dome/Reading Lamps - Left Rear](#)
8. B77LF Radio Volume Compensator Interior Noise Microphone - Left Front (NKC) [B77LF Radio Volume Compensator Interior Noise Microphone - Left Front \(NKC\)](#)
9. A3L Sunshade - Left [A3L Sunshade - Left](#)
10. B24LF Mobile Telephone Microphone - Left Front [B24LF Mobile Telephone Microphone - Left Front](#)
11. A98 Front Overhead Console Assembly [A98 Front Overhead Console Assembly](#)
12. B24RF Mobile Telephone Microphone - Right Front (IOS/IOT/IOU) [B24RF Mobile Telephone Microphone - Right Front \(IOS/IOT/IOU\)](#)

REAR ROOF ANTENNA

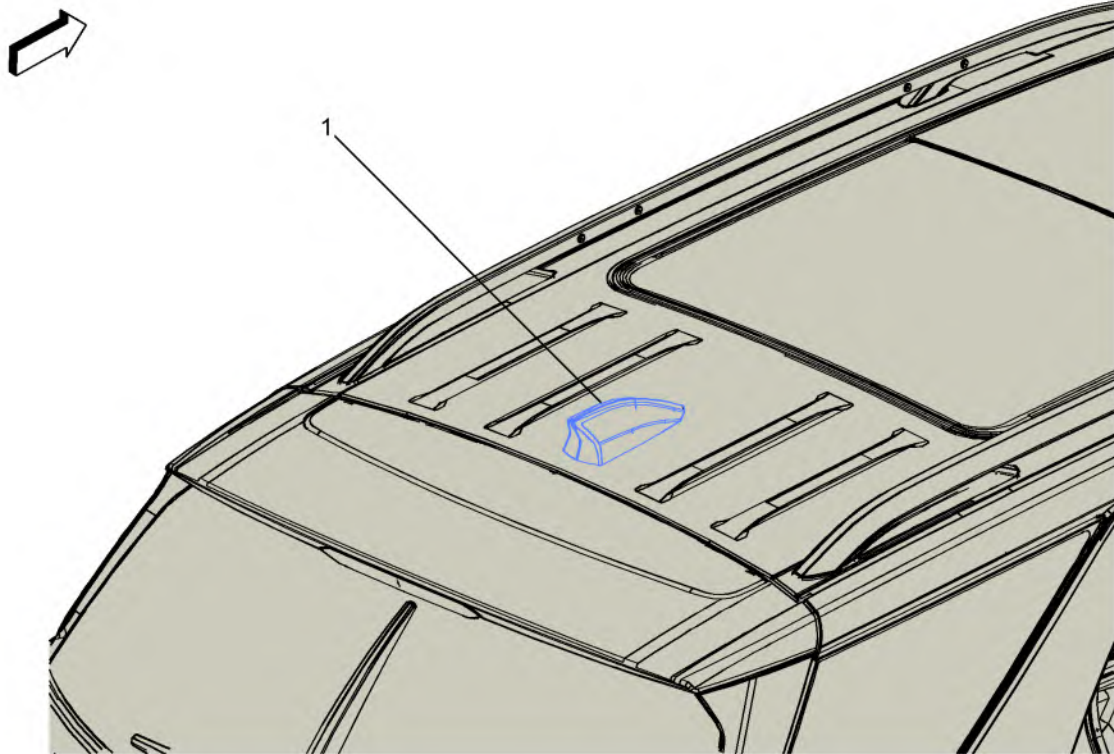


Fig. 20: Rear Roof Antenna

Courtesy of GENERAL MOTORS COMPANY

Items

1. T2RR Antenna - Roof Rear [T2RR Antenna - Roof Rear \(IOB/IO5/IO6-U2Q\)](#), [T2RR Antenna - Roof Rear X1 \(UE1\)](#), [T2RR Antenna - Roof Rear X2 \(U2K\)](#)

LEFT REAR OF THE PASSENGER COMPARTMENT

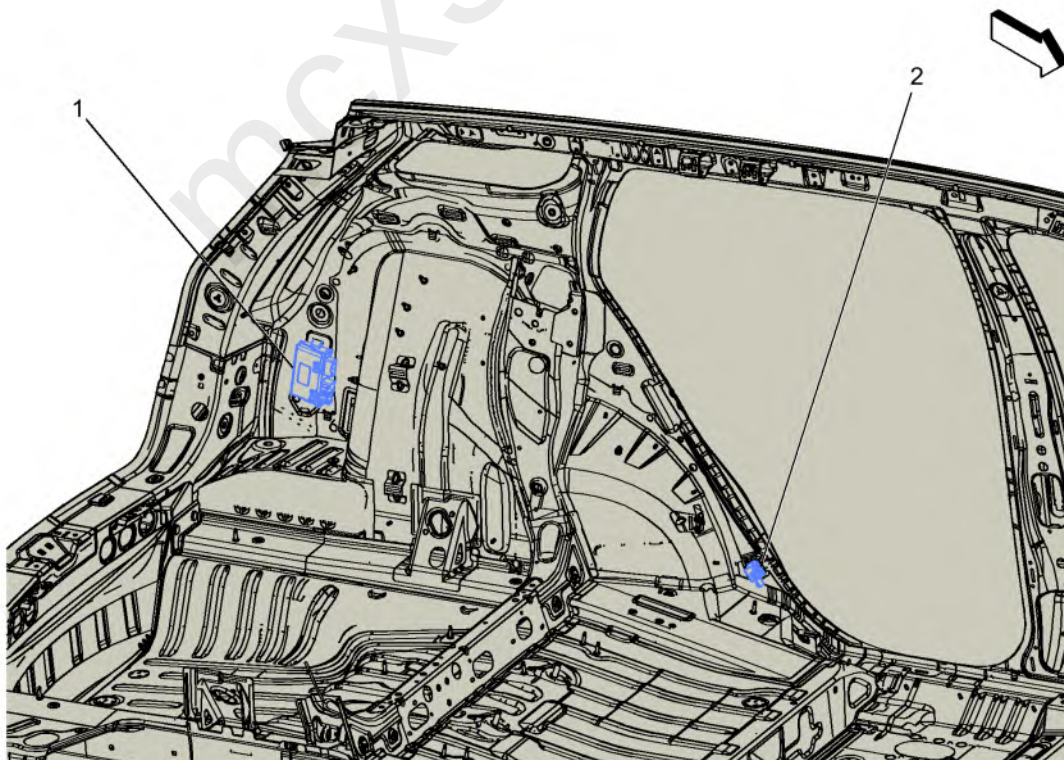


Fig. 21: Passenger Compartment - Left Rear

Courtesy of GENERAL MOTORS COMPANY

Items

Items

1. K39 Liftgate Control Module (TB5/TC2) [K39 Liftgate Control Module X1 \(TB5/TC2\)](#) [K39 Liftgate Control Module X2 \(TB5/TC2\)](#) [K39 Liftgate Control Module X3 \(TB5/TC2\)](#)
2. B63LR Side Impact Sensor - Left Rear [B63LR Side Impact Sensor - Left Rear](#)

RIGHT REAR OF THE PASSENGER COMPARTMENT

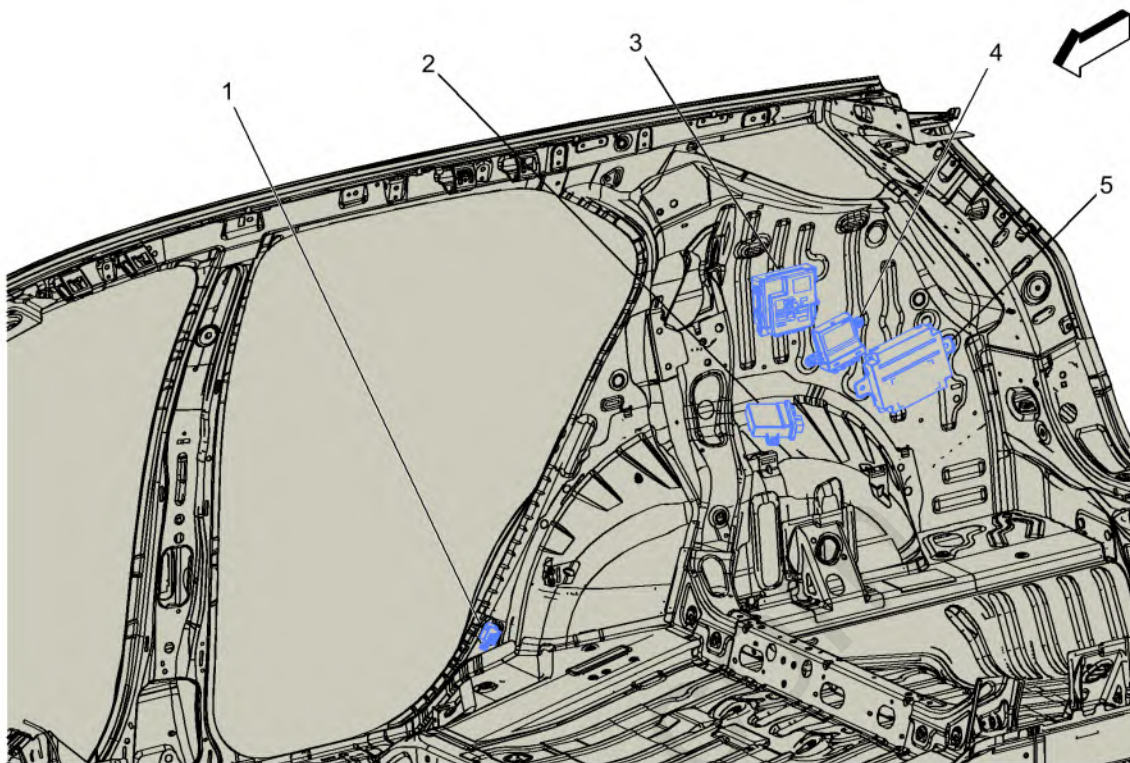


Fig. 22: Passenger Compartment - Right Rear
 Courtesy of GENERAL MOTORS COMPANY

Items

1. B63RR Side Impact Sensor - Right Rear [B63RR Side Impact Sensor - Right Rear](#)
2. K26 Headlamp Control Module (TR7) [K26 Headlamp Control Module \(TR7\)](#)
3. K84 Keyless Entry Control Module [K84 Keyless Entry Control Module X1](#) [K84 Keyless Entry Control Module X2](#)
4. K182 Parking Assist Control Module (UD5/UD7/UFQ) [K182 Parking Assist Control Module X1 \(UD5/UD7/UFQ\)](#) [K182 Parking Assist Control Module X2 \(UD5/UD7/UFQ\)](#) [K182 Parking Assist Control Module X3 \(UD5/UFQ\)](#)
5. K157 Video Processing Control Module (UVH) [K157 Video Processing Control Module X1 \(UVH\)](#) [K157 Video Processing Control Module X2 \(UVH\)](#) [K157 Video Processing Control Module X3 \(UVH\)](#)