

2018 ACCESSORIES & EQUIPMENT

Interior Trim And Paneling - Traverse

SPECIFICATIONS

FASTENER SPECIFICATIONS

Single Use Non-Threaded Fasteners/Components

NOTE:

All fasteners/components listed in this table MUST BE DISCARDED and replaced with NEW after removal.

Application
Windshield Garnish Molding Tether Clip

Reusable Threaded Fastener Tightening Specifications

NOTE:


All fasteners listed in this table can be reused after removal.

Application	Specification
	Metric (English)
Body Lock Pillar Upper Trim Panel Bolt	3 N.m (27 lb in)
Body Rear Corner Upper Garnish Molding Fastener	3 N.m (27 lb in)
Cargo Tie Down Loop Fastener	22 N.m (16 lb ft)
Center Pillar Upper Garnish Molding Bolt	3 N.m (27 lb in)
Front Side Door Armrest Bracket Bolt	2.5 N.m (22 lb in)
Front Side Door Armrest Pull Cup Bolt	2.5 N.m (22 lb in)
Front Side Door Inside Handle Bolt	2.5 N.m (22 lb in)
Front Side Door Trim Panel Bolt	1.5 N.m (13 lb in)
Liftgate Lower Trim Finish Panel Bolt	2.5 N.m (22 lb in)
Rear Compartment Floor Stowage Compartment Divider Retainer	1.2 N.m (11 lb in)
Rear Side Door Armrest Bracket Bolt	2.5 N.m (22 lb in)
Rear Side Door Armrest Pull Cup Bolt	2.5 N.m (22 lb in)
Rear Side Door Inside Handle Fastener	2.5 N.m (22 lb in)
Rear Side Door Trim Panel Bolt	1.5 N.m (13 lb in)
Roof Rail Assist Handle Fastener	6N.m (53 lb in)
Sunshade Bolt	2.5 N.m (22 lb in)
Sunshade Support Fastener	2 N.m (18 lb in)

REPAIR INSTRUCTIONS


FRONT SIDE DOOR LOCKING ROD PUSHBUTTON BEZEL REPLACEMENT

--

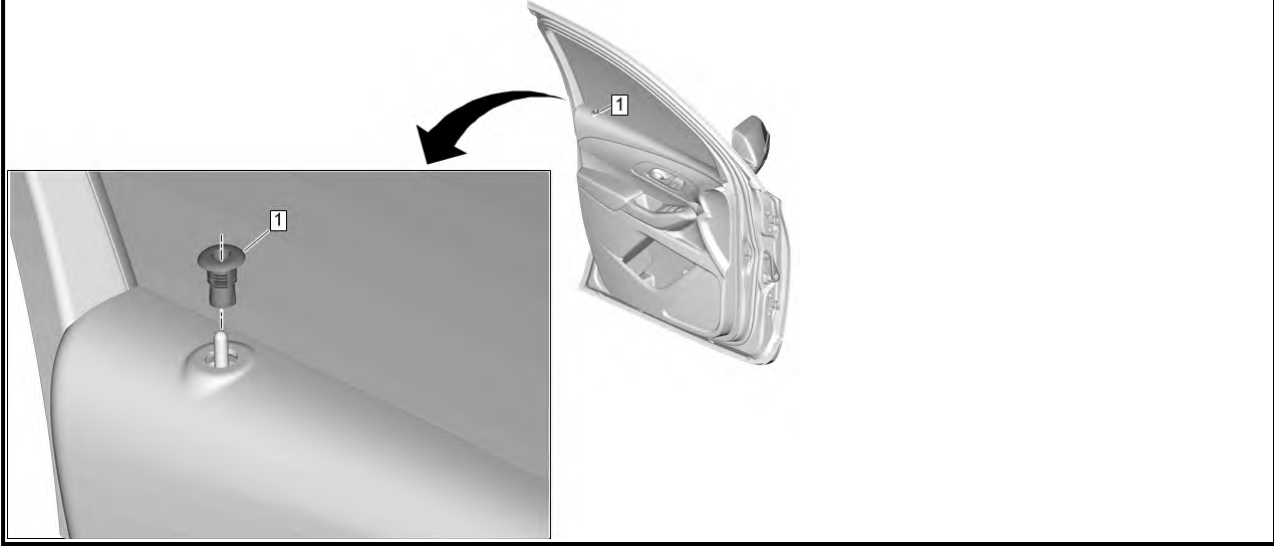

Callout	Component Name
1	Front Side Door Locking Rod Pushbutton Bezel Procedure 1. Ensure the locking rod is in the unlocked position. 2. Use a flat bladed plastic trim tool to disengage the detent tab. 3. Remove the knob by pulling upward.


REAR SIDE DOOR LOCKING ROD PUSHBUTTON BEZEL REPLACEMENT

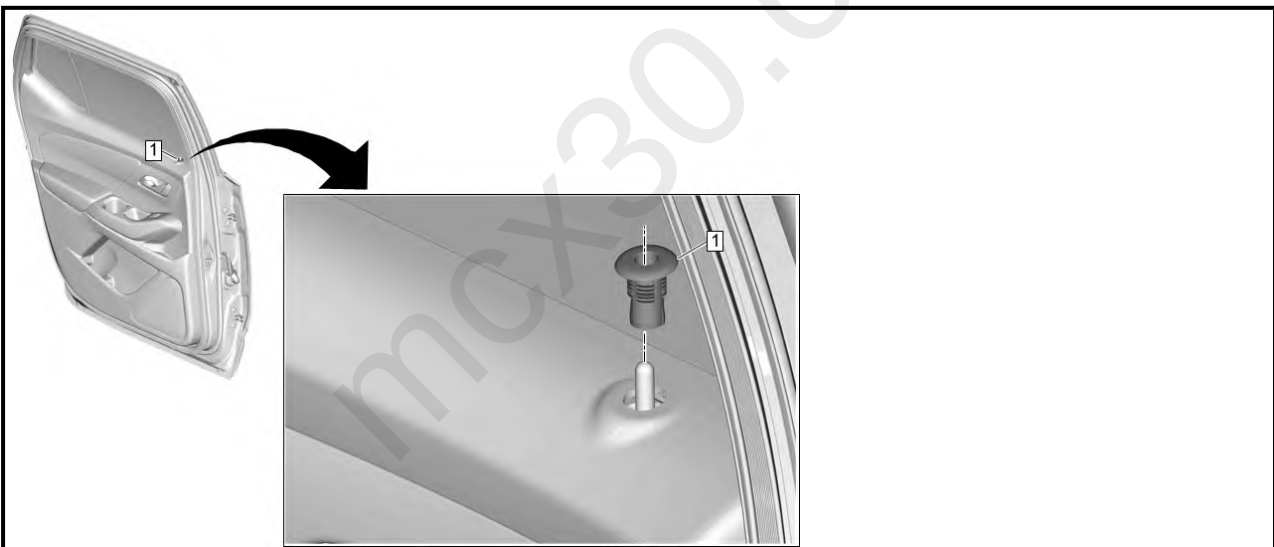

Callout	Component Name
1	Rear Side Door Locking Rod Pushbutton Bezel Procedure 1. Ensure the locking rod is in the unlocked position. 2. Use a flat bladed plastic trim tool to disengage the detent tab. 3. Remove the knob by pulling upward.


FRONT SIDE DOOR ACCESSORY SWITCH MOUNT PLATE REPLACEMENT - DRIVER SIDE



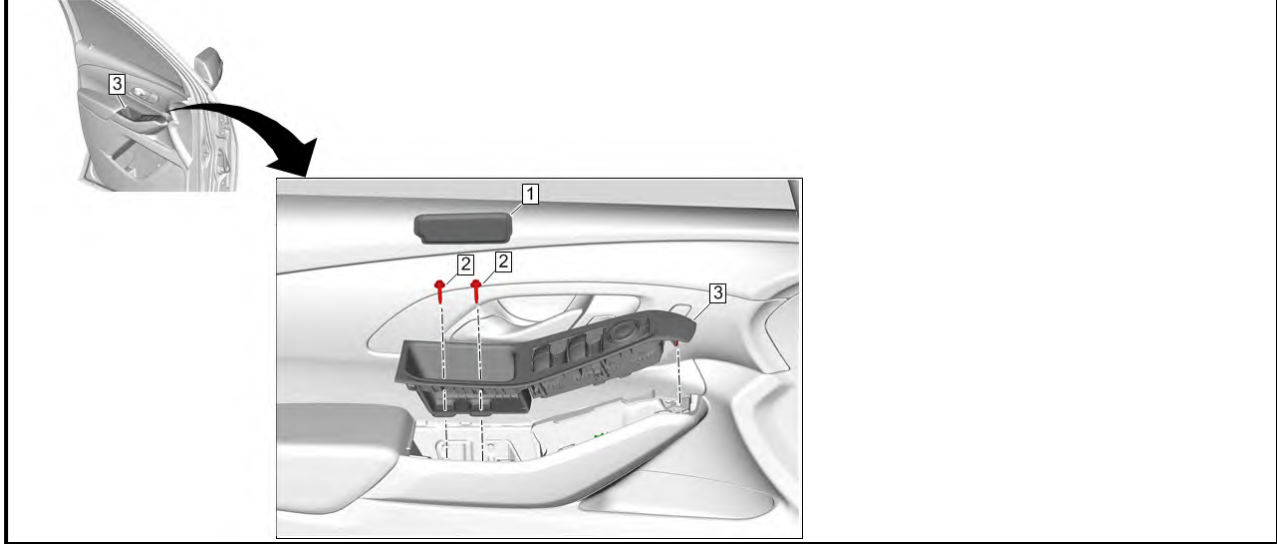

Callout	Component Name
1	Front Side Door Pull Cup Liner
2	Front Side Door Armrest Pull Cup Bolt [2x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
3	Front Side Door Accessory Switch Mount Plate - Driver Side Procedure 1. Using a flat-bladed plastic trim tool, start at the front of the accessory switch mount plate and gently insert trim tool to lift the front side door accessory switch mount plate from the door trim assembly. 2. Disconnect the electrical connector. 3. Transfer parts as necessary.


FRONT SIDE DOOR ACCESSORY SWITCH MOUNT PLATE REPLACEMENT - PASSENGER SIDE

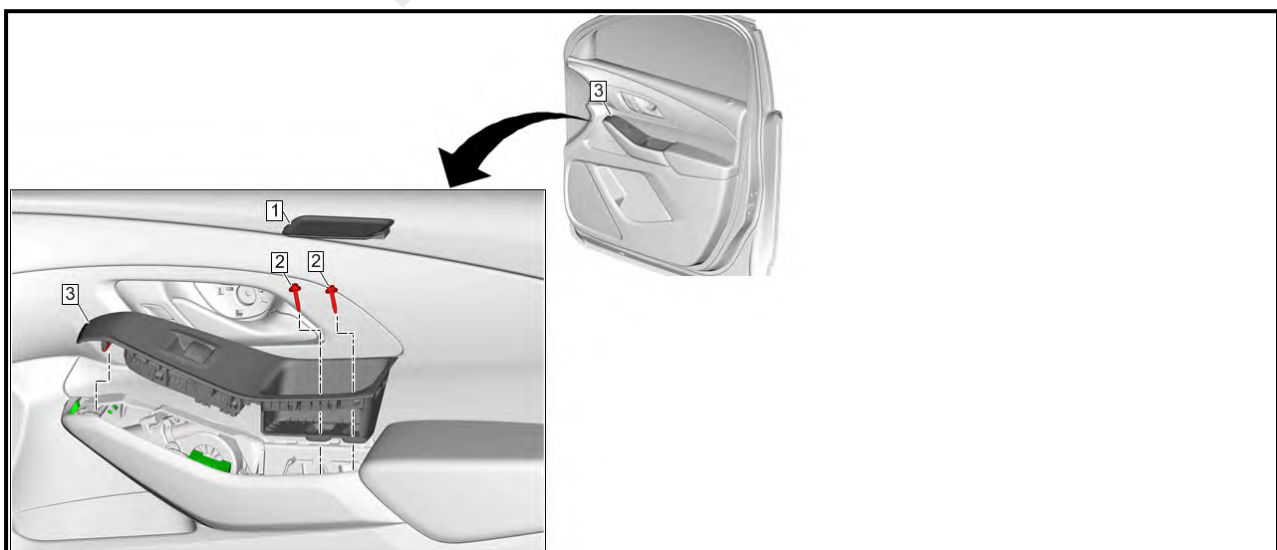

Callout	Component Name
1	Front Side Door Pull Cup Liner


Callout	Component Name
2	Front Side Door Armrest Pull Cup Bolt [2x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
3	Front Side Door Accessory Switch Mount Plate - Passenger Side Procedure 1. Using a flat-bladed plastic trim tool, start at the front of the accessory switch mount plate and gently insert trim tool to lift the front side door accessory switch mount plate from the door trim assembly. 2. Disconnect the electrical connector. 3. Transfer parts as necessary.

REAR SIDE DOOR ACCESSORY SWITCH MOUNT PLATE REPLACEMENT

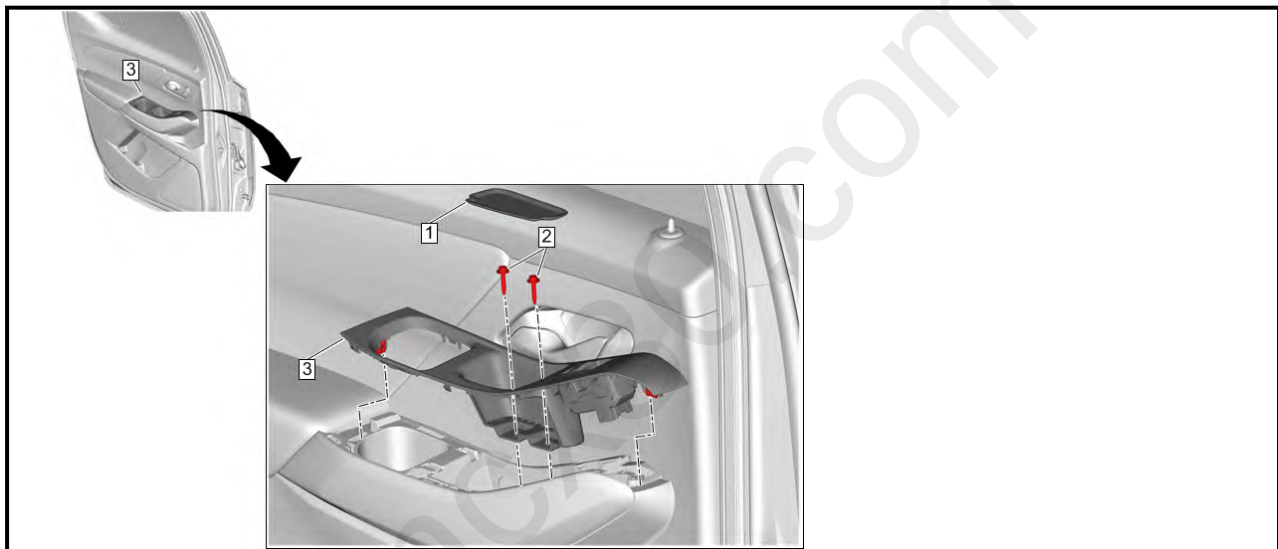


Callout	Component Name
1	Rear Side Door Pull Cup Liner
2	Rear Side Door Armrest Pull Cup Bolt [2x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
3	Rear Side Door Accessory Switch Mount Plate Procedure 1. Using a flat-bladed plastic trim tool, start at the rear of the accessory switch mount plate and gently insert trim tool to lift the rear side door accessory switch mount plate from the door trim assembly. 2. Disconnect the electrical connector. 3. Transfer parts as necessary.

FRONT SIDE DOOR PULL HANDLE BRACKET REPLACEMENT

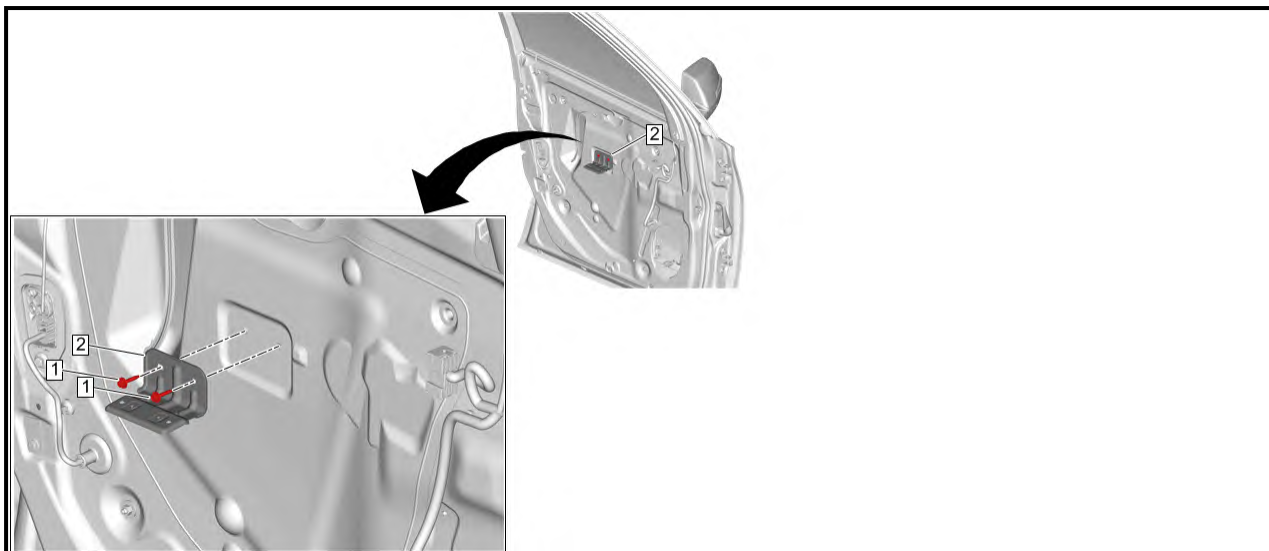

Callout	Component Name
Preliminary Procedure <u>Front Side Door Trim Replacement</u>	
1	Front Side Door Armrest Bracket Bolt [2x] CAUTION: Refer to: <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
2	Front Side Door Pull Handle Bracket Procedure Reposition water deflector, as necessary.

REAR SIDE DOOR PULL HANDLE BRACKET REPLACEMENT

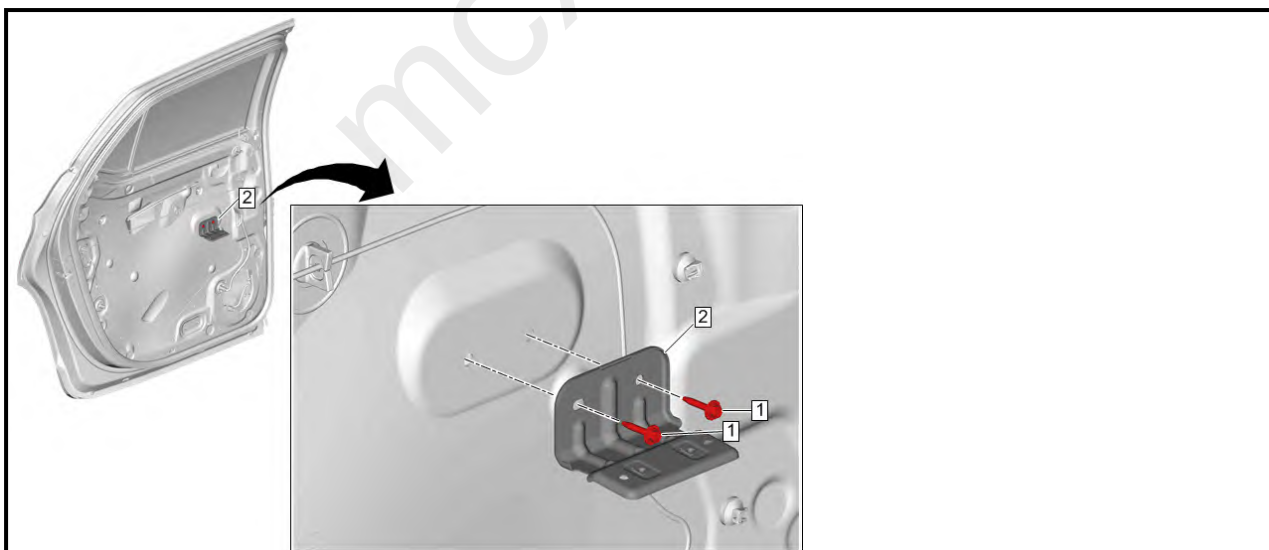


Callout	Component Name
Preliminary Procedure <u>Rear Side Door Trim Replacement</u>	

Callout	Component Name
1	Rear Side Door Armrest Bracket Bolt [2x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Rear Side Door Pull Handle Bracket Procedure Reposition water deflector, as necessary.

FRONT SIDE DOOR TRIM REPLACEMENT

Removal Procedure


1.

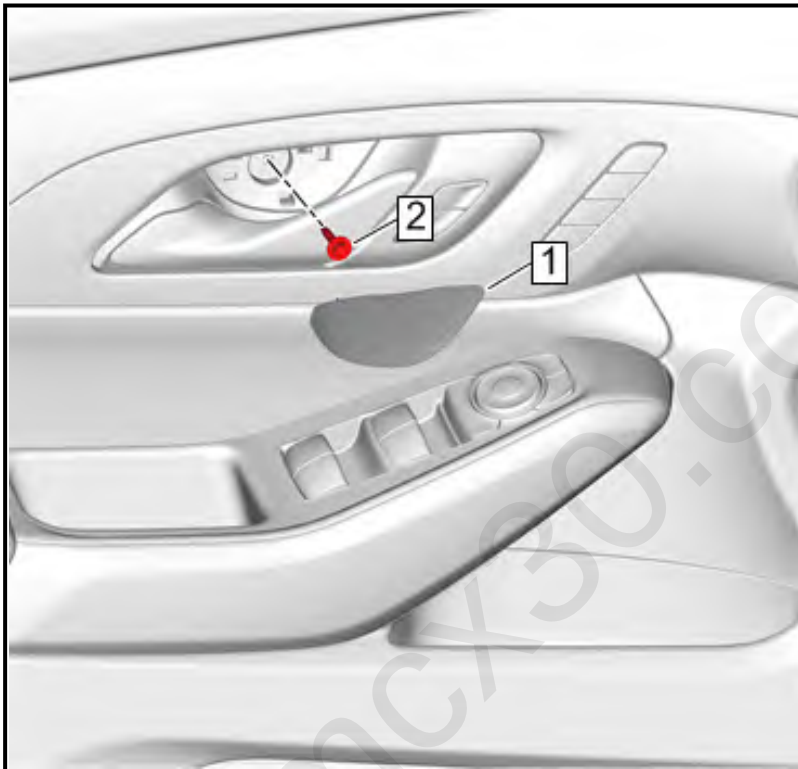


Use a flat-bladed plastic trim tool to release the front side door inside handle bolt finish cap (1).

2. Front Side Door Inside Handle Bolt (2) - Remove

 3.




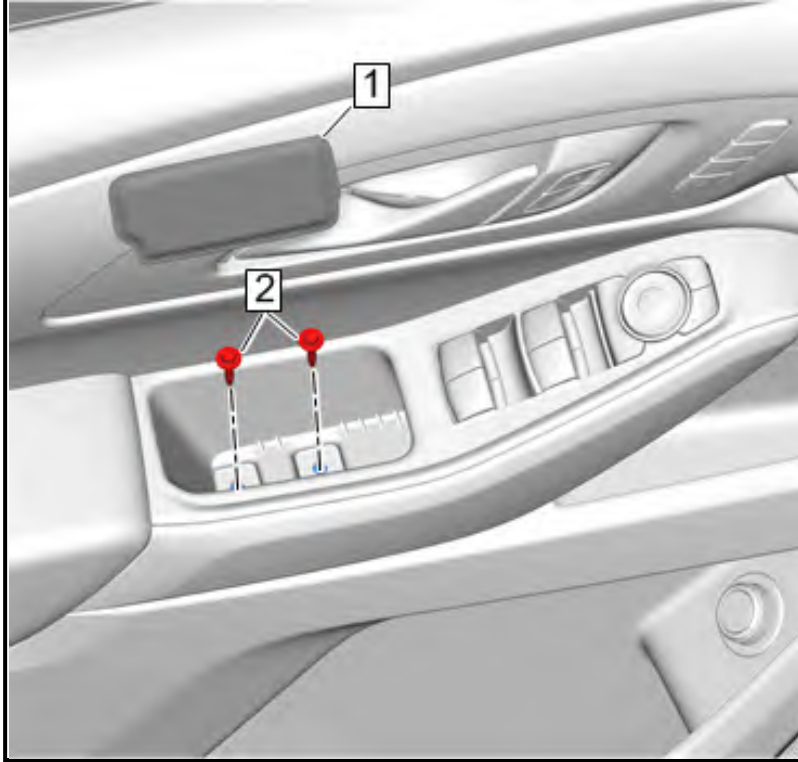

Use a flat-bladed plastic trim tool to release the front side door armrest pull cup bolt cap (1).

4. Front Side Door Armrest Pull Cup Bolt (2) - Remove [2x]

5.

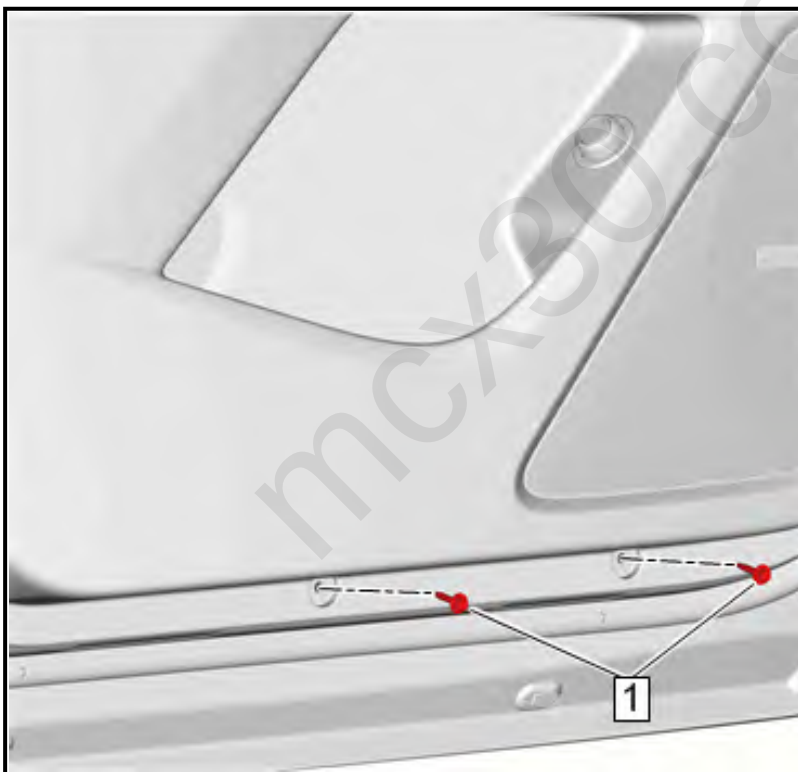

Front Side Door Trim Panel Bolt (1) - Remove [2x]


6.





NOTE: The front side door trim has an integral front side door trim assembly belt bracket that hooks over the front side door window inner sealing strip assembly and the front side door window garnish molding.

Front Side Door Trim (1) - Remove

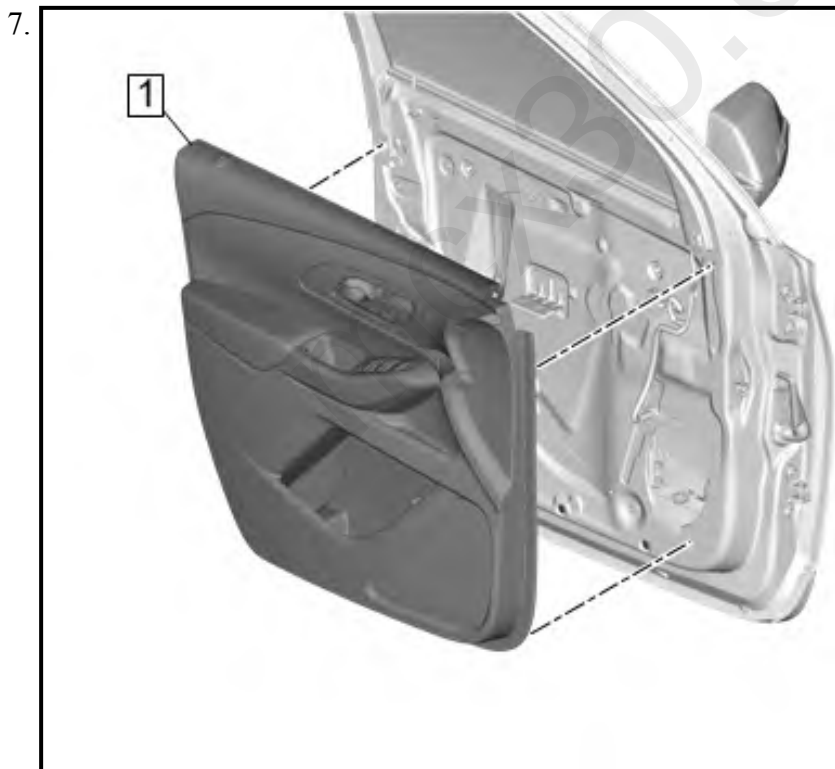

Front Side Door Trim (1) - Remove

1. Use a flat-bladed plastic trim tool to loosen the retainers all along the bottom of the door trim panel.
2. When the front side door trim (1) is sufficiently loosened, place inner hand behind front side door trim and pull towards you to disengage integral retainers and clips.
3. Lift up and swing out to disengage integral front side door trim assembly belt bracket from the front side door window inner sealing strip assembly and the front side door window garnish molding.

4. Disconnect the door lock retainer cable from the front side door trim (1) and the inside handle.
5. Disconnect the electrical connector.
8. Place the front side door trim (1) on a clean flat surface.

Installation Procedure




NOTE: The front side door trim has an integral front side door trim assembly belt bracket that hooks over the front side door window inner sealing strip assembly and the front side door window garnish molding.

Front Side Door Trim (1) - Install


1. Connect the electrical connector.
2. Route lock rod through lock rod bezel on front side door trim. (1)
3. Hook the integral front side door trim assembly belt bracket to the front side door window inner sealing strip assembly and the front side door window garnish molding and swing in to install.
4. Connect the door lock retainer cable to the front side door trim (1) and the inside handle.
2. Engage most forward locator pin.
3. Engage remaining retainers starting from the bottom to the front and rear.



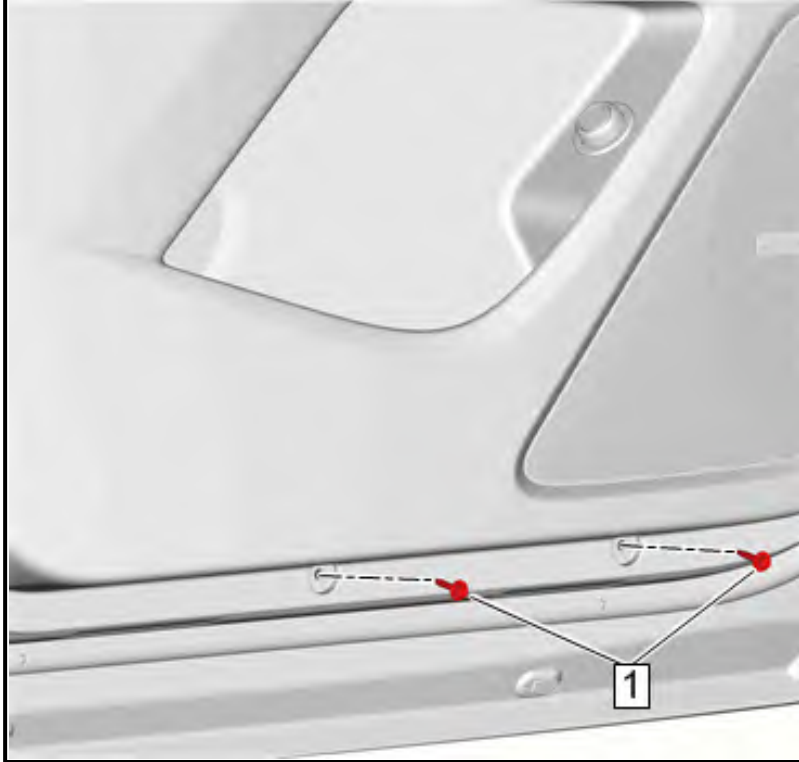

CAUTION: Refer to [Fastener Caution](#) .

Front Side Door Trim Panel Bolt (1) - Install and tighten [2x] 1.5 N.m (13 lb in)

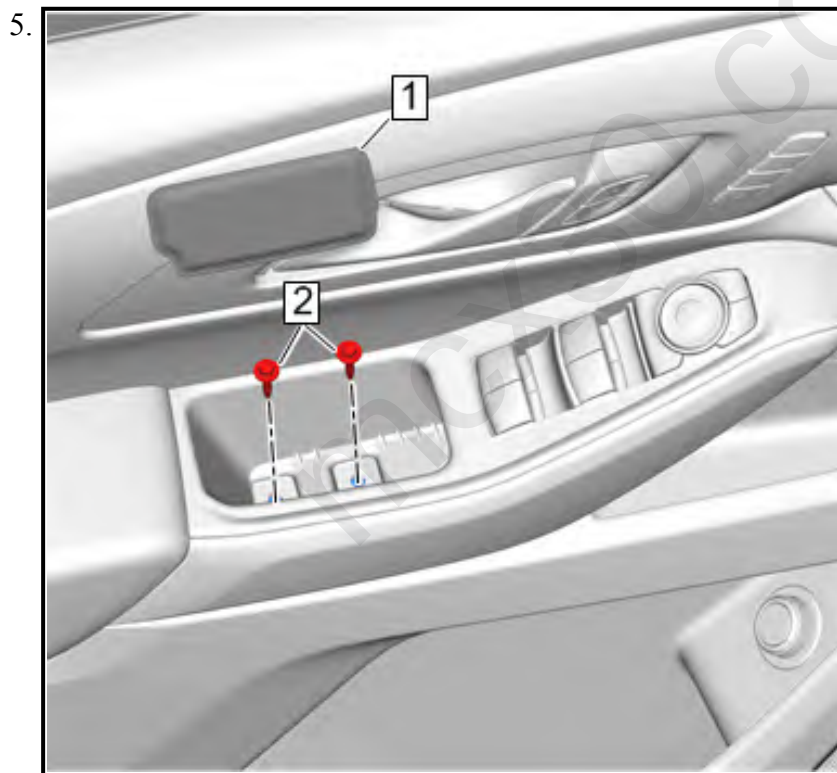

Front Side Door Armrest Pull Cup Bolt (2) - Install and tighten [2x] 2.5 N.m (22 lb in)

6. Front Side Door Armrest Pull Cup Bolt Cap (1) - Install






Front Side Door Inside Handle Bolt (2) - Install and tighten 2.5 N.m (22 lb in)


8. Front Side Door Inside Handle Bolt Finish Cap (1) - Install

FRONT SIDE DOOR WATER DEFLECTOR REPLACEMENT

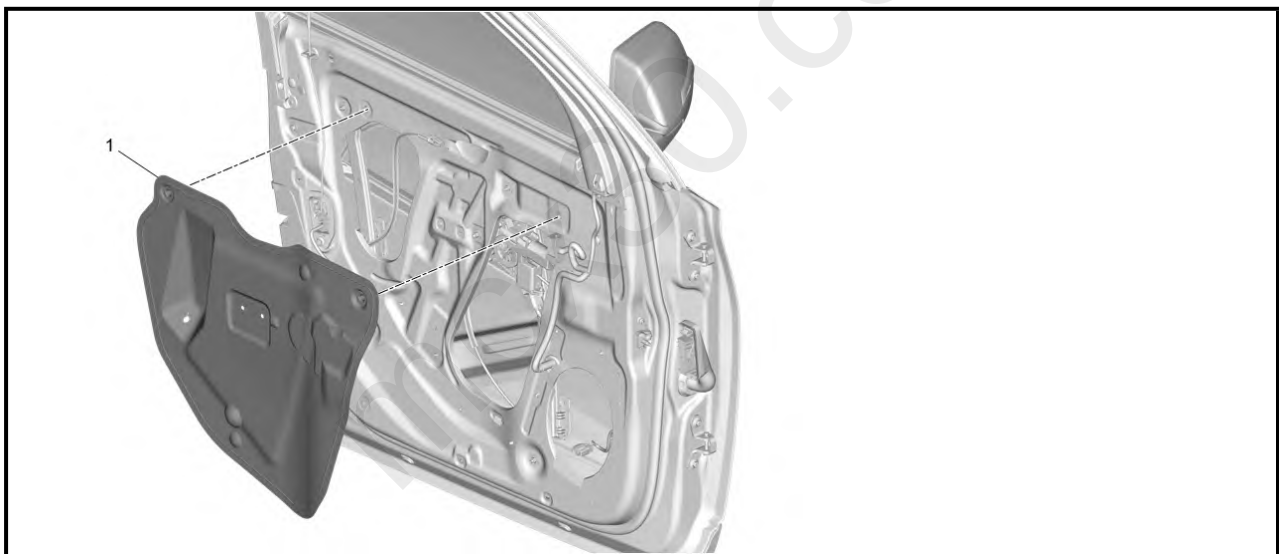


Callout	Component Name
Preliminary Procedures Front Side Door Trim Replacement Front Side Door Pull Handle Bracket Replacement	
1	Front Side Door Water Deflector Procedure Route front side door inside handle cable through hole in deflector assembly while removing it from the door. NOTE: When reinstalling water deflector ensure integral locators are installed properly and that water deflector is secured and leakproof.

REAR SIDE DOOR WATER DEFLECTOR REPLACEMENT

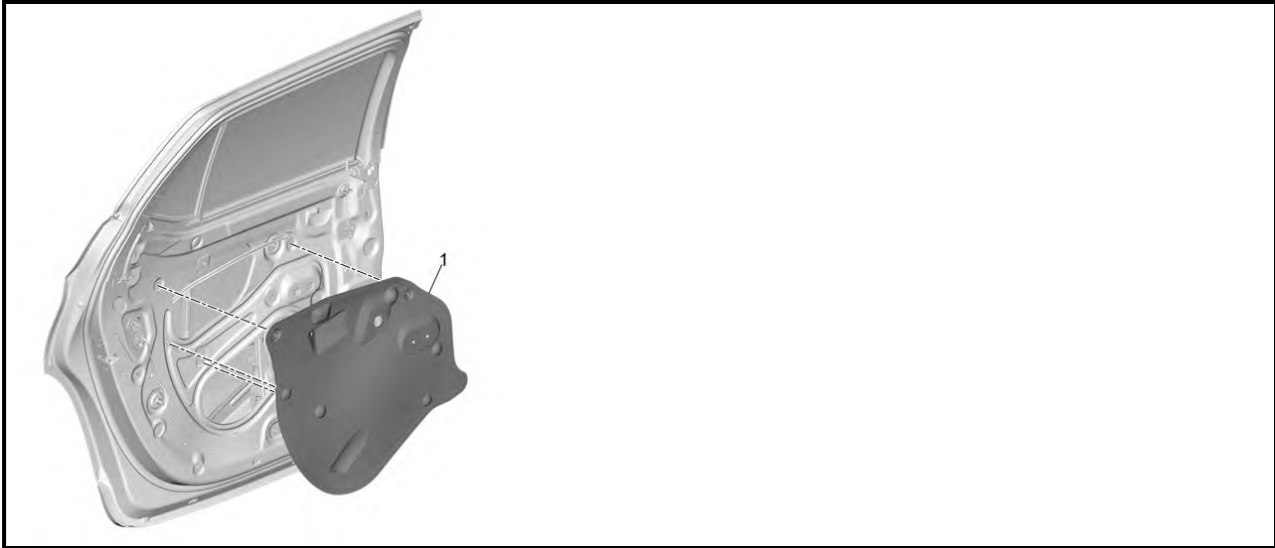

Callout	Component Name
Preliminary Procedures Rear Side Door Trim Replacement Rear Side Door Pull Handle Bracket Replacement Rear Side Door Locking Rod Bellcrank Replacement	
1	Rear Side Door Water Deflector Procedure Route rear side door inside handle cable through hole in deflector assembly while removing it from the door. NOTE: When reinstalling water deflector ensure integral locators are installed properly and that water deflector is secured and leakproof.


REAR SIDE DOOR WINDOW GARNISH MOLDING REPLACEMENT

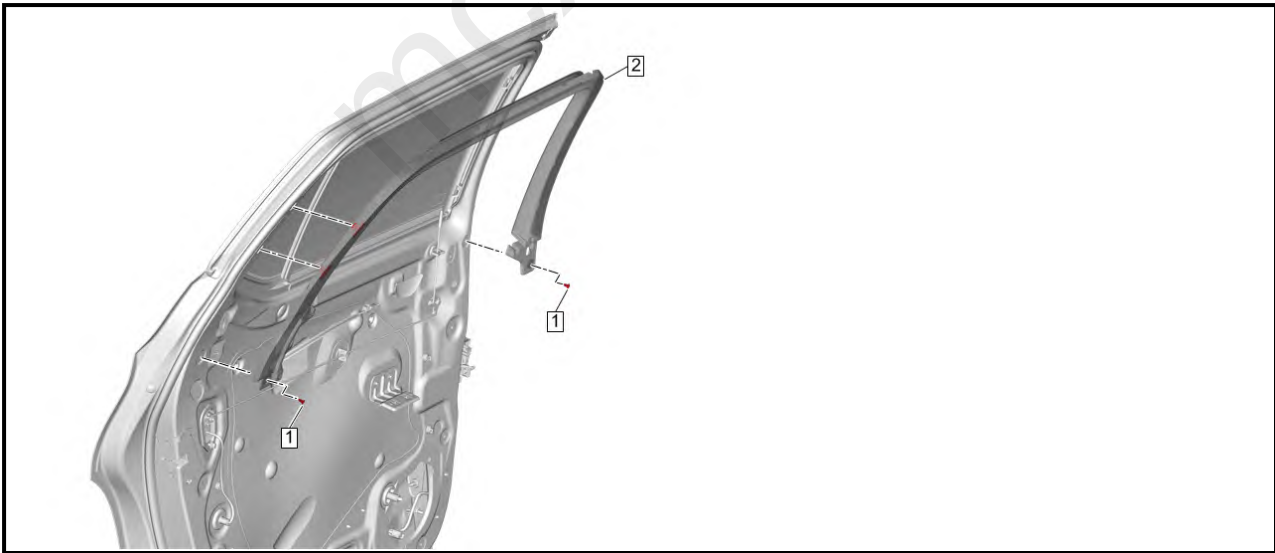

Callout	Component Name
Preliminary Procedure Rear Side Door Trim Replacement	
1	Rear Side Door Window Garnish Molding Retainer [2x] Procedure Use a flat-bladed plastic tool to remove the push-in retainers.

Callout	Component Name
2	Rear Side Door Window Garnish Molding Procedure 1. Use a plastic flat-bladed tool to disengage the four integral clips. 2. Ensure that the door weatherstrip is not trapped below the garnish molding once completely installed. Reposition the weatherstrip as necessary.

FRONT SIDE DOOR WINDOW GARNISH MOLDING REPLACEMENT

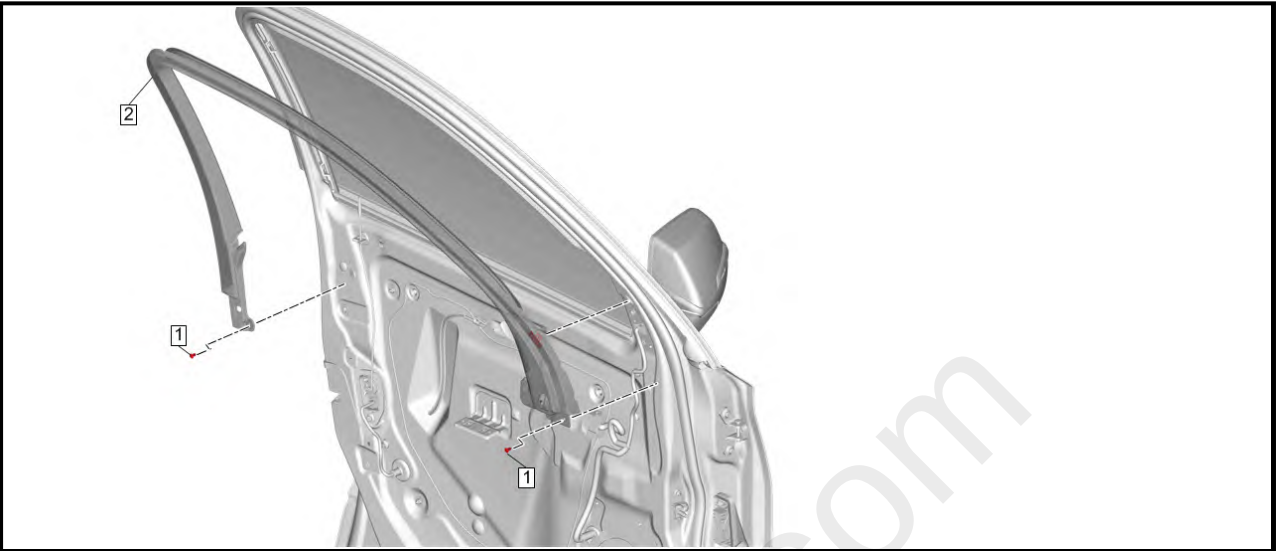

Callout	Component Name
Preliminary Procedure <u>Front Side Door Trim Replacement</u>	
1	Front Side Door Window Garnish Molding Retainer [2x] Procedure Use a flat-bladed plastic tool to remove the push-in retainers.
2	Front Side Door Window Garnish Molding Procedure Ensure that the door weatherstrip is not trapped below the garnish molding once completely installed. Reposition the weatherstrip as necessary.


FRONT SIDE DOOR SILL GARNISH MOLDING REPLACEMENT



Callout	Component Name


Callout	Component Name
1	Front Side Door Sill Garnish Molding Procedure 1. Starting at the rear of the garnish molding, pull upward at the B-Pillar joint to disengage garnish molding. 2. Work your way forward disengaging all of the garnish molding clips then pull rearward to disengage the clip on the forward vertical wall. 3. Reposition the front floor panel carpet as needed.

REAR SIDE DOOR SILL GARNISH MOLDING REPLACEMENT

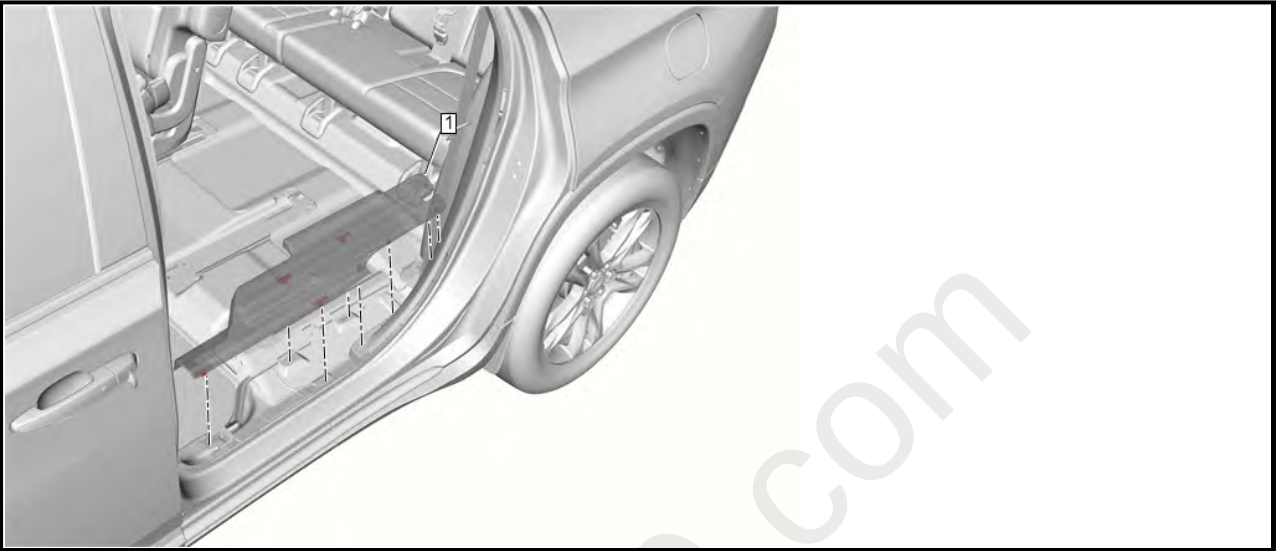

Callout	Component Name
1	Rear Side Door Sill Garnish Molding Procedure Use the appropriate plastic trim tool to aid in the removal of the rear side door sill garnish molding.


ROOF RAIL ASSIST HANDLE REPLACEMENT

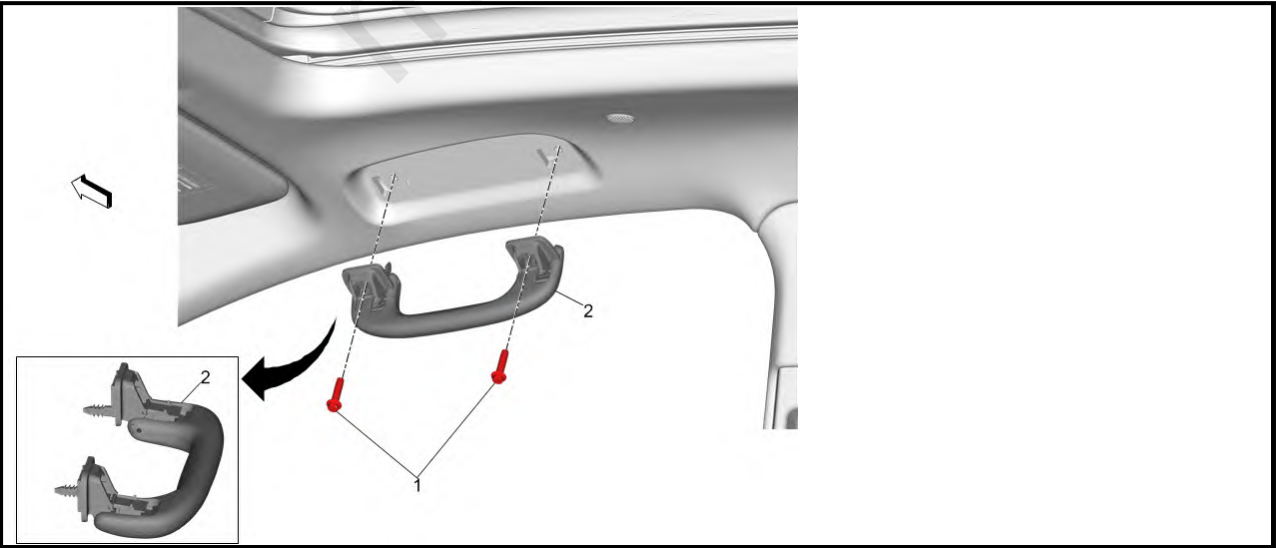

Callout	Component Name


Callout	Component Name
1	Roof Rail Assist Handle Fastener [2x] CAUTION: Refer to: Fastener Caution . Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the screws. Tighten 6 N.m (53 lb in)
2	Roof Rail Assist Handle Procedure Use a flat bladed plastic tool to remove.


ROOF RAIL REAR ASSIST HANDLE REPLACEMENT

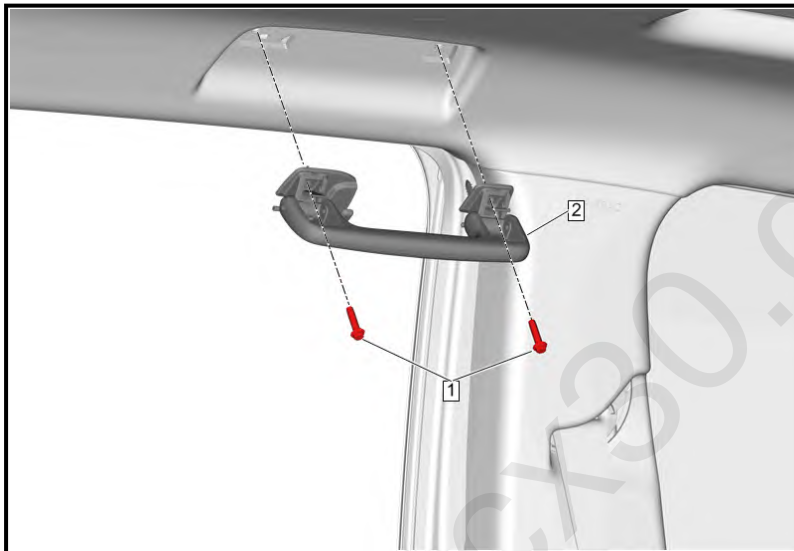

Callout	Component Name
1	Roof Rail Assist Handle Fastener [2x] CAUTION: Refer to: Fastener Caution . Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the screws. Tighten 6 N.m (53 lb in)
2	Roof Rail Rear Assist Handle Procedure Use a flat bladed plastic tool to remove.

 
SUNSHADE REPLACEMENT



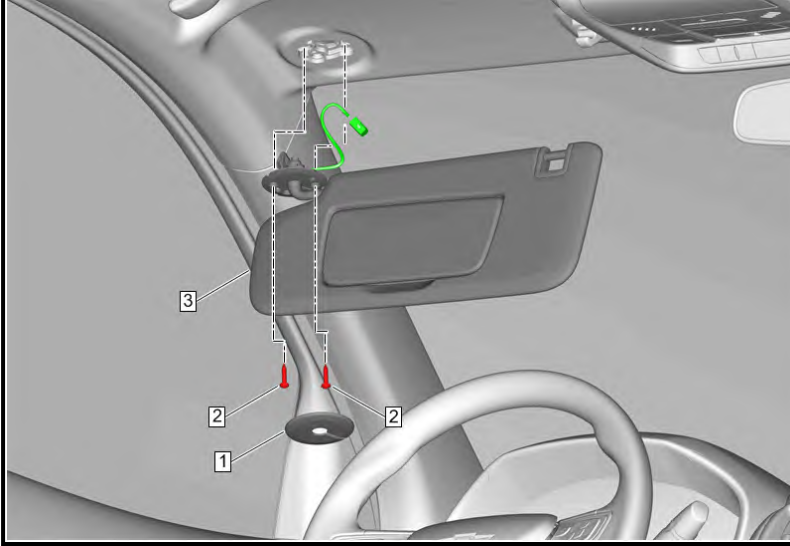

Callout	Component Name
1	Sunshade Retainer Bolt Cover
2	Sunshade Bolt [2x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
3	Sunshade Procedure 1. It is only necessary to lower the front of the headlining trim panel to gain access to the sunshade electrical connector. Only do those steps in the headlining trim panel replacement procedure that will lower the headliner enough to gain access to the part. 2. Squeeze the tabs at the base of the sunshade to detach it from the roof panel and allow the headliner with the sunshade attached to be lowered. 3. Disconnect the electrical connector. 4. Release the retainer attaching the sunshade to the headlining trim panel.


SUNSHADE SUPPORT REPLACEMENT

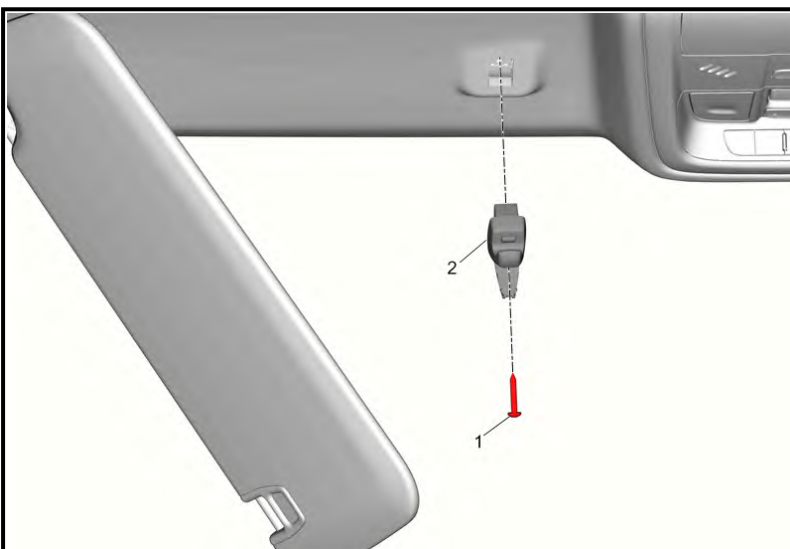

Callout	Component Name

Callout	Component Name
Preliminary Procedures 1. It is only necessary to lower the headlining. Only do those steps in the headlining procedure that will allow access to the component being removed. 2. Unclip the sunshade and rotate the sunshade to the side.	
1	Sunshade Support Fastener CAUTION: <u>Fastener Caution</u> Procedure Use a small flat-bladed tool to open the sunshade support bolt cover to access the fastener. Tighten 2 N.m (18 lb in)
2	Sunshade Support Procedure Using the appropriate tool, release the metal sunshade support retainer.

WINDSHIELD GARNISH MOLDING REPLACEMENT

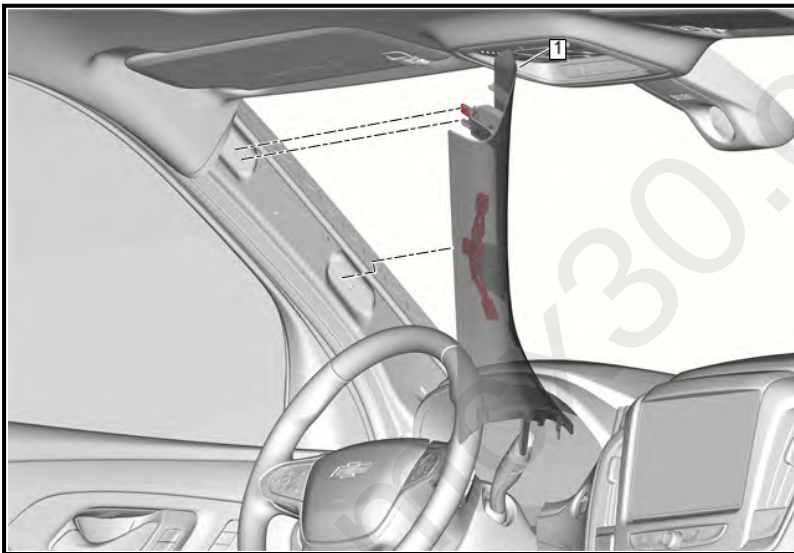

Callout	Component Name
CAUTION: If a vehicle is equipped with a head curtain inflator module ensure that the inflator module and tether are undamaged. If tether or curtain airbag are damaged in any way, they must be replaced.	
CAUTION: Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be replaced.	
Preliminary Procedure Disable the SIR system. <u>SIR Disabling and Enabling</u>	


Callout	Component Name
1	Windshield Garnish Molding Procedure 1. Pull the top of the A-Pillar inward to disengage the upper clip. 2. Carefully remove the tether from the dog house. 3. Pull upward to disengage from the instrument panel. 4. The tether clip at the center portion of the garnish molding MUST be replaced every time the windshield garnish molding is removed. 5. Enable the SIR System. SIR Disabling and Enabling

BODY REAR CORNER UPPER GARNISH MOLDING REPLACEMENT




Callout	Component Name
Preliminary Procedures 1. Disable the SIR system. SIR Disabling and Enabling 2. Remove the rear seat lower anchor plate bolt on the side of the trim panel being replaced. 3rd Row Seat Belt Retractor Replacement	
1	Body Rear Corner Upper Garnish Molding Cap
2	Body Rear Corner Upper Garnish Molding Fastener CAUTION: Refer to Fastener Caution . Tighten 3 N.m (27 lb in)
3	Body Rear Corner Upper Garnish Molding Procedure 1. Use a flat bladed plastic trim tool. 2. Route the seat belt through trim panel. 3. Disconnect the electrical connector. 4. Enable the SIR System. SIR Disabling and Enabling

CENTER PILLAR UPPER TRIM PANEL REPLACEMENT

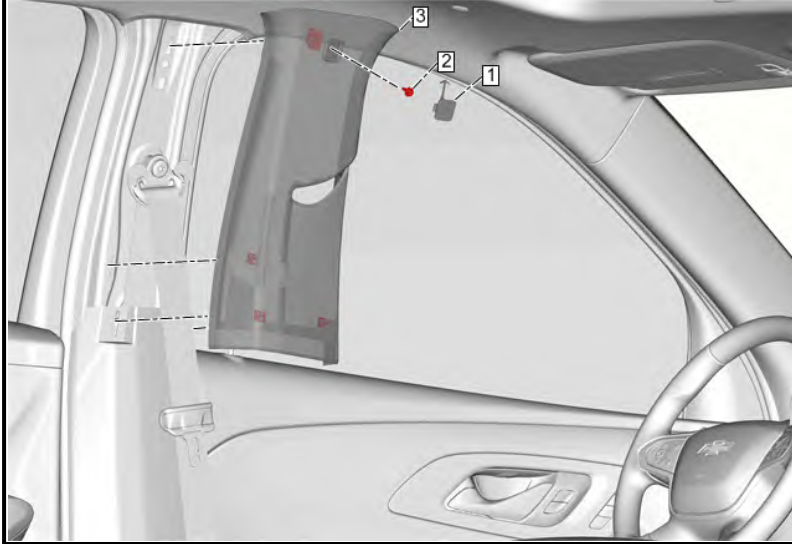

Callout	Component Name
Preliminary Procedure Disable the SIR system. SIR Disabling and Enabling	
1	Center Pillar Upper Trim Panel Bolt Cap
2	Center Pillar Upper Garnish Molding Bolt CAUTION: Refer to Fastener Caution . Tighten 3 N.m (27 lb in)
3	Center Pillar Upper Trim Panel Procedure 1. Pull the trim panel toward the inside of the vehicle to disengage the retainers. 2. When replacing the center pillar upper trim panel, feed the seat belt through the panel. 3. Enable the SIR System. SIR Disabling and Enabling


CENTER PILLAR LOWER TRIM PANEL REPLACEMENT

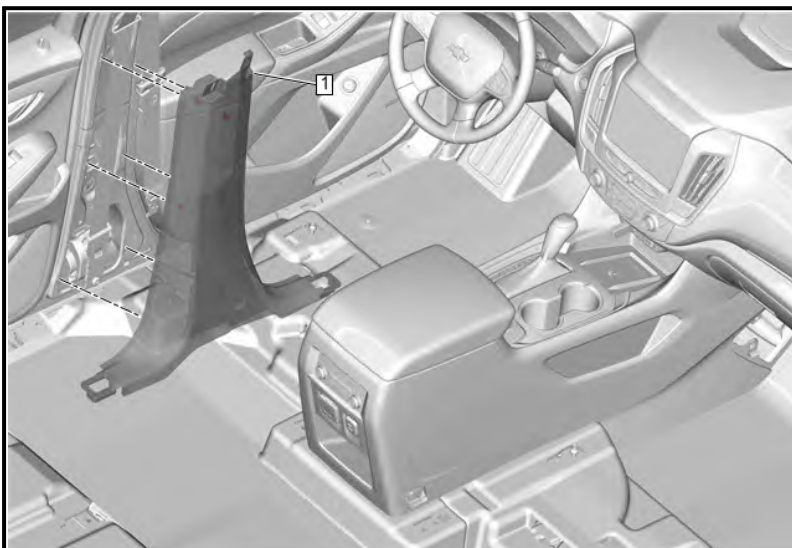

Callout	Component Name

Callout	Component Name
Preliminary Procedures 1. Center Pillar Upper Trim Panel Replacement 2. Front Side Door Sill Garnish Molding Replacement 3. Rear Side Door Sill Garnish Molding Replacement 4. Remove the driver or passenger seat belt anchor plate tensioner cover and fastener. Front Seat Belt Retractor Replacement 5. Move the seat to the full forward position.	
1	Center Pillar Lower Trim Panel Procedure 1. Pull the trim panel toward the inside of the vehicle to disengage the retainers. 2. Ensure the seat belt webbing does not become trapped during installation.

BODY LOCK PILLAR UPPER TRIM PANEL REPLACEMENT

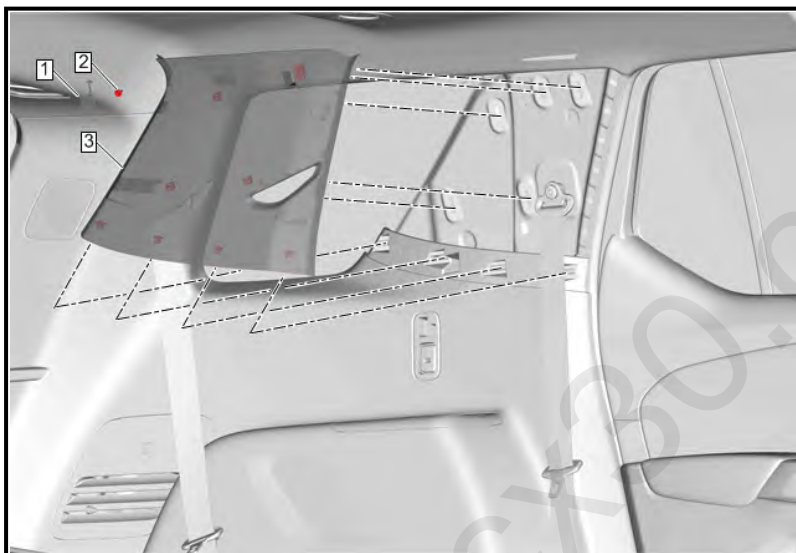


Callout	Component Name
Preliminary Procedures 1. Disable the SIR system. SIR Disabling and Enabling 2. Remove the rear seat lower anchor plate bolt on the side of the trim panel being replaced. Rear Seat Belt Retractor Replacement	
1	Body Lock Pillar Upper Trim Panel Bolt Cap
2	Body Lock Pillar Upper Trim Panel Bolt CAUTION: Refer to Fastener Caution . Tighten 3 N.m (27 lb in)


Callout	Component Name
3	Body Lock Pillar Upper Trim Panel Procedure 1. Use a flat bladed plastic trim tool. 2. Route the seat belt through trim panel. 3. Enable the SIR System. SIR Disabling and Enabling

QUARTER LOWER REAR TRIM PANEL REPLACEMENT (RIGHT SIDE)


Removal Procedure

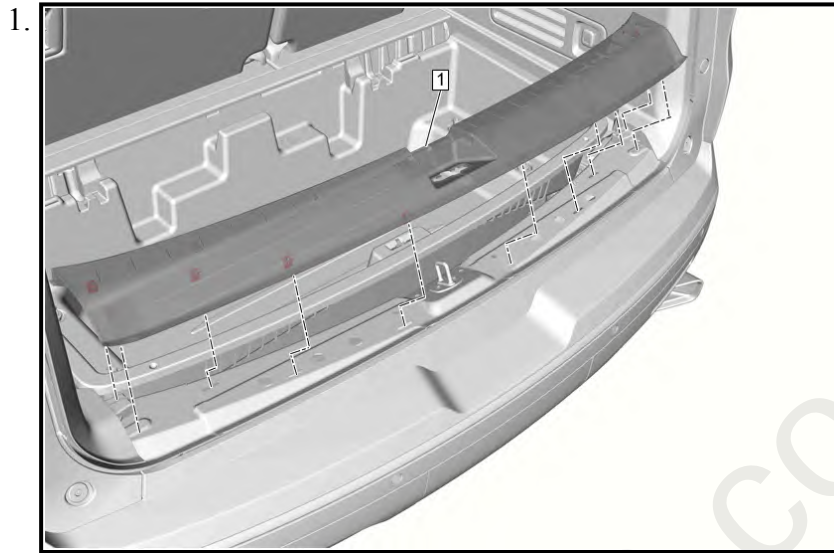


Rear End Trim Finish Panel (1) - Remove - [Rear End Trim Finish Panel Replacement](#)

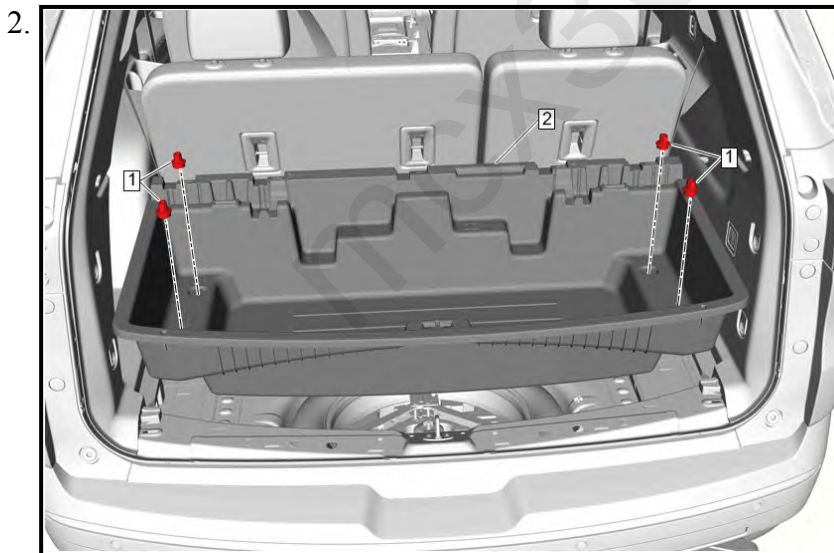


 Rear Compartment Floor Stowage Compartment Divider (2) - Remove - [Rear Compartment Floor Stowage Compartment Divider Replacement](#)




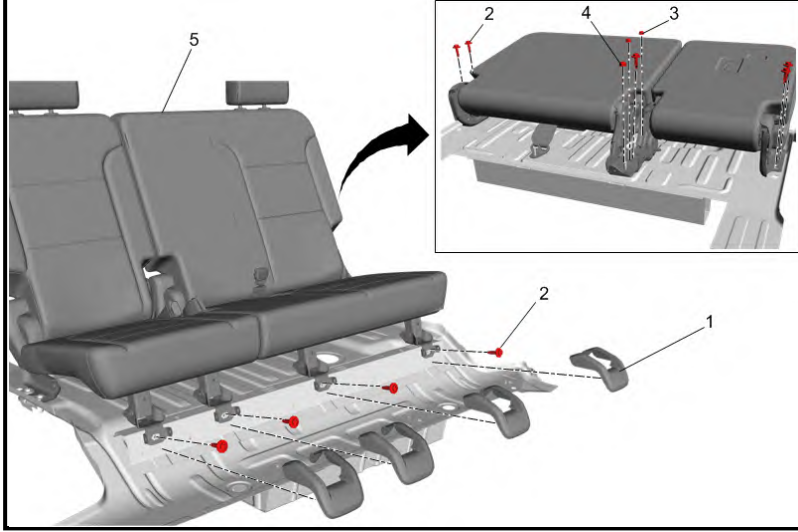

3rd Row Seat (5) - Remove - [3rd Row Seat Removal and Installation \(Power\)](#), [3rd Row Seat Removal and Installation \(Manual\)](#).

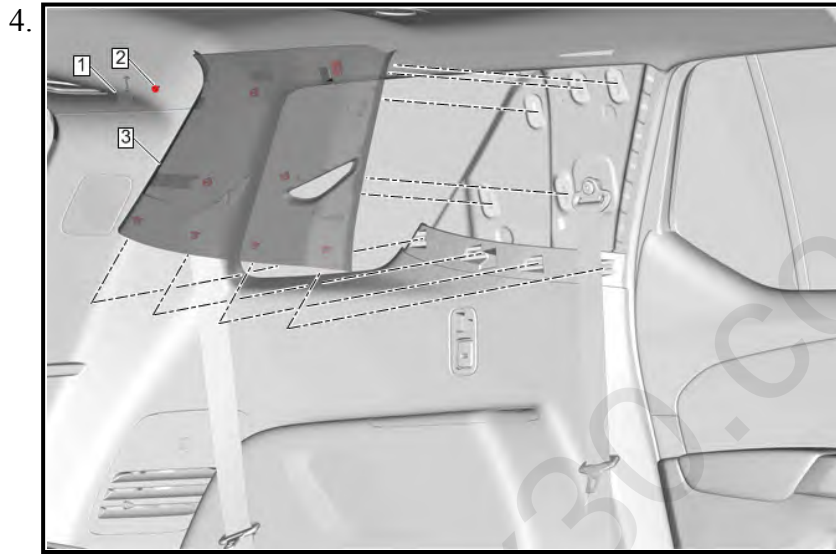


Body Lock Pillar Upper Trim Panel (3) - Remove - [Body Lock Pillar Upper Trim Panel Replacement](#)

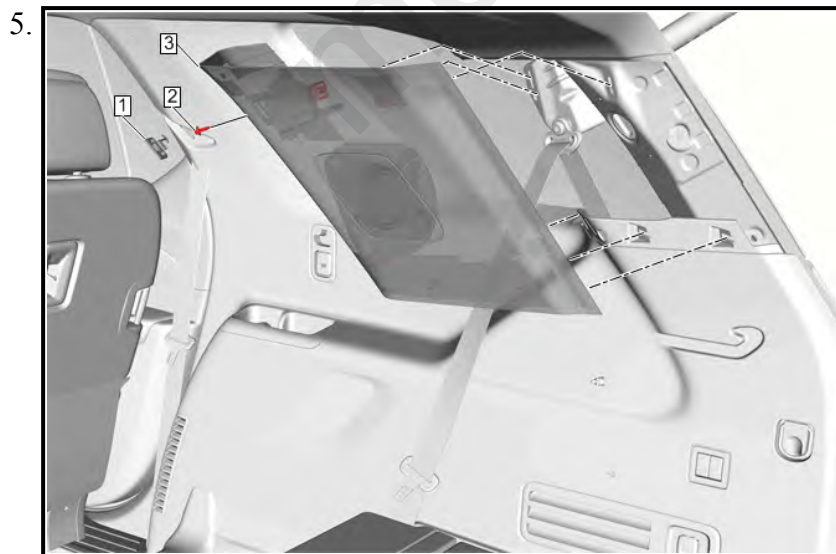


Body Rear Corner Upper Garnish Molding (3) - Remove - [Body Rear Corner Upper Garnish Molding Replacement](#)




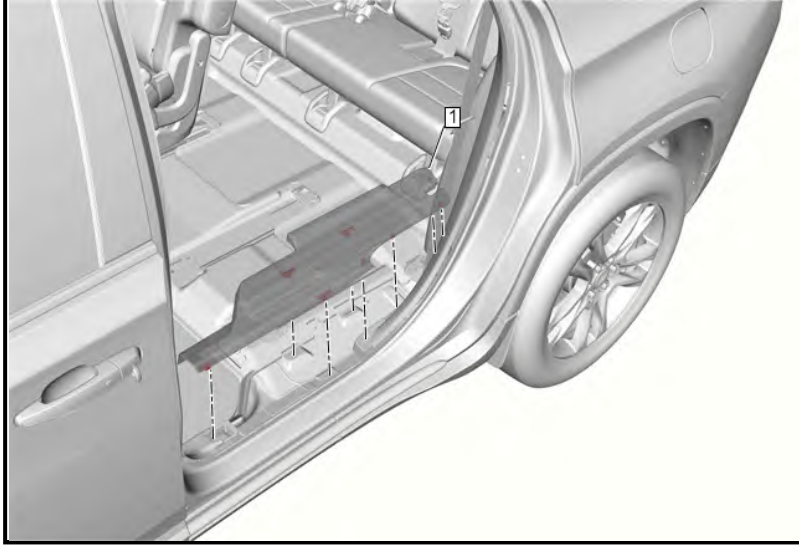

Rear Side Door Sill Garnish Molding (1) - Remove - [Rear Side Door Sill Garnish Molding Replacement](#)

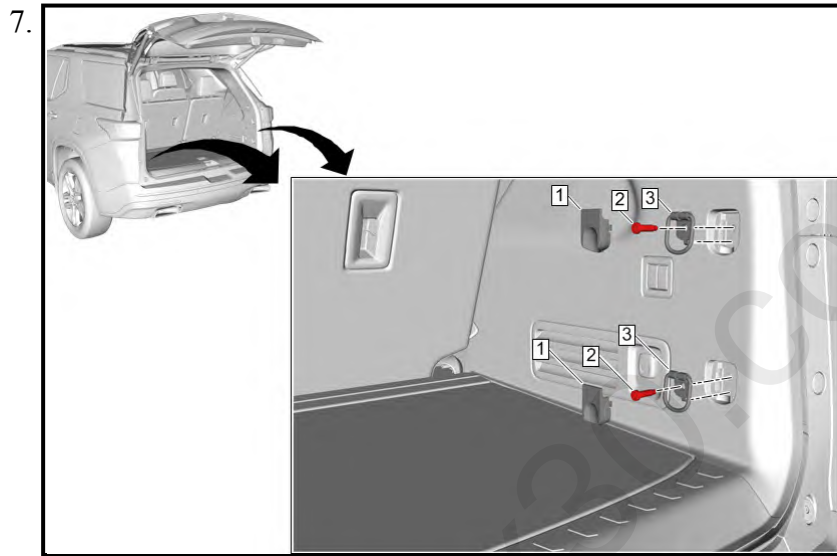


Cargo Tie Down Loop (3) - Remove - [Cargo Tie Down Loop Replacement](#)

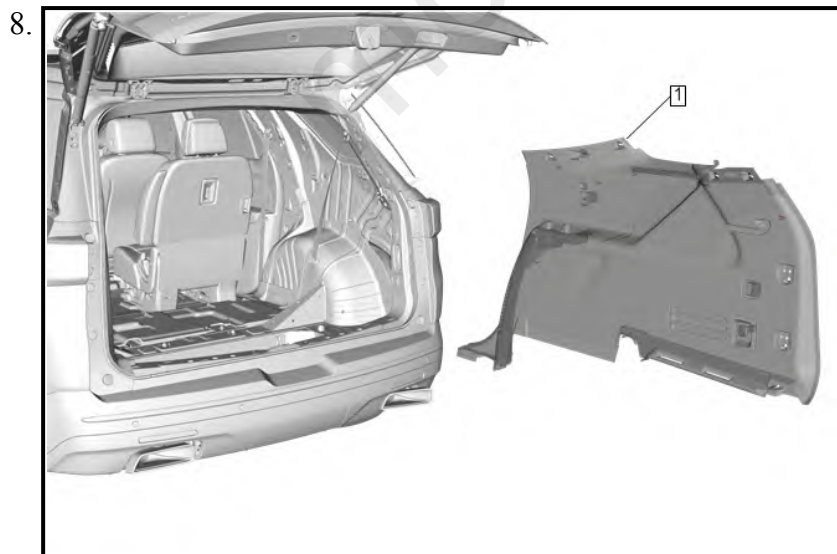


Use a flat-bladed plastic trim tool to release the quarter lower rear trim panel (1) from the quarter inner panel.

9. Disconnect all electrical connectors.

 
Installation Procedure



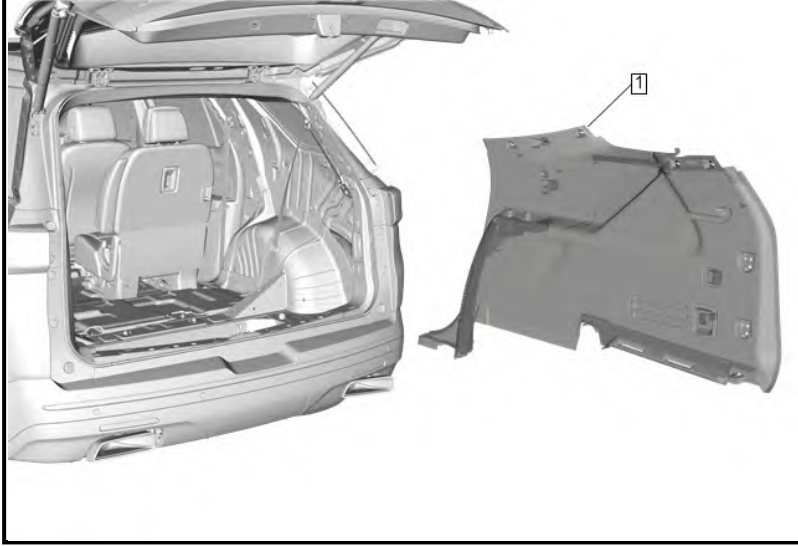


Quarter Lower Rear Trim Panel (1) - Install

2. Connect all electrical connectors.

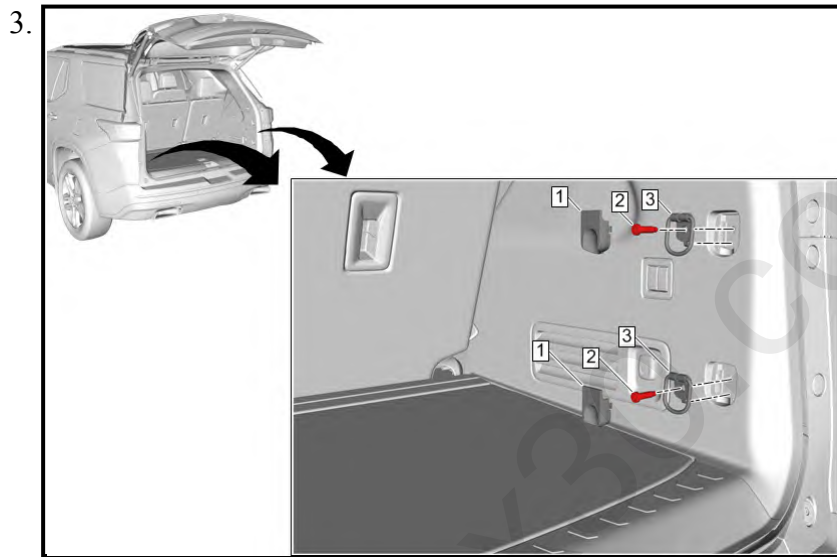


Cargo Tie Down Loop (3) - Install - [Cargo Tie Down Loop Replacement](#)

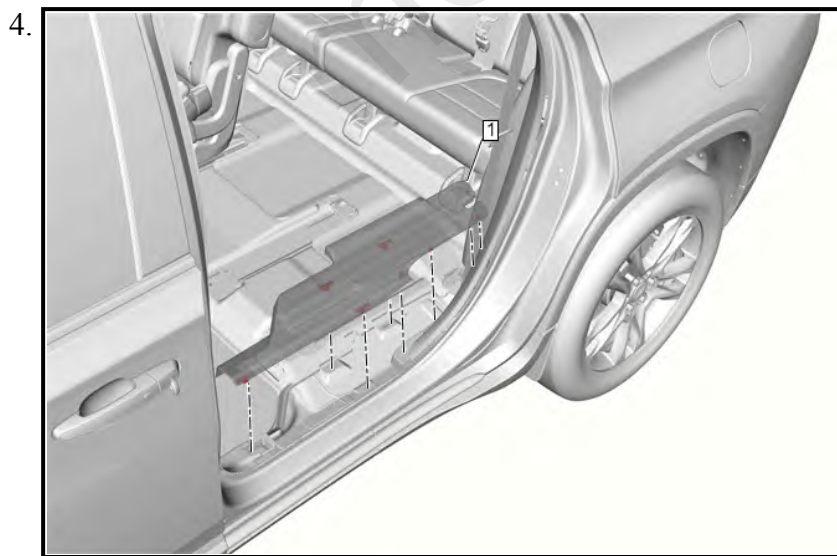


Rear Side Door Sill Garnish Molding (1) - Install - [Rear Side Door Sill Garnish Molding Replacement](#)




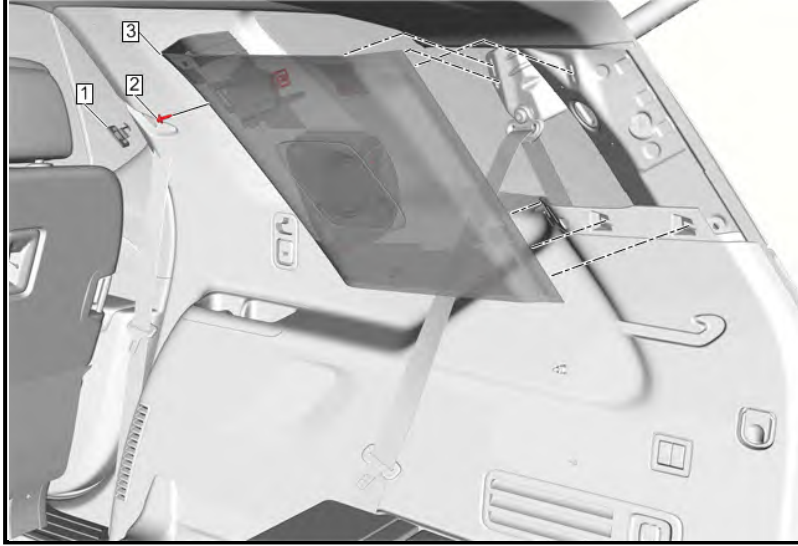

Body Rear Corner Upper Garnish Molding (3) - Install - [Body Rear Corner Upper Garnish Molding Replacement](#)

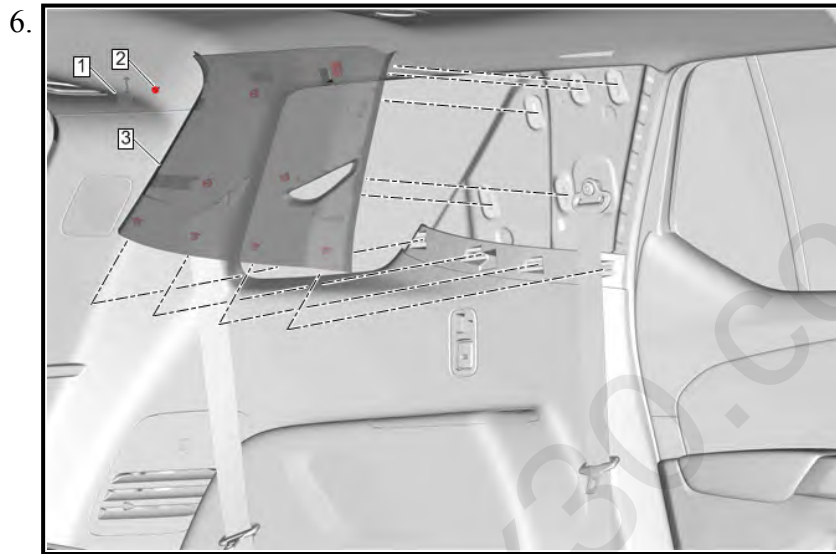


Body Lock Pillar Upper Trim Panel (3) - Install - [Body Lock Pillar Upper Trim Panel Replacement](#)

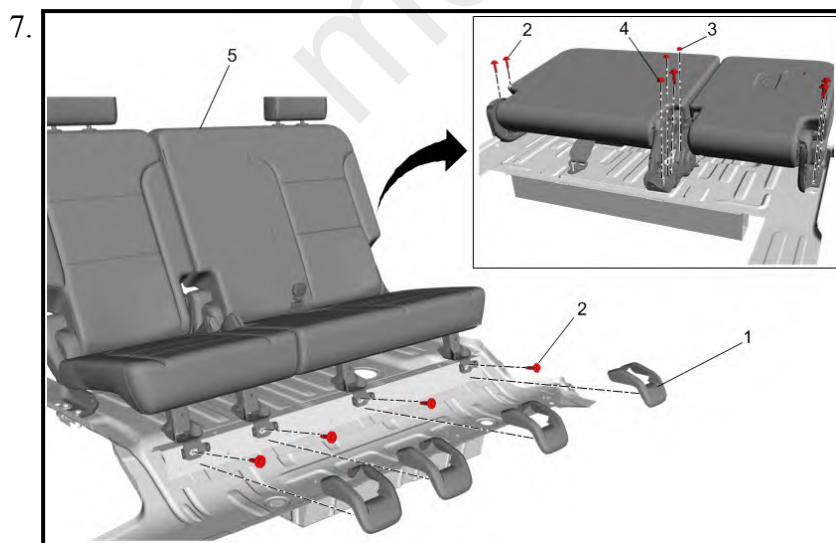


3rd Row Seat (5) - Install - [3rd Row Seat Removal and Installation \(Power\)](#) [3rd Row Seat Removal and Installation \(Manual\)](#)



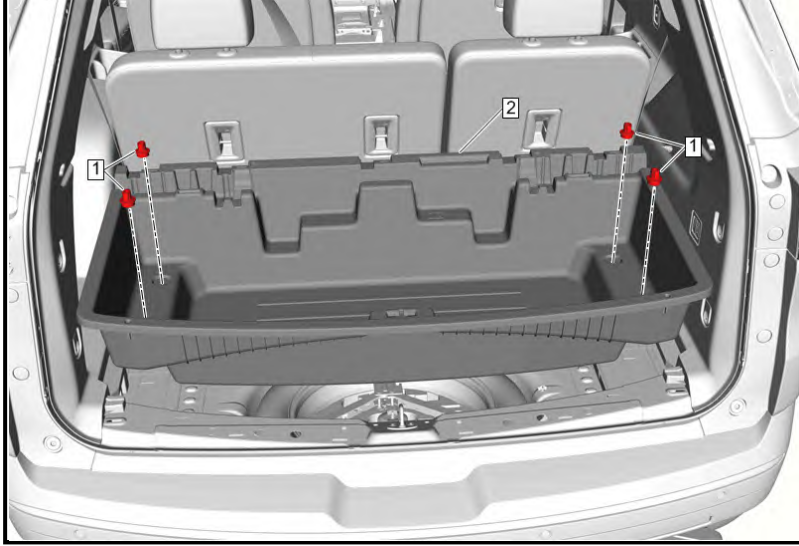


Rear Compartment Floor Stowage Compartment Divider (2) - Install - [Rear Compartment Floor Stowage Compartment Divider Replacement](#)

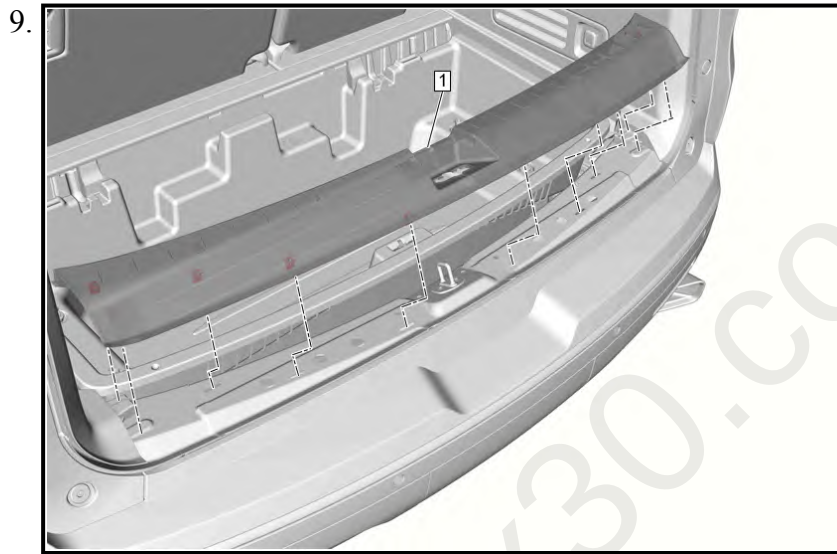


Rear End Trim Finish Panel (1) - Install - [Rear End Trim Finish Panel Replacement](#)


QUARTER LOWER REAR TRIM PANEL REPLACEMENT (LEFT SIDE)

Removal Procedure

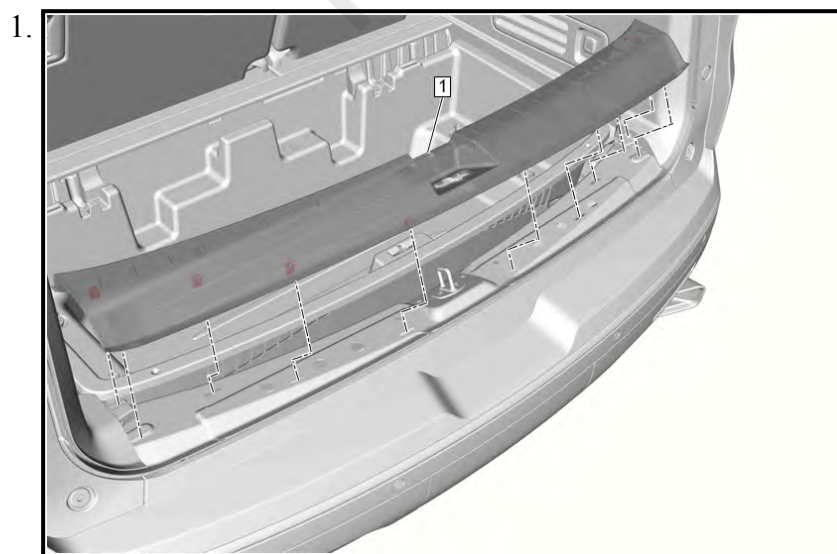


Rear End Trim Finish Panel (1) - Remove - [Rear End Trim Finish Panel Replacement](#)

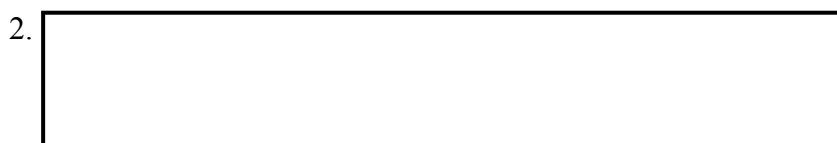


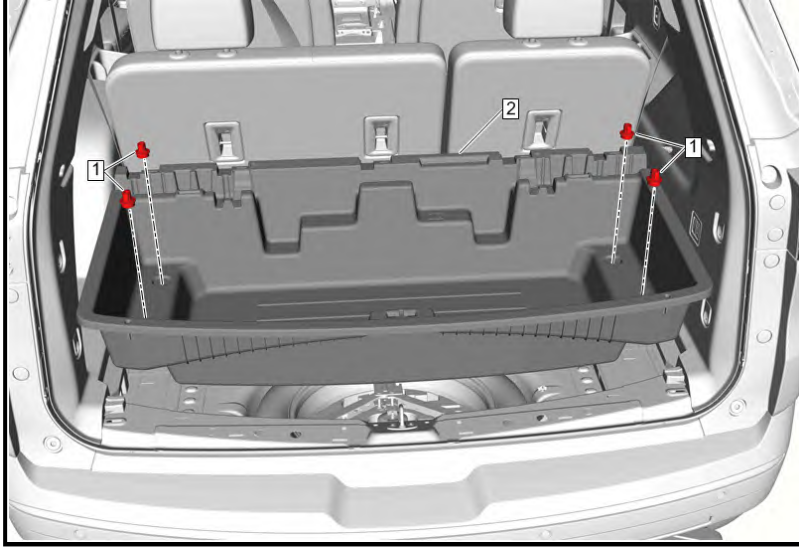

Rear Compartment Floor Stowage Compartment Divider (2) - Remove - [Rear Compartment Floor Stowage Compartment Divider Replacement](#)

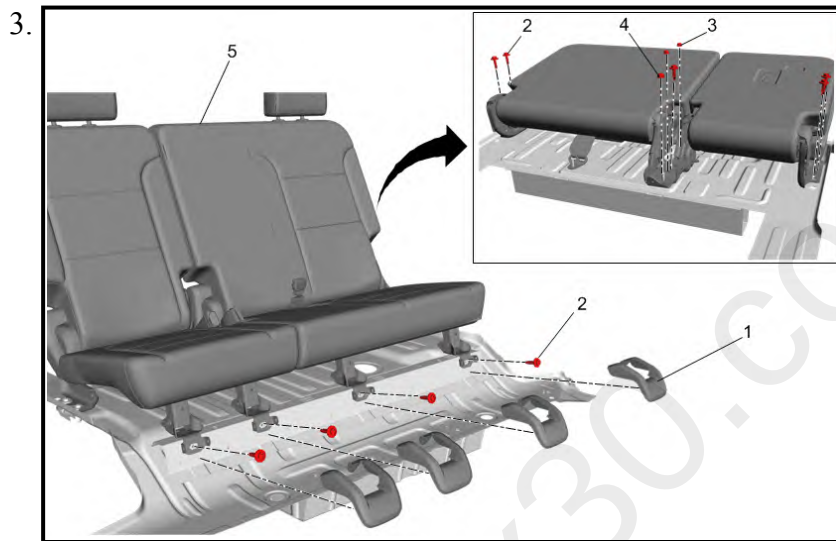


3rd Row Seat (5) - Remove - [3rd Row Seat Removal and Installation \(Power\)](#), [3rd Row Seat Removal and Installation \(Manual\)](#)

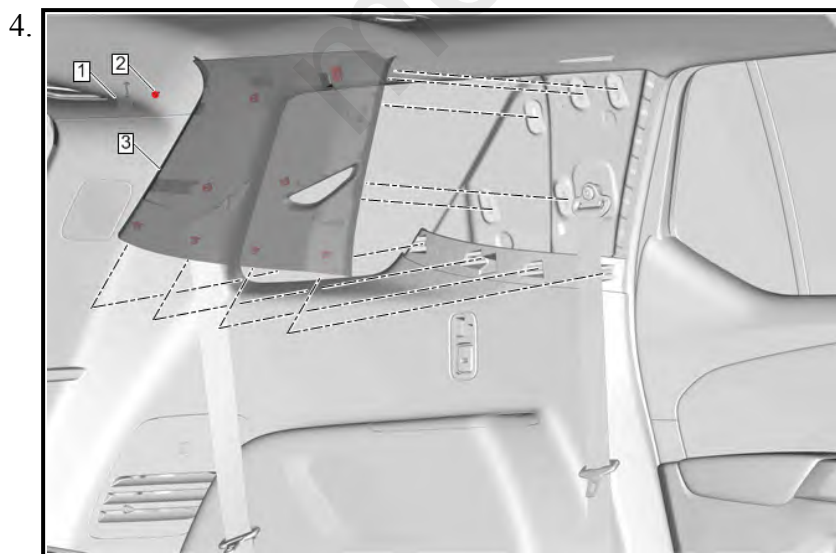


Body Lock Pillar Upper Trim Panel (3) - Remove - [Body Lock Pillar Upper Trim Panel Replacement](#)




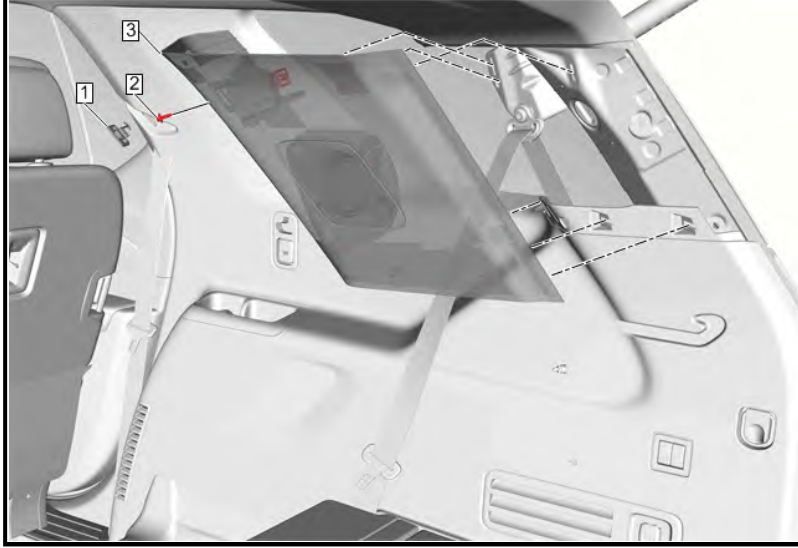

Body Rear Corner Upper Garnish Molding (3) - Remove - [Body Rear Corner Upper Garnish Molding Replacement](#)

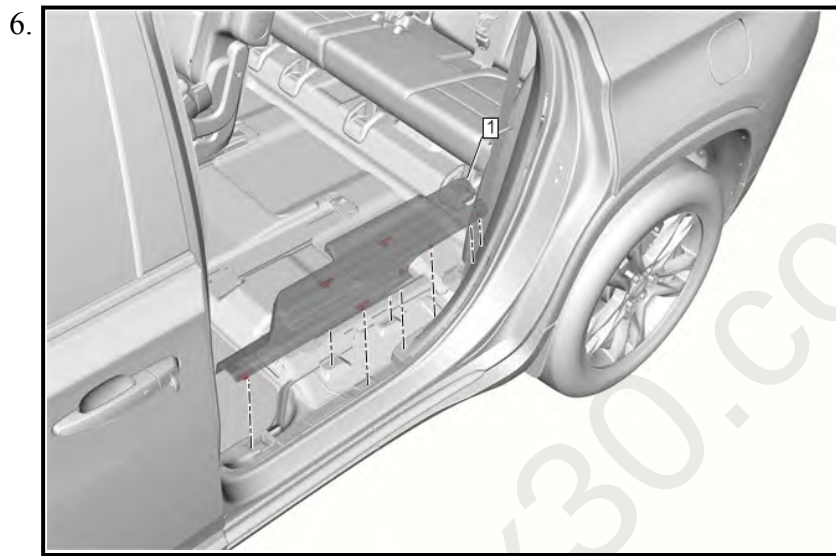



Rear Side Door Sill Garnish Molding (1) - Remove - [Rear Side Door Sill Garnish Molding Replacement](#)

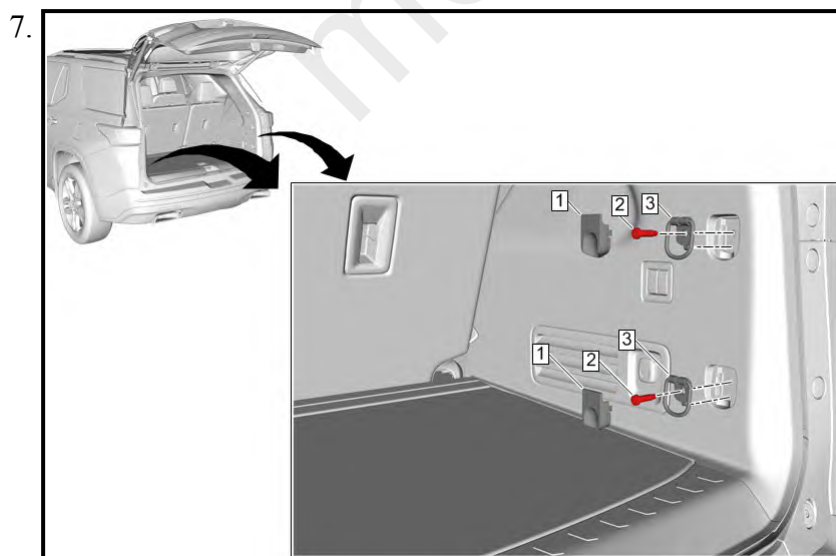

Cargo Tie Down Loop (3) - Remove - [Cargo Tie Down Loop Replacement](#)

8. Disconnect all electrical connectors.

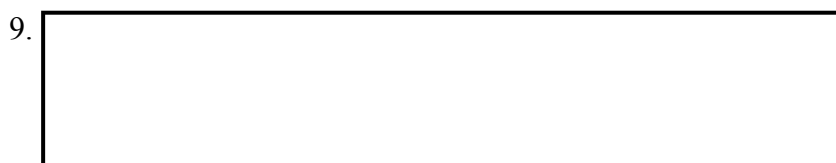


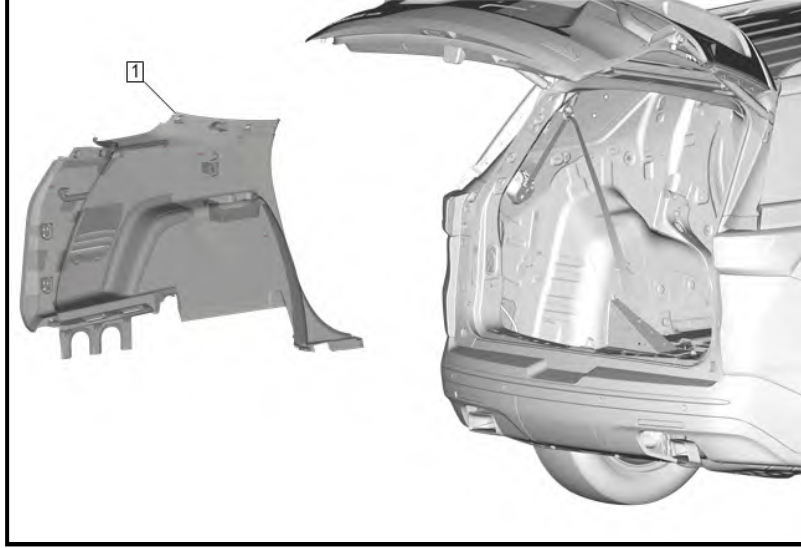

Use a flat-bladed plastic trim tool to release the quarter lower rear trim panel (1) from the quarter inner panel.


10. Disconnect all electrical connectors.

Installation Procedure

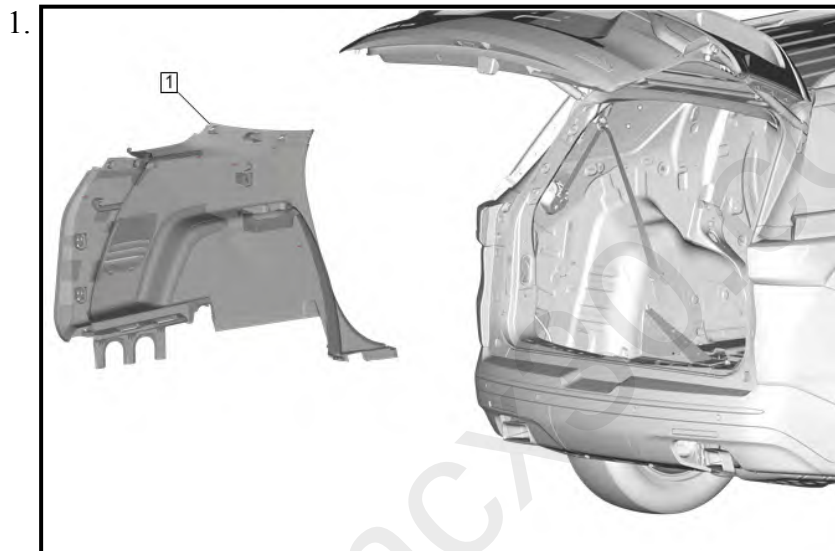



Quarter Lower Rear Trim Panel (1) - Install

2. Connect all electrical connectors.

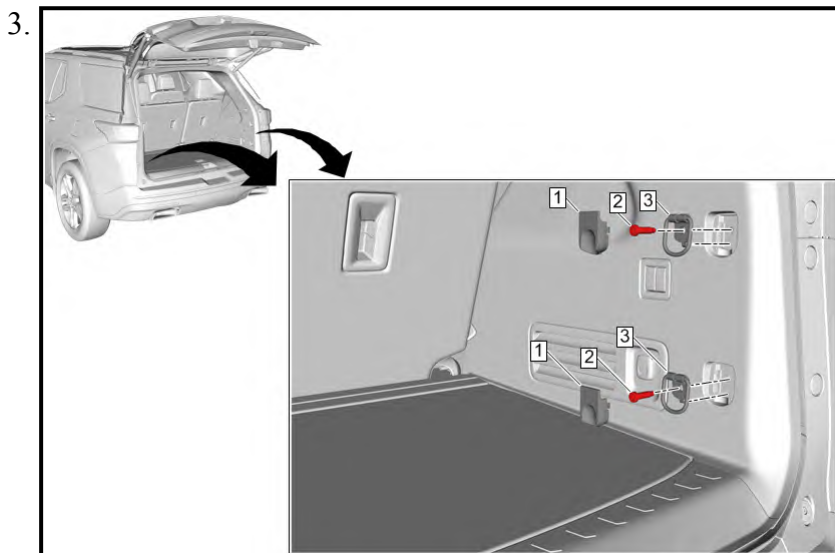


 Cargo Tie Down Loop (3) - Install - [Cargo Tie Down Loop Replacement](#)




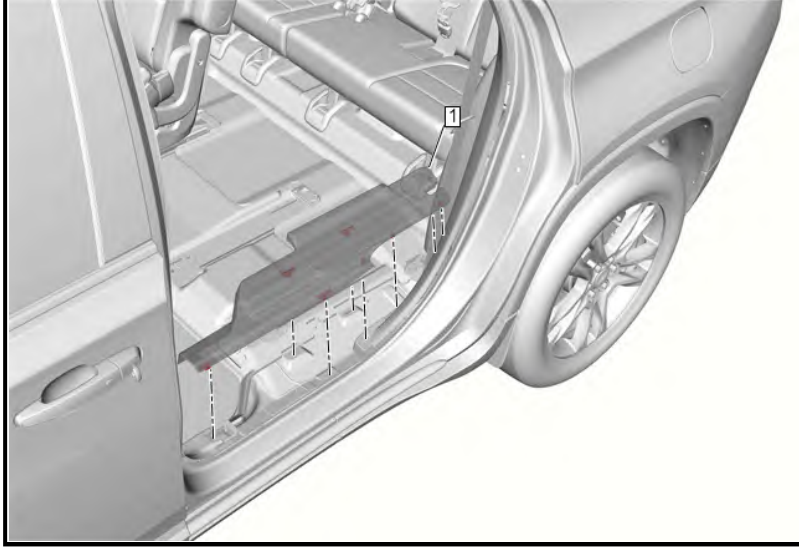

Rear Side Door Sill Garnish Molding (1) - Install - [Rear Side Door Sill Garnish Molding Replacement](#)

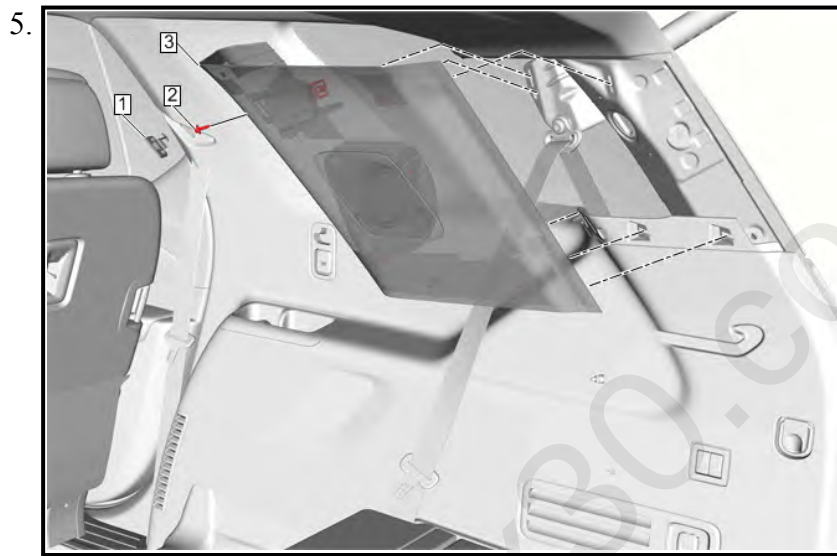


Body Rear Corner Upper Garnish Molding (3) - Install - [Body Rear Corner Upper Garnish Molding Replacement](#)

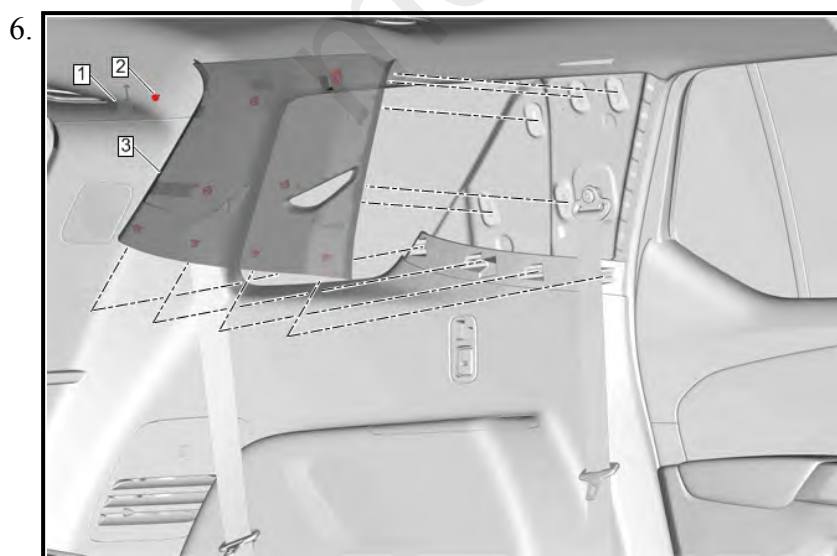


Body Lock Pillar Upper Trim Panel (3) - Install - [Body Lock Pillar Upper Trim Panel Replacement](#)




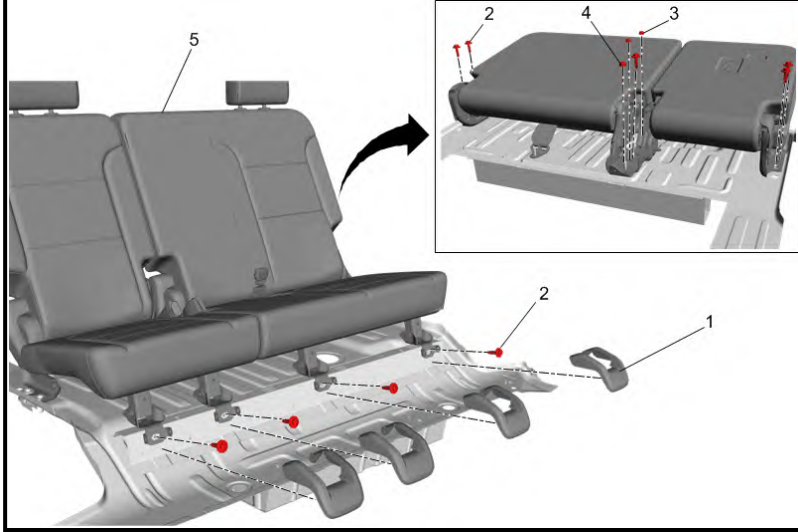

3rd Row Seat (5) - Install - [3rd Row Seat Removal and Installation \(Power\)](#), [3rd Row Seat Removal and Installation \(Manual\)](#).

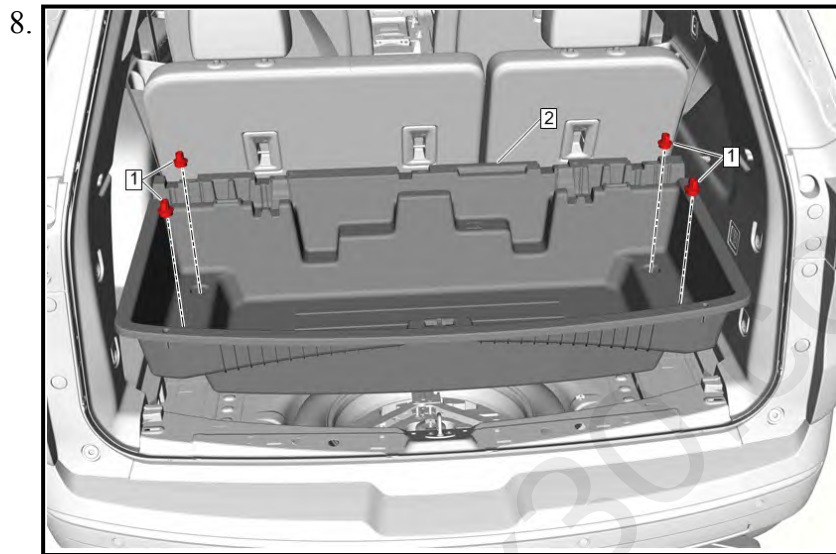


Rear Compartment Floor Stowage Compartment Divider (2) - Install - [Rear Compartment Floor Stowage Compartment Divider Replacement](#)

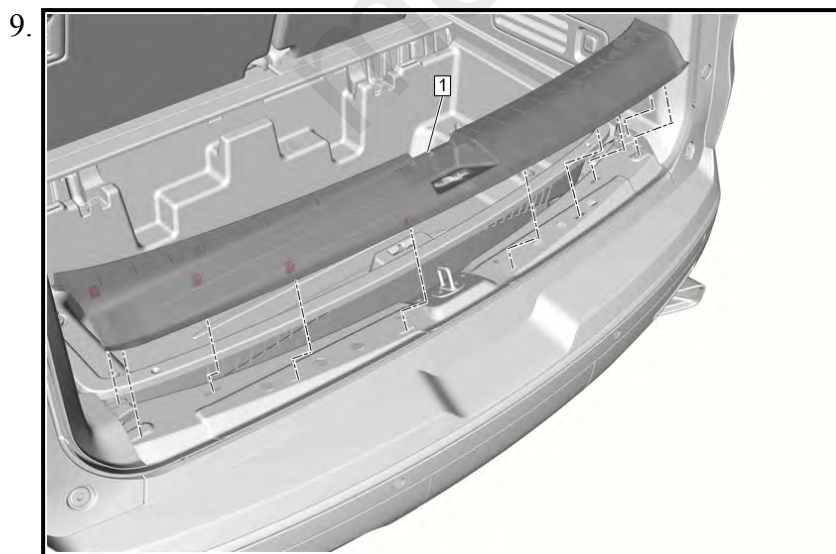

Rear End Trim Finish Panel (1) - Install - [Rear End Trim Finish Panel Replacement](#)


QUARTER STOWAGE POCKET DOOR REPLACEMENT



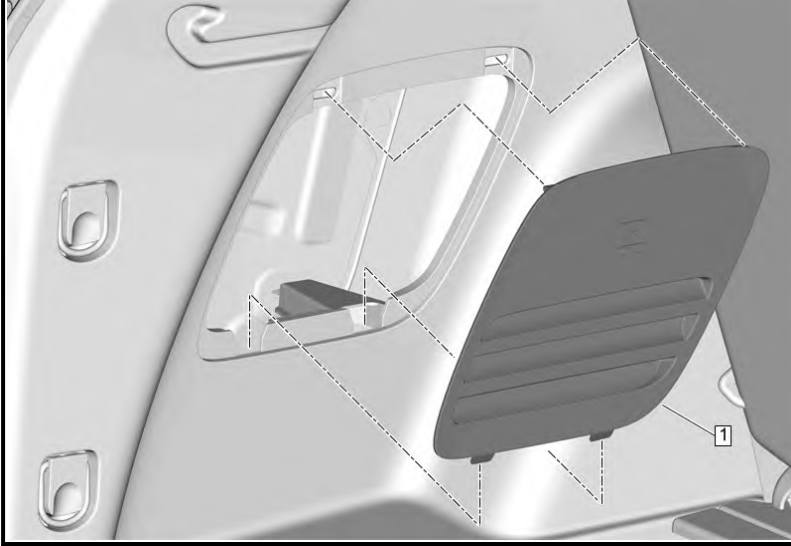

Callout	Component Name
1	Quarter Stowage Pocket Door Procedure Use a flat bladed trim tool to disengage upper integral clips, then move quarter stowage pocket door upward and outward to clear tabs on bottom.


REAR END TRIM FINISH PANEL REPLACEMENT

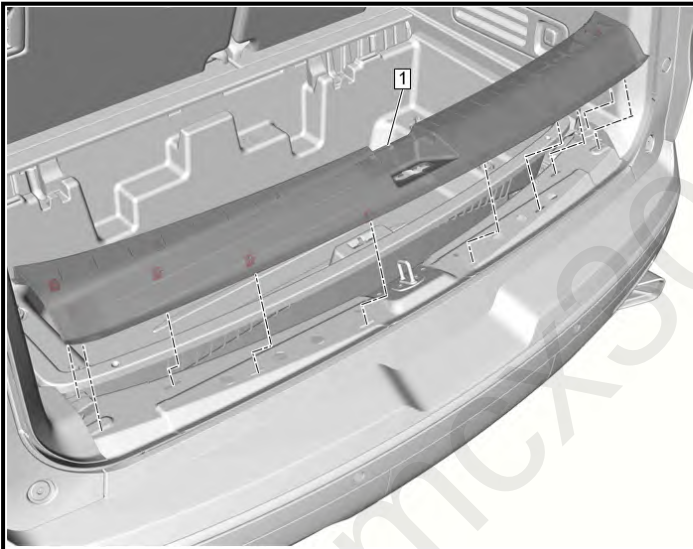

Callout	Component Name
Preliminary Procedure <u>Load Floor Trim Panel Replacement</u>	
1	Rear End Trim Finish Panel Procedure 1. Use a flat bladed plastic trim tool. 2. Grasp and gently pull up on the rear end trim finish panel in order to release the integral retaining clips.


LOAD FLOOR TRIM PANEL REPLACEMENT



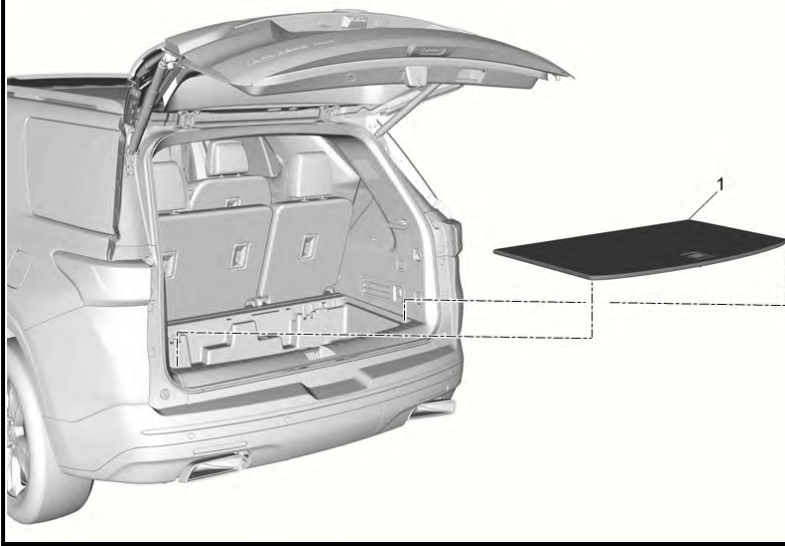

Callout	Component Name
1	Load Floor Trim Panel

REAR COMPARTMENT FLOOR STOWAGE COMPARTMENT DIVIDER REPLACEMENT

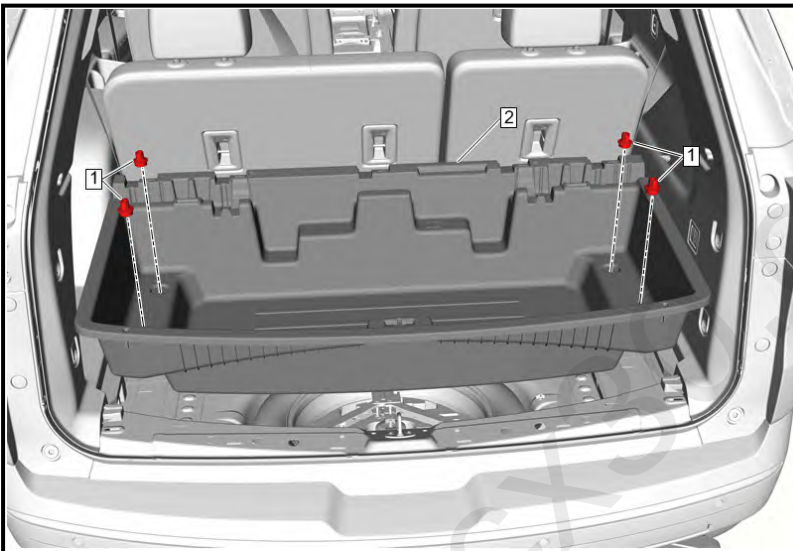


Callout	Component Name
Preliminary Procedure <u>Load Floor Trim Panel Replacement</u>	
1	Rear Compartment Floor Storage Compartment Divider Retainer [4x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 1.2 N.m (11 lb in)
2	Rear Compartment Floor Storage Compartment Divider Procedure Transfer components as necessary.

REAR SIDE DOOR TRIM REPLACEMENT

Removal Procedure


1.

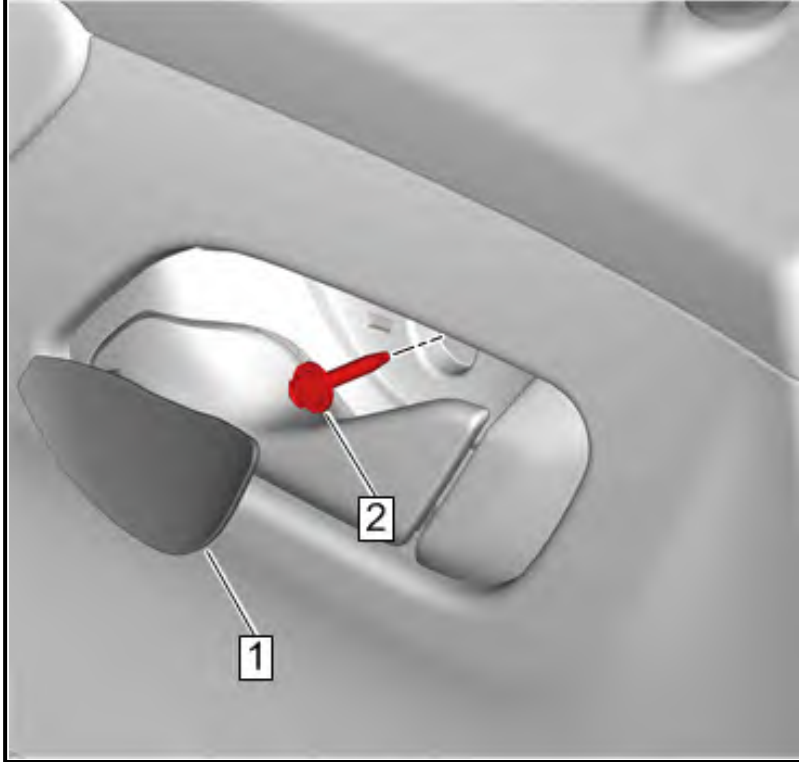

Use a flat-bladed plastic trim tool to release the rear side door inside handle bolt finish cap. (1)

2. Rear Side Door Inside Handle Fastener (2) - Remove

3.

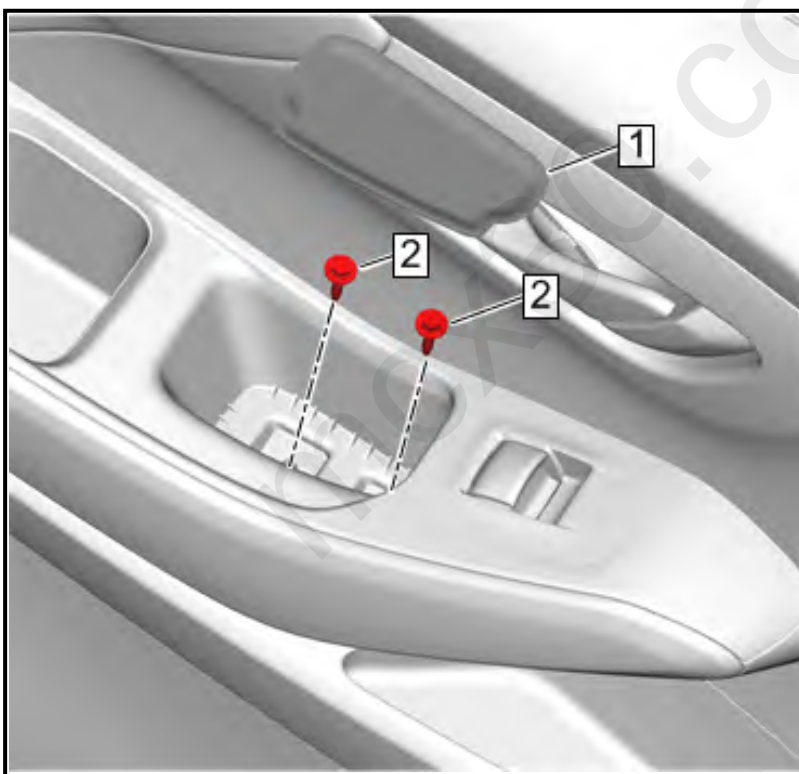


Use a flat-bladed plastic trim tool to release the rear side door armrest pull cup bolt cap. (1)


4. Rear Side Door Armrest Pull Cup Bolt (2) - Remove [2x]

5.



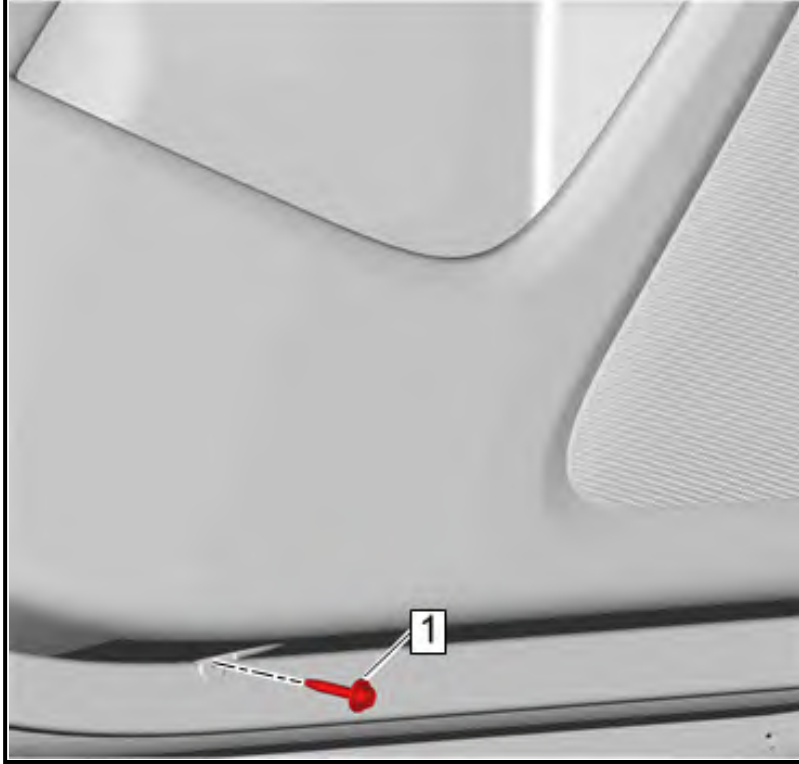


Rear Side Door Trim Panel Bolt (1) - Remove

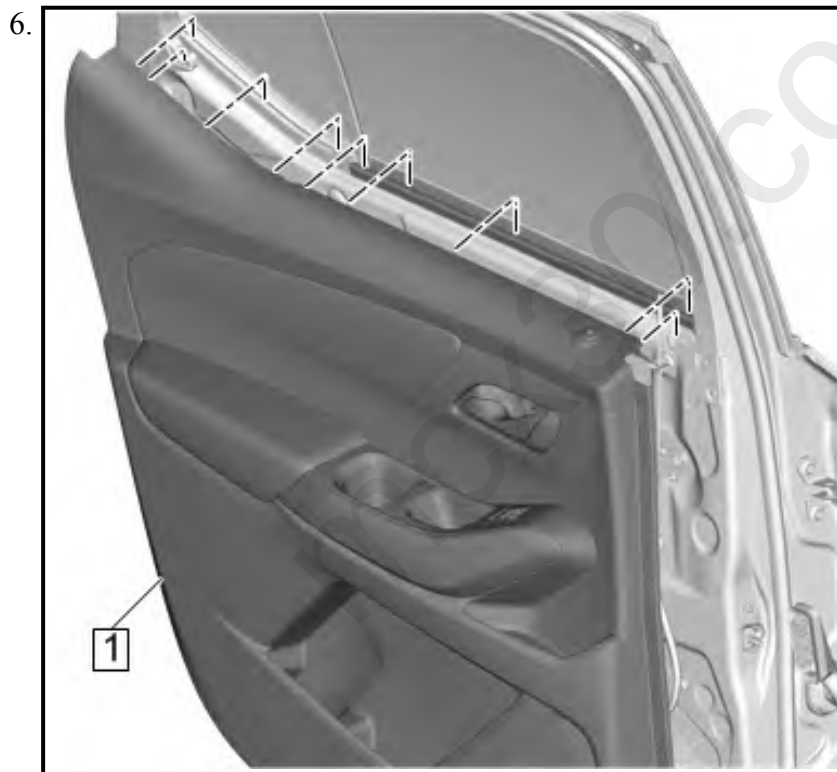

NOTE: The rear side door trim has an integral rear side door trim assembly belt bracket that hooks over the rear side door window inner sealing strip assembly and the rear side door window garnish molding.

Rear Side Door Trim (1) - Remove




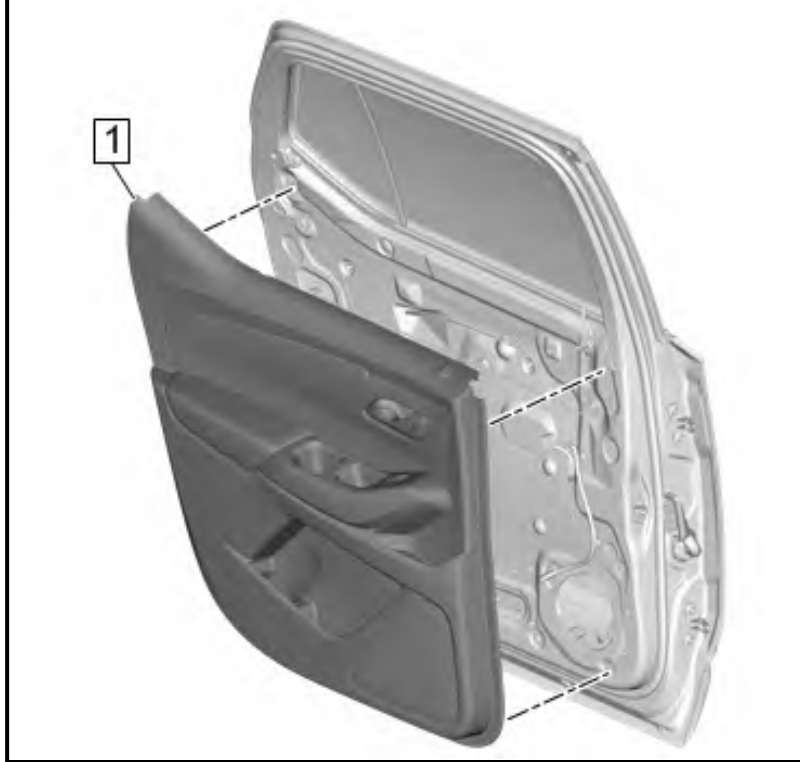

Rear Side Door Trim (1) - Remove

1. When the rear side door trim (1) is sufficiently loosened, place inner hand behind panel and pull towards you to disengage integral retainers and clips.
2. Lift up and swing out to disengage integral rear side door trim assembly belt bracket from the rear side door window inner sealing strip assembly and the rear side door window garnish molding.
3. Disconnect the door lock retainer cable from the rear side door trim (1) and the inside handle.
4. Disconnect the electrical connector.
8. Place the rear side door trim (1) on a clean flat surface.

Installation Procedure

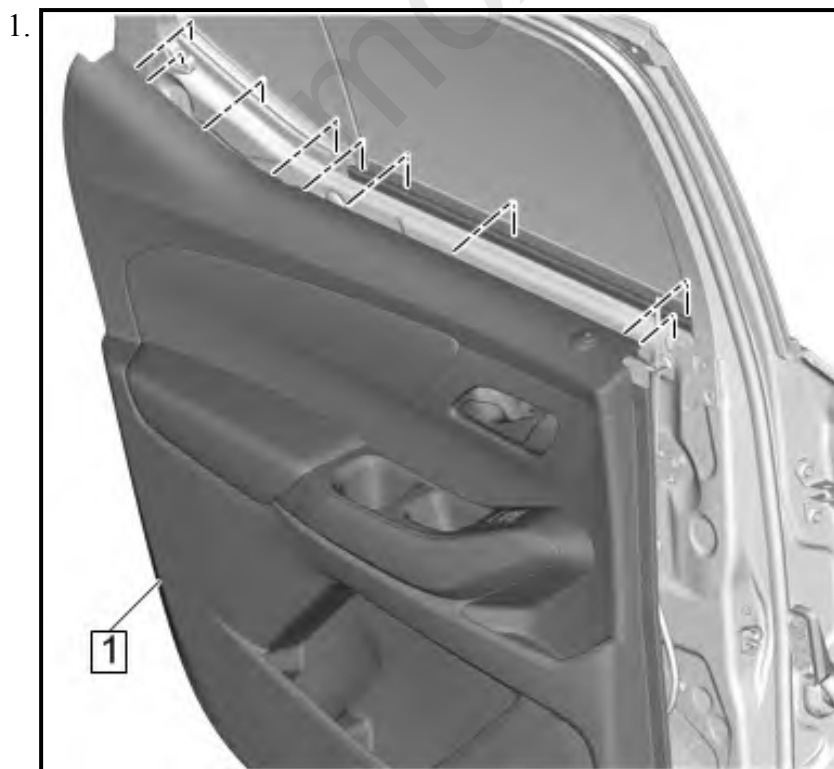


NOTE:

The rear side door trim has an integral rear side door trim assembly belt bracket that hooks over the rear side door window inner sealing strip assembly and the rear side door window garnish molding.

Rear Side Door Trim (1) - Install

2.

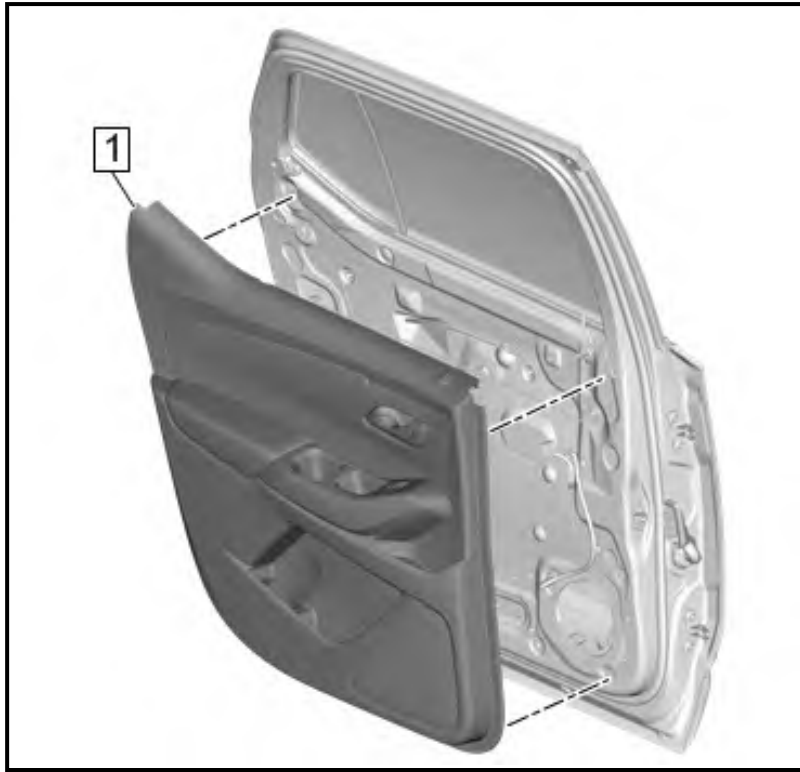

Rear Side Door Trim (1) - Install


1. Connect the electrical connector.
2. Route lock rod through lock rod bezel on rear side door trim. (1)
3. Hook the integral rear side door trim assembly belt bracket to the rear side door window inner sealing strip assembly and the rear side door window garnish molding and swing in to install.
4. Connect the door lock retainer cable to the rear side door trim (1) and the inside handle.
3. Engage most forward locator pin.
4. Engage remaining retainers starting from the bottom to the front and rear.

5.



CAUTION: Refer to [Fastener Caution](#) .


Rear Side Door Trim Panel Bolt (1) - Install and tighten 1.5 N.m (13 lb in)

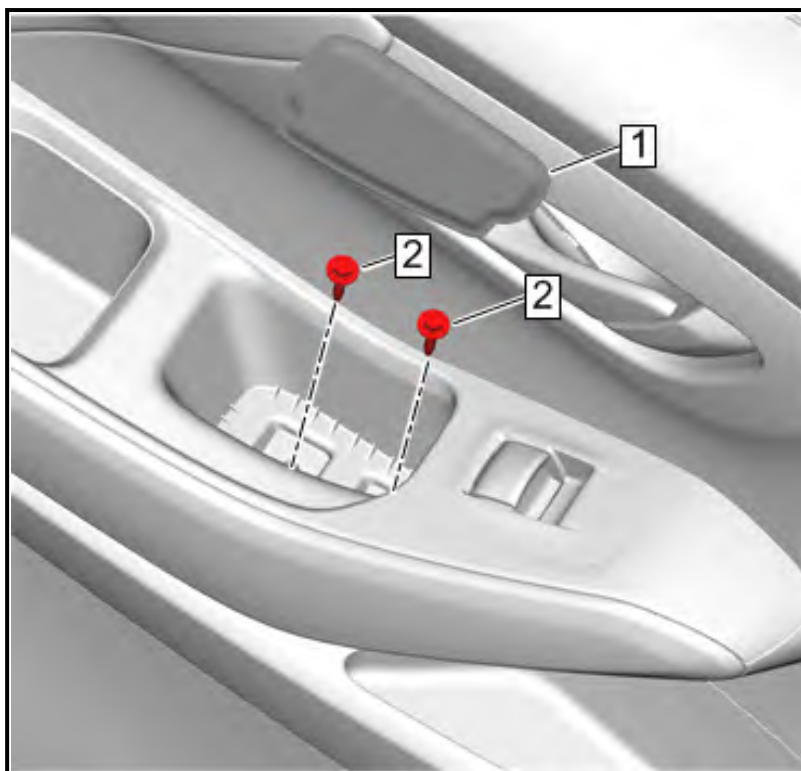

Rear Side Door Armrest Pull Cup Bolt (2) - Install and tighten [2x] 2.5 N.m (22 lb in)

6. Rear Side Door Armrest Pull Cup Bolt Cap (1) - Install

7.

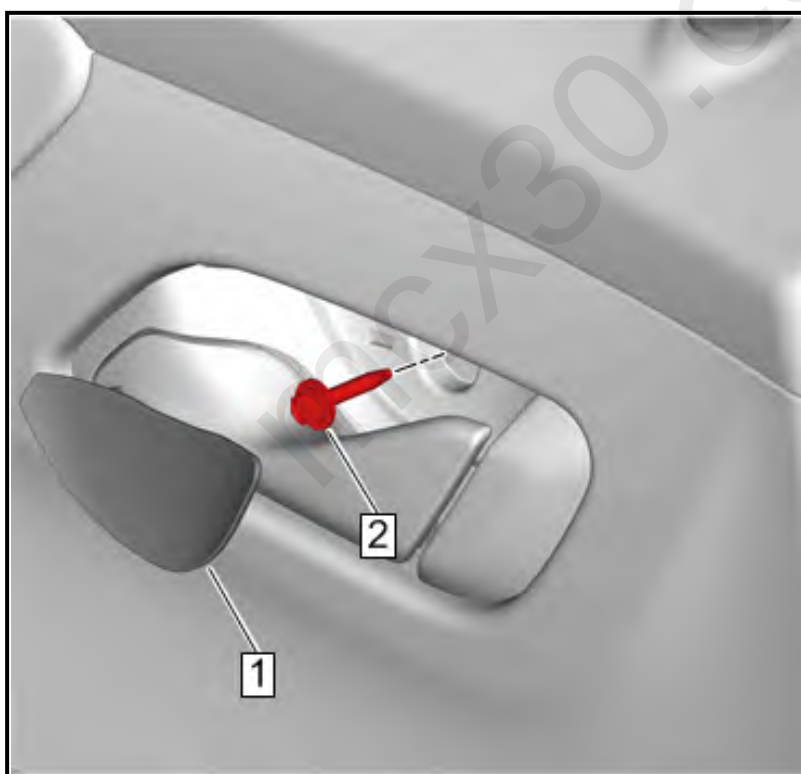

Rear Side Door Inside Handle Fastener (2) - Install and tighten 2.5 N.m (22 lb in)

8. Rear Side Door Inside Handle Bolt Finish Cap (1) - Install


LIFTGATE UPPER CENTER TRIM FINISH PANEL REPLACEMENT






Callout	Component Name
1	Liftgate Upper Center Trim Finish Panel Procedure Use the appropriate trim tool to release the liftgate upper center trim finish panel from the liftgate inner panel.


LIFTGATE UPPER SIDE TRIM FINISH PANEL REPLACEMENT

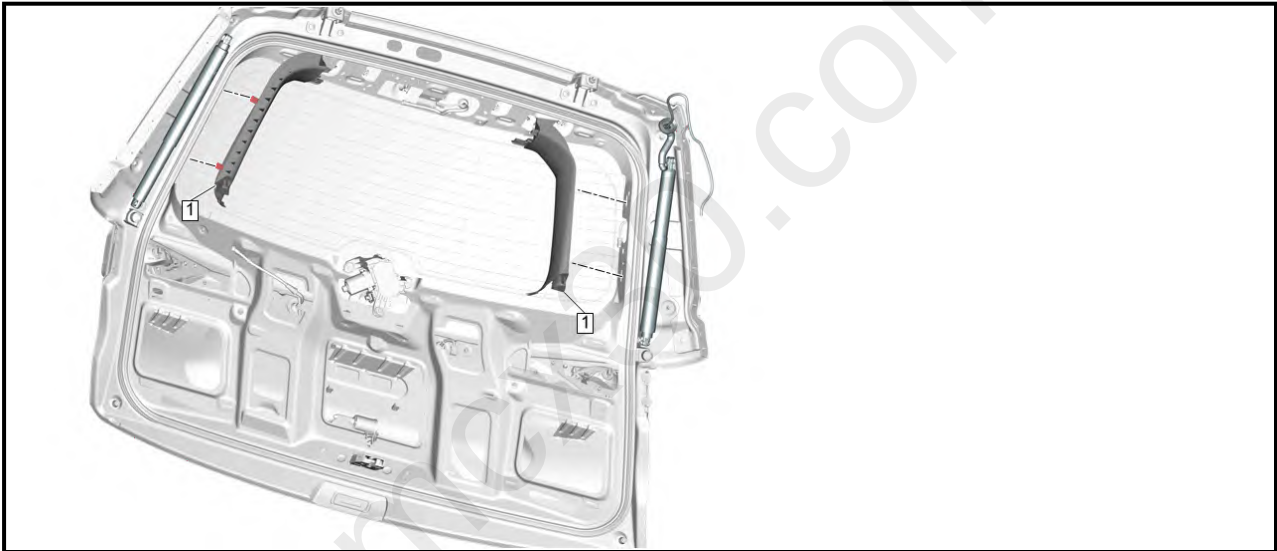

Callout	Component Name
Preliminary Procedures	
1. <u>Liftgate Upper Center Trim Finish Panel Replacement</u> 2. <u>Liftgate Lower Trim Finish Panel Replacement</u>	
1	Liftgate Upper Side Trim Finish Panel [2x] Procedure Use a flat bladed plastic trim tool.

 
LIFTGATE LOWER TRIM FINISH PANEL REPLACEMENT



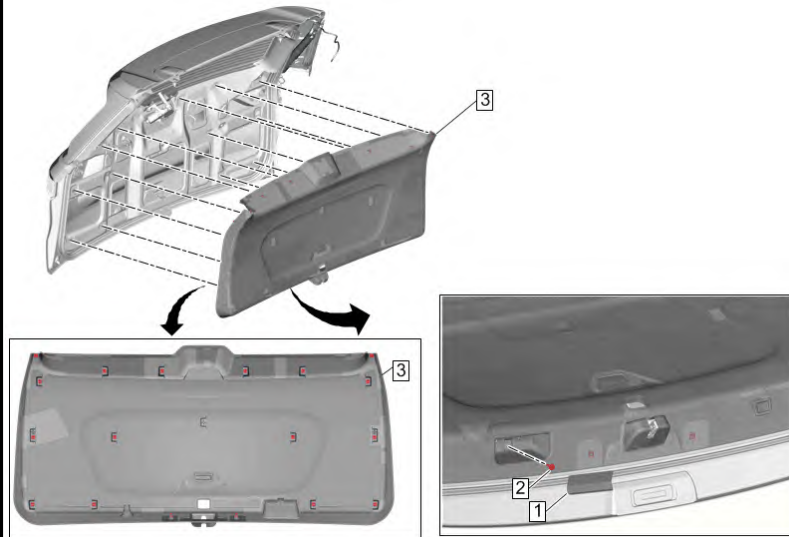

Callout	Component Name
1	Liftgate Lower Trim Finish Panel Access Hole Cover Procedure Use a flat bladed plastic trim tool.
2	Liftgate Lower Trim Finish Panel Bolt CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
3	Liftgate Lower Trim Finish Panel Procedure 1. Use a trim panel removal tool to aid in the removal of the trim panel from the liftgate assembly. 2. Disconnect the electrical connector, if equipped.


CARGO TIE DOWN LOOP REPLACEMENT

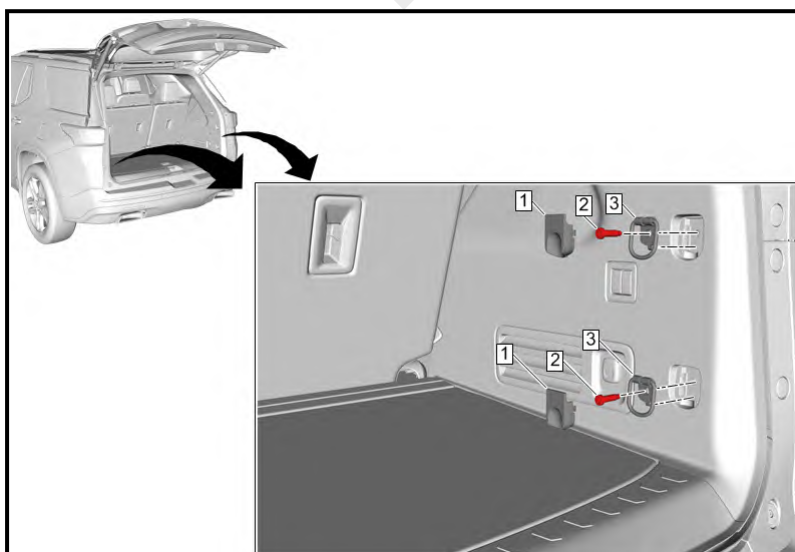

Callout	Component Name


Callout	Component Name
1	Cargo Tie Down Loop Trim Cover [4x] Procedure Use a small flat-bladed tool to disengage integral tabs on cargo tie down loop trim cover from the quarter lower rear trim panel.
2	Cargo Tie Down Loop Fastener [4x] CAUTION: Refer to Fastener Caution . Tighten 22 N.m (16 lb ft)
3	Cargo Tie Down Loop [4x]

LIFTGATE LOCK STRIKER COVER REPLACEMENT

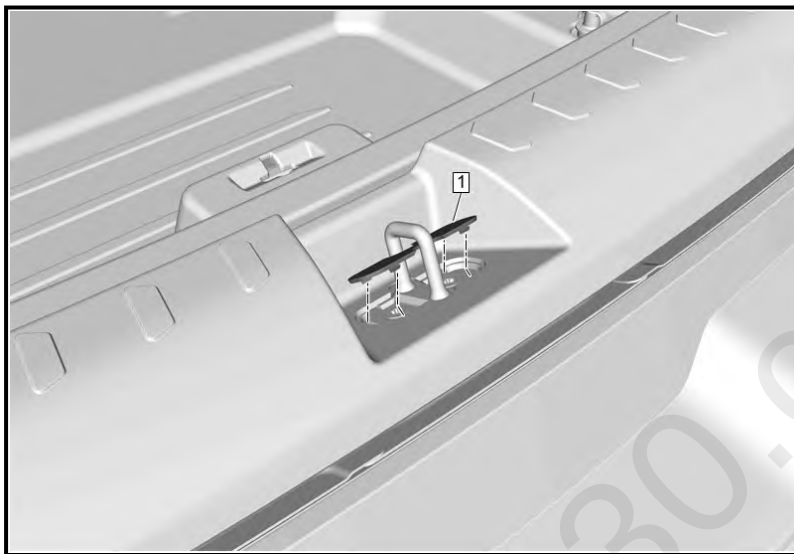

Callout	Component Name
1	Liftgate Lock Striker Cover Procedure Use a flat bladed plastic tool to remove.

BODY PRESSURE RELIEF VALVE REPLACEMENT

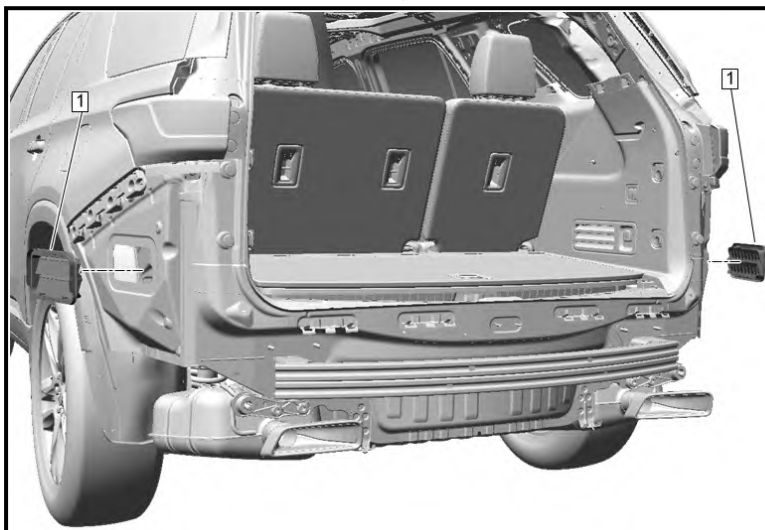

Callout	Component Name
Preliminary Procedure Rear Bumper Fascia Replacement	

Callout	Component Name
1	Body Pressure Relief Valve [2x] Procedure 1. Use a flat-bladed tool to release the locking tabs on the body pressure relief valve at the two upper, and two lower locations. 2. Press the body pressure relief valve into the quarter panel until the locking tabs lock in place at both the upper, and lower locations.

mcx30.com