

2018 ACCESSORIES & EQUIPMENT

Seat Hardware, Trim, And Upholstery - Traverse

SPECIFICATIONS

FASTENER SPECIFICATIONS

Reusable Threaded Fastener Tightening Specifications

NOTE: <i>All fasteners listed in this table can be reused after removal.</i>	
Application	Specification
	Metric (English)
Driver or Passenger Seat Adjuster Finish Cover Fastener	2.5 N.m (22 lb in)
Driver or Passenger Seat Back Frame Fastener	35 N.m (26 lb ft)
Driver or Passenger Seat Bolt	45 N.m (33 lb ft)
Driver or Passenger Seat Inner Recliner Finish Cover Fastener	2.5 N.m (22 lb in)
Front Seat Adjuster Handle Fastener	2.5 N.m (22 lb in)
Front Seat Cushion Outer Finish Cover Fastener	2.5 N.m (22 lb in)
Front Seat Vertical Actuator Handle Fastener	2.5 N.m (22 lb in)
Rear Seat Armrest Fastener	2.5 N.m (22 lb in)
Rear Seat Back Center Bar Front Finish Cover Fastener	2.5 N.m (22 lb in)
Rear Seat Back Cushion Latch Release Handle Bezel Fastener	4.7 N.m (42 lb in)
Rear Seat Back Cushion Latch Release Handle Fastener	4.7 N.m (42 lb in)
Rear Seat Back Frame Bolt	75 N.m (55 lb ft)
Rear Seat Back Panel Bolt	75 N.m (55 lb ft)
Rear Seat Belt Opening Bezel Fastener	2.5 N.m (22 lb in)
Rear Seat Bolt	45 N.m (33 lb ft)
Rear Seat Cushion Bracket Fastener	2.5 N.m (22 lb in)
Rear Seat Cushion Frame Bolt	32.5 N.m (24 lb ft)
Rear Seat Frame Nut	50 N.m (37 lb ft)
Rear Seat Inner Hinge Finish Cover Fastener	2.5 N.m (22 lb in)
Rear Seat Inner Recliner Cable Fastener	2.5 N.m (22 lb in)
Rear Seat Outer Hinge Finish Cover Fastener	2.5 N.m (22 lb in)
Rear Seat Spacer	25 N.m (18 lb ft)
Rear Seat Track Finish Cover Fastener	2.5 N.m (22 lb in)
3rd Row Seat Back Frame Bolt	25 N.m (18 lb ft)
3rd Row Seat Back Hinge Finish Cover Fastener	2.5 N.m (22 lb in)
3rd Row Seat Bolt	45 N.m (33 lb ft)
3rd Row Seat Cushion Frame Bolt	25 N.m (18 lb ft)
3rd Row Seat Nut - Front	20 N.m (15 lb ft)
3rd Row Seat Nut - Rear	45 N.m (33 lb ft)
3rd Row Seat Pull Strap Bolt	4.5 N.m (40 lb in)


DIAGNOSTIC INFORMATION AND PROCEDURES

MANUAL SEAT ADJUSTER MECHANICAL DIAGNOSIS

Condition	Action
NOTE: Replace all seat adjusters as an assembly Replace both sides at the same time.	
The adjusters are not in parallel alignment with each other.	1. Loosen the floor pan attaching bolts. 2. Position the seat fully forward. 3. Tighten the bolts.
The adjusters are new, not broken in.	Operate the seat to the fully forward and fully rearward positions several times in order to work the tightness out of the channels.
The adjusters are improperly lubricated.	Lubricate the adjuster channels.
The adjusters are bent or damaged.	Replace the adjusters.
The adjusters are binding.	Lubricate or replace the adjusters.
The seat components are loose, damaged, or broken.	Repair or replace the defective components.
The seat mounting bolts are loose.	Tighten the mounting bolts to specifications.
The adjuster lock bar spring is disconnected or broken.	Repair or replace the spring.
The adjuster lock bar is sticking or binding.	Lubricate the lock bar pivot or replace the adjuster.
The locking wire is too loose.	Tighten the locking wire.
The locking wire is disconnected or broken.	Repair or replace the locking wire.
The locking wire is too tight.	Loosen the locking wire.

REPAIR INSTRUCTIONS

DRIVER OR PASSENGER SEAT REMOVAL AND INSTALLATION

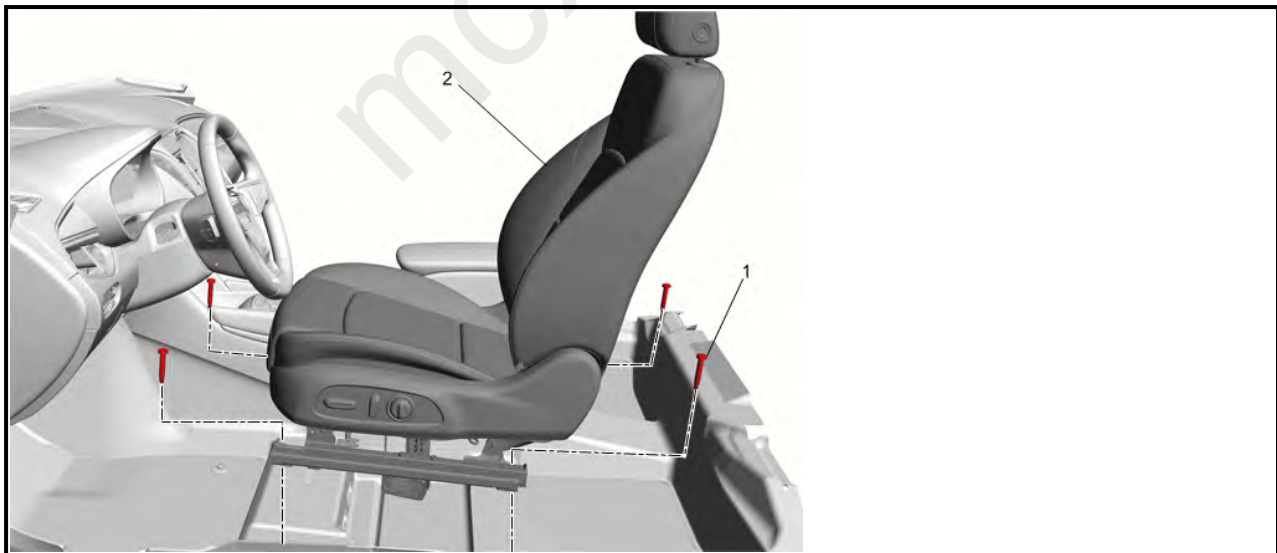


Callout	Component Name

Callout	Component Name
WARNING: Refer to SIR Warning .	
Preliminary Procedures 1. Disable the SIR system. SIR Disabling and Enabling . 2. Disconnect the seat belt from the tensioner. Front Seat Belt Retractor Replacement	
1	Driver or Passenger Seat Bolt [4x] CAUTION: Fastener Caution . Procedure Adjust the seat to gain access to the bolts. Tighten 45 N.m (33 lb ft)
2	Driver or Passenger Seat Procedure 1. Disconnect the electrical connector. 2. With the aid of an assistant, remove the front seat. 3. Enable the SIR System. SIR Disabling and Enabling .

DRIVER OR PASSENGER SEAT REMOVAL - WITH NO FORE/AFT MOVEMENT

WARNING: Refer to [SIR Warning](#) .


1. Disable the SIR system. [SIR Disabling and Enabling](#)

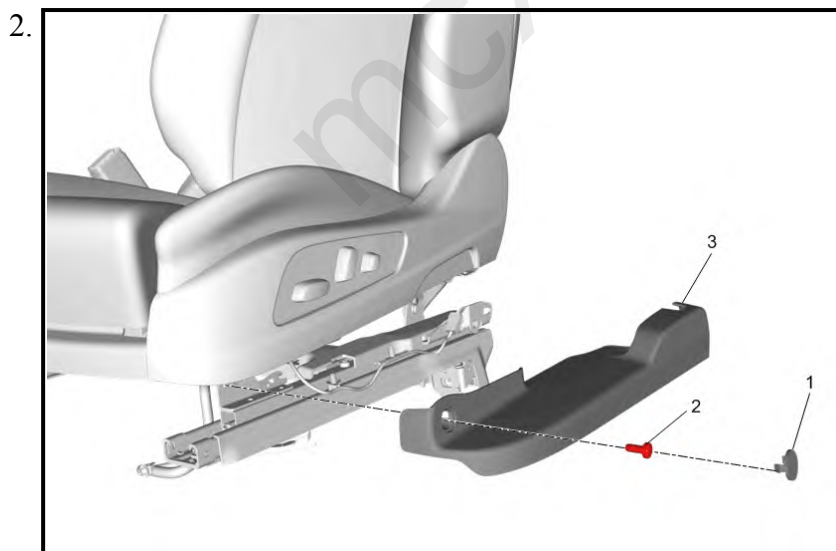


Driver or Passenger Seat Adjuster Finish Cover (3) - Remove - [Driver or Passenger Seat Adjuster Finish Cover Replacement](#)

3. Adjust the seat to gain access to the bolts.



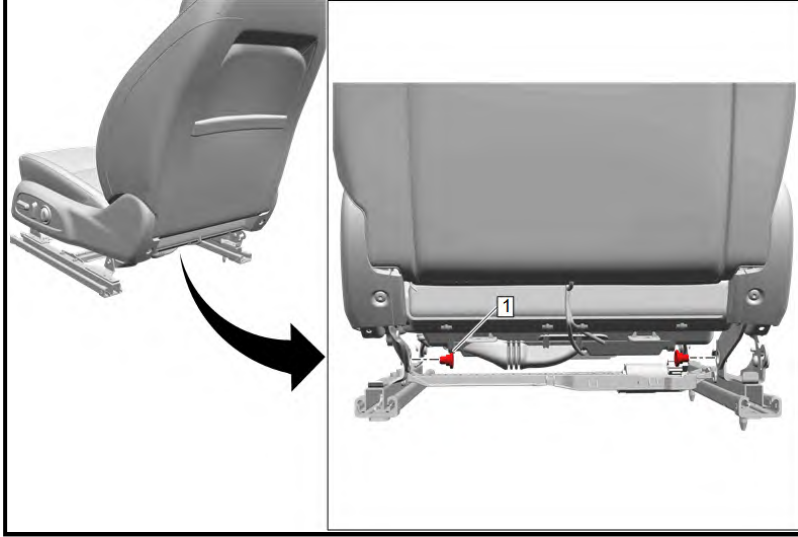

Front Seat Vertical Adjuster Bracket Bolt - Rear (1) - Remove [2x]

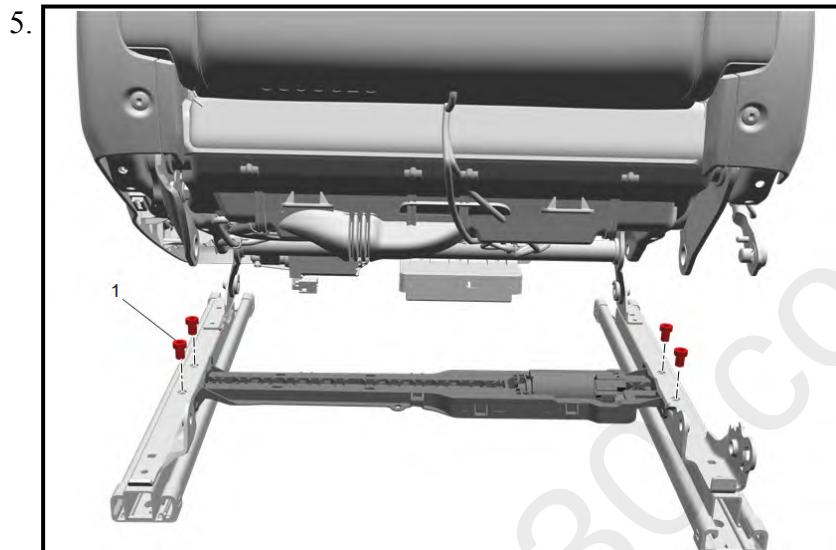

Tilt the seat forward and support it.

6. Remove the cross brace cover.

7. Cross Brace Bolt (1) - Remove [4x]

NOTE: The seat can now be moved fore/aft to access the seat bolts.


8. Driver or Passenger Seat Bolt - Remove - [Driver or Passenger Seat Removal and Installation](#)

NOTE: If sending the frame back for warranty return, reinstall the front seat vertical adjuster bracket bolts and the cross brace bolts.

9. Replace with NEW seat cushion frame. - Remove - [Driver or Passenger Seat Cushion Frame Replacement \(Power\)](#)[Driver or Passenger Seat Cushion Frame Replacement \(Manual\)](#)


DRIVER OR PASSENGER SEAT ADJUSTER VERTICAL ACTUATOR HANDLE REPLACEMENT



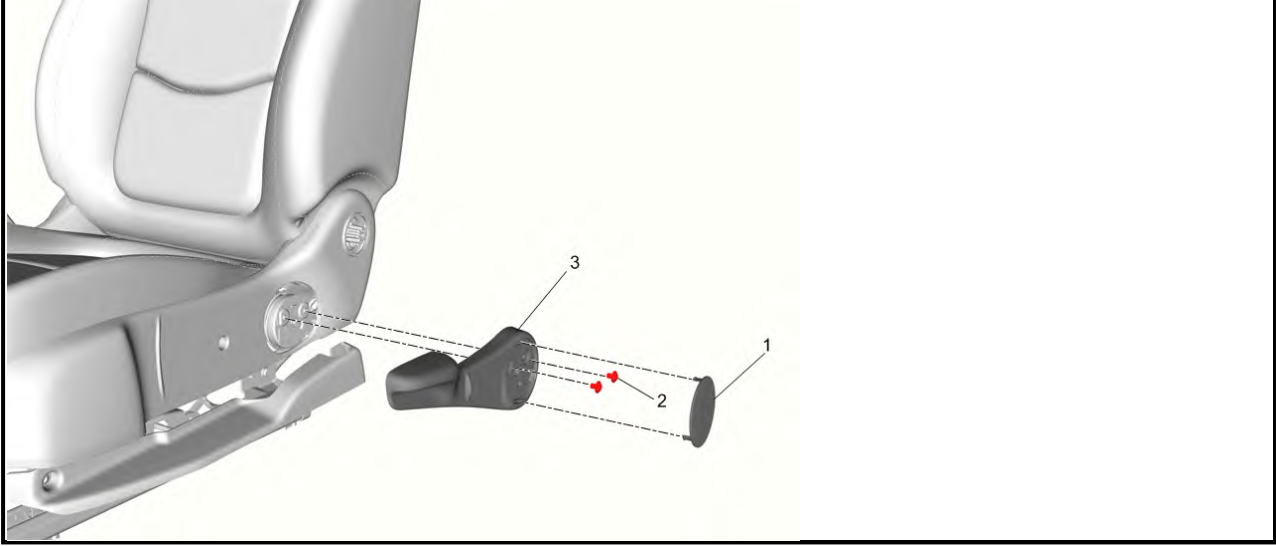


Callout	Component Name
Preliminary Procedure	
<u>Driver or Passenger Seat Adjuster Handle Replacement</u>	
1	Front Seat Vertical Actuator Handle Cap
2	Front Seat Vertical Actuator Handle Fastener [2x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
3	Driver or Passenger Seat Vertical Actuator Handle

DRIVER OR PASSENGER SEAT ADJUSTER HANDLE REPLACEMENT

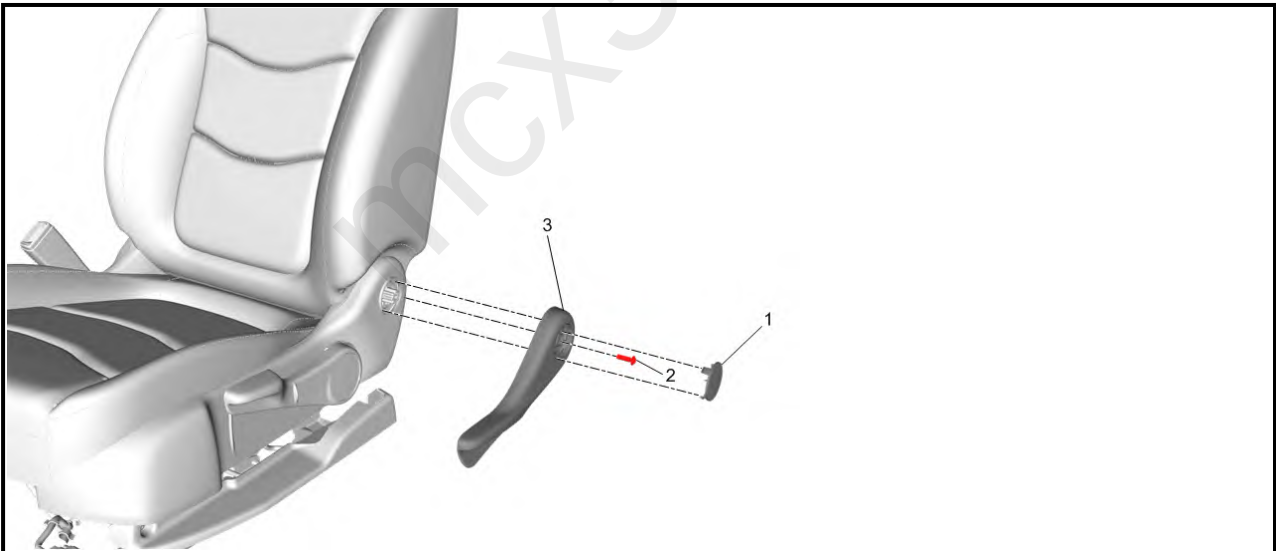


Callout	Component Name
1	Front Seat Adjuster Finish Cover Bolt Cap
2	Front Seat Adjuster Handle Fastener CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
3	Front Seat Adjuster Handle

DRIVER OR PASSENGER SEAT HEAD RESTRAINT REPLACEMENT

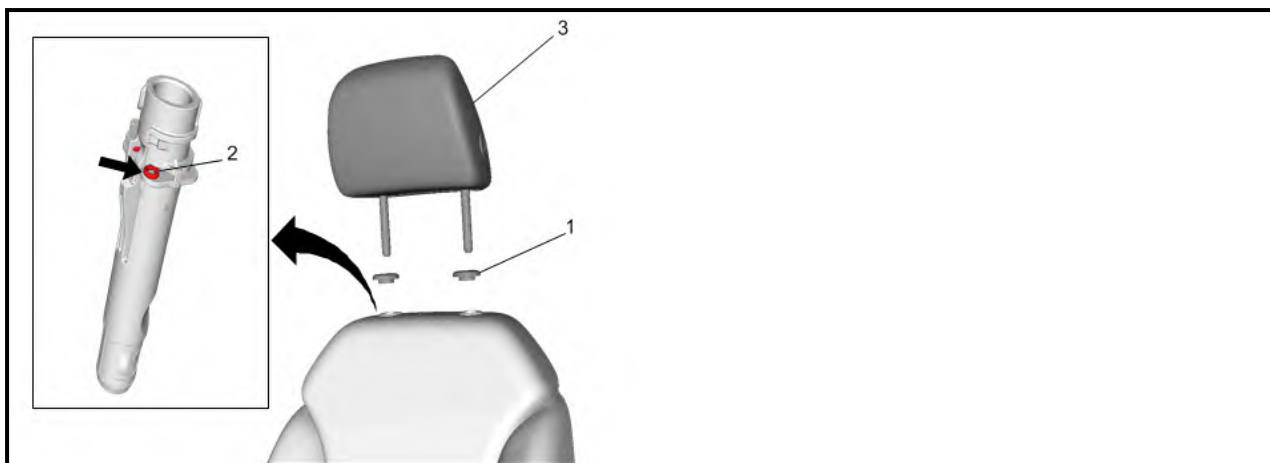


Callout	Component Name
1	Driver or Passenger Front Seat Head Restraint Guide Bezel [2x] Procedure 1. Raise the headrest to gain access to the head restraint guide bezel. 2. Twist the bezel counter clockwise and push the bezel upward on the head restraint adjuster rod.
2	Driver or Passenger Seat Head Restraint Clip [2x] Procedure Using a suitable pointed or flat bladed tool, push the metal clip rearward while pulling upward on the head restraint.
3	Driver or Passenger Seat Head Restraint


DRIVER OR PASSENGER SEAT HEAD RESTRAINT GUIDE REPLACEMENT

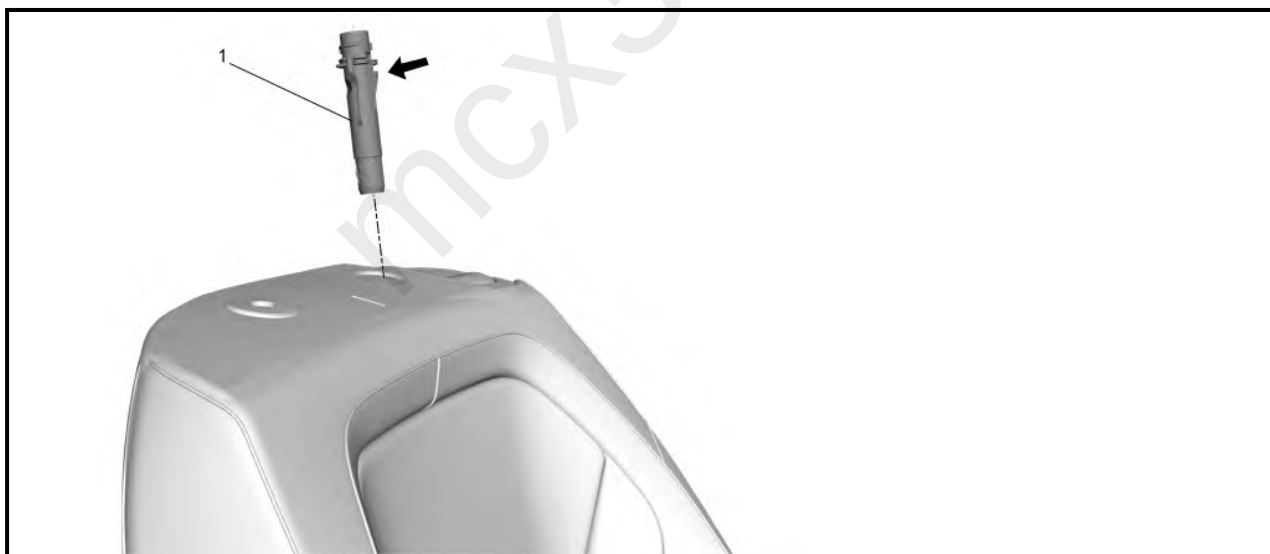

Callout	Component Name
Preliminary Procedure <u>Driver or Passenger Seat Head Restraint Replacement.</u>	
1	Driver or Passenger Seat Head Restraint Guide Procedure Using a suitable flat-bladed tool, slide the tool on the outside of the guide until it finds the slot. Then push the plastic slot inward and pull upward to remove the guide from the seat back frame.

 
DRIVER OR PASSENGER SEAT ADJUSTER FINISH COVER REPLACEMENT



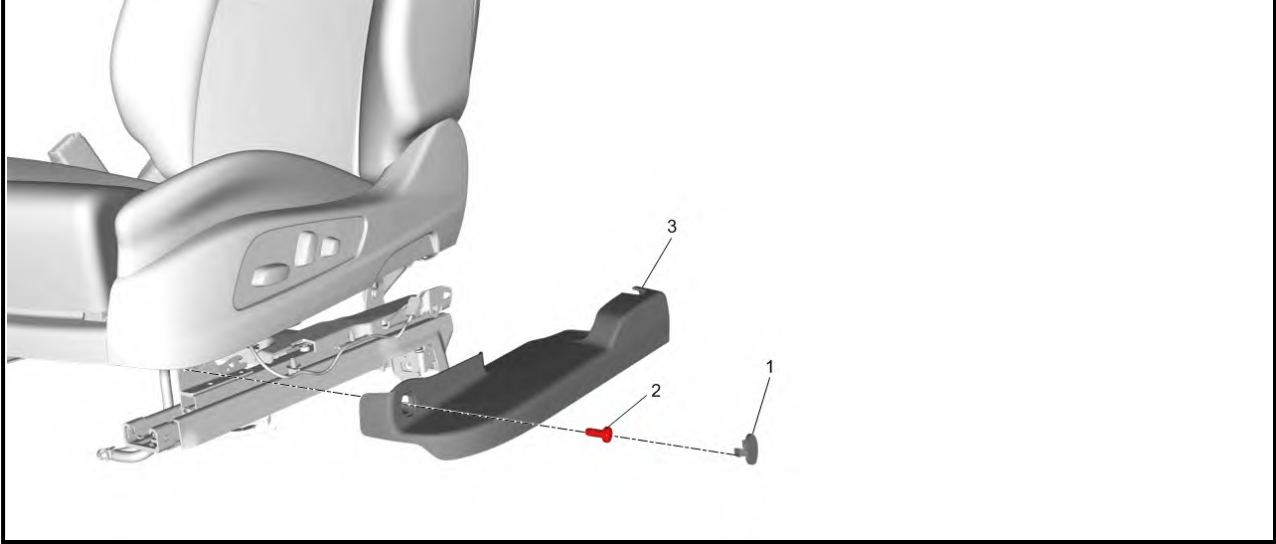


Callout	Component Name
1	Front Seat Cushion Outer Finish Cover Bolt Cap
2	Driver or Passenger Seat Adjuster Finish Cover Fastener CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
3	Driver or Passenger Seat Adjuster Finish Cover Procedure Disconnect and reposition harness as necessary.

DRIVER OR PASSENGER SEAT INNER RECLINER FINISH COVER REPLACEMENT

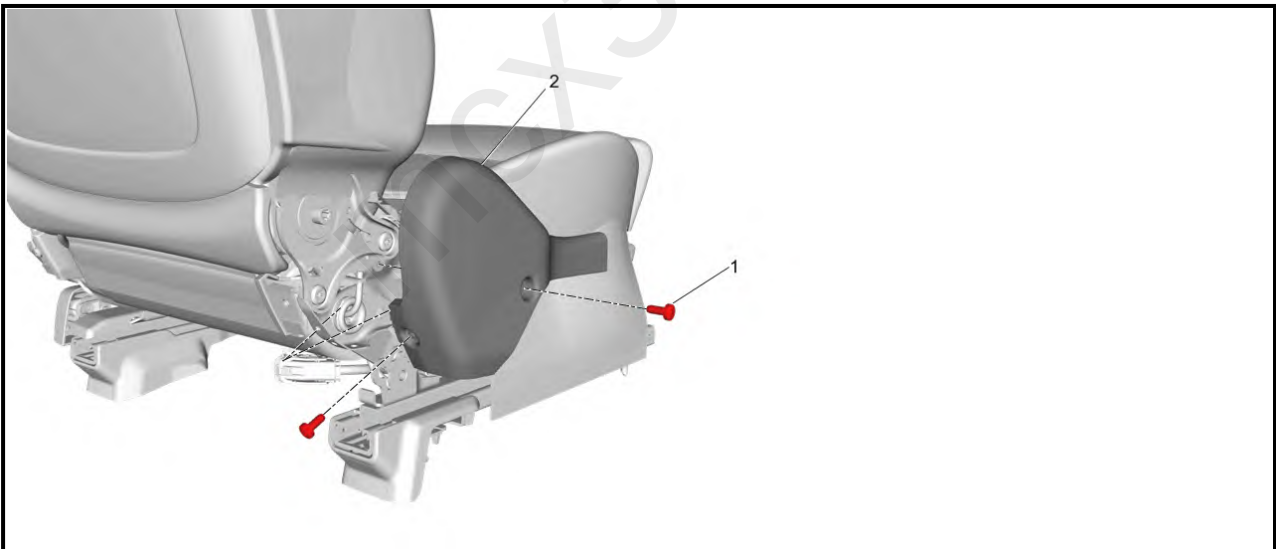


Callout	Component Name
Preliminary Procedure Driver or Passenger Seat Removal and Installation	
1	Driver or Passenger Seat Inner Recliner Finish Cover Fastener [2x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Driver or Passenger Seat Inner Recliner Finish Cover

DRIVER OR PASSENGER SEAT CUSHION FRAME REPLACEMENT (POWER)

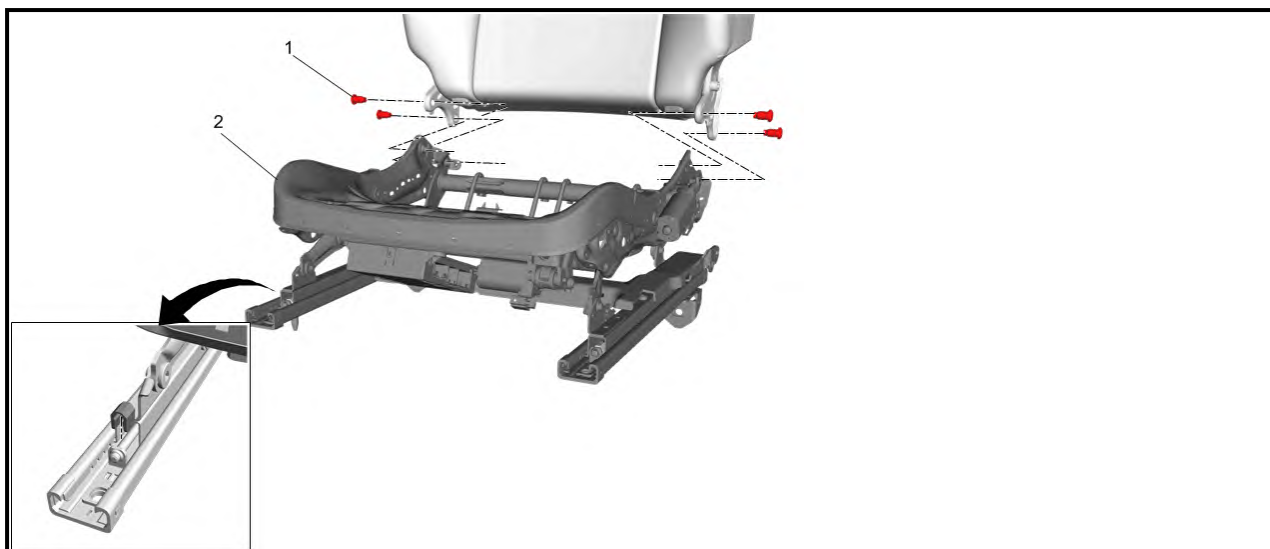


Callout	Component Name
WARNING: Refer to SIR Warning .	
Procedure Front Seat Cushion Cover and Pad Replacement	
1	Driver or Passenger Seat Back Frame Fastener [4x] CAUTION: Refer to Fastener Caution . Tighten 35 N.m (26 lb ft)
2	Driver or Passenger Seat Cushion Frame Procedure 1. Disconnect the electrical connector. 2. Transfer components as necessary. NOTE: When replacing the seat cushion frame, ensure the front seat adjuster stops are installed.

DRIVER OR PASSENGER SEAT CUSHION FRAME REPLACEMENT (MANUAL)

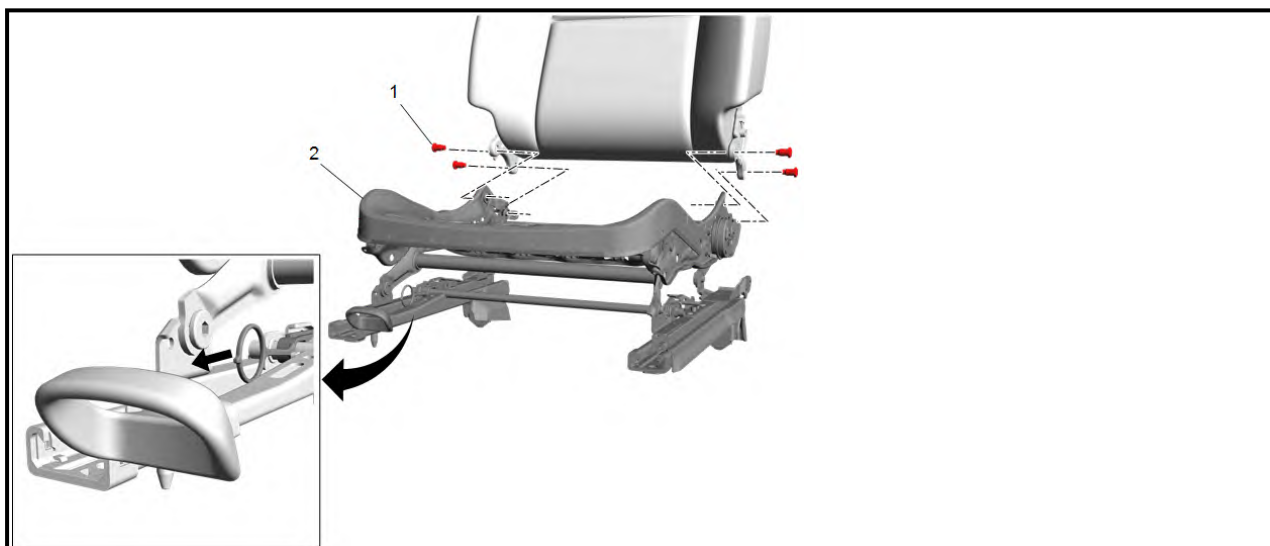

Callout	Component Name
WARNING: Refer to SIR Warning .	
Preliminary Procedure Front Seat Cushion Cover and Pad Replacement	
1	Driver or Passenger Seat Back Frame Fastener [4x] CAUTION: Refer to Fastener Caution . Tighten 35 N.m (26 lb ft)
2	Driver or Passenger Seat Cushion Frame Procedure 1. Disconnect the electrical connector. 2. Transfer components as necessary. NOTE: When replacing the seat cushion frame, ensure the locking retainer is pulled forward to unlock the seat track.


FRONT SEAT CUSHION PAD SUPPORT REPLACEMENT

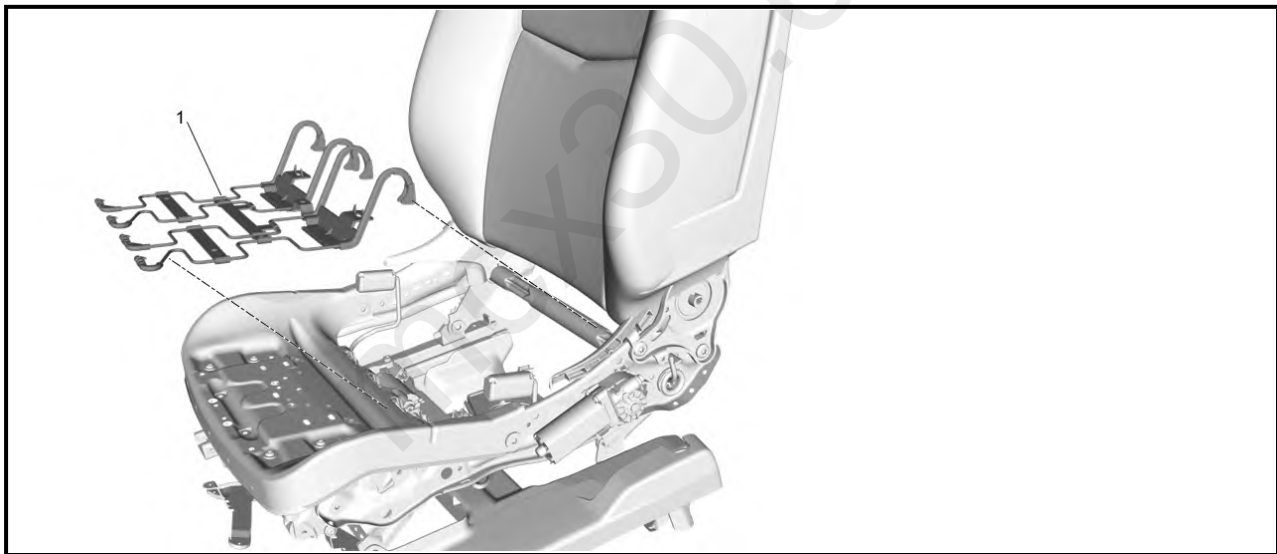

Callout	Component Name
WARNING: To avoid personal injury, perform a preload test on the passenger presence system whenever you remove or replace the seat cushion trim. Failure to do so may cause the system to malfunction.	
Preliminary Procedures 1. Front Seat Cushion Cover and Pad Replacement 2. If servicing the passenger seat, Airbag Front Passenger Presence Module Replacement	


Callout	Component Name
1	Front Seat Cushion Pad Support Procedure 1. Transfer components as necessary. 2. If servicing the passenger seat, re-zero the passenger presence system. <u>Passenger Presence System Rezeroing</u>

FRONT SEAT CUSHION OUTER FINISH COVER REPLACEMENT (MANUAL)

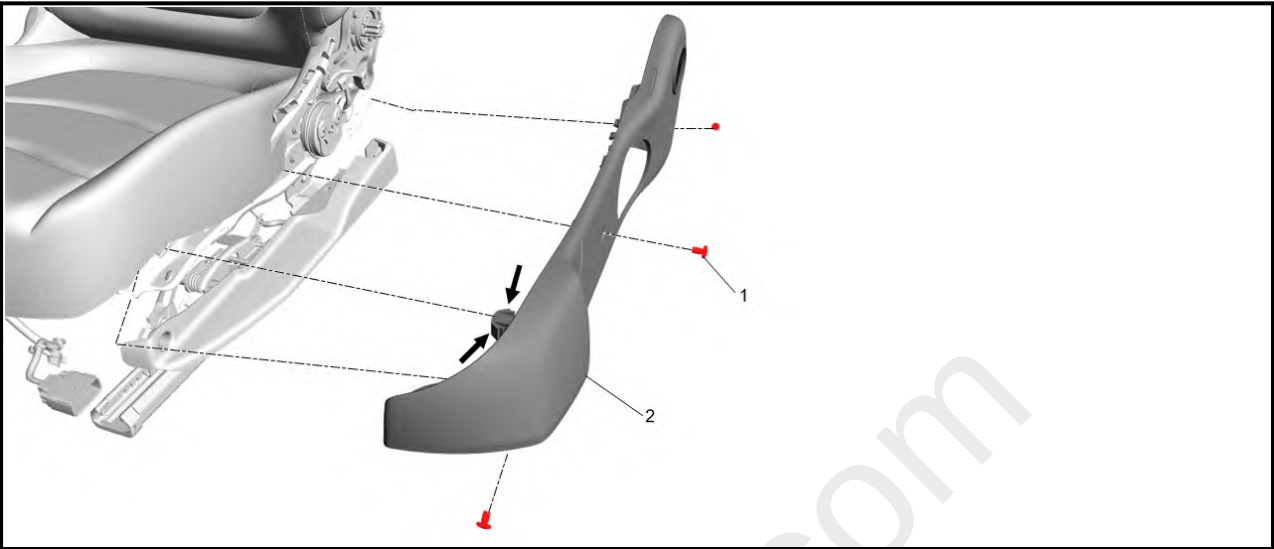

Callout	Component Name
Preliminary Procedure <u>Driver or Passenger Seat Adjuster Vertical Actuator Handle Replacement</u>	
1	Front Seat Cushion Outer Finish Cover Fastener [3x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
2	Front Seat Cushion Outer Finish Cover Procedure Squeeze retainer to release.

FRONT SEAT CUSHION OUTER FINISH COVER REPLACEMENT (POWER)

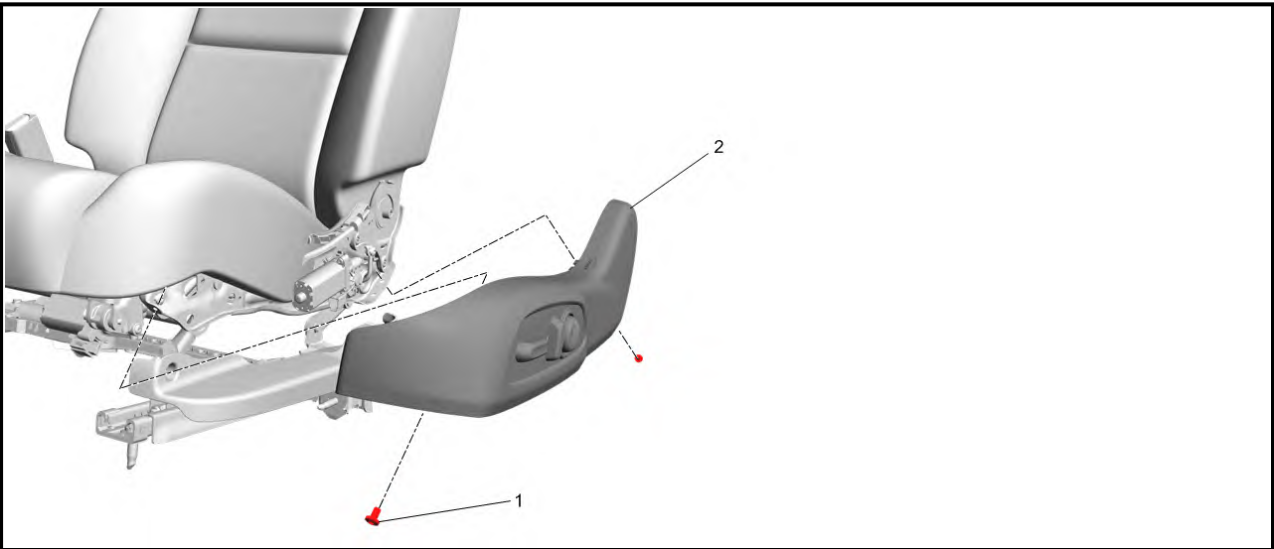

Callout	Component Name
1	Front Seat Cushion Outer Finish Cover Fastener [2x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Front Seat Cushion Outer Finish Cover Procedure 1. Disconnect the outer finish cover from the inner finish cover. 2. Lift upward to disengage the cover from the wire retainer. 3. Disconnect the electrical connector. 4. Transfer components as necessary.

FRONT SEAT CUSHION COVER AND PAD REPLACEMENT

Removal Procedure

WARNING: To avoid personal injury, perform a preload test on the passenger presence system whenever you remove or replace the seat cushion trim. Failure to do so may cause the system to malfunction.


WARNING: Refer to [SIR Warning](#) .

1. Disable the SIR system. [SIR Disabling and Enabling](#)




Driver or Passenger Seat (2) - Remove - [Driver or Passenger Seat Removal and Installation](#)




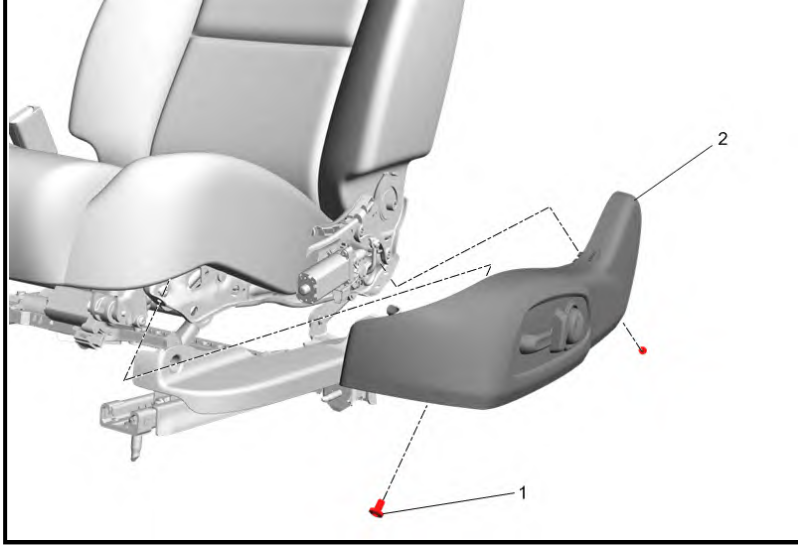

Front Seat Cushion Outer Finish Cover (2) - Remove - [Front Seat Cushion Outer Finish Cover Replacement \(Manual\)](#)[Front Seat Cushion Outer Finish Cover Replacement \(Power\)](#)

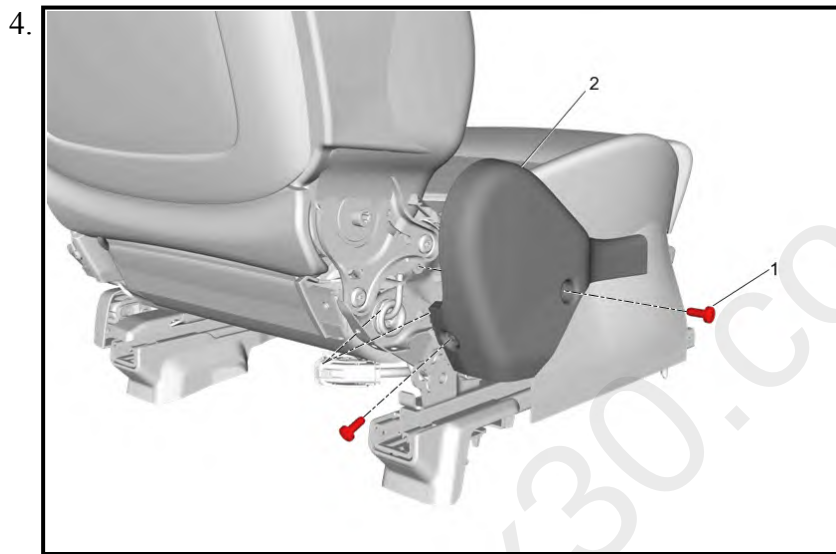


Driver or Passenger Seat Inner Recliner Finish Cover (2) - Remove - [Driver or Passenger Seat Inner Recliner Finish Cover Replacement](#)

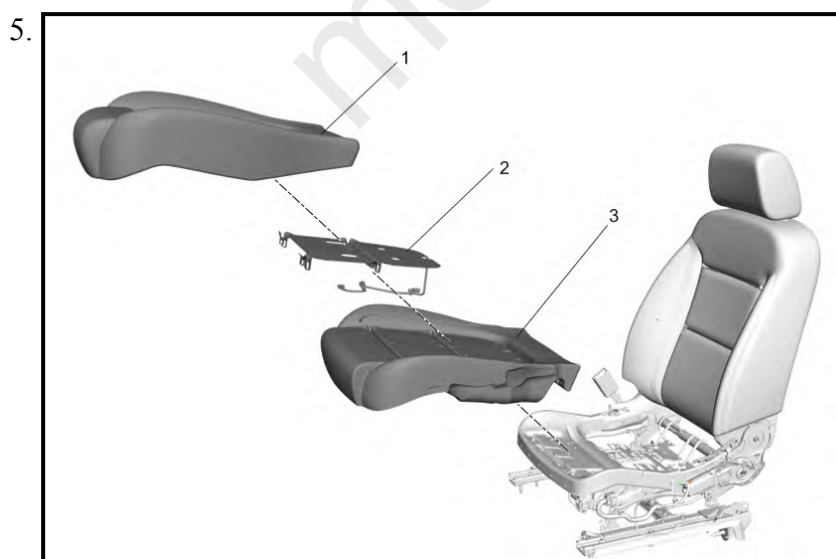


Disengage the J-channel retainers from the seat cushion frame.

6. Disconnect the electrical connectors.
7. Front Seat Cushion Cover (1) - Remove
8. Front Seat Cushion Heater (2) - Remove - [Front Seat Cushion Heater Replacement](#)
9. Front Seat Cushion Pad (3) - Remove
10. Transfer components as necessary.

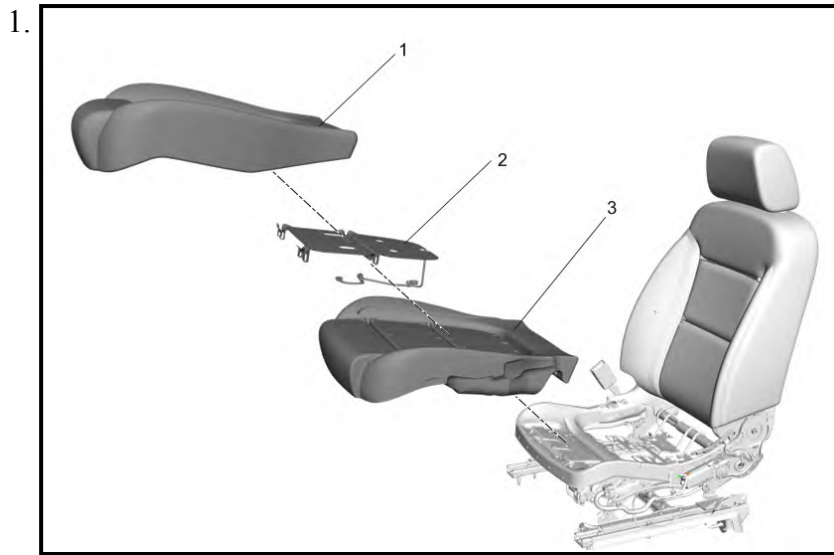


Front Seat Cushion Pad (3) - Install

2. Front Seat Cushion Heater (2) - Install - [Front Seat Cushion Heater Replacement](#)
3. Front Seat Cushion Cover (1) - Install
4. Connect the J-channel retainers.

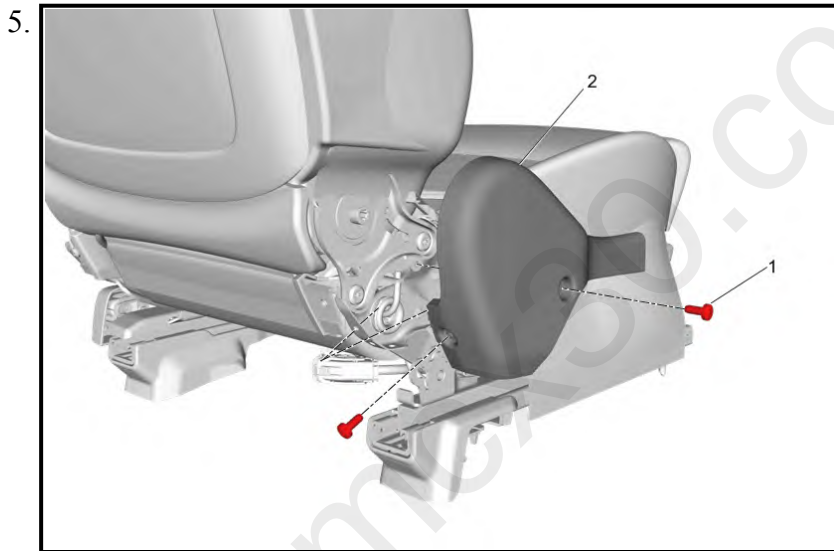


Driver or Passenger Seat Inner Recliner Finish Cover (2) - Install - [Driver or Passenger Seat Inner Recliner Finish Cover Replacement](#)

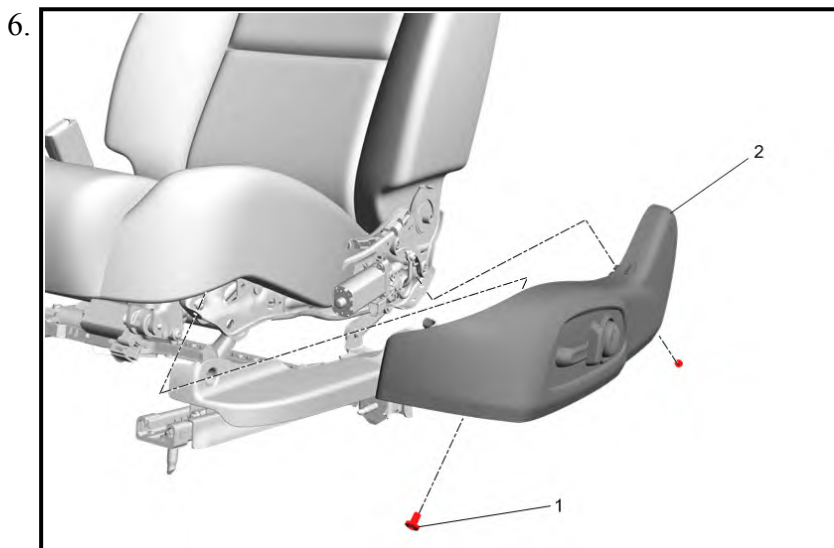

Front Seat Cushion Outer Finish Cover (2) - Install - [Front Seat Cushion Outer Finish Cover Replacement \(Manual\)](#)[Front Seat Cushion Outer Finish Cover Replacement \(Power\)](#)

7.

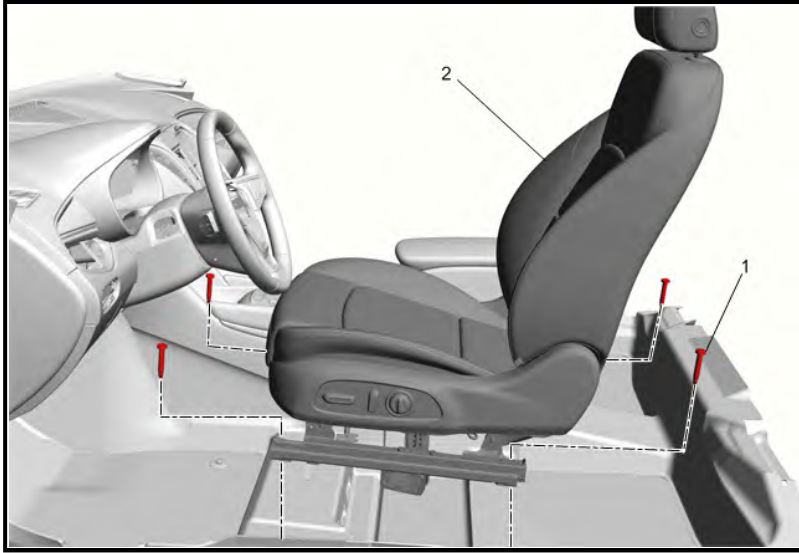

Driver or Passenger Seat (2) - Install - [Driver or Passenger Seat Removal and Installation](#)

8. Enable the SIR System. [SIR Disabling and Enabling](#)

9. If servicing the passenger seat, re-zero the passenger presence system. [Passenger Presence System Rezeroing](#)

DRIVER OR PASSENGER SEAT BACK COVER AND PAD REPLACEMENT


Removal Procedure

WARNING: Refer to [SIR Warning](#) .

WARNING: Do not repair or replace the seat stitching or seams in the seat back trim cover with an internal mounted seat side airbag module. Replace the complete seat back trim cover from the OEM. Non-OEM seat stitching may cause improper airbag deployment which could result in personal injury.

1. Disable the SIR system. [SIR Disabling and Enabling](#)


2.

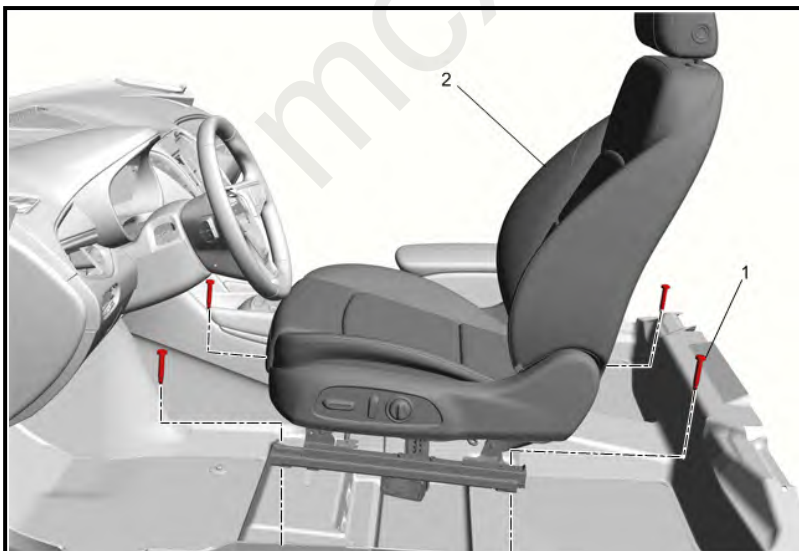


Driver or Passenger Seat (2) - Remove - [Driver or Passenger Seat Removal and Installation](#)

3.




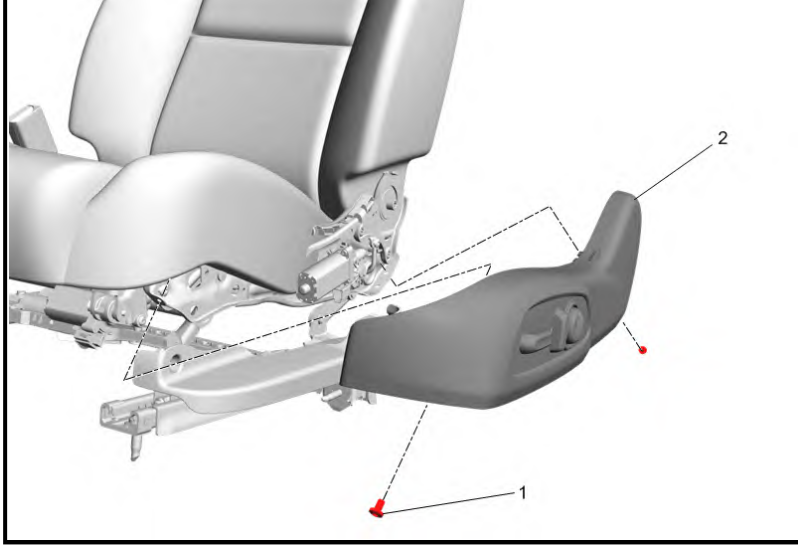

Front Seat Cushion Outer Finish Cover (2) - Remove - [Front Seat Cushion Outer Finish Cover Replacement \(Manual\)](#)[Front Seat Cushion Outer Finish Cover Replacement \(Power\)](#)

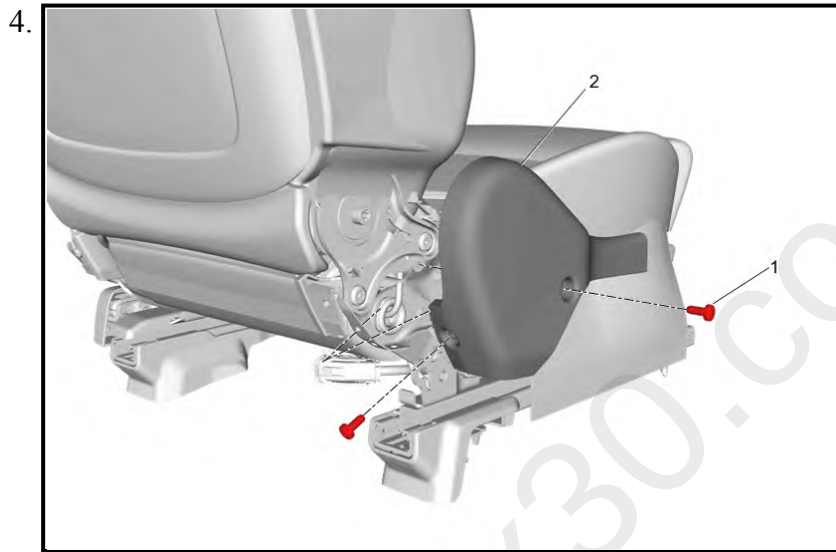

Driver or Passenger Seat Inner Recliner Finish Cover (2) - Remove - [Driver or Passenger Seat Inner Recliner Finish Cover Replacement](#)

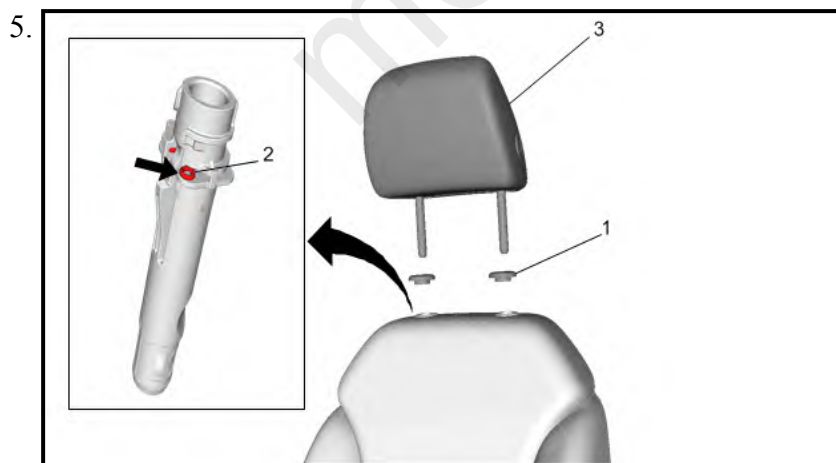

Driver or Passenger Seat Head Restraint (3) - Remove - [Driver or Passenger Seat Head Restraint Replacement](#)


6. Disengage the seat back cover lower J-channel retainer.

NOTE: Hold both sides of the zipper straight while unzipping.

7. Unzip the left and right seat back cover zippers


8. Disengage the J-channel retainers from the seat back cushion frame.

9.

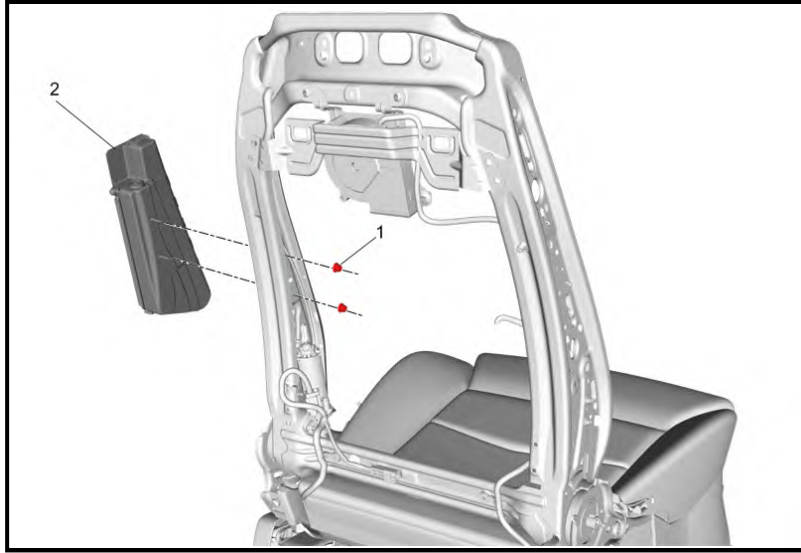


Front Seat Outboard Seat Back Airbag Nut (1) - Remove - [Front Seat Outboard Seat Back Airbag Replacement](#)

10.

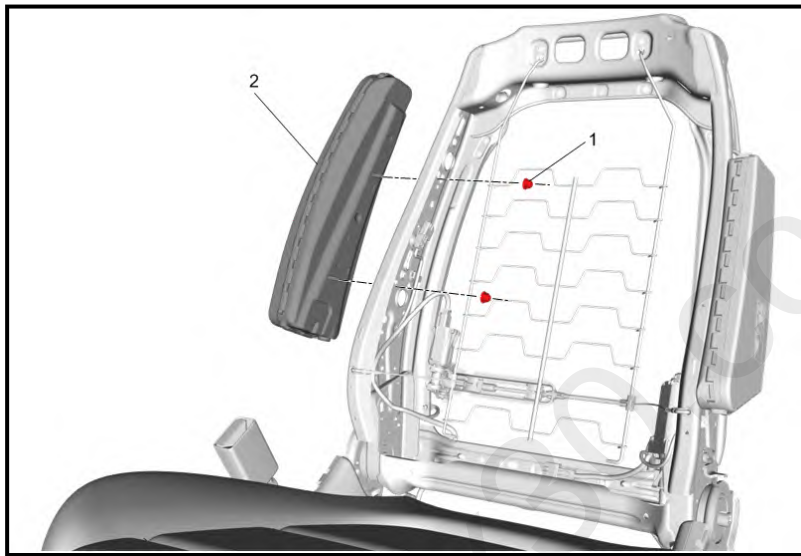

Front Seat Inboard Seat Back Airbag Nut (1) - Remove - [Front Seat Inboard Seat Back Airbag Replacement](#)

11.

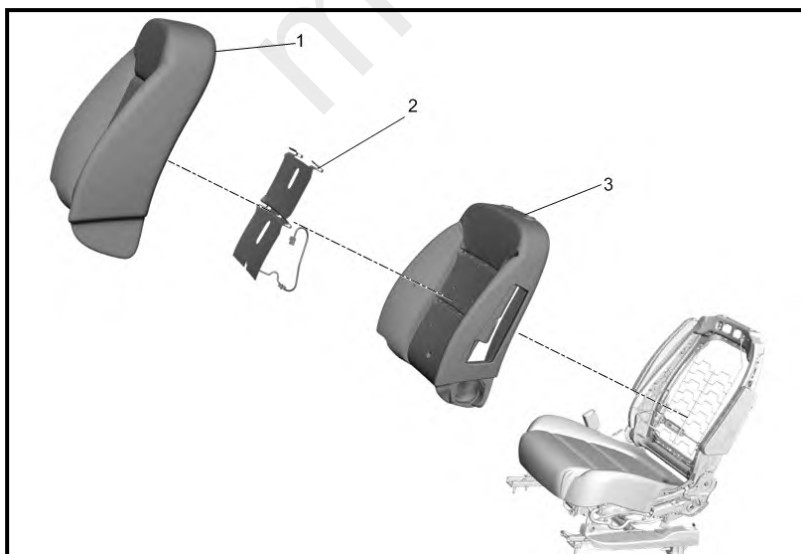


Driver or Passenger Seat Back Cushion Cover (1) - Remove

12. Driver or Passenger Seat Back Cushion Heater (2) - Remove - [Driver or Passenger Seat Back Heater Replacement](#)


13. Driver or Passenger Seat Back Cushion Pad (3) - Remove

Installation Procedure

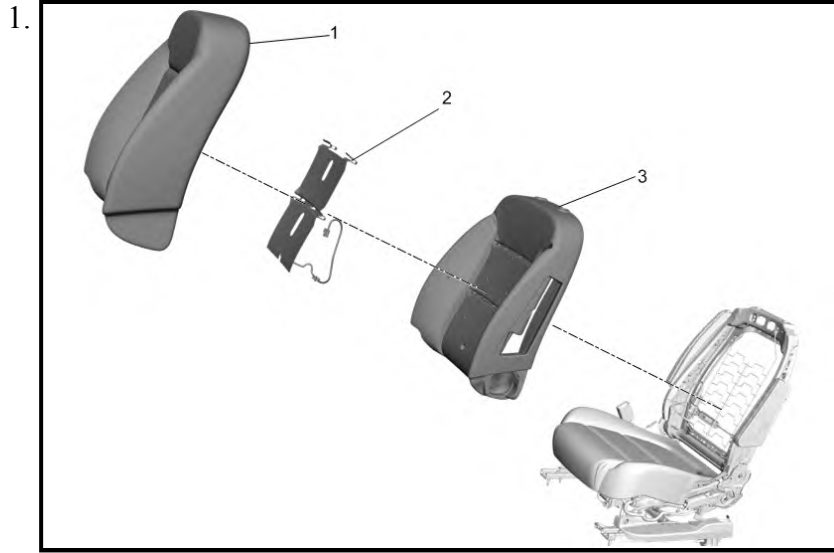


Driver or Passenger Seat Back Cushion Pad (3) - Install

2. Driver or Passenger Seat Back Cushion Heater (2) - Install - [Driver or Passenger Seat Back Heater Replacement](#)
3. Driver or Passenger Seat Back Cushion Cover (1) - Install

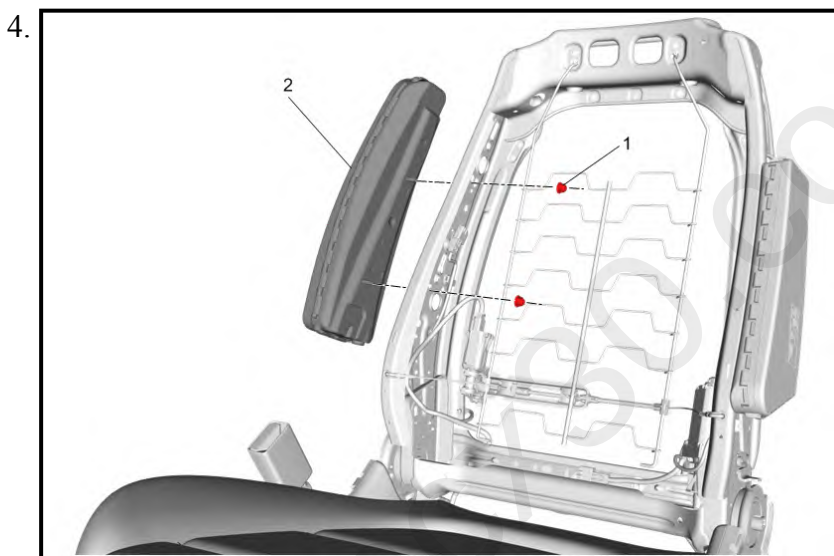

Front Seat Inboard Seat Back Airbag Nut (1) - Install - [Front Seat Inboard Seat Back Airbag Replacement](#)

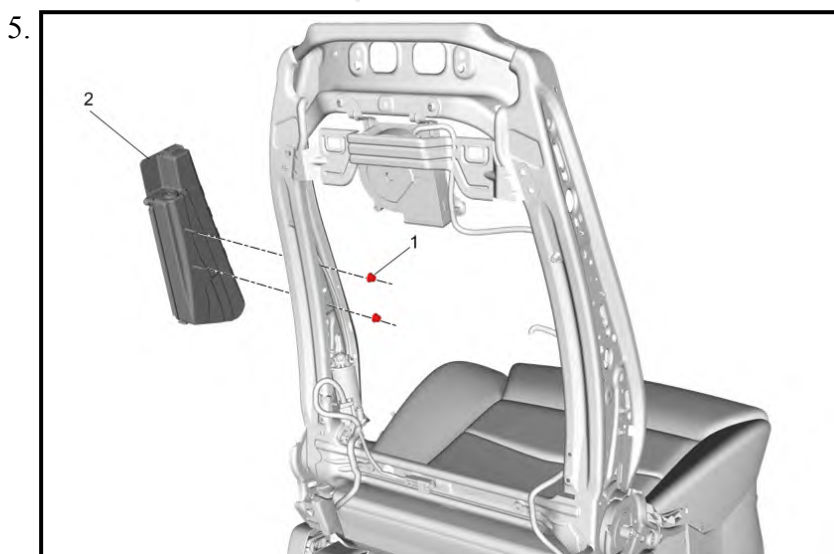


Front Seat Outboard Seat Back Airbag Nut (1) - Install - [Front Seat Outboard Seat Back Airbag Replacement](#)


6. Connect the J-channel retainers to the seat back cushion frame.

NOTE: Hold both sides of the trim together while pulling straight down on the zipper.


7. Close the left and right seat back cover zippers
8. Connect the seat back cover lower J-channel retainer.

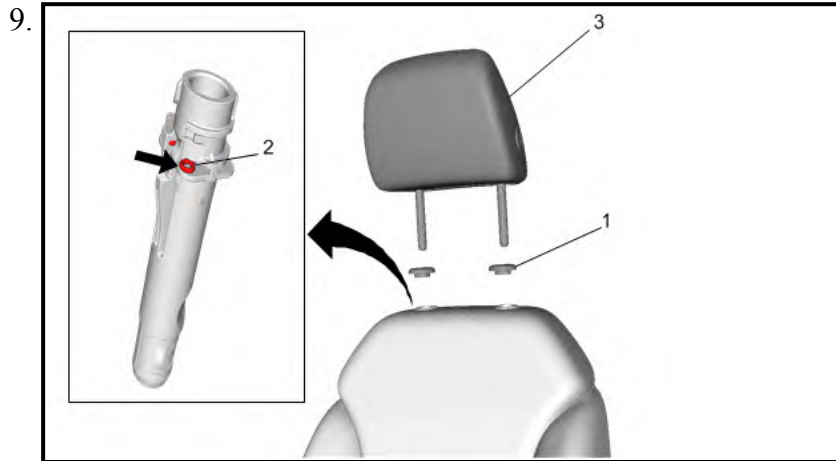


Driver or Passenger Seat Head Restraint (3) - Install - [Driver or Passenger Seat Head Restraint Replacement](#)

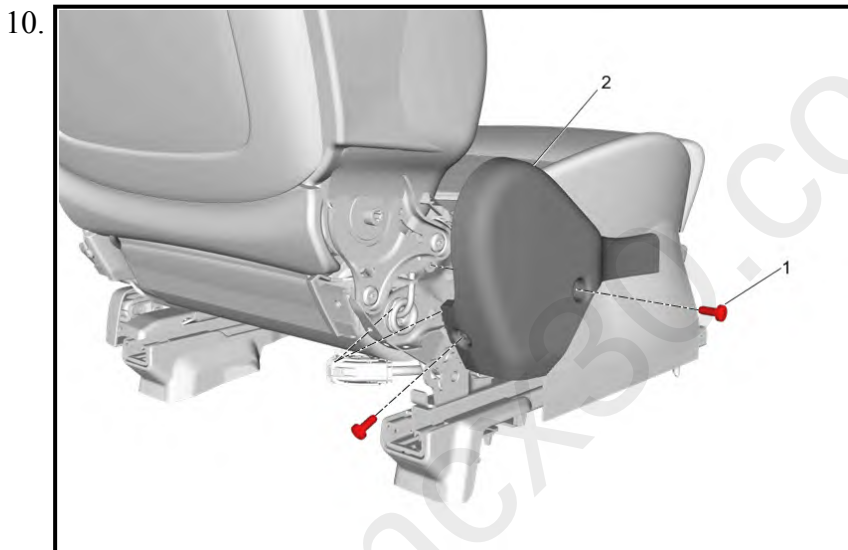


Driver or Passenger Seat Inner Recliner Finish Cover (2) - Install - [Driver or Passenger Seat Inner Recliner Finish Cover Replacement](#)

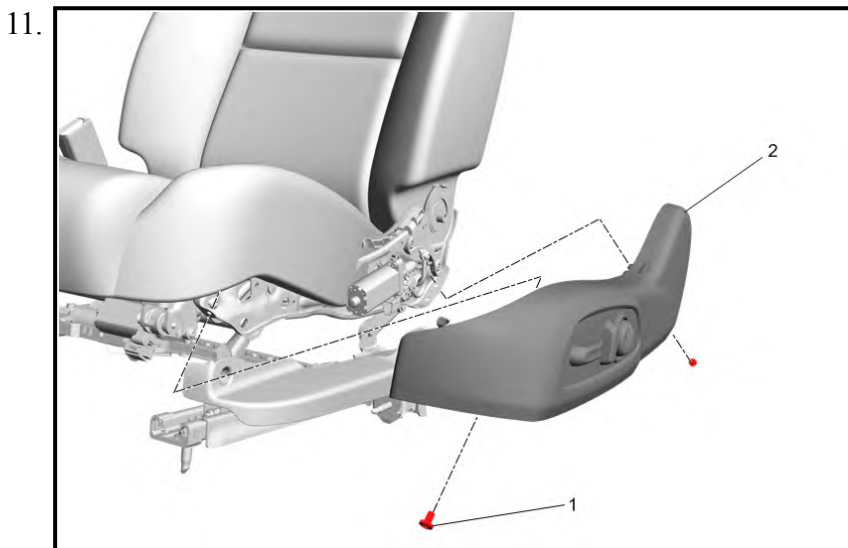

 Front Seat Cushion Outer Finish Cover (2) - Install - [Front Seat Cushion Outer Finish Cover Replacement \(Manual\)](#)[Front Seat Cushion Outer Finish Cover Replacement \(Power\)](#)




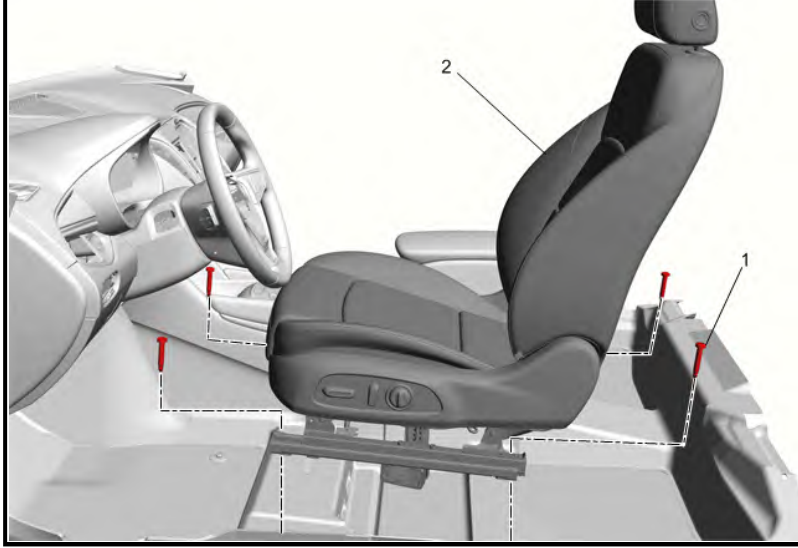

Driver or Passenger Seat (2) - Install - [Driver or Passenger Seat Removal and Installation](#)


13. Enable the SIR System. [SIR Disabling and Enabling](#)

DRIVER OR PASSENGER SEAT BACK CUSHION FRAME REPLACEMENT

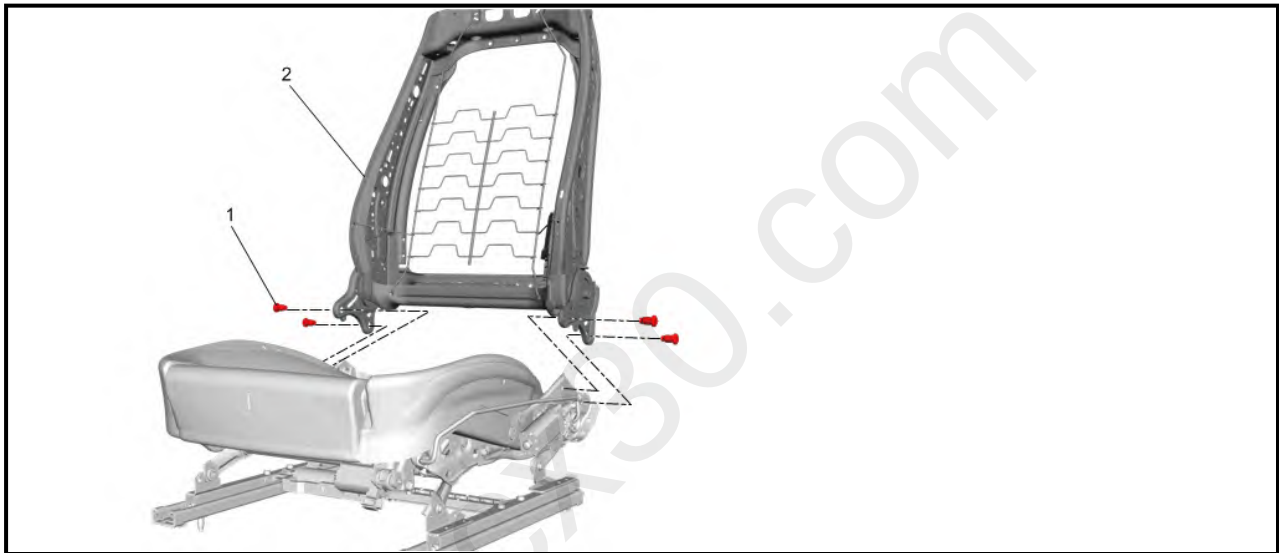


Callout	Component Name
WARNING: Refer to SIR Warning .	
Procedure Driver or Passenger Seat Back Cover and Pad Replacement	
1	Driver or Passenger Seat Back Frame Fastener [4x] CAUTION: Refer to Fastener Caution . Tighten 35 N.m (26 lb ft)
2	Driver or Passenger Seat Back Cushion Frame Procedure 1. Disconnect the electrical connector. 2. Transfer components as necessary.

REAR SEAT REMOVAL AND INSTALLATION (BUCKET)

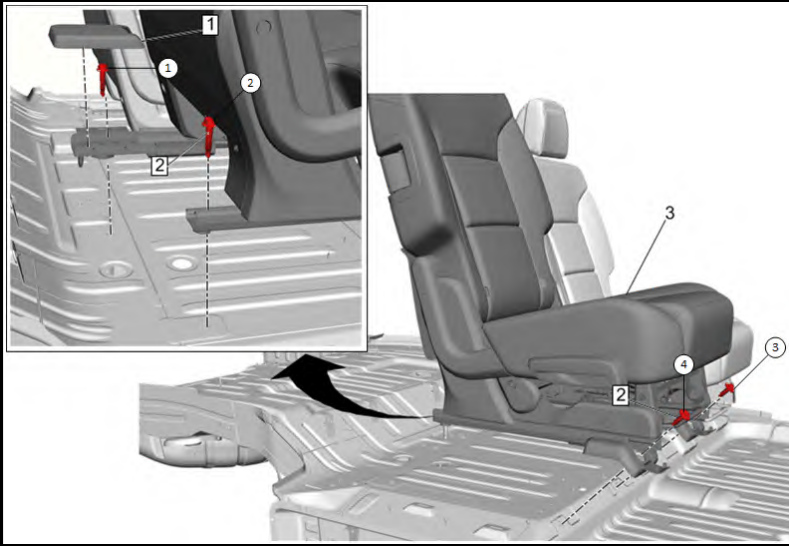

Callout	Component Name
1	Rear Seat Track Cover
2	Rear Seat Bolt [4x] CAUTION: Refer to Fastener Caution . Tighten 45 N.m (33 lb ft)
3	Rear Seat Procedure 1. Disconnect electrical connections, if applicable. 2. With the aid of an assistant remove the rear seat, by lifting and pulling the seat upward to disengage it from the floor.


REAR SEAT REMOVAL AND INSTALLATION (40%)

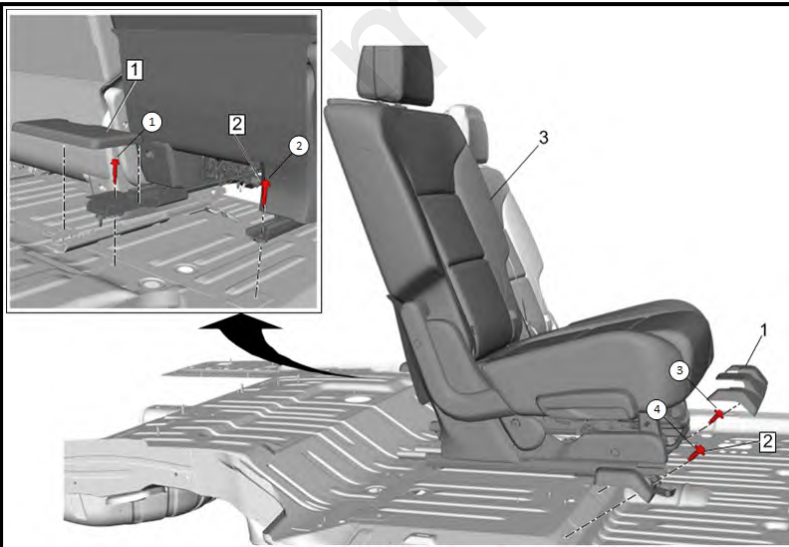

Callout	Component Name
1	Rear Seat Track Cover


Callout	Component Name
2	Rear Seat Bolt [4x] CAUTION: Refer to Fastener Caution . Tighten 45 N.m (33 lb ft)
3	Rear Seat Procedure 1. Disconnect electrical connections, if applicable. 2. Fold the rear seat back cushion down to gain access to the rear seat bolts. 3. With the aid of an assistant remove the rear seat, by lifting and pulling the seat upward to disengage it from the floor.

REAR SEAT REMOVAL AND INSTALLATION (60%)

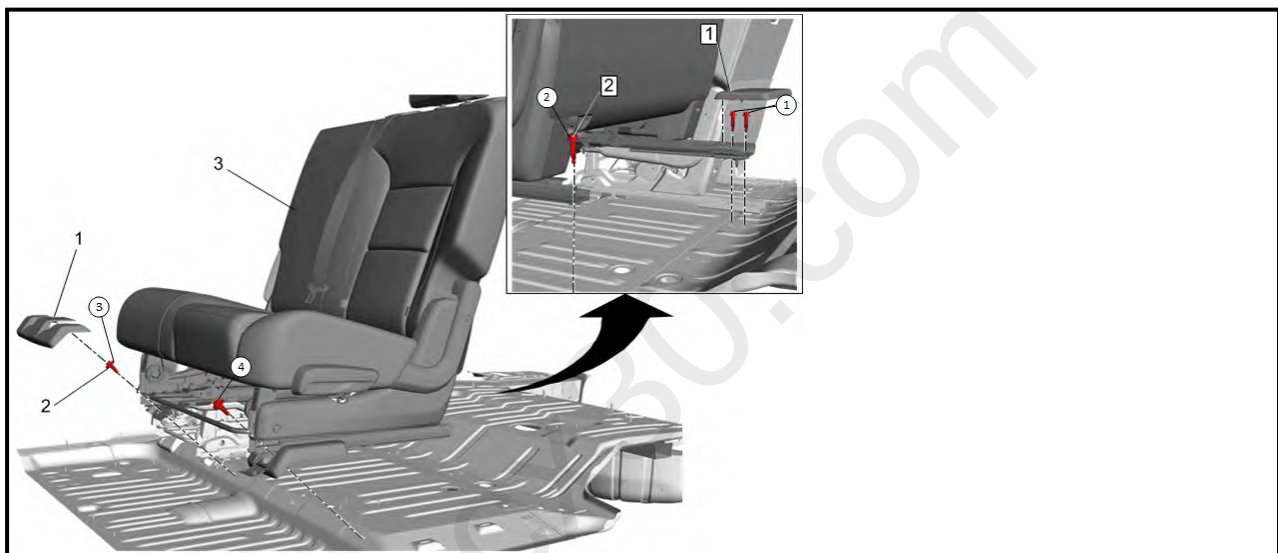

Callout	Component Name
1	Rear Seat Track Cover
2	Rear Seat Bolt [5x] CAUTION: Refer to Fastener Caution . Tighten 45 N.m (33 lb ft)
3	Rear Seat Procedure 1. Disconnect electrical connections, if applicable. 2. Fold the rear seat back cushion down to gain access to the rear seat bolts. 3. With the aid of an assistant remove the rear seat, by lifting and pulling the seat upward to disengage it from the floor.

 REAR SEAT ARMREST REPLACEMENT (BUCKET)






Callout	Component Name
1	Rear Seat Armrest Support Finish Cover
2	Rear Seat Armrest Fastener CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
3	Rear Seat Armrest


REAR SEAT INNER HINGE FINISH COVER REPLACEMENT (40%)

Removal Procedure

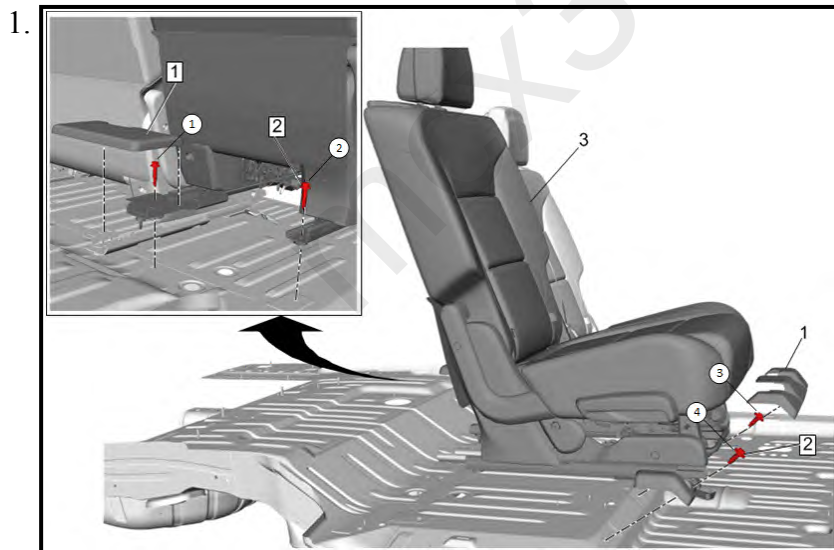


Rear Seat (3) - Remove - [Rear Seat Removal and Installation \(40%\)](#)



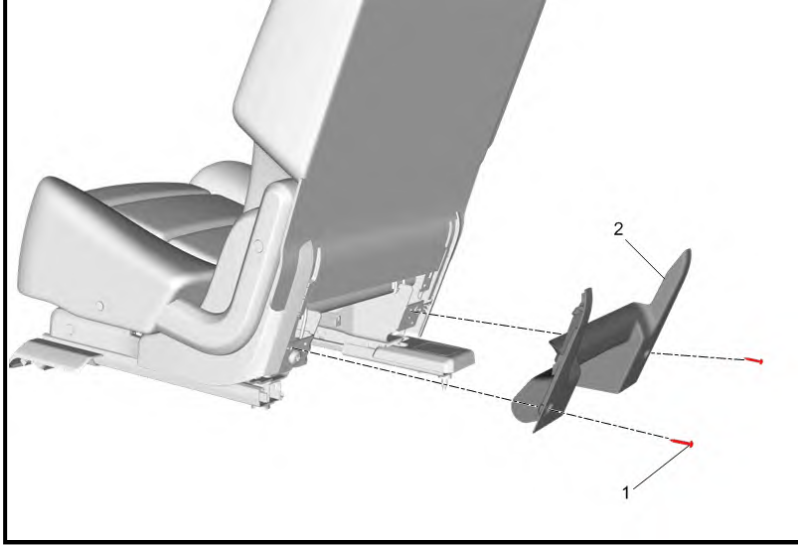

Rear Seat Back Center Bar Front Finish Cover (2) - Remove - [Rear Seat Back Center Bar Front Finish Cover Replacement \(40%\)](#)

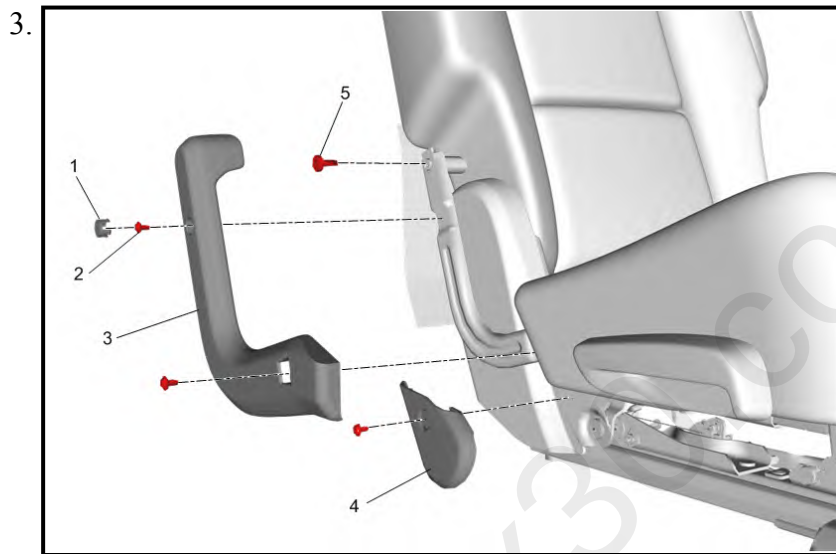


Rear Seat Outer Hinge Finish Cover Cap (1) - Remove

4. Rear Seat Outer Hinge Finish Cover Fastener (2) - Remove [3x]

5. Rear Seat Outer Hinge Finish Cover - Outer (3) - Remove

6. Rear Seat Outer Hinge Finish Cover - Front (4) - Remove

7. Rear Seat Cushion Frame Bolt - Upper (5) - Remove

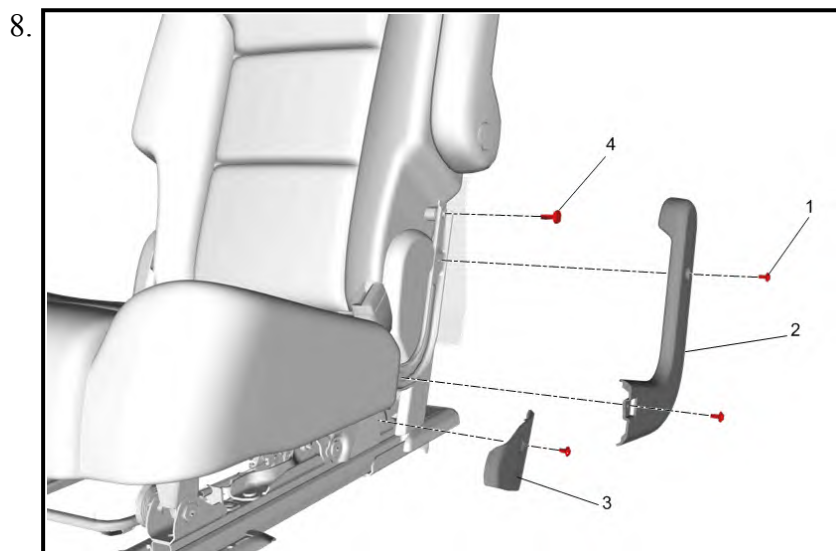


Rear Seat Inner Hinge Finish Cover Fastener (1) - Remove [3x]

9. Rear Seat Inner Hinge Finish Cover - Outer (2) - Remove

10. Rear Seat Inner Hinge Finish Cover - Front (3) - Remove

11. Rear Seat Cushion Frame Bolt - Upper (4) - Remove

12.

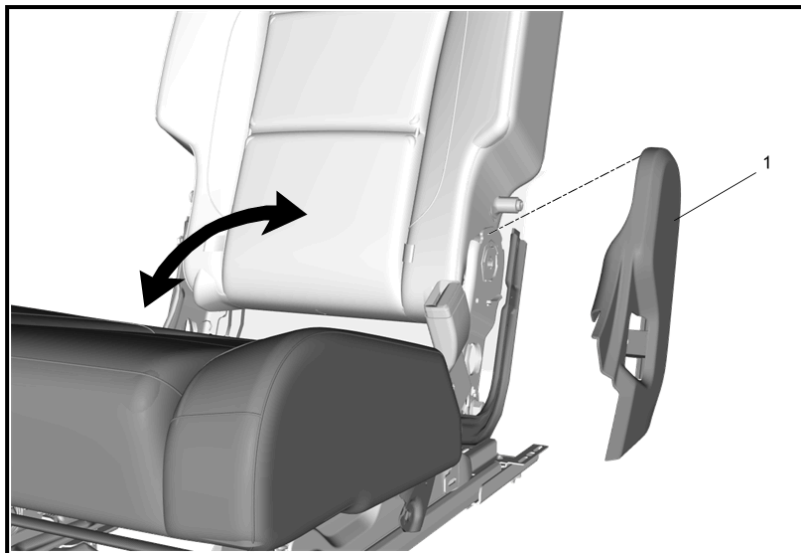


Rotate the seat cushion down.

13. Rear Seat Inner Hinge Finish Cover - Inner (1) - Remove

Installation Procedure


1.

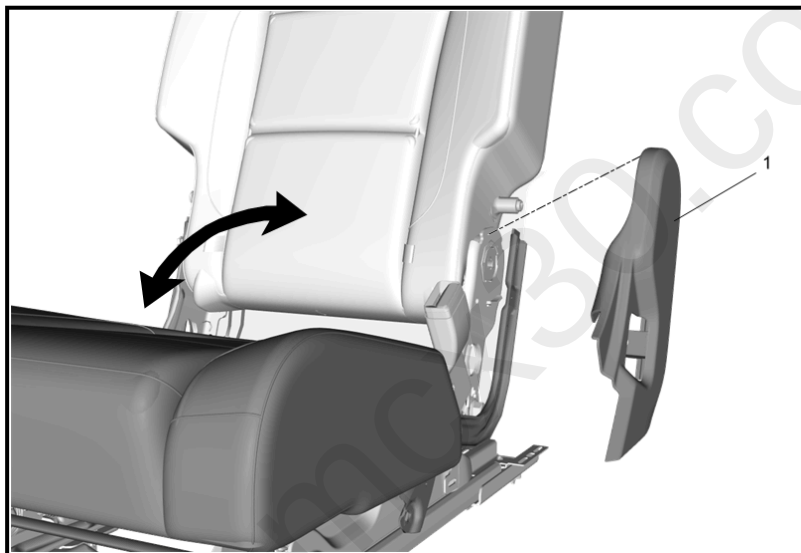

Rear Seat Inner Hinge Finish Cover - Inner (1) - Install

2. Rotate the seat cushion upward.

3.

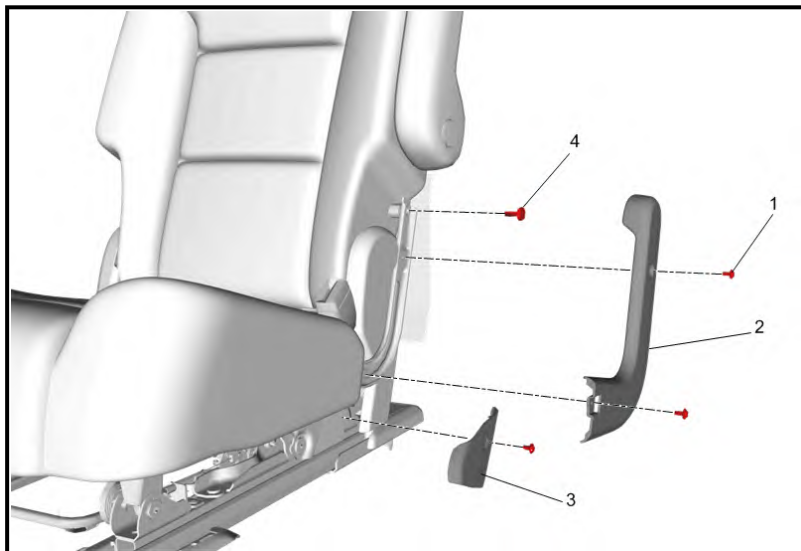


CAUTION: Refer to [Fastener Caution](#) .

Rear Seat Cushion Frame Bolt - Upper (4) - Install and tighten 32.5 N.m (24 lb ft)

4. Rear Seat Inner Hinge Finish Cover - Outer (2) - Install

5. Rear Seat Inner Hinge Finish Cover - Front (3) - Install

6. Rear Seat Inner Hinge Finish Cover Fastener (1) - Install and tighten [3x] 2.5 N.m (22 lb in)

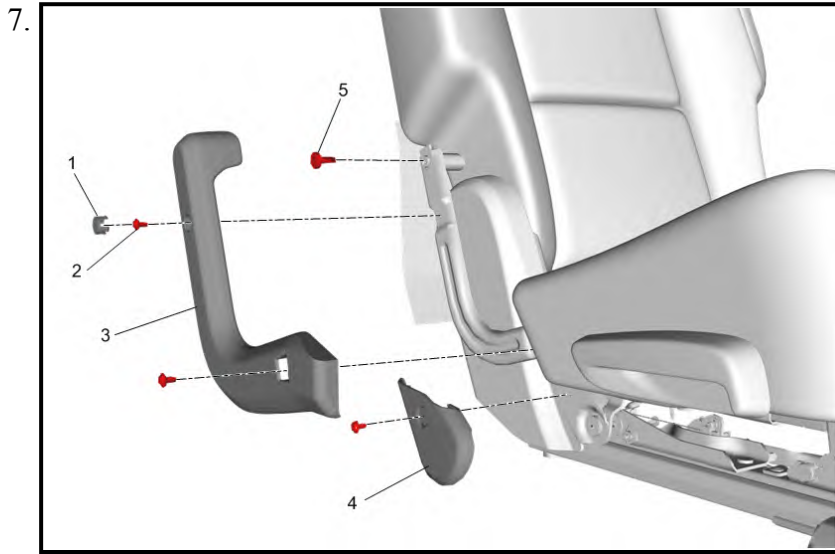


Rear Seat Cushion Frame Bolt - Upper (5) - Install and tighten 32.5 N.m (24 lb ft)

8. Rear Seat Outer Hinge Finish Cover - Front (4) - Install

9. Rear Seat Outer Hinge Finish Cover - Outer (3) - Install


10. Rear Seat Outer Hinge Finish Cover Fastener (2) - Install and tighten [3x] 2.5 N.m (22 lb in)

11. Rear Seat Outer Hinge Finish Cover Cap (1) - Install

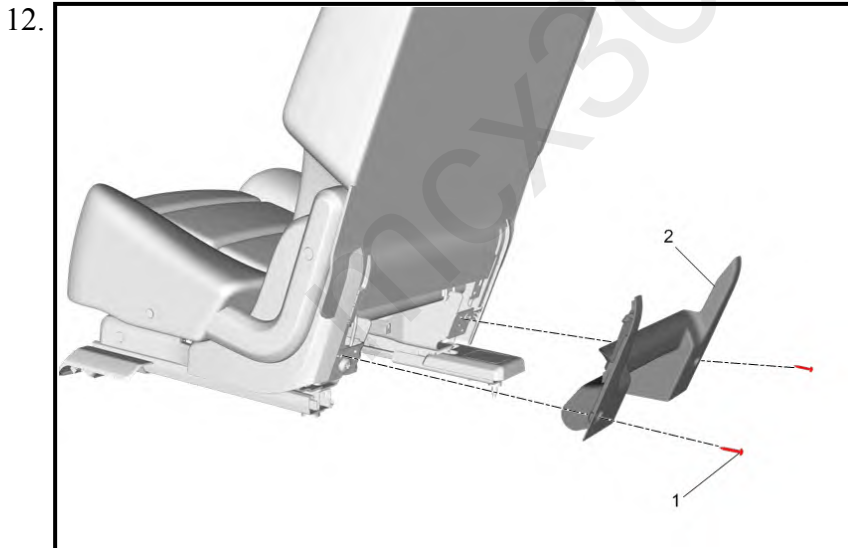

Rear Seat Back Center Bar Front Finish Cover (2) - Install - **Rear Seat Back Center Bar Front Finish Cover Replacement (40%)**



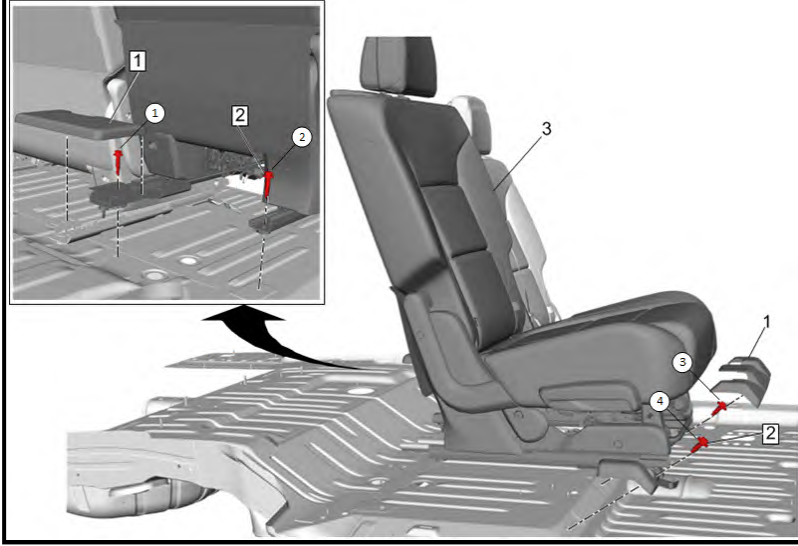


Rear Seat (3) - Install - [Rear Seat Removal and Installation \(40%\)](#)

REAR SEAT INNER HINGE FINISH COVER REPLACEMENT (60%)


Removal Procedure




Rear Seat (3) - Remove - [Rear Seat Removal and Installation \(60%\)](#)

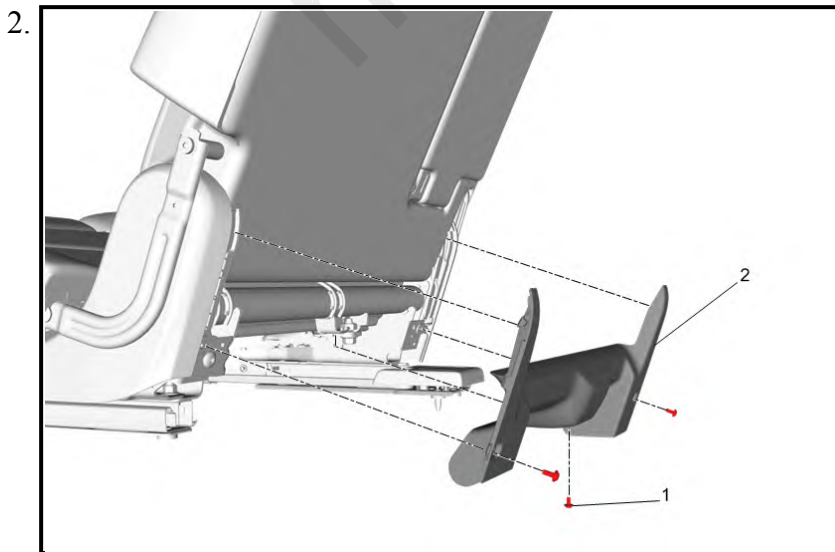


Rear Seat Back Center Bar Front Finish Cover (2) - Remove - [Rear Seat Back Center Bar Front Finish Cover Replacement \(60%\)](#)

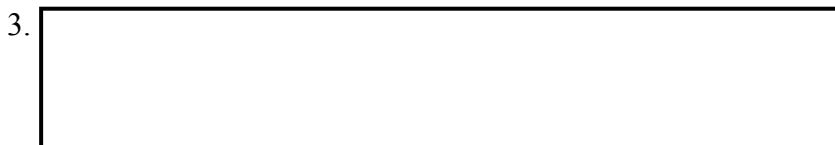

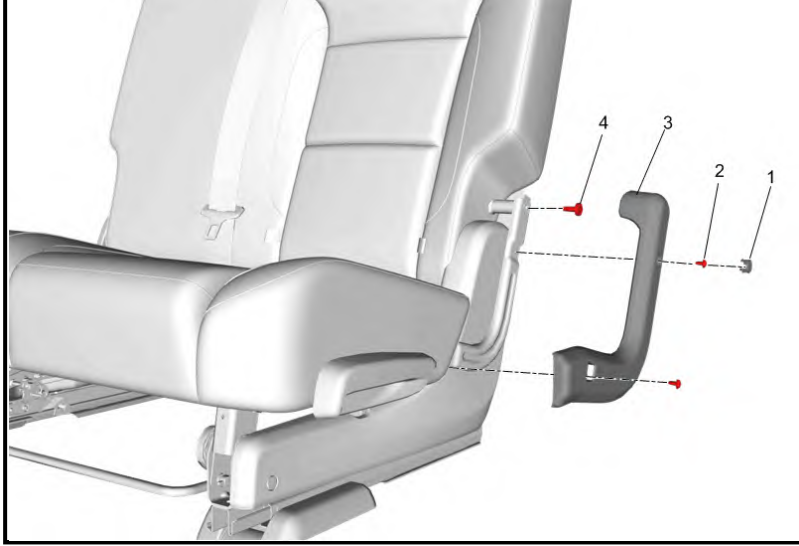


Rear Seat Outer Hinge Finish Cover Cap (1) - Remove

4. Rear Seat Outer Hinge Finish Cover Fastener (2) - Remove [2x]
5. Rear Seat Outer Hinge Finish Cover - Outer (3) - Remove
6. Rear Seat Cushion Frame Bolt - Upper (4) - Remove

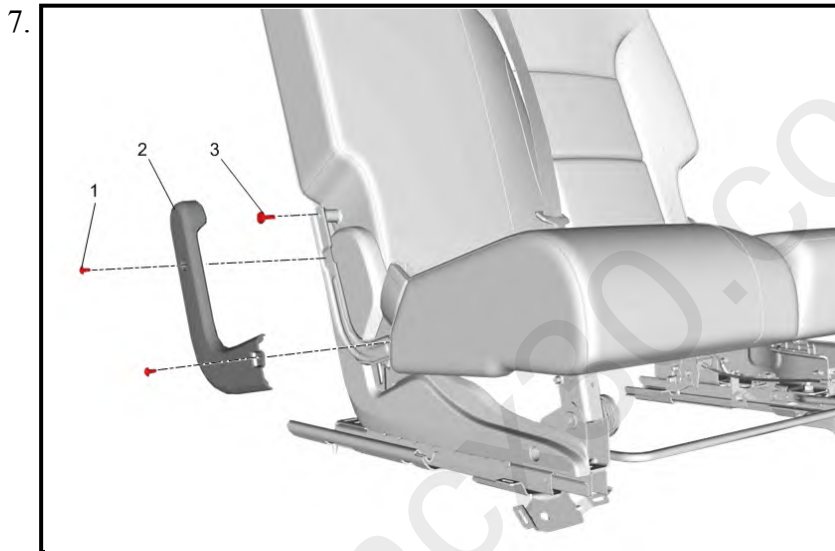

Rear Seat Inner Hinge Finish Cover Fastener (1) - Remove [2x]


8. Rear Seat Inner Hinge Finish Cover - Outer (2) - Remove
9. Rear Seat Cushion Frame Bolt - Upper (3) - Remove

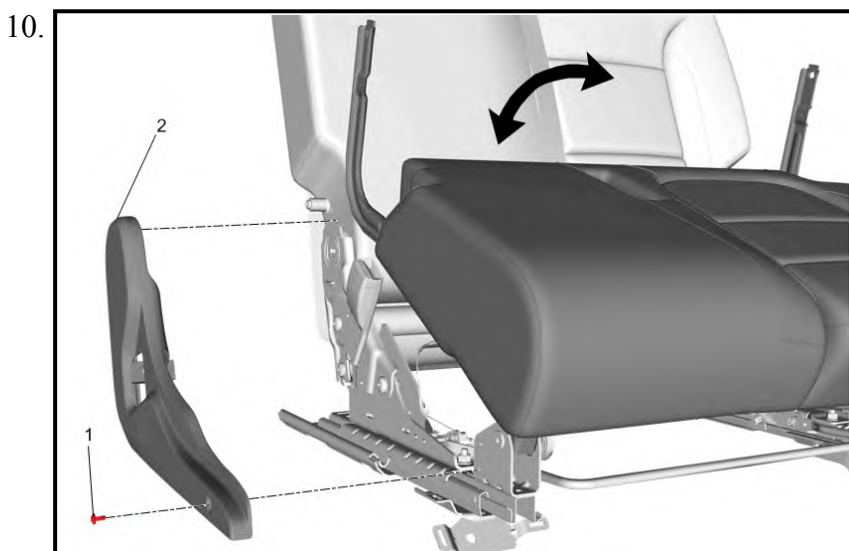

Rotate the seat cushion upward.

11. Rear Seat Inner Hinge Finish Cover Fastener (1) - Remove
12. Rear Seat Inner Hinge Finish Cover - Inner (2) - Remove


Installation Procedure

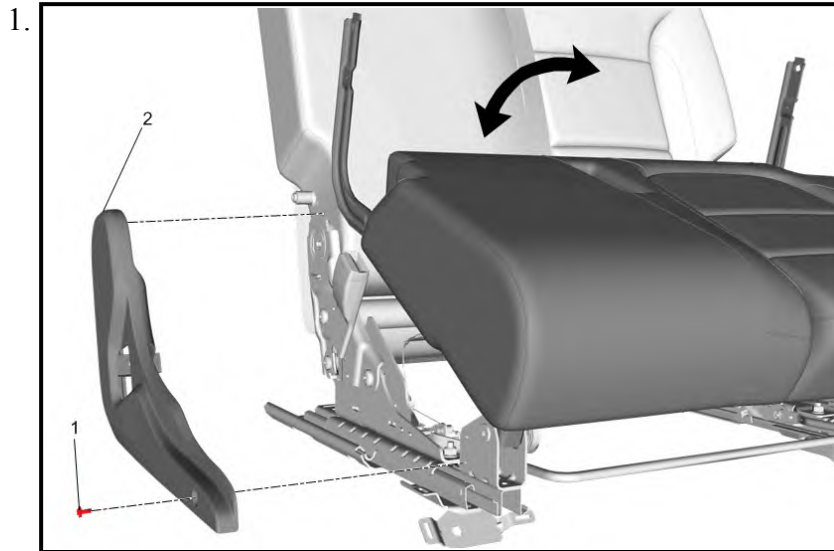

Rear Seat Inner Hinge Finish Cover - Inner (2) - Install

CAUTION: Refer to [Fastener Caution](#) .


2. Rear Seat Inner Hinge Finish Cover Fastener (1) - Install and tighten 2.5 N.m (22 lb in)
3. Rotate the seat cushion down.

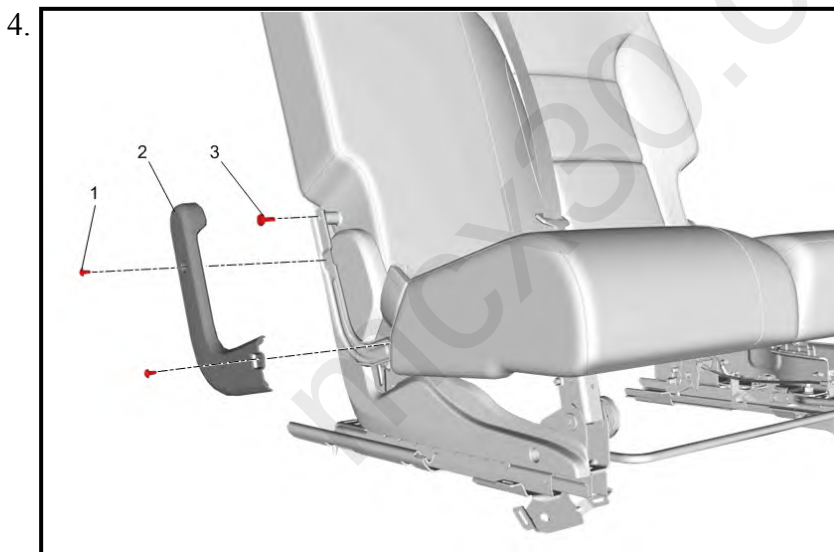

Rear Seat Cushion Frame Bolt - Upper (3) - Install and tighten 32.5 N.m (24 lb ft)

5. Rear Seat Inner Hinge Finish Cover - Outer (2) - Install
6. Rear Seat Inner Hinge Finish Cover Fastener (1) - Install and tighten [2x] 2.5 N.m (22 lb in)



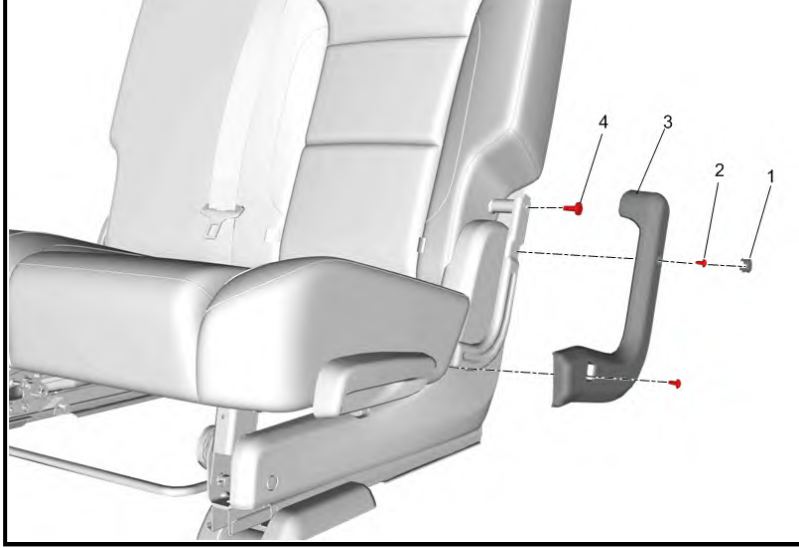


Rear Seat Cushion Frame Bolt - Upper (4) - Install and tighten 32.5 N.m (24 lb ft)

8. Rear Seat Outer Hinge Finish Cover - Outer (3) - Install

9. Rear Seat Outer Hinge Finish Cover Fastener (2) - Install and tighten [2x] 2.5 N.m (22 lb in)

10. Rear Seat Outer Hinge Finish Cover Cap (1) - Install

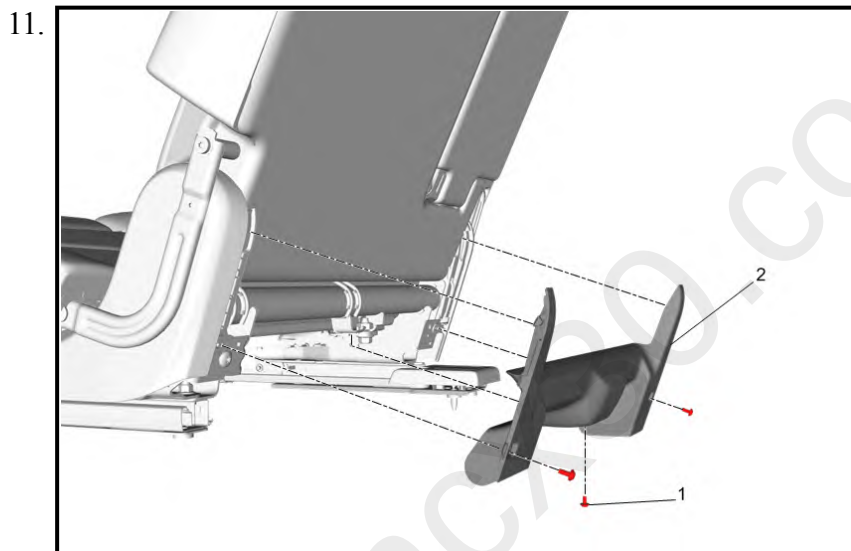


Rear Seat Back Center Bar Front Finish Cover (2) - Install - [Rear Seat Back Center Bar Front Finish Cover Replacement \(60%\)](#)




Rear Seat (3) - Install - [Rear Seat Removal and Installation \(60%\)](#)

REAR SEAT INNER HINGE FINISH COVER REPLACEMENT (LEFT BUCKET)


Removal Procedure

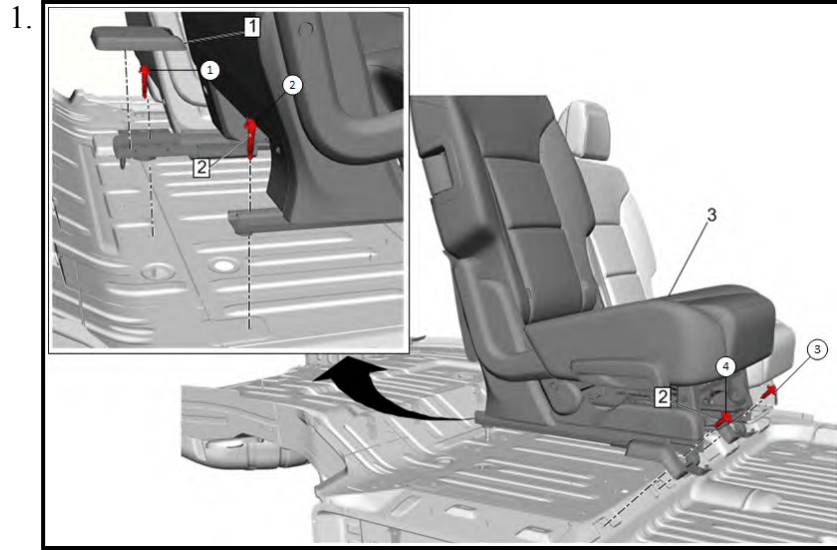

Rear Seat (3) - Remove - [Rear Seat Removal and Installation \(Bucket\)](#)

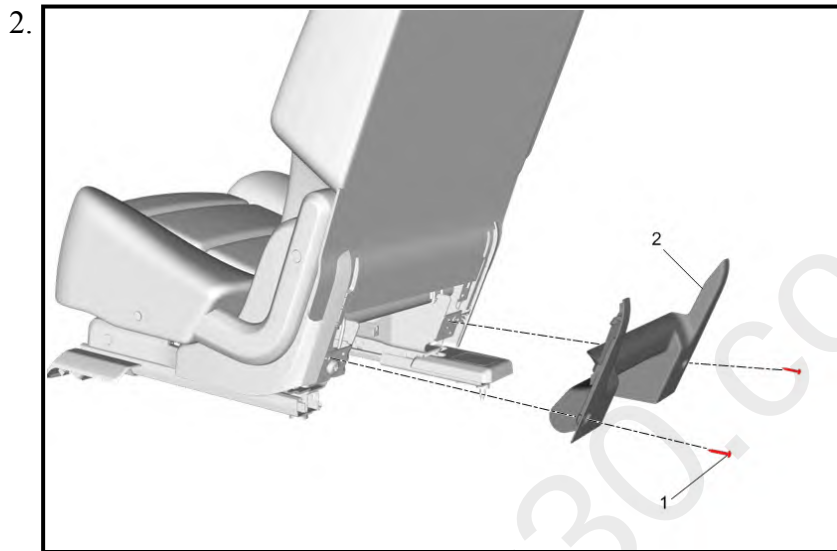

Rear Seat Back Center Bar Front Finish Cover (2) - Remove - [Rear Seat Back Center Bar Front Finish Cover Replacement \(Bucket\)](#)

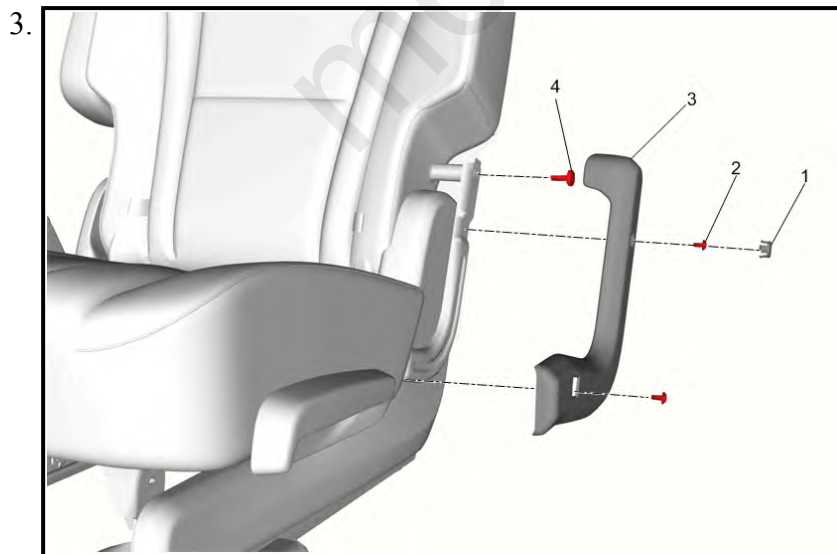



Rear Seat Outer Hinge Finish Cover Cap (1) - Remove

4. Rear Seat Outer Hinge Finish Cover Fastener (2) - Remove [2x]

5. Rear Seat Outer Hinge Finish Cover - Outer (3) - Remove

 6. Rear Seat Cushion Frame Bolt - Upper (4) - Remove




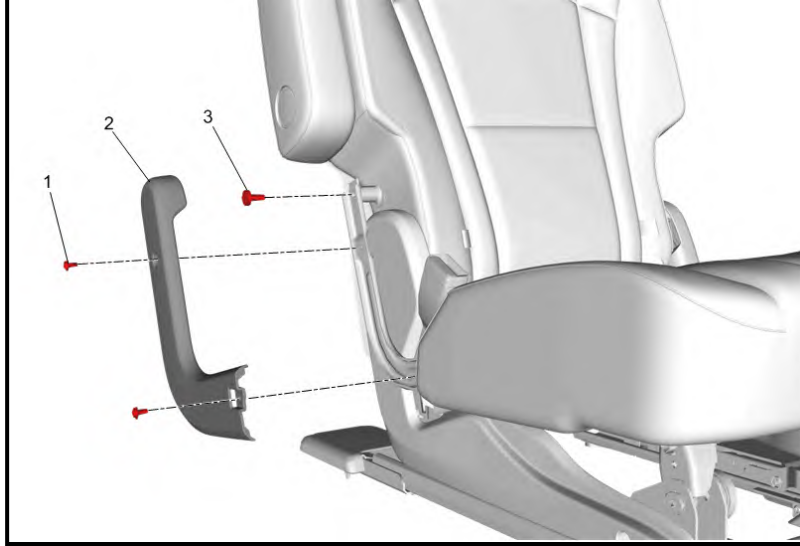

Rear Seat Inner Hinge Finish Cover Fastener (1) - Remove [2x]

8. Rear Seat Inner Hinge Finish Cover - Outer (2) - Remove

9. Rear Seat Cushion Frame Bolt - Upper (3) - Remove

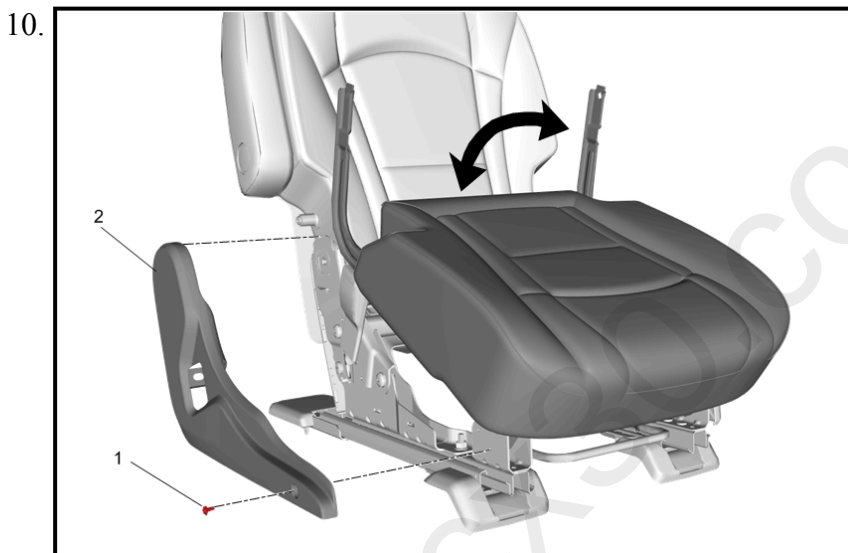


Rotate the seat cushion upward.

11. Rear Seat Inner Hinge Finish Cover Fastener (1) - Remove

12. Rear Seat Inner Hinge Finish Cover - Inner (2) - Remove


Installation Procedure

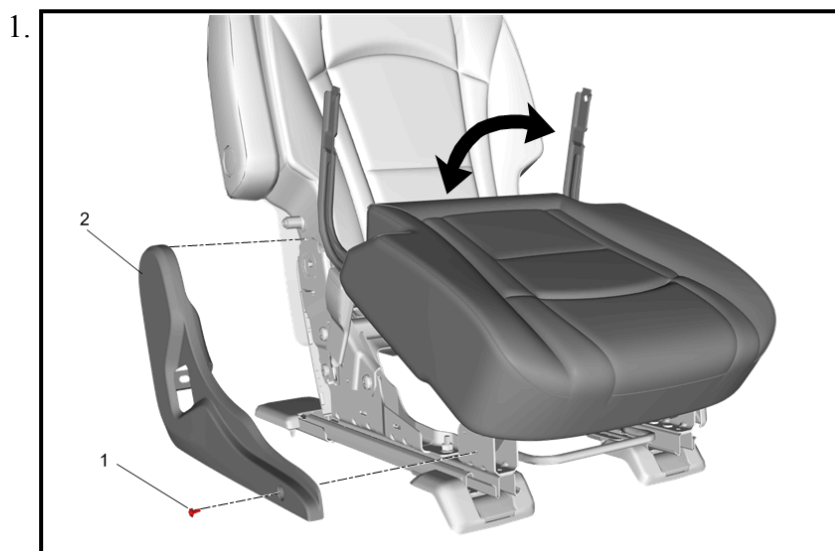

Rear Seat Inner Hinge Finish Cover - Inner (2) - Install


CAUTION: Refer to [Fastener Caution](#).

2. Rear Seat Inner Hinge Finish Cover Fastener (1) - Install and tighten 2.5 N.m (22 lb in)
3. Rotate the seat cushion down.

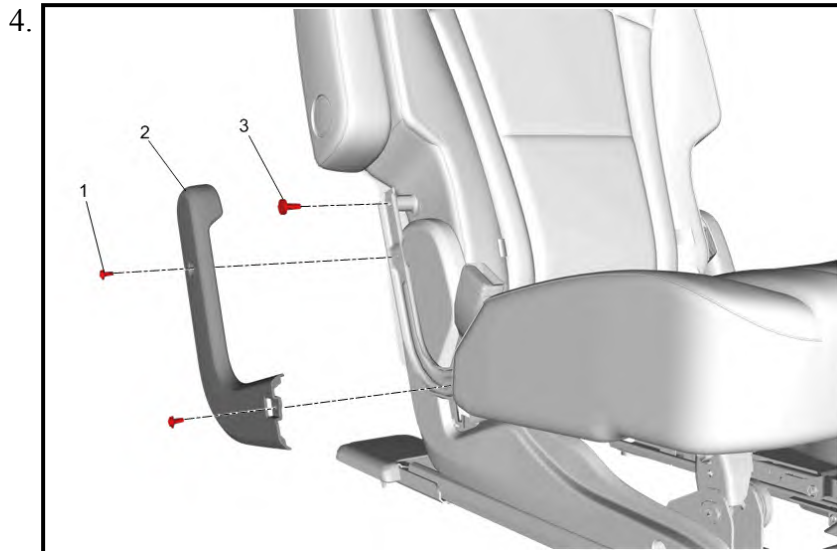

Rear Seat Cushion Frame Bolt - Upper (3) - Install and tighten 32.5 N.m (24 lb ft)


5. Rear Seat Inner Hinge Finish Cover - Outer (2) - Install
6. Rear Seat Inner Hinge Finish Cover Fastener (1) - Install and tighten [2x] 2.5 N.m (22 lb in)

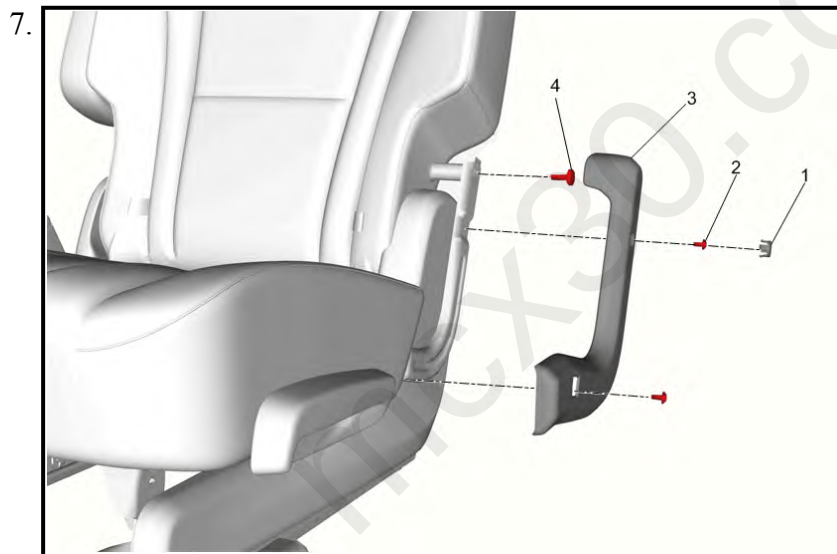


Rear Seat Cushion Frame Bolt - Upper (4) - Install and tighten 32.5 N.m (24 lb ft)

8. Rear Seat Outer Hinge Finish Cover - Outer (3) - Install
9. Rear Seat Outer Hinge Finish Cover Fastener (2) - Install and tighten [2x] 2.5 N.m (22 lb in)
10. Rear Seat Outer Hinge Finish Cover Cap (1) - Install



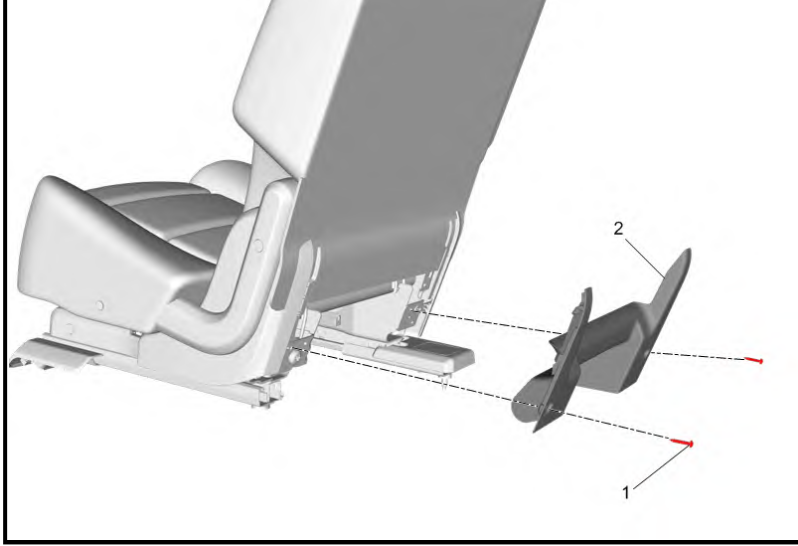


Rear Seat Back Center Bar Front Finish Cover (2) - Install - [Rear Seat Back Center Bar Front Finish Cover Replacement \(Bucket\)](#)

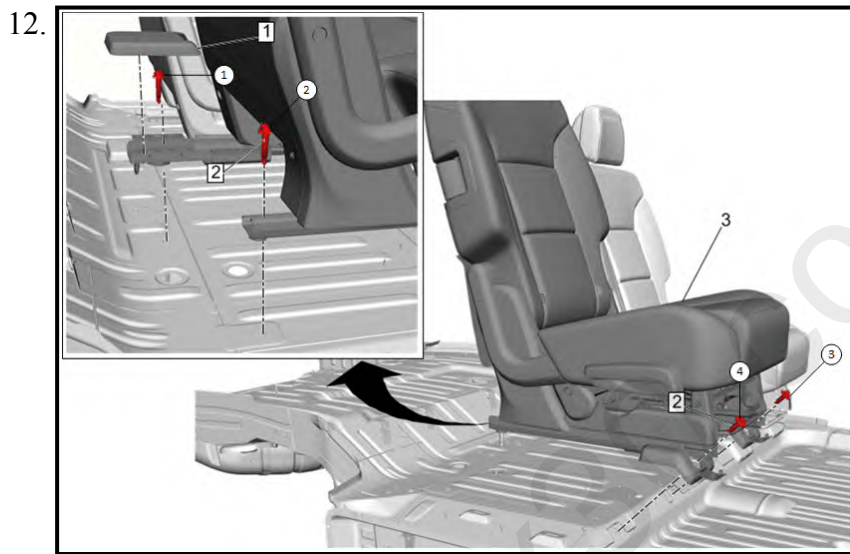


Rear Seat (3) - Install - [Rear Seat Removal and Installation \(Bucket\)](#)


REAR SEAT INNER HINGE FINISH COVER REPLACEMENT (RIGHT BUCKET)

Removal Procedure

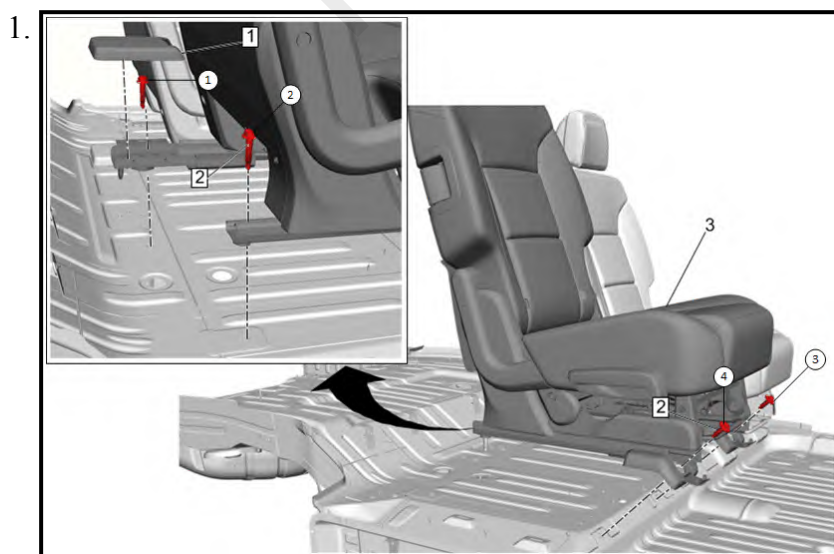


Rear Seat (3) - Remove - [Rear Seat Removal and Installation \(Bucket\)](#)

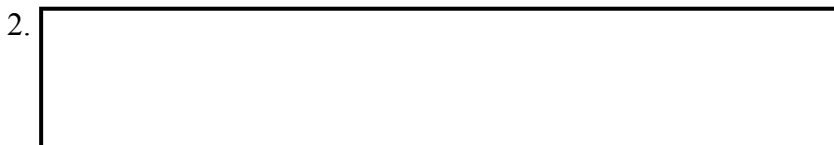

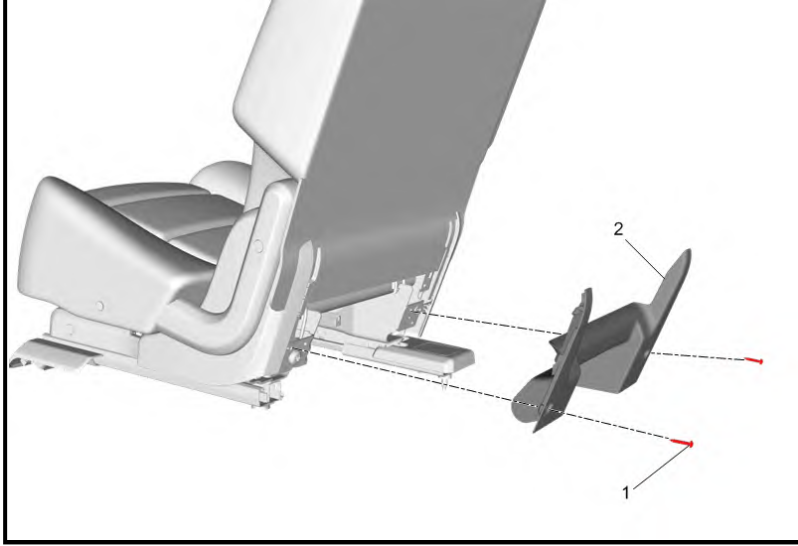

Rear Seat Back Center Bar Front Finish Cover (2) - Remove - [Rear Seat Back Center Bar Front Finish Cover Replacement \(Bucket\)](#)

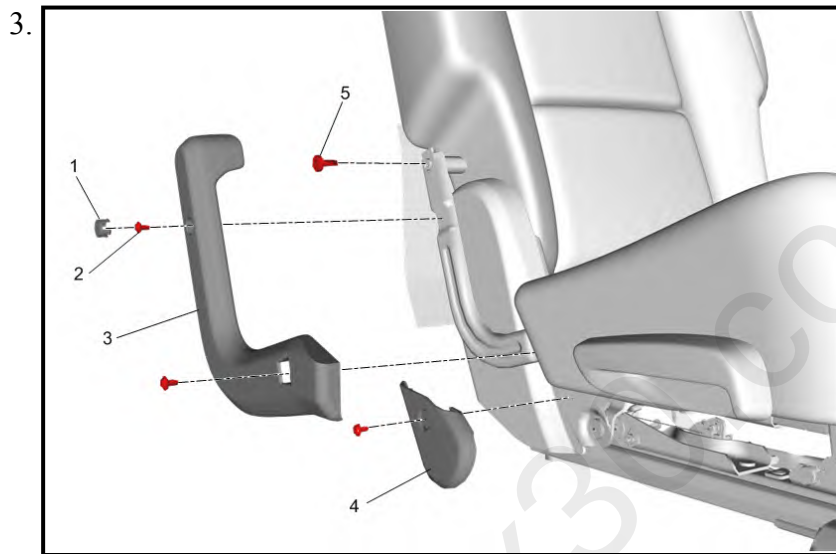


Rear Seat Outer Hinge Finish Cover Cap (1) - Remove

4. Rear Seat Outer Hinge Finish Cover Fastener (2) - Remove [3x]

5. Rear Seat Outer Hinge Finish Cover - Outer (3) - Remove

6. Rear Seat Outer Hinge Finish Cover - Front (4) - Remove

7. Rear Seat Cushion Frame Bolt - Upper (5) - Remove

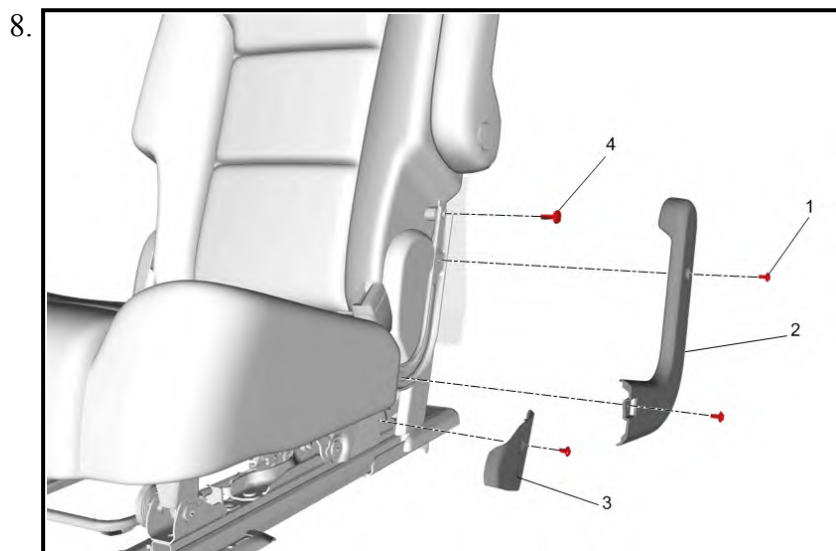


Rear Seat Inner Hinge Finish Cover Fastener (1) - Remove [3x]

9. Rear Seat Inner Hinge Finish Cover - Outer (2) - Remove

10. Rear Seat Inner Hinge Finish Cover - Front (3) - Remove


11. Rear Seat Cushion Frame Bolt - Upper (4) - Remove

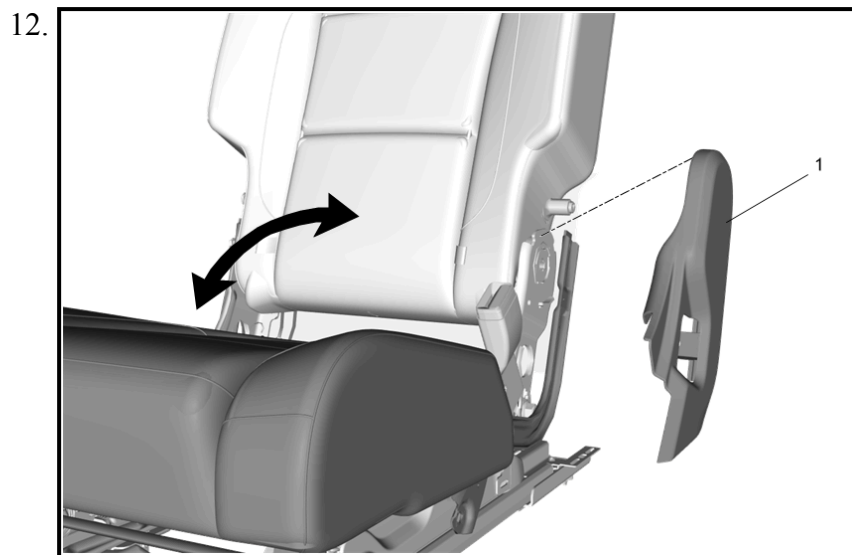

Rotate the seat cushion down.


13. Rear Seat Inner Hinge Finish Cover - Inner (1) - Remove

Installation Procedure

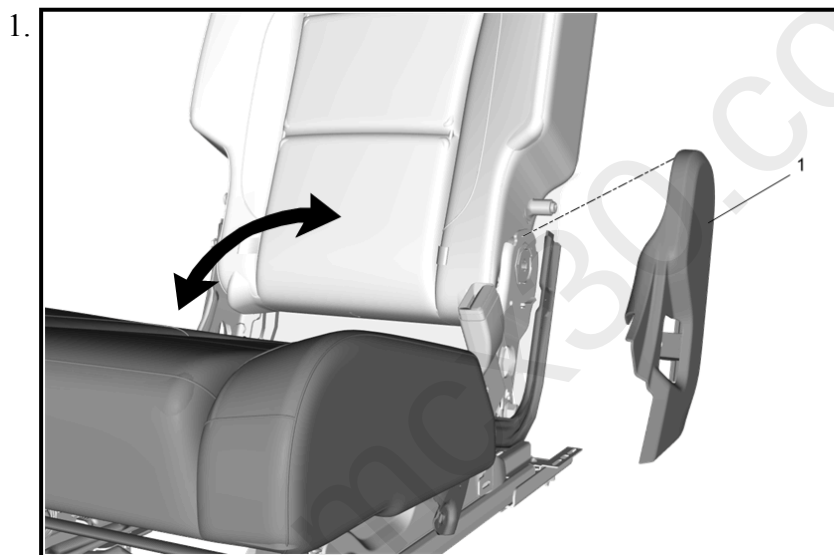

Rear Seat Inner Hinge Finish Cover - Inner (1) - Install

2. Rotate the seat cushion upward.

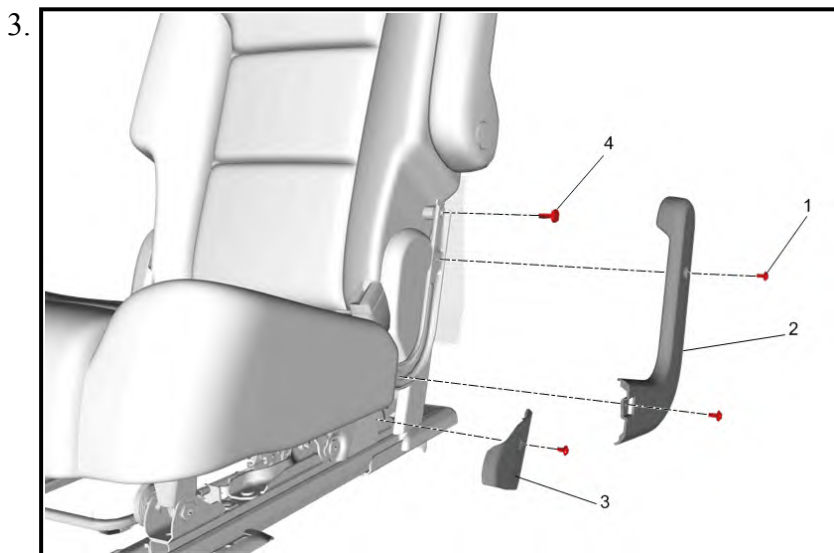


CAUTION: Refer to [Fastener Caution](#) .

Rear Seat Cushion Frame Bolt - Upper (4) - Install and tighten 32.5 N.m (24 lb ft)

4. Rear Seat Inner Hinge Finish Cover - Outer (2) - Install

5. Rear Seat Inner Hinge Finish Cover - Front (3) - Install

6. Rear Seat Inner Hinge Finish Cover Fastener (1) - Install and tighten [3x] 2.5 N.m (22 lb in)

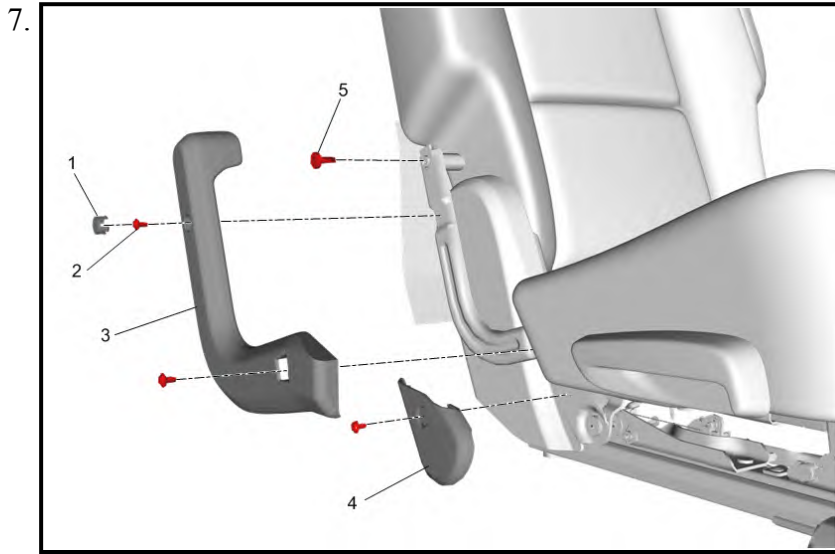


Rear Seat Cushion Frame Bolt - Upper (5) - Install and tighten 32.5 N.m (24 lb ft)

8. Rear Seat Outer Hinge Finish Cover - Front (4) - Install


9. Rear Seat Outer Hinge Finish Cover - Outer (3) - Install


10. Rear Seat Outer Hinge Finish Cover Fastener (2) - Install and tighten [3x] 2.5 N.m (22 lb in)

11. Rear Seat Outer Hinge Finish Cover Cap (1) - Install

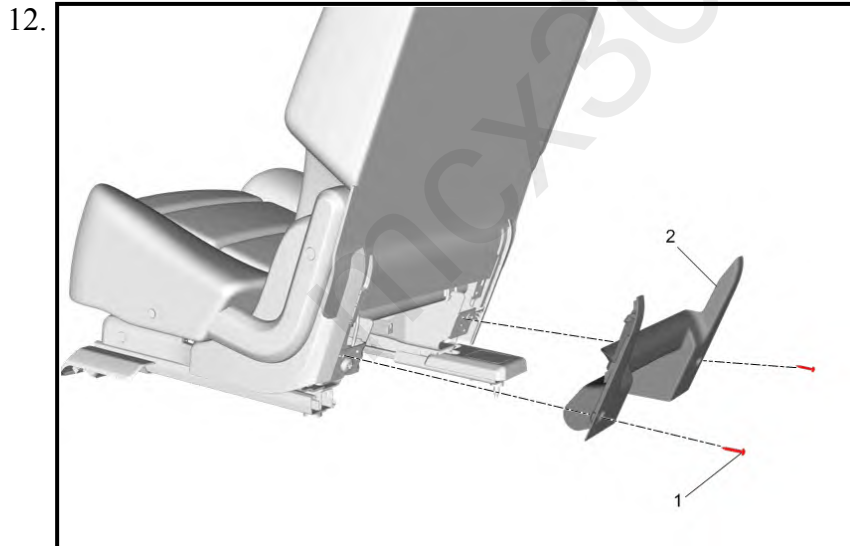

 Rear Seat Back Center Bar Front Finish Cover (2) - Install - **Rear Seat Back Center Bar Front Finish Cover Replacement (Bucket)**




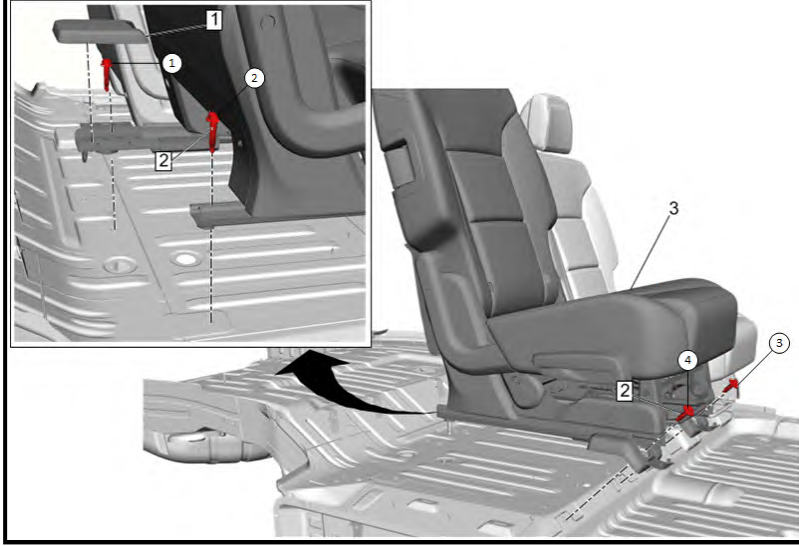


Rear Seat (3) - Install - [Rear Seat Removal and Installation \(Bucket\)](#)

REAR SEAT OUTER HINGE FINISH COVER REPLACEMENT (40%)


Removal Procedure

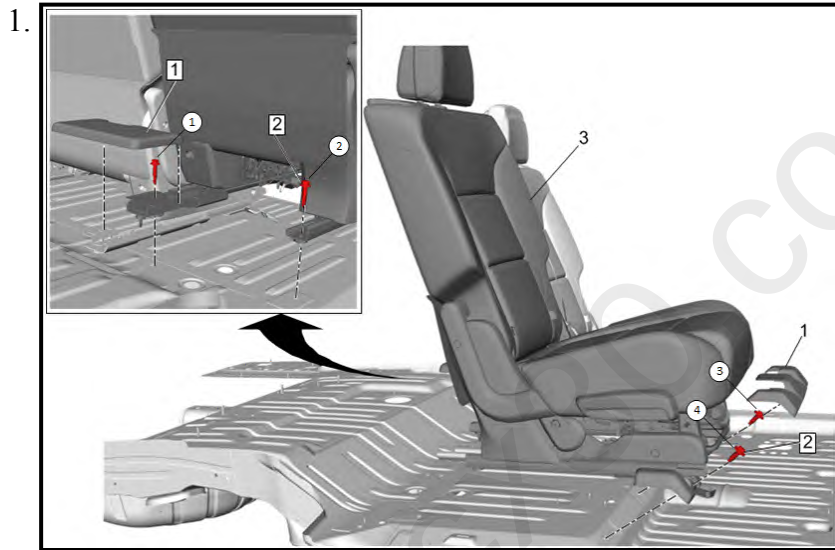


Rear Seat (3) - Remove - [Rear Seat Removal and Installation \(40%\)](#)

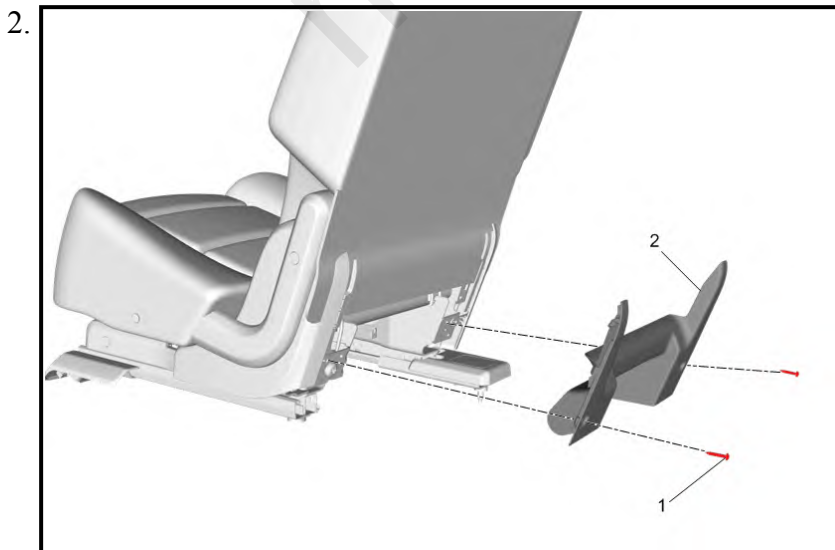

Rear Seat Back Center Bar Front Finish Cover (2) - Remove - [Rear Seat Back Center Bar Front Finish Cover Replacement \(40%\)](#)

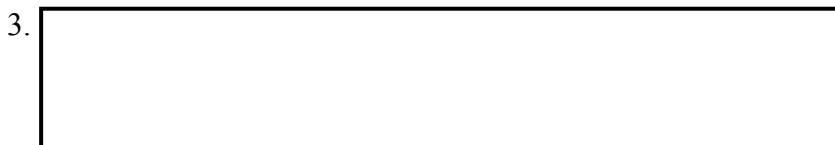

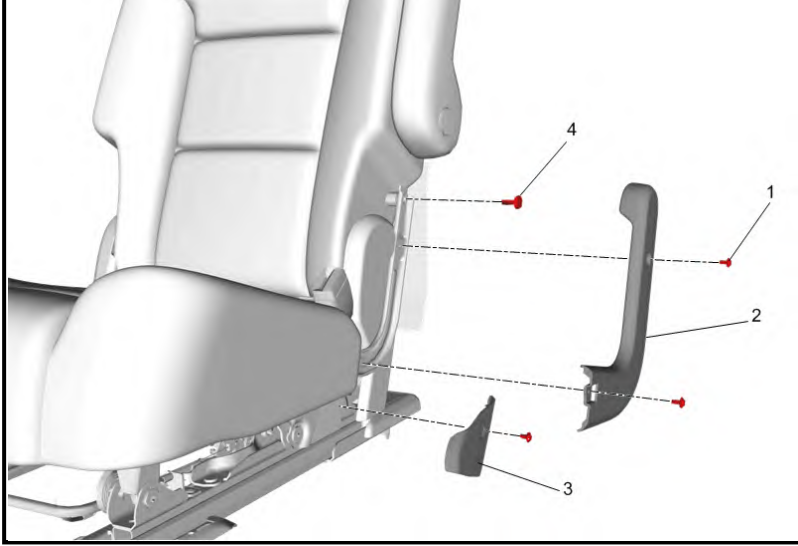


Rear Seat Inner Hinge Finish Cover Fastener (1) - Remove [3x]

4. Rear Seat Inner Hinge Finish Cover - Outer (2) - Remove

5. Rear Seat Inner Hinge Finish Cover - Front (3) - Remove

6. Rear Seat Cushion Frame Bolt - Upper (4) - Remove

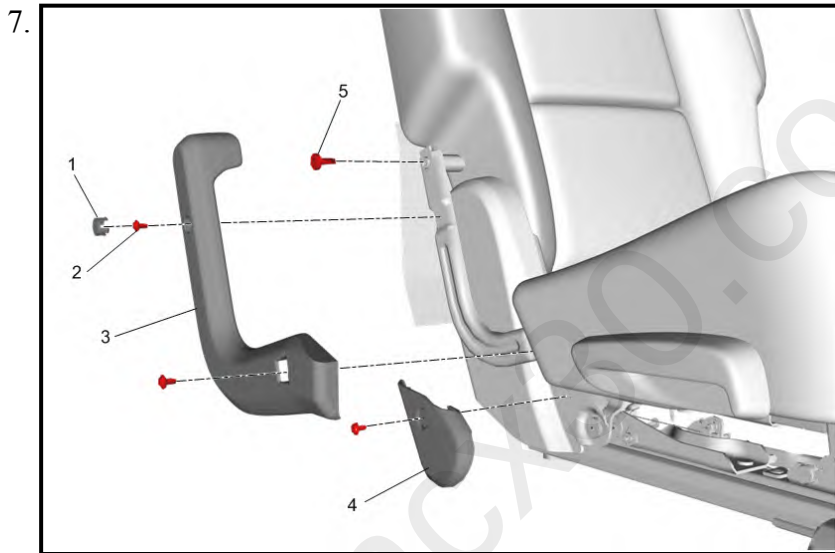


Rear Seat Outer Hinge Finish Cover Cap (1) - Remove

8. Rear Seat Outer Hinge Finish Cover Fastener (2) - Remove [3x]

9. Rear Seat Outer Hinge Finish Cover - Outer (3) - Remove

10. Rear Seat Outer Hinge Finish Cover - Front (4) - Remove


11. Rear Seat Cushion Frame Bolt - Upper (5) - Remove

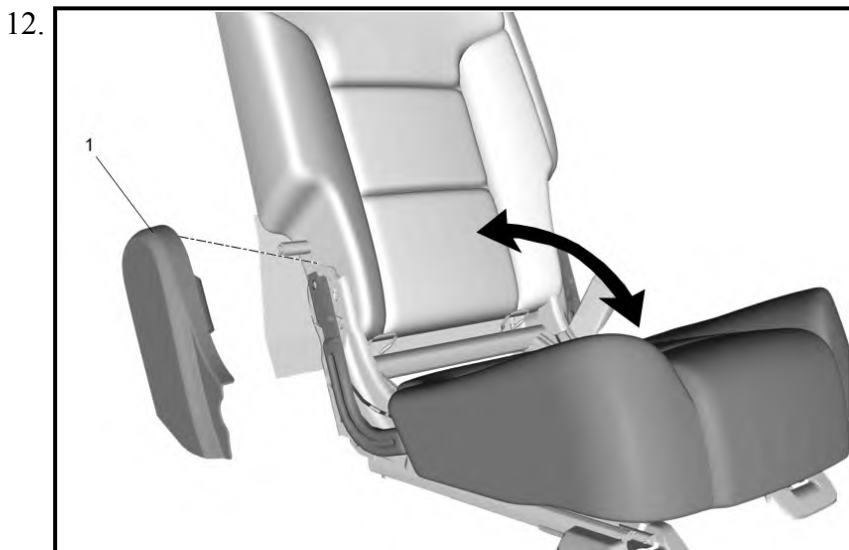

Rotate the seat cushion down.


13. Rear Seat Outer Hinge Finish Cover - Inner (1) - Remove

Installation Procedure

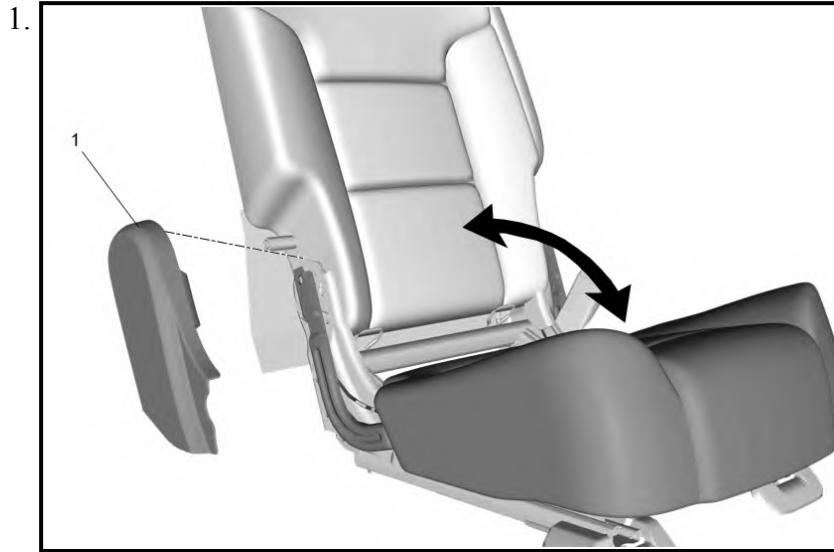

Rear Seat Outer Hinge Finish Cover - Inner (1) - Install

2. Rotate the seat cushion upward.

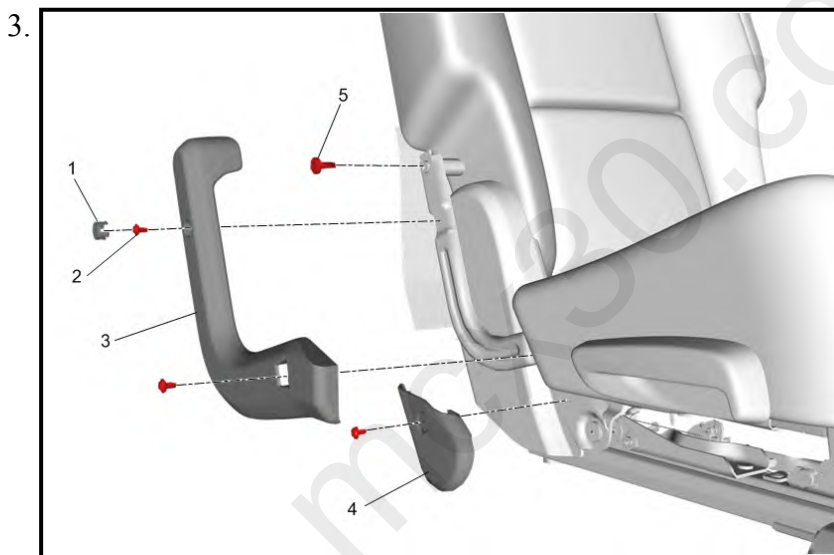

CAUTION: Refer to [Fastener Caution](#) .

Rear Seat Cushion Frame Bolt - Upper (5) - Install and tighten 32.5 N.m (24 lb ft)


4. Rear Seat Outer Hinge Finish Cover - Front (4) - Install

5. Rear Seat Outer Hinge Finish Cover - Outer (3) - Install

6. Rear Seat Outer Hinge Finish Cover Fastener (2) - Install and tighten [3x] 2.5 N.m (22 lb in)

7. Rear Seat Outer Hinge Finish Cover Cap (1) - Install



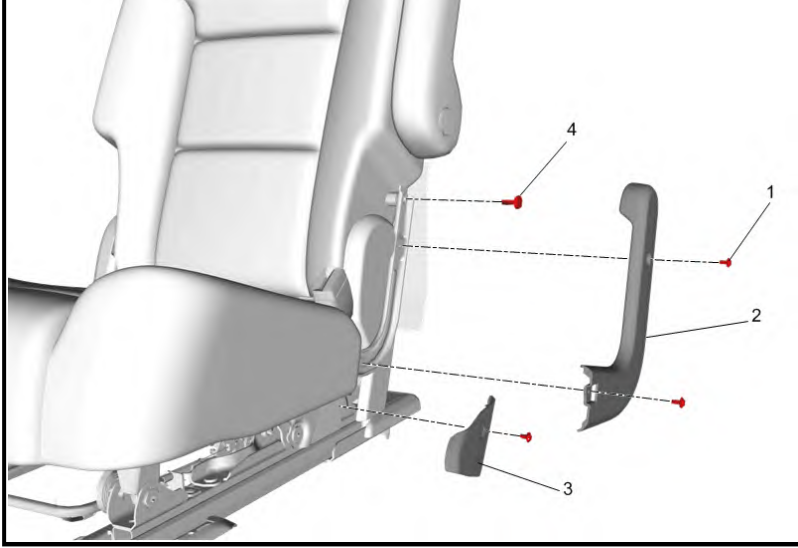


Rear Seat Cushion Frame Bolt - Upper (4) - Install and tighten 32.5 N.m (24 lb ft)


9. Rear Seat Inner Hinge Finish Cover - Outer (2) - Install

10. Rear Seat Inner Hinge Finish Cover - Front (3) - Install

11. Rear Seat Inner Hinge Finish Cover Fastener (1) - Install and tighten [3x] 2.5 N.m (22 lb in)

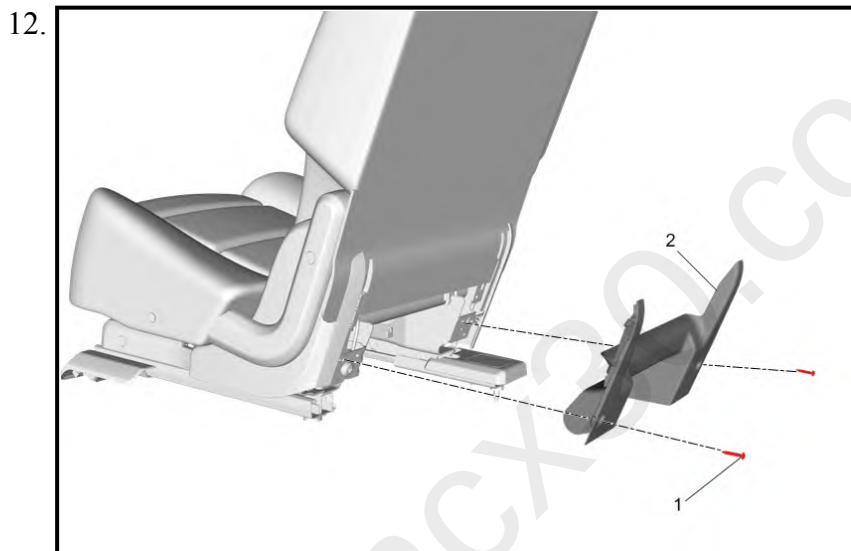

Rear Seat Back Center Bar Front Finish Cover (2) - Install - **Rear Seat Back Center Bar Front Finish Cover Replacement (40%)**

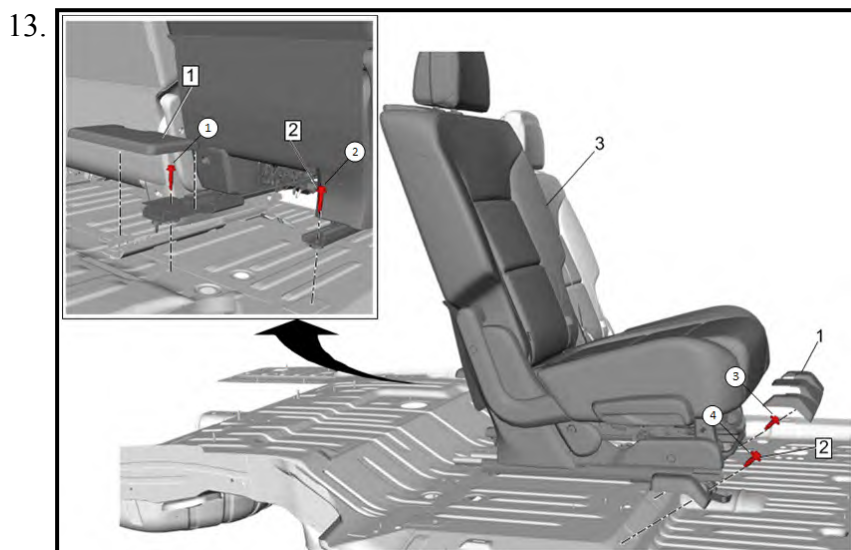


Rear Seat (3) - Install - **Rear Seat Removal and Installation (40%)**

REAR SEAT OUTER HINGE FINISH COVER REPLACEMENT (60%)


Removal Procedure



Rear Seat (3) - Remove - [Rear Seat Removal and Installation \(60%\)](#)

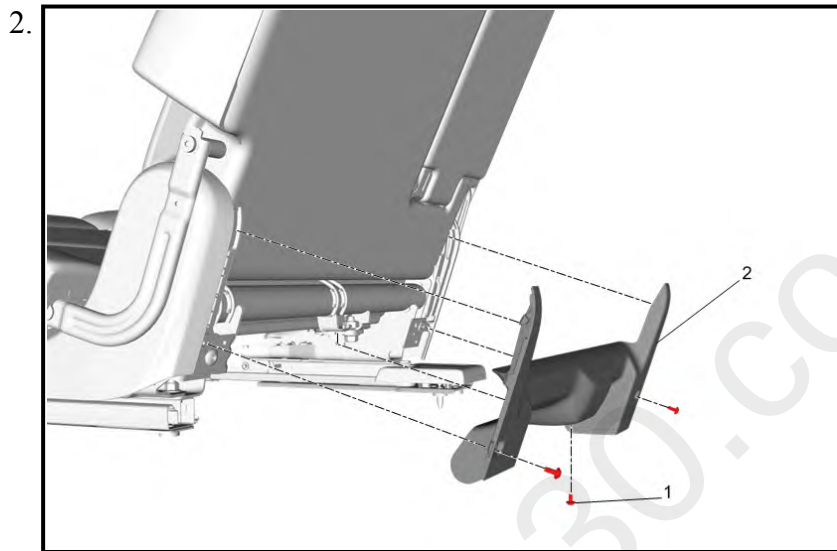

Rear Seat Back Center Bar Front Finish Cover (2) - Remove - [Rear Seat Back Center Bar Front Finish Cover Replacement \(60%\)](#)

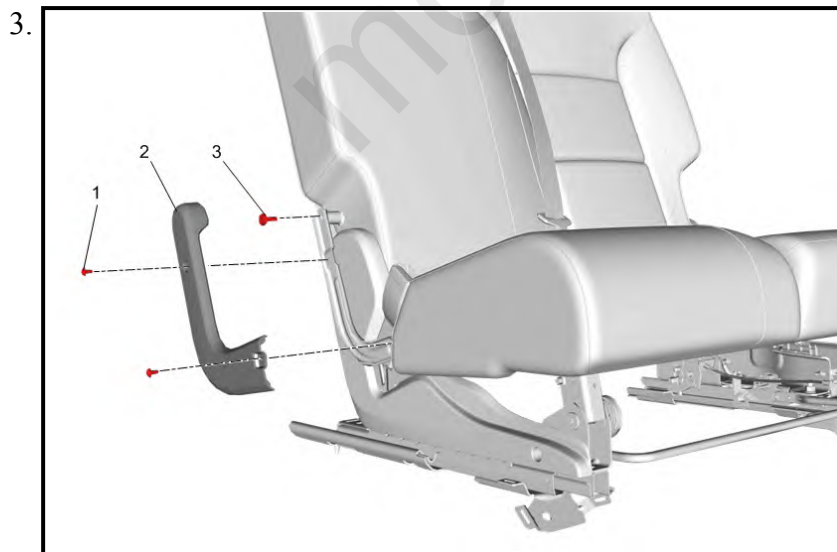


Rear Seat Inner Hinge Finish Cover Fastener (1) - Remove [2x]

4. Rear Seat Inner Hinge Finish Cover - Outer (2) - Remove

5. Rear Seat Cushion Frame Bolt - Upper (3) - Remove



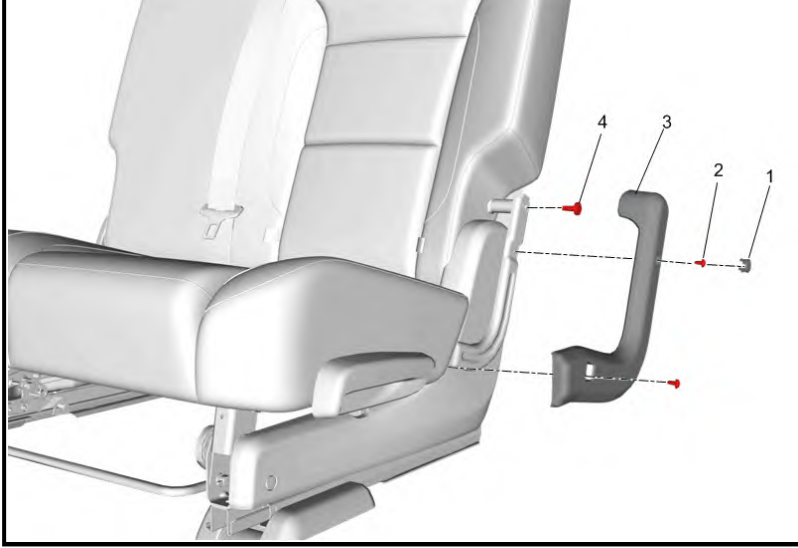


Rear Seat Outer Hinge Finish Cover Cap (1) - Remove

7. Rear Seat Outer Hinge Finish Cover Fastener (2) - Remove [2x]

8. Rear Seat Outer Hinge Finish Cover - Outer (3) - Remove

9. Rear Seat Cushion Frame Bolt - Upper (4) - Remove

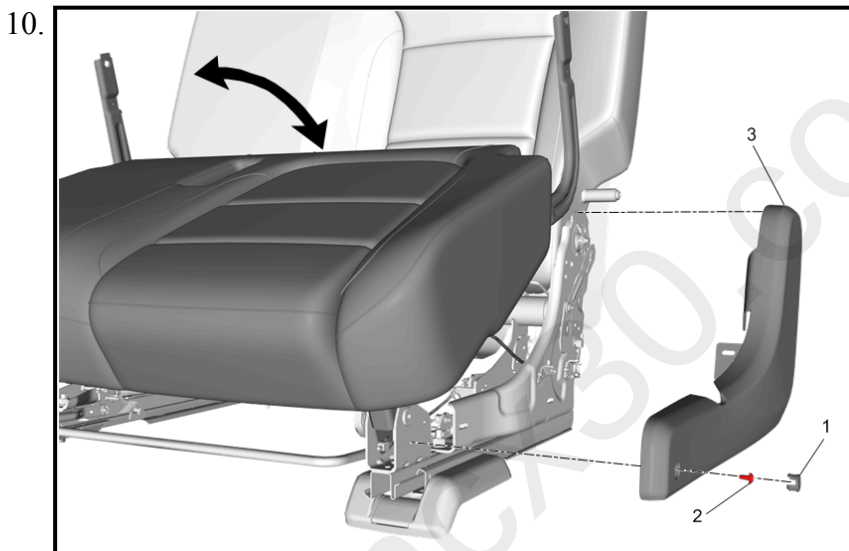


Rotate the seat cushion upward.

11. Rear Seat Outer Hinge Finish Cover Cap (1) - Remove

12. Rear Seat Outer Hinge Finish Cover Fastener (2) - Remove

13. Rear Seat Outer Hinge Finish Cover - Inner (3) - Remove

Installation Procedure

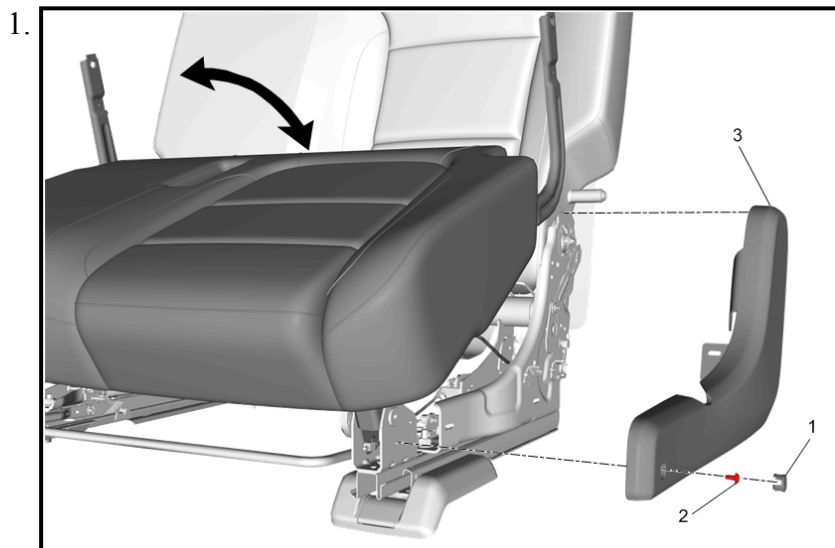

Rear Seat Outer Hinge Finish Cover - Inner (3) - Install


CAUTION: Refer to [Fastener Caution](#) .

2. Rear Seat Outer Hinge Finish Cover Fastener (2) - Install and tighten 2.5 N.m (22 lb in)
3. Rear Seat Outer Hinge Finish Cover Cap (1) - Install
4. Rotate the seat cushion down.



Rear Seat Cushion Frame Bolt - Upper (4) - Install and tighten 32.5 N.m (24 lb ft)


6. Rear Seat Outer Hinge Finish Cover - Outer (3) - Install
7. Rear Seat Outer Hinge Finish Cover Fastener (2) - Install and tighten [2x] 2.5 N.m (22 lb in)
8. Rear Seat Outer Hinge Finish Cover Cap (1) - Install

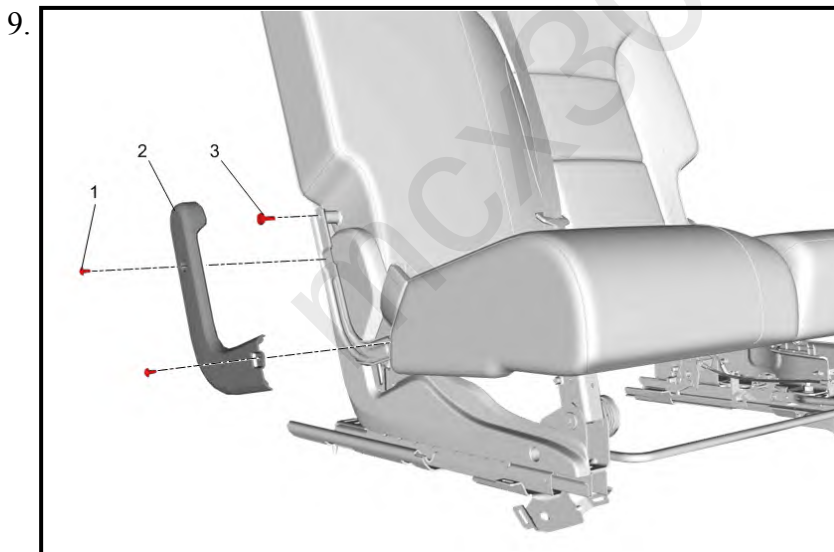

Rear Seat Cushion Frame Bolt - Upper (3) - Install and tighten 32.5 N.m (24 lb ft)

10. Rear Seat Inner Hinge Finish Cover - Outer (2) - Install
11. Rear Seat Inner Hinge Finish Cover Fastener (1) - Install and tighten [2x] 2.5 N.m (22 lb in)



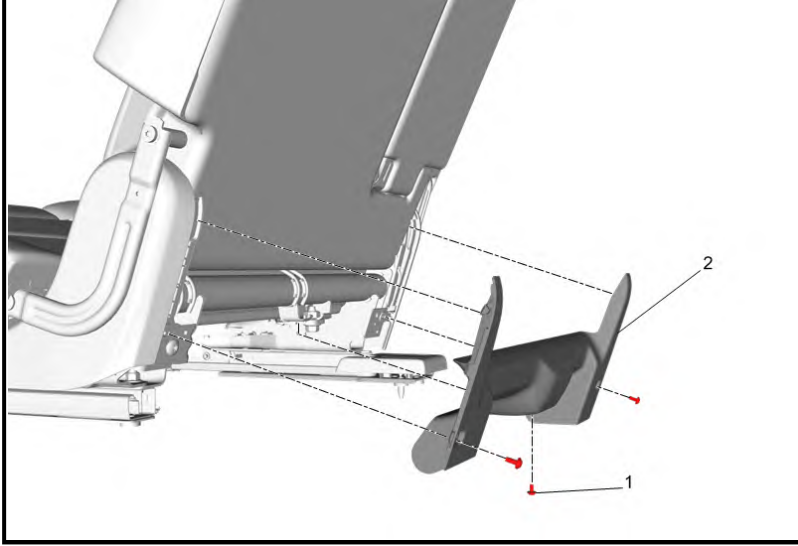


Rear Seat Back Center Bar Front Finish Cover (2) - Install - [Rear Seat Back Center Bar Front Finish Cover Replacement \(60%\)](#)




Rear Seat (3) - Install - [Rear Seat Removal and Installation \(60%\)](#)


REAR SEAT OUTER HINGE FINISH COVER REPLACEMENT (LEFT BUCKET)

Removal Procedure

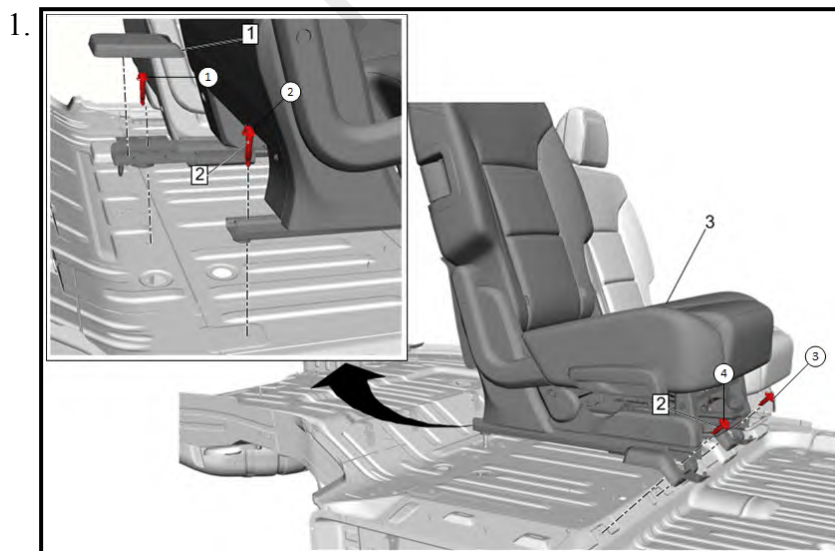


Rear Seat (3) - Remove - [Rear Seat Removal and Installation \(Bucket\)](#)

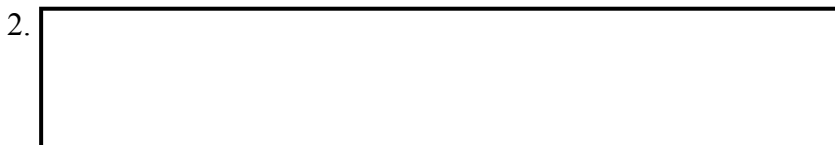

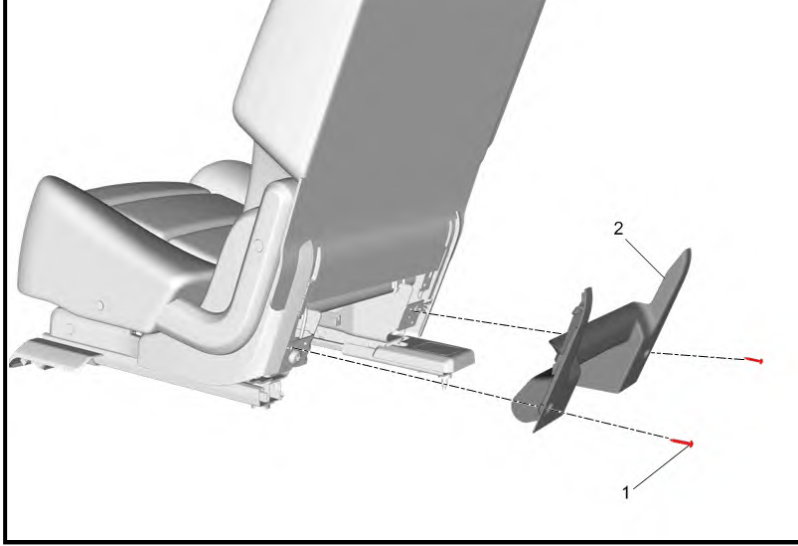


Rear Seat Back Center Bar Front Finish Cover (2) - Remove - [Rear Seat Back Center Bar Front Finish Cover Replacement \(Bucket\)](#)

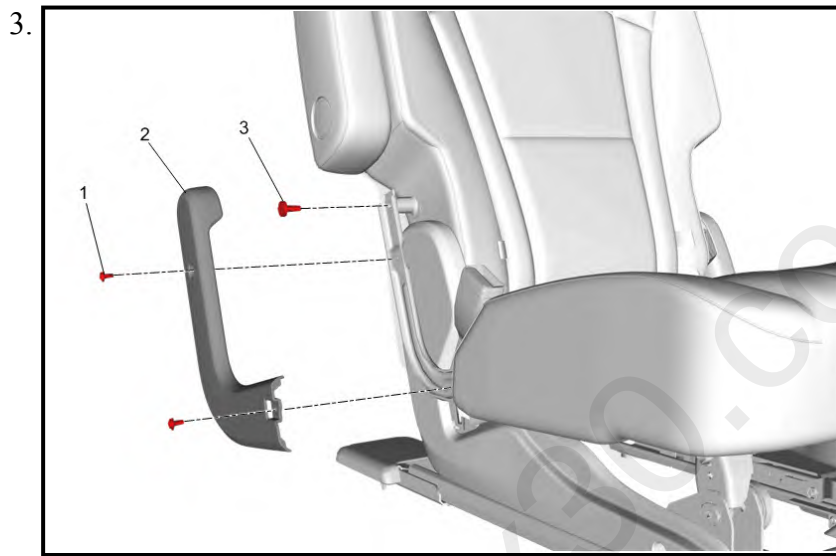

Rear Seat Inner Hinge Finish Cover Fastener (1) - Remove [2x]

4. Rear Seat Inner Hinge Finish Cover - Outer (2) - Remove

5. Rear Seat Cushion Frame Bolt - Upper (3) - Remove

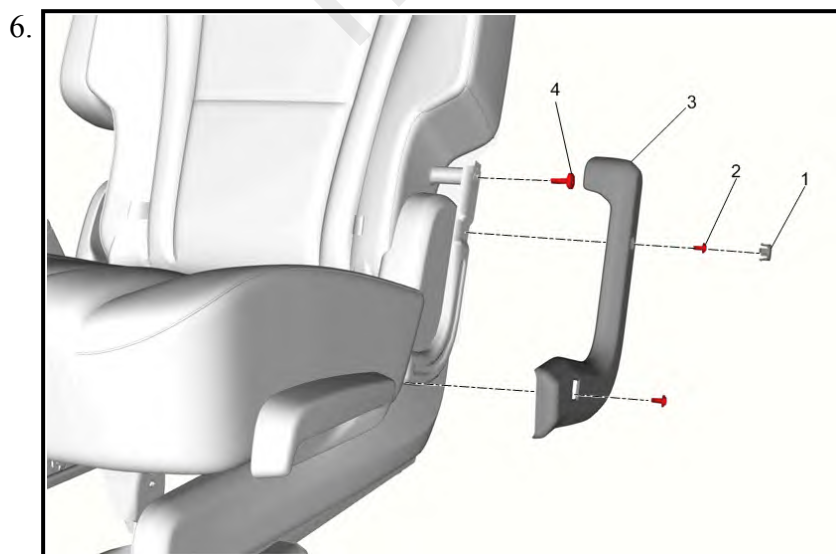


Rear Seat Outer Hinge Finish Cover Cap (1) - Remove

7. Rear Seat Outer Hinge Finish Cover Fastener (2) - Remove [2x]

8. Rear Seat Outer Hinge Finish Cover - Outer (3) - Remove

9. Rear Seat Cushion Frame Bolt - Upper (4) - Remove

10.

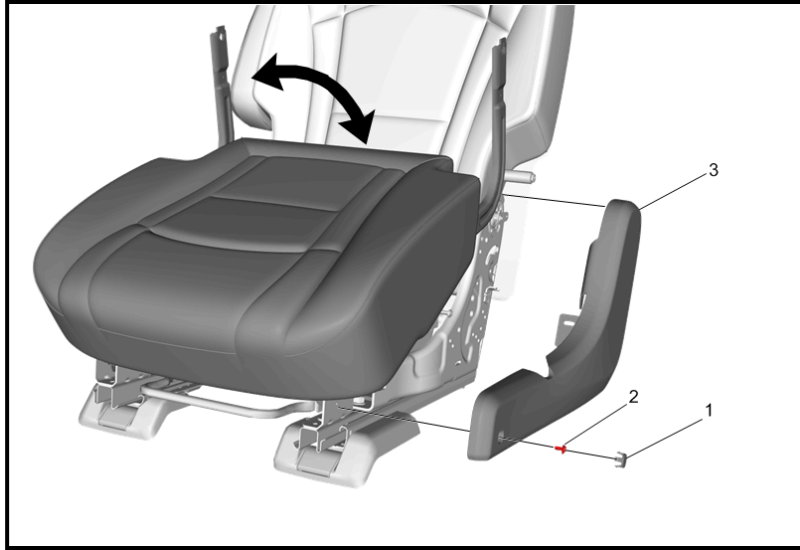


Rotate the seat cushion upward.

11. Rear Seat Outer Hinge Finish Cover Cap (1) - Remove
12. Rear Seat Outer Hinge Finish Cover Fastener (2) - Remove
13. Rear Seat Outer Hinge Finish Cover - Inner (3) - Remove

Installation Procedure

1.

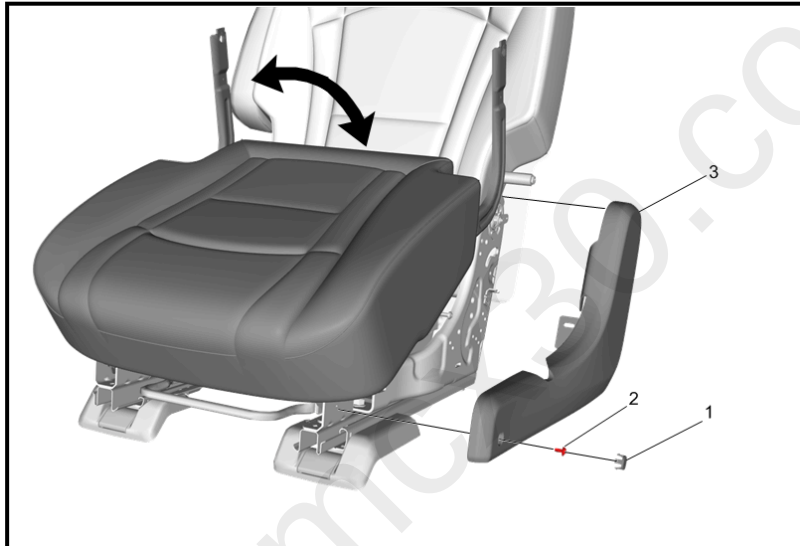


Rear Seat Outer Hinge Finish Cover - Inner (3) - Install

CAUTION: Refer to [Fastener Caution](#) .

2. Rear Seat Outer Hinge Finish Cover Fastener (2) - Install and tighten 2.5 N.m (22 lb in)
3. Rear Seat Outer Hinge Finish Cover Cap (1) - Install
4. Rotate the seat cushion down.

5.



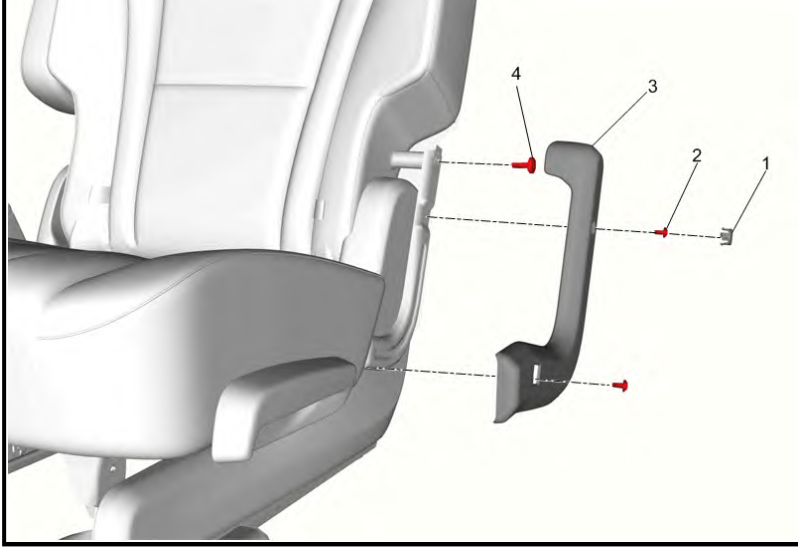


Rear Seat Cushion Frame Bolt - Upper (4) - Install and tighten 32.5 N.m (24 lb ft)

6. Rear Seat Outer Hinge Finish Cover - Outer (3) - Install

7. Rear Seat Outer Hinge Finish Cover Fastener (2) - Install and tighten [2x] 2.5 N.m (22 lb in)


8. Rear Seat Outer Hinge Finish Cover Cap (1) - Install

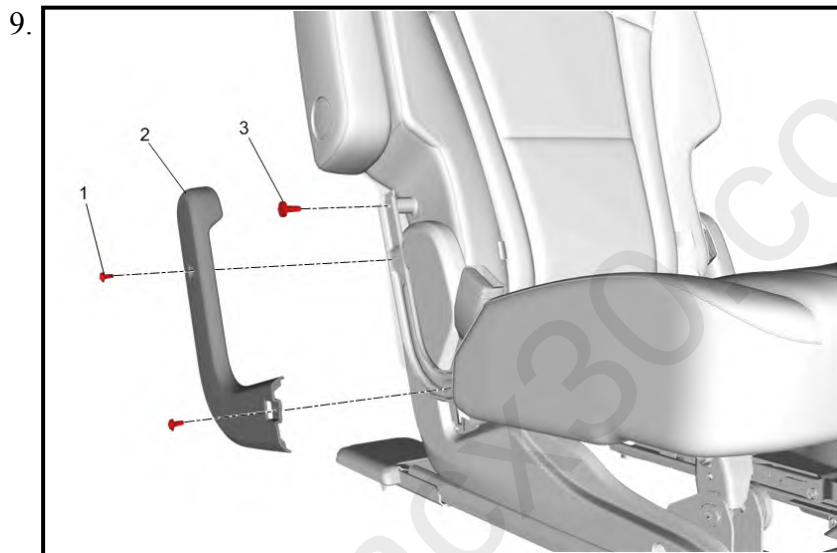


Rear Seat Cushion Frame Bolt - Upper (3) - Install and tighten 32.5 N.m (24 lb ft)

10. Rear Seat Inner Hinge Finish Cover - Outer (2) - Install

11. Rear Seat Inner Hinge Finish Cover Fastener (1) - Install and tighten [2x] 2.5 N.m (22 lb in)

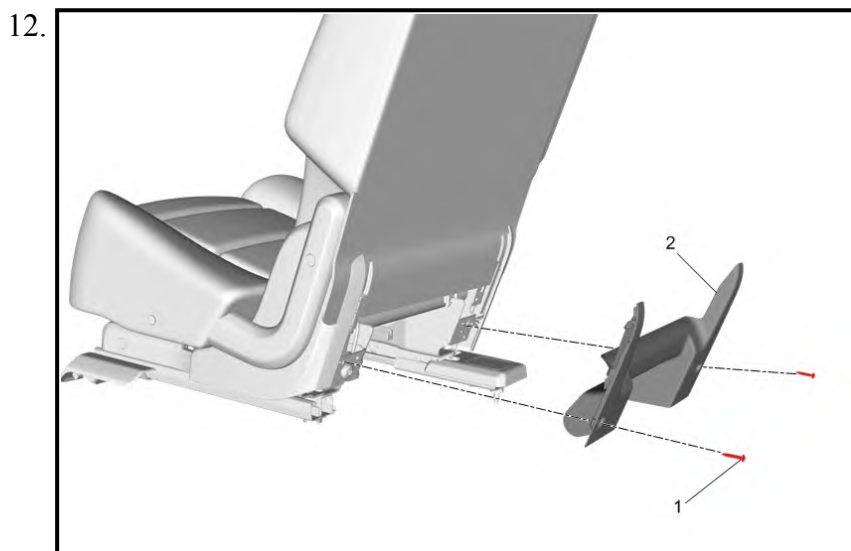


Rear Seat Back Center Bar Front Finish Cover (2) - Install - [Rear Seat Back Center Bar Front Finish Cover Replacement \(Bucket\)](#)

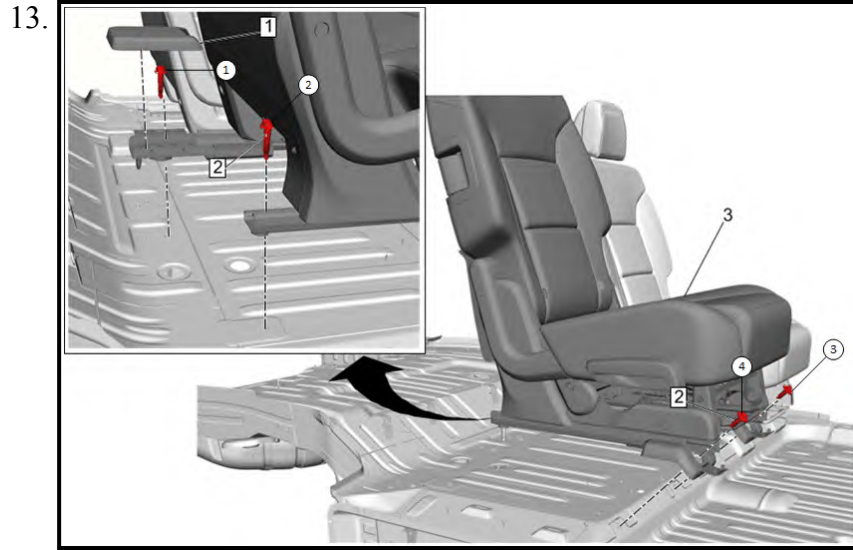


Rear Seat (3) - Install - [Rear Seat Removal and Installation \(Bucket\)](#)

REAR SEAT OUTER HINGE FINISH COVER REPLACEMENT (RIGHT BUCKET)

Removal Procedure

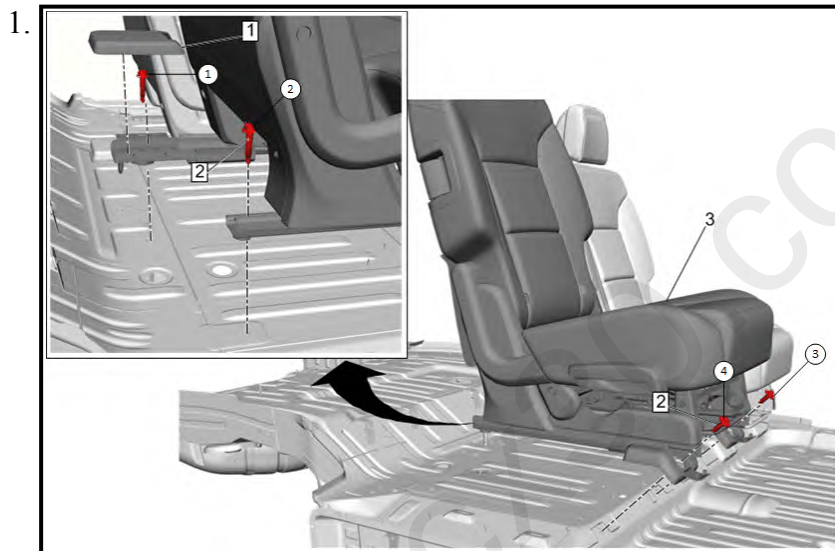


Rear Seat (3) - Remove - [Rear Seat Removal and Installation \(Bucket\)](#)

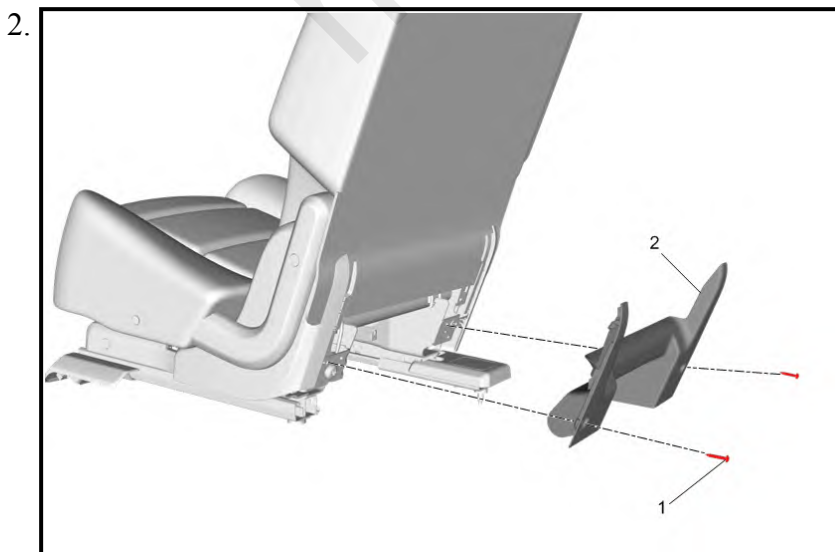

Rear Seat Back Center Bar Front Finish Cover (2) - Remove - [Rear Seat Back Center Bar Front Finish Cover Replacement \(Bucket\)](#)



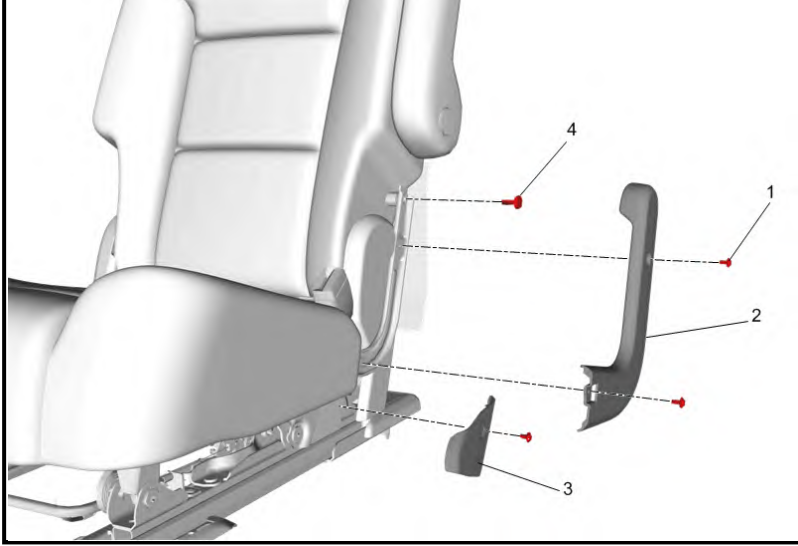


Rear Seat Inner Hinge Finish Cover Fastener (1) - Remove [3x]

4. Rear Seat Inner Hinge Finish Cover - Outer (2) - Remove

5. Rear Seat Inner Hinge Finish Cover - Front (3) - Remove

6. Rear Seat Cushion Frame Bolt - Upper (4) - Remove

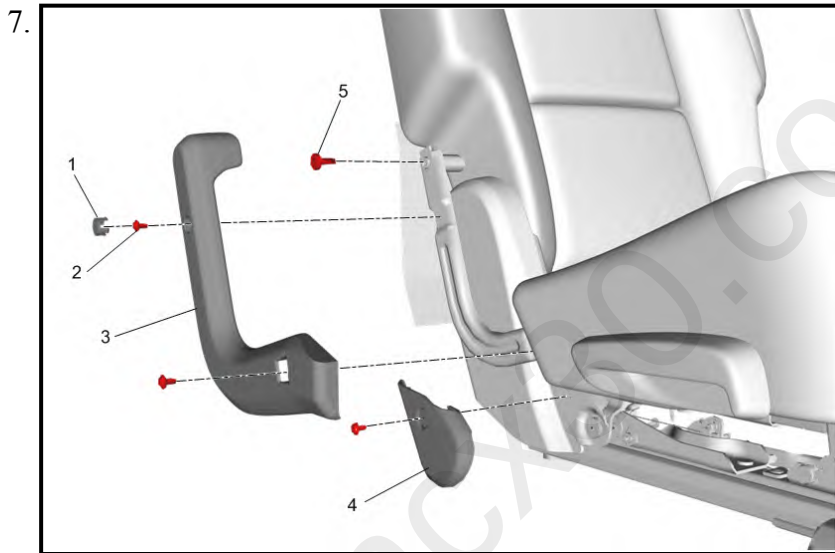


Rear Seat Outer Hinge Finish Cover Cap (1) - Remove

8. Rear Seat Outer Hinge Finish Cover Fastener (2) - Remove [3x]

9. Rear Seat Outer Hinge Finish Cover - Outer (3) - Remove

10. Rear Seat Outer Hinge Finish Cover - Front (4) - Remove


11. Rear Seat Cushion Frame Bolt - Upper (5) - Remove

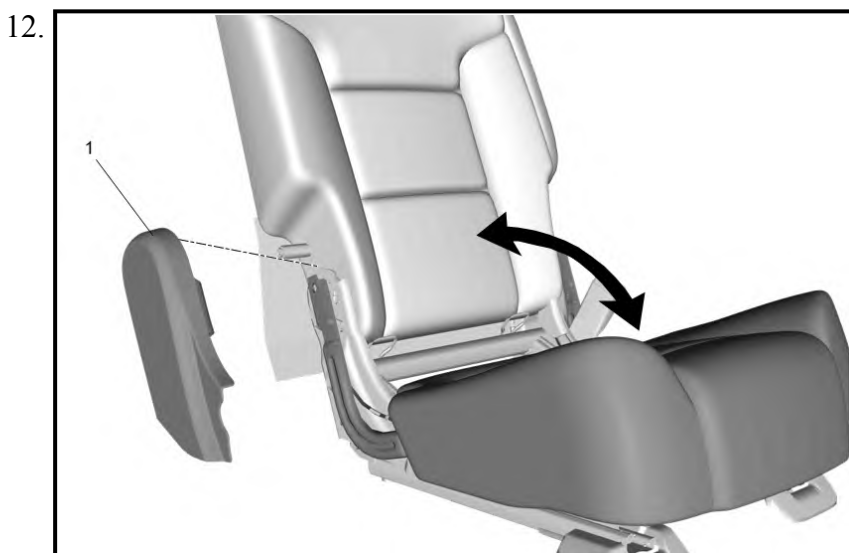

Rotate the seat cushion down.


13. Rear Seat Outer Hinge Finish Cover - Inner (1) - Remove

Installation Procedure

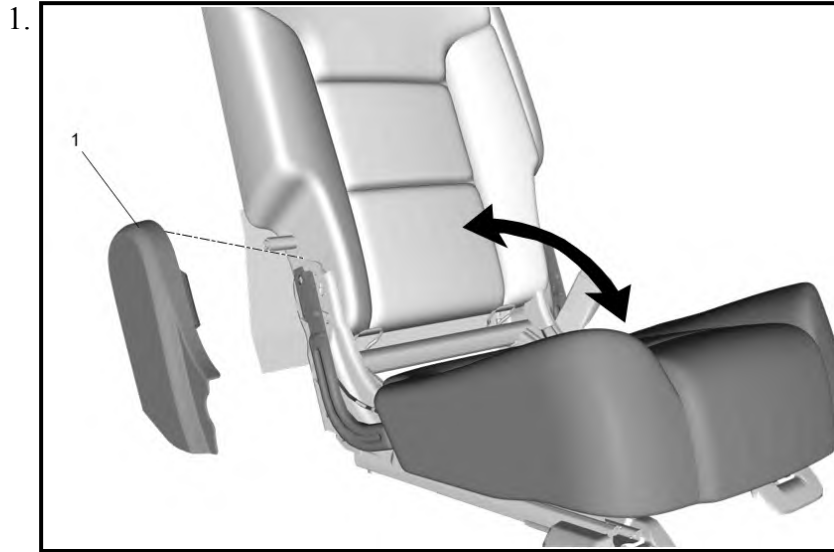

Rear Seat Outer Hinge Finish Cover - Inner (1) - Install

2. Rotate the seat cushion upward.

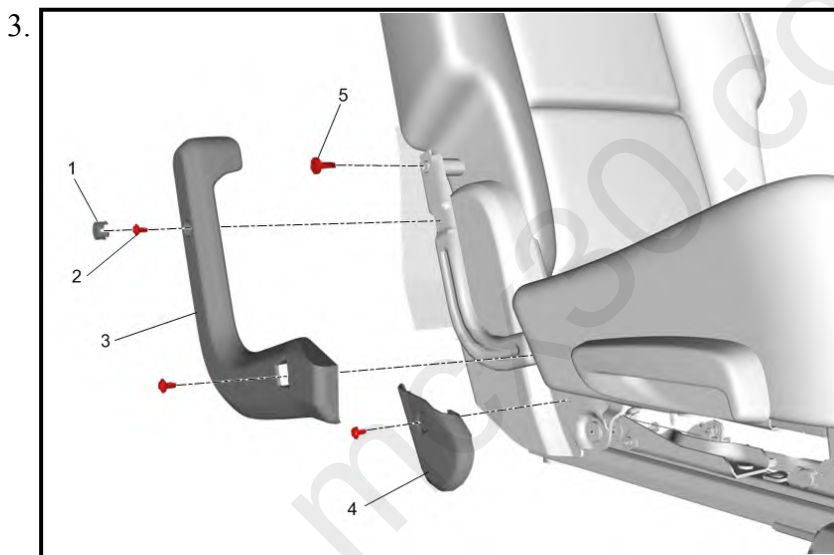

CAUTION: Refer to [Fastener Caution](#) .

Rear Seat Cushion Frame Bolt - Upper (5) - Install and tighten 32.5 N.m (24 lb ft)


4. Rear Seat Outer Hinge Finish Cover - Front (4) - Install

5. Rear Seat Outer Hinge Finish Cover - Outer (3) - Install

6. Rear Seat Outer Hinge Finish Cover Fastener (2) - Install and tighten [3x] 2.5 N.m (22 lb in)

7. Rear Seat Outer Hinge Finish Cover Cap (1) - Install



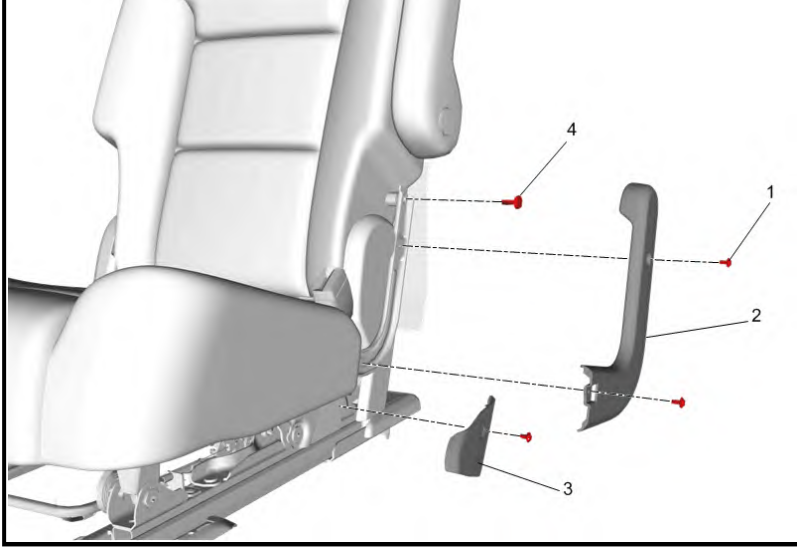


Rear Seat Cushion Frame Bolt - Upper (4) - Install and tighten 32.5 N.m (24 lb ft)


9. Rear Seat Inner Hinge Finish Cover - Outer (2) - Install

10. Rear Seat Inner Hinge Finish Cover - Front (3) - Install

11. Rear Seat Inner Hinge Finish Cover Fastener (1) - Install and tighten [3x] 2.5 N.m (22 lb in)

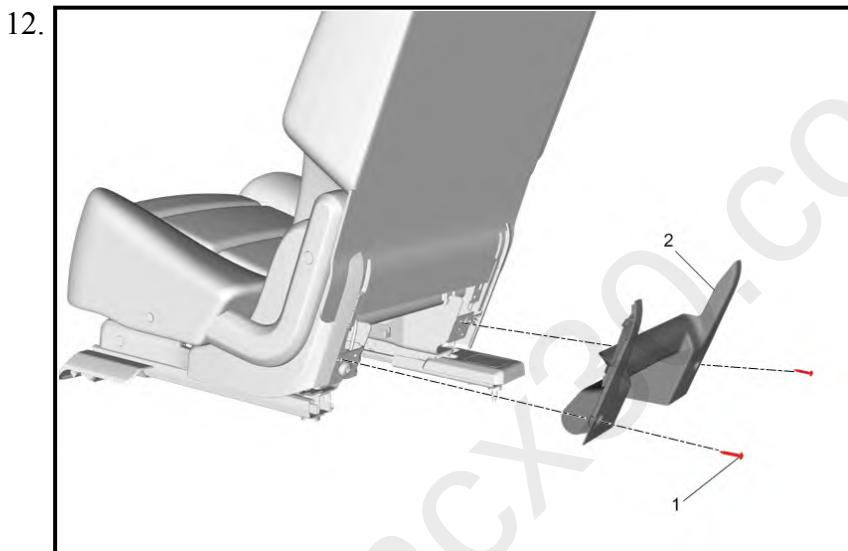


Rear Seat Back Center Bar Front Finish Cover (2) - Install - [Rear Seat Back Center Bar Front Finish Cover Replacement \(Bucket\)](#)

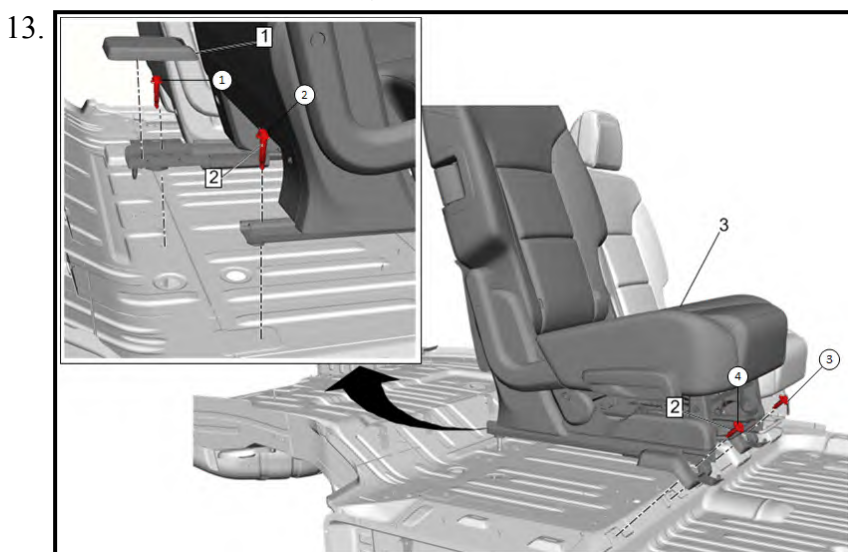


Rear Seat (3) - Install - [Rear Seat Removal and Installation \(Bucket\)](#)

REAR SEAT HEAD RESTRAINT REPLACEMENT

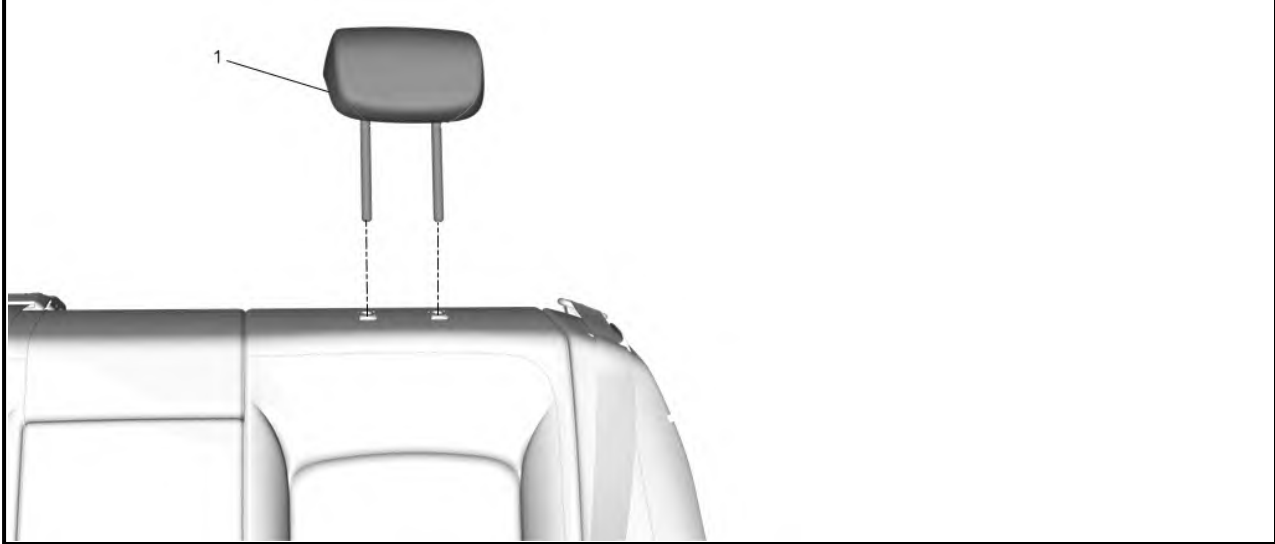


Callout	Component Name
1	Rear Seat Head Restraint Procedure 1. Lower the rear seat back forward to gain space between the head restraint and the roof. 2. Depress the large button on the head restraint guide and raise the head restraint to the full up position. 3. Depress the smaller button on the opposite head restraint guide and pull upward to remove from the seat.


REAR SEAT HEAD RESTRAINT GUIDE REPLACEMENT

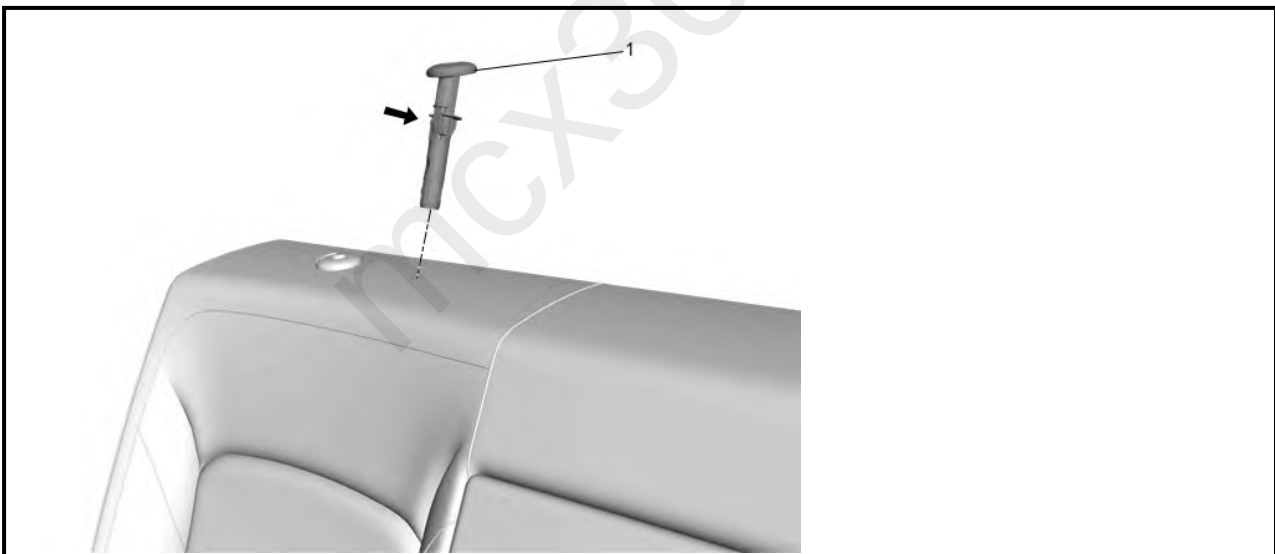

Callout	Component Name
Preliminary Procedure <u>Rear Seat Head Restraint Replacement.</u>	
1	Rear Seat Head Restraint Guide Procedure Using a suitable flat-bladed tool, slide the tool on the outside of the guide until it finds the slot. Then push the plastic slot inward and pull upward to remove the guide from the seat back frame.

 
REAR SEAT TRACK FINISH COVER REPLACEMENT (INBOARD)



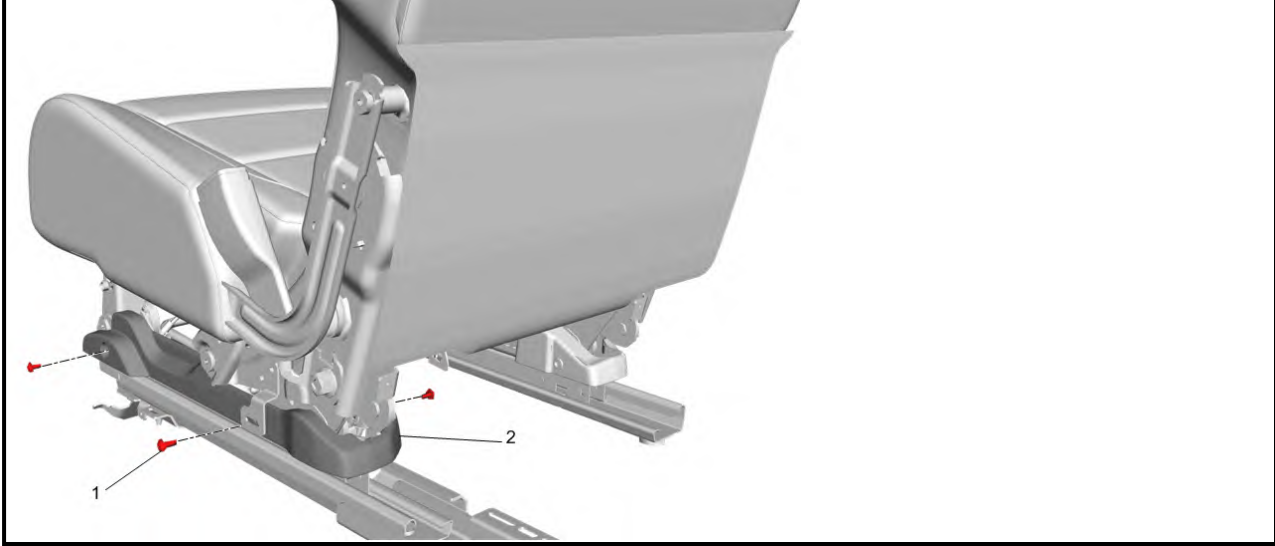

Callout	Component Name
Preliminary Procedure <u>Rear Seat Inner Hinge Finish Cover Replacement (40%)</u> <u>Rear Seat Inner Hinge Finish Cover Replacement (60%)</u> <u>Rear Seat Inner Hinge Finish Cover Replacement (Left Bucket)</u> <u>Rear Seat Inner Hinge Finish Cover Replacement (Right Bucket)</u> .	
1	Rear Seat Track Finish Cover Fastener [3x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
2	Rear Seat Track Finish Cover

REAR SEAT TRACK FINISH COVER REPLACEMENT (OUTBOARD)

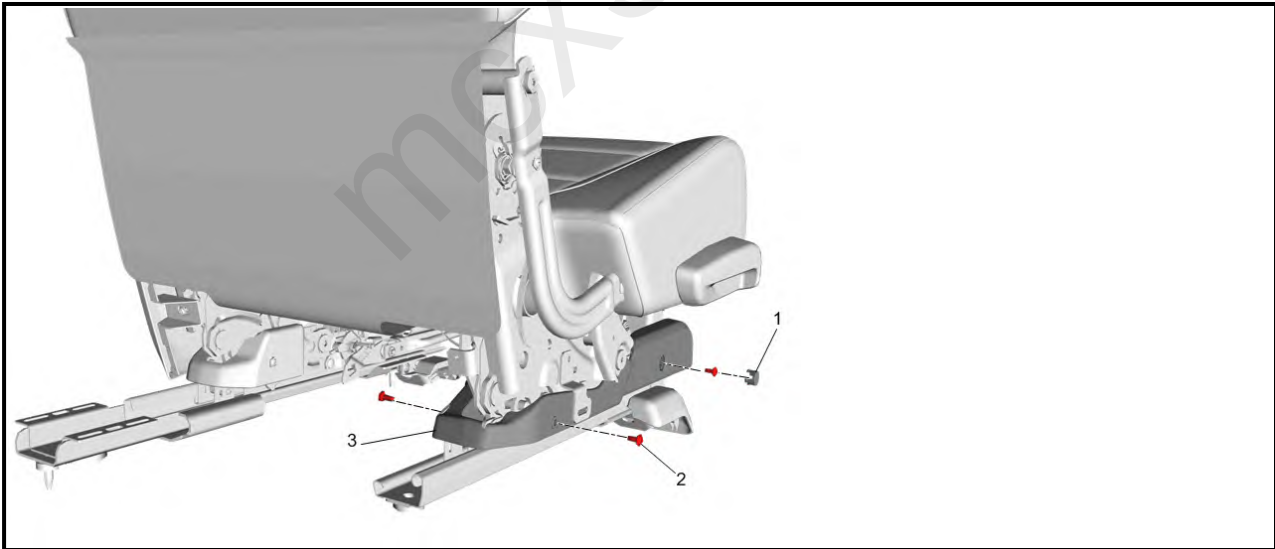


Callout	Component Name
Preliminary Procedure <u>Rear Seat Inner Hinge Finish Cover Replacement (40%)</u> <u>Rear Seat Inner Hinge Finish Cover Replacement (60%)</u>	
1	Rear Seat Track Finish Cover Cap


Callout	Component Name
2	Rear Seat Track Finish Cover Fastener [3x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
3	Rear Seat Track Finish Cover

REAR SEAT FRAME REPLACEMENT (LEFT BUCKET)

Removal Procedure

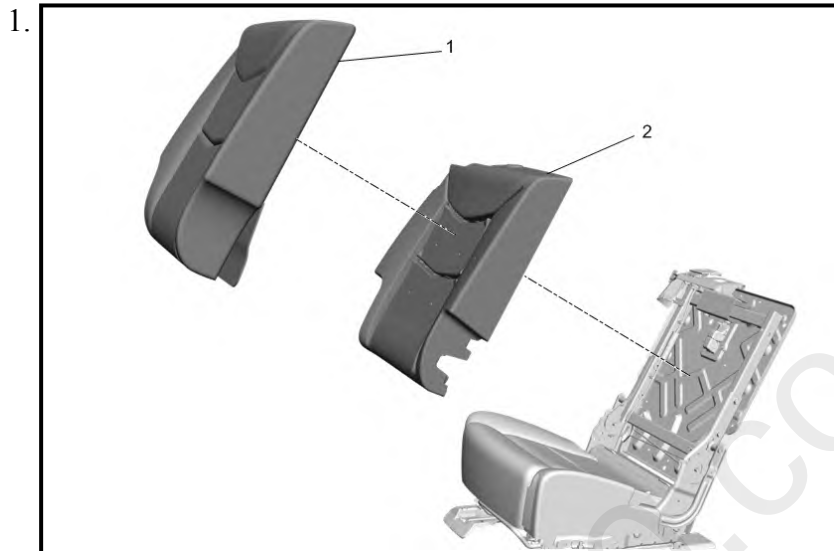


Rear Seat Back Cushion Cover and Pad (2) - Remove - [Rear Seat Back Cushion Cover and Pad Replacement \(Bucket\)](#).

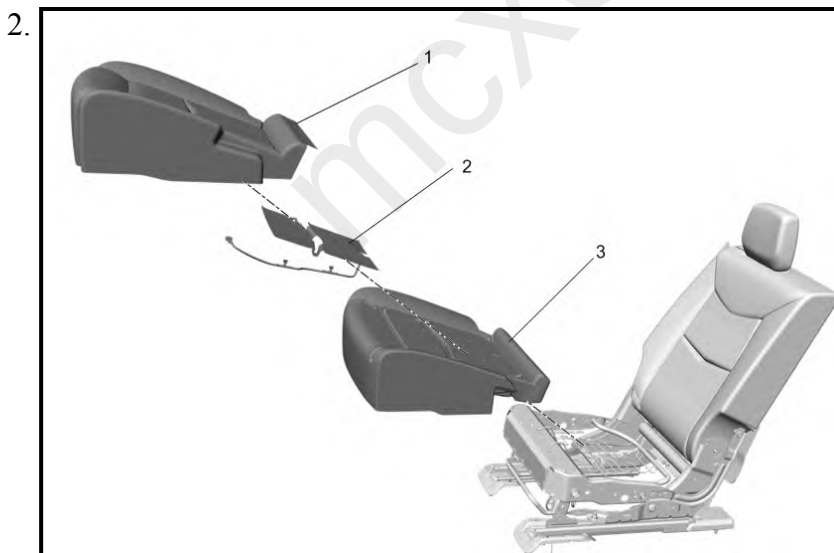

Rear Seat Cushion Cover and Pad (3) - Remove - [Rear Seat Cushion Cover and Pad Replacement \(Bucket\)](#).




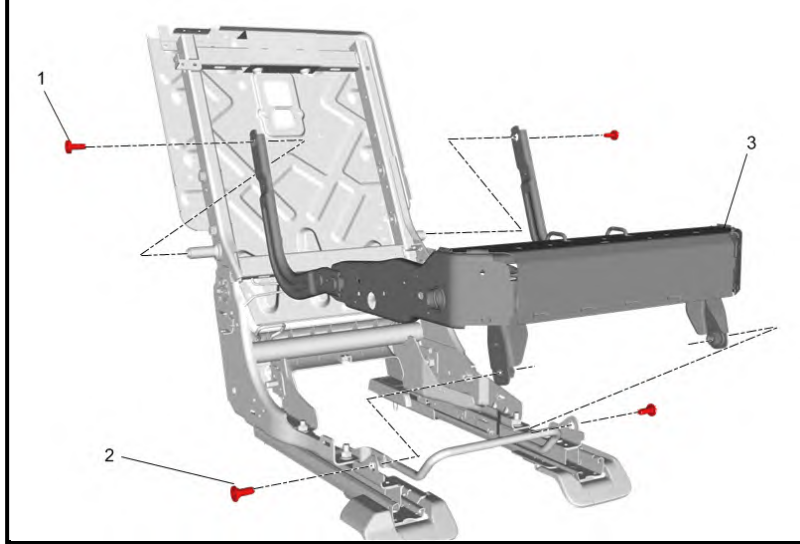

Rear Seat Cushion Frame Bolt - Upper (1) - Remove [2x]

4. Rear Seat Cushion Frame Bolt - Front (2) - Remove [2x]


5. Rear Seat Cushion Frame (3) - Remove

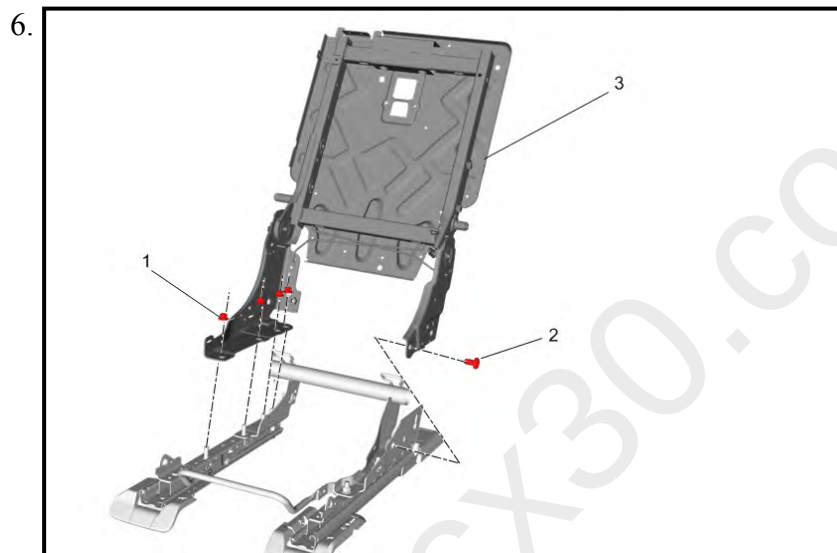

Rear Seat Frame Nut (1) - Remove [4x]

7. Rear Seat Back Panel Bolt (2) - Remove


8. Rear Seat Back Panel (3) - Remove

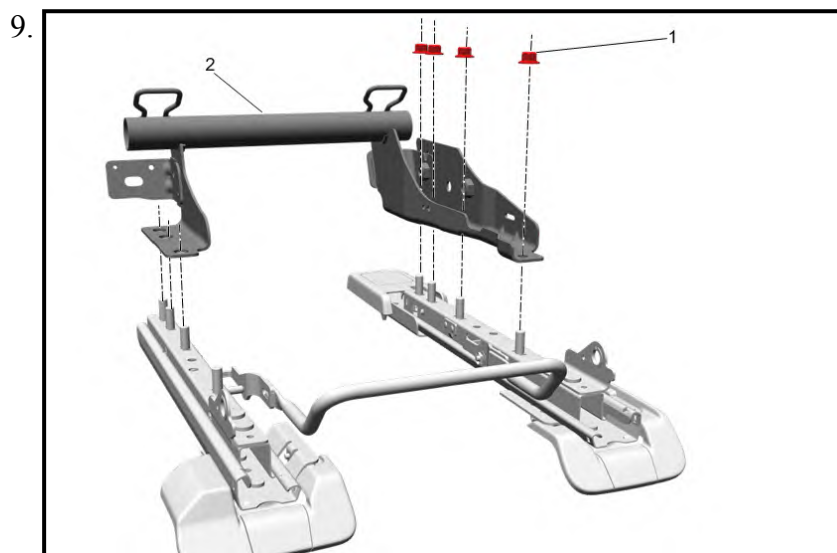

Rear Seat Frame Nut (1) - Remove [4x]

10. Rear Seat Frame Stanchion (2) - Remove

11.

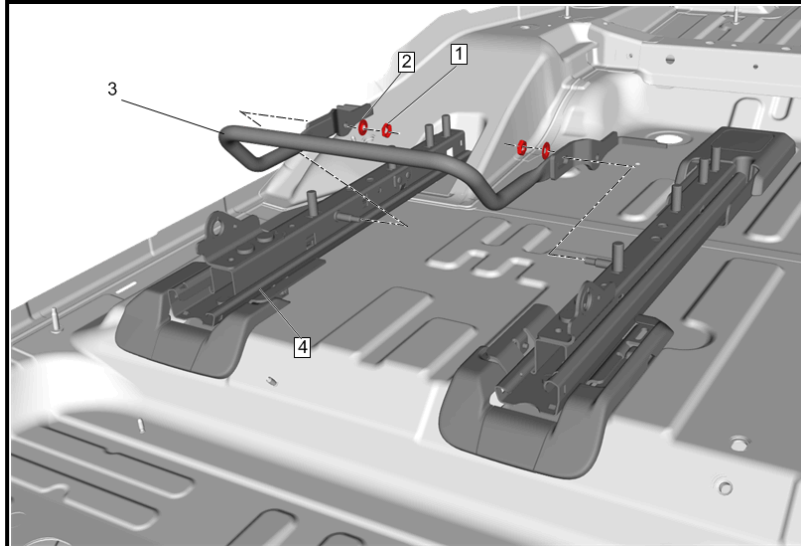

Rear Seat Cushion Bracket Fastener (1) - Remove [2x]

12. Rear Seat Cushion Bracket Washer (2) - Remove [2x]


13. Rear Seat Cushion Bracket (3) - Remove

14. Rear Seat Support (4) - Remove

15. Transfer components as necessary.

Installation Procedure

1.

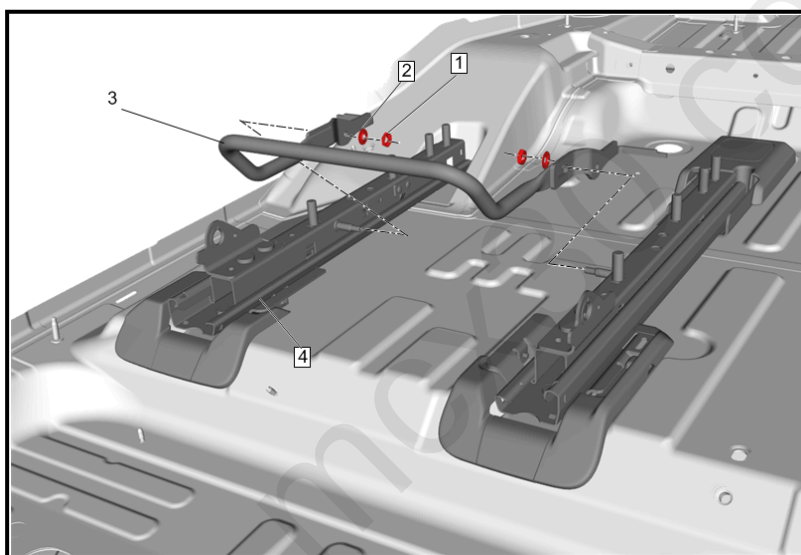

Install both rear seat supports (4) in the vehicle to set the cross-car width.

2. Rear Seat Cushion Bracket (3) - Install


3. Rear Seat Cushion Bracket Washer (2) - Install

CAUTION: Refer to Fastener Caution .

4. Rear Seat Cushion Bracket Fastener (1) - Install and tighten [2x] 2.5 N.m (22 lb in)

5.




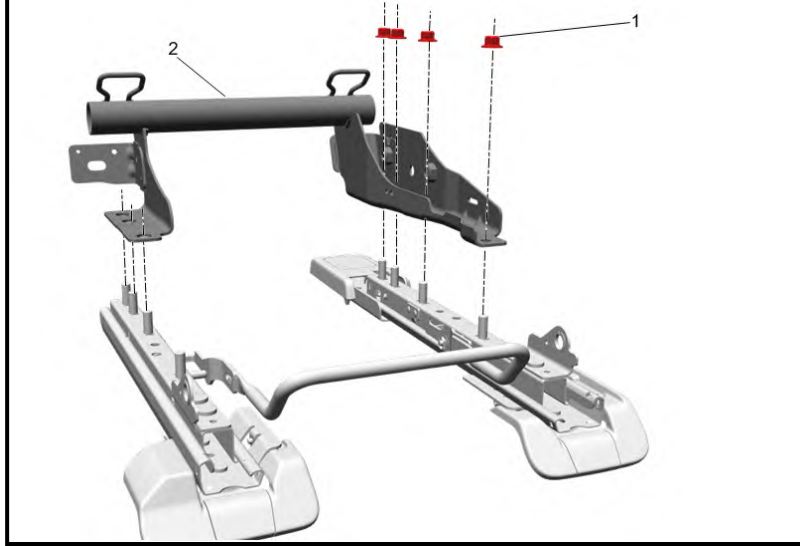

Rear Seat Frame Stanchion (2) - Install

6. Rear Seat Frame Nut (1) - Install and tighten [4x] 50 N.m (37 lb ft)

7.

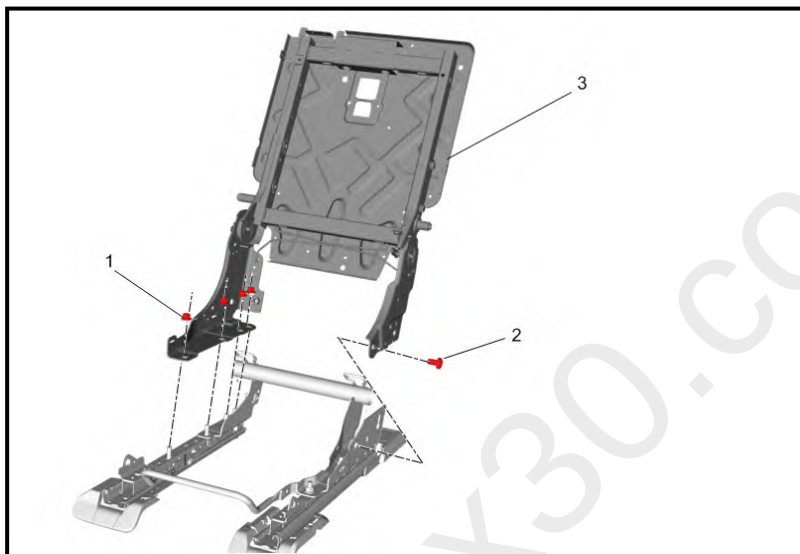


Rear Seat Back Panel (3) - Install

8. Rear Seat Frame Nut (1) - Install and tighten [4x] 50 N.m (37 lb ft)

9. Rear Seat Back Panel Bolt (2) - Install and tighten 75 N.m (55 lb ft)


10.

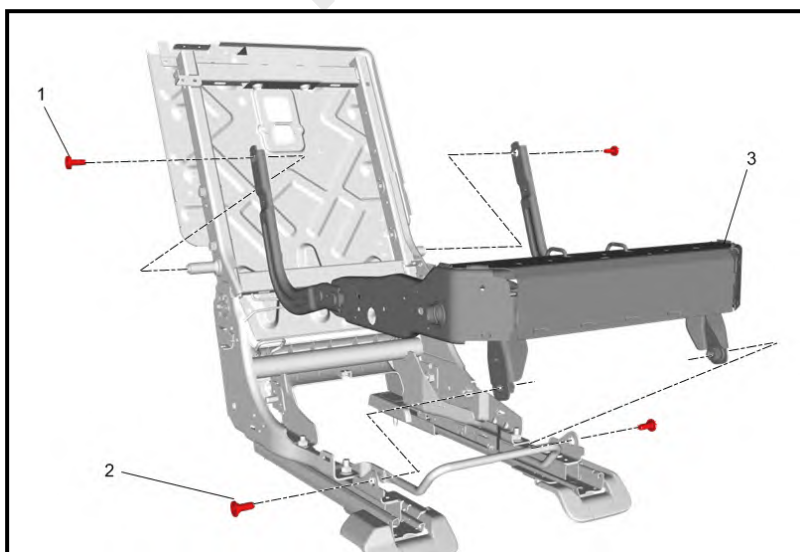


Rear Seat Cushion Frame (3) - Install

11. Rear Seat Cushion Frame Bolt - Front (2) - Install and tighten [2x] 32.5 N.m (24 lb ft)

12. Rear Seat Cushion Frame Bolt - Upper (1) - Install and tighten [2x] 32.5 N.m (24 lb ft)

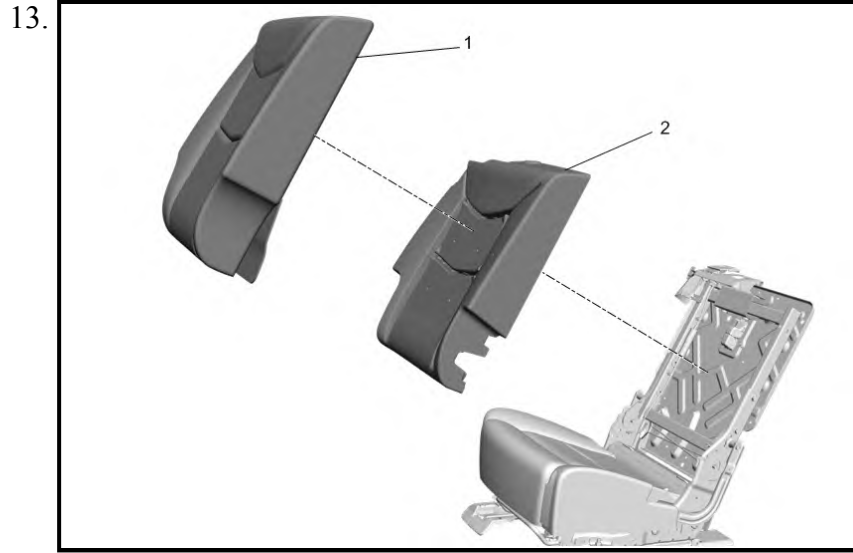


Rear Seat Back Cushion Cover and Pad (2) - Install - [Rear Seat Back Cushion Cover and Pad Replacement \(Bucket\)](#)

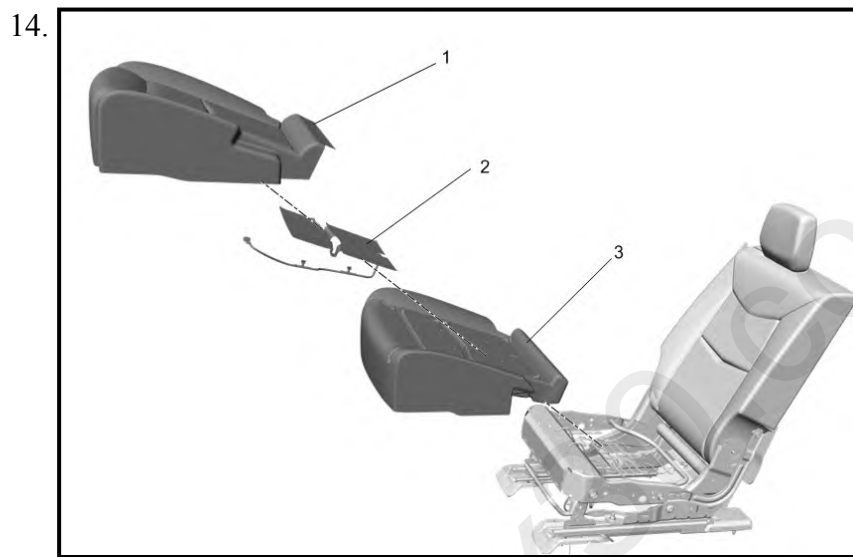


Rear Seat Cushion Cover and Pad (3) - Install - [Rear Seat Cushion Cover and Pad Replacement \(Bucket\)](#)


REAR SEAT FRAME REPLACEMENT (60%)

Removal Procedure

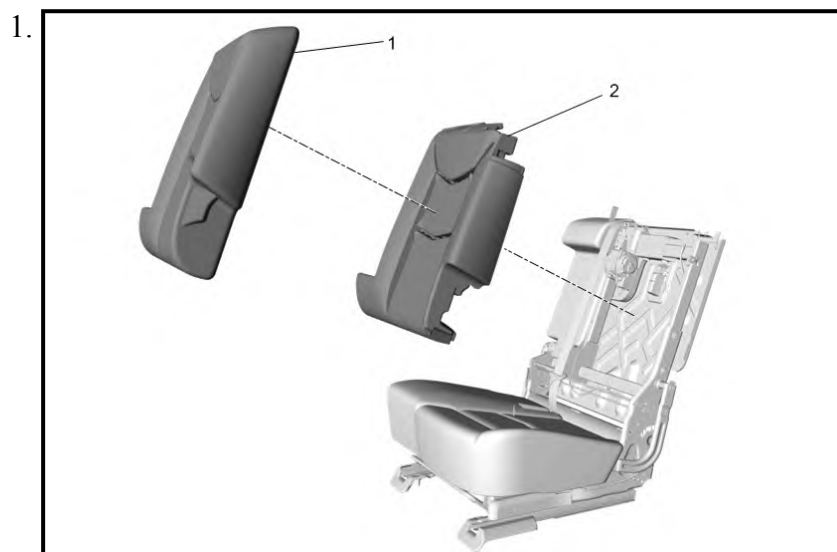


 Rear Seat Back Cushion Cover and Pad (2) - Remove - [Rear Seat Back Cushion Cover and Pad Replacement \(60%\)](#)



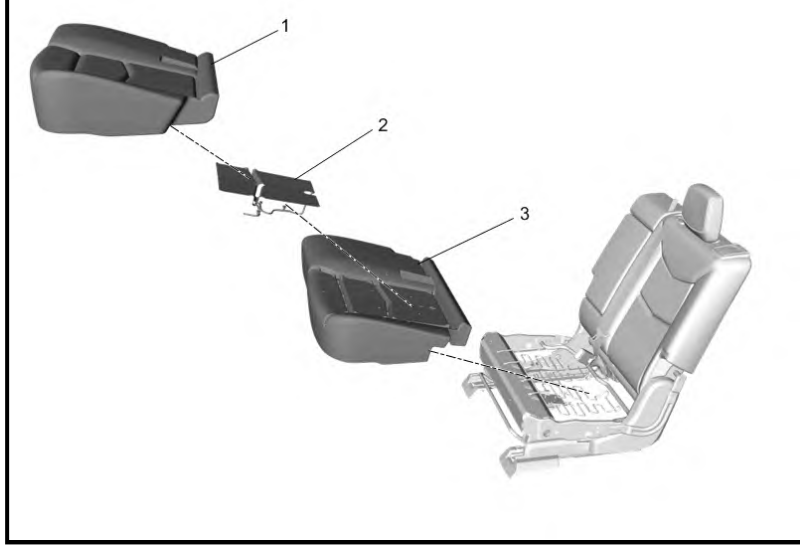


Rear Seat Cushion Cover and Pad (3) - Remove - **Rear Seat Cushion Cover and Pad Replacement (60%)**

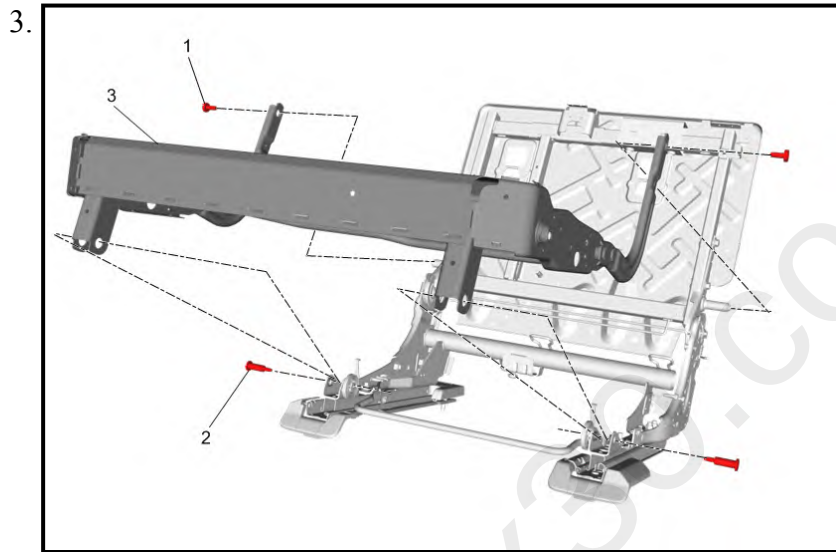

Rear Seat Cushion Frame Bolt - Upper (1) - Remove [2x]

4. Rear Seat Cushion Frame Bolt - Front (2) - Remove [2x]


5. Rear Seat Cushion Frame (3) - Remove

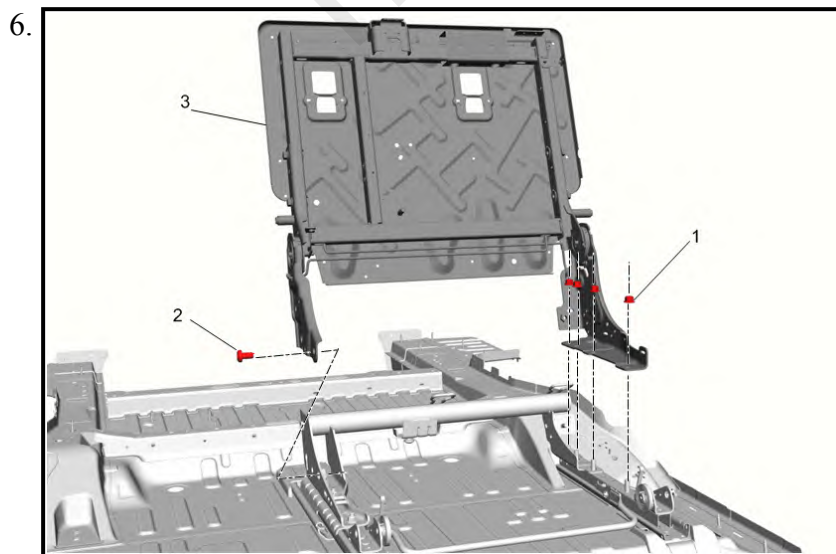

Rear Seat Frame Nut (1) - Remove [4x]


7. Rear Seat Back Panel Bolt (2) - Remove

8. Rear Seat Back Panel (3) - Remove

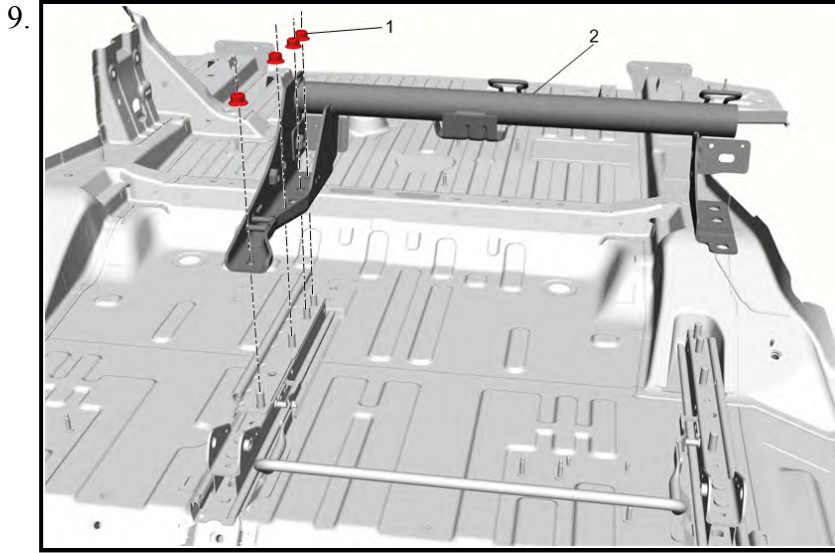

Rear Seat Frame Nut (1) - Remove [4x]

10. Rear Seat Frame Stanchion (2) - Remove

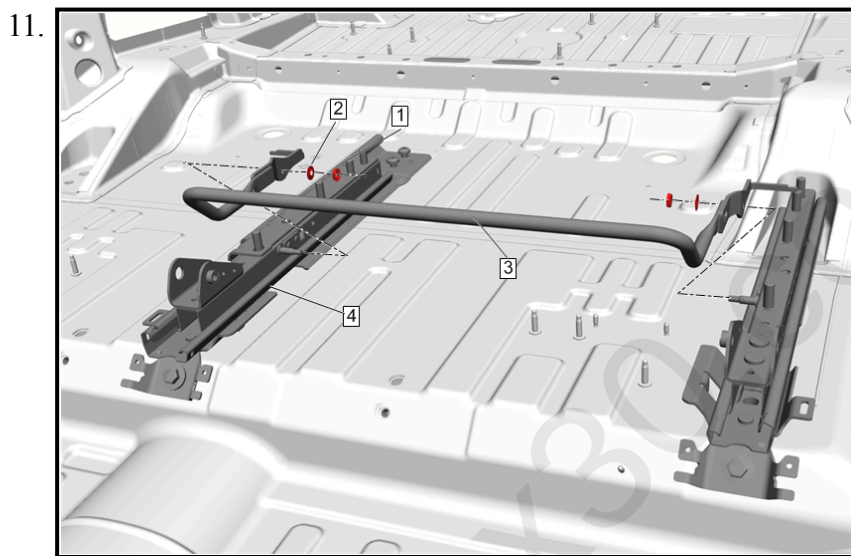

Rear Seat Cushion Bracket Fastener (1) - Remove [2x]


12. Rear Seat Cushion Bracket Washer (2) - Remove [2x]

13. Rear Seat Cushion Bracket (3) - Remove

14. Rear Seat Support (4) - Remove

15. Transfer components as necessary.

Installation Procedure

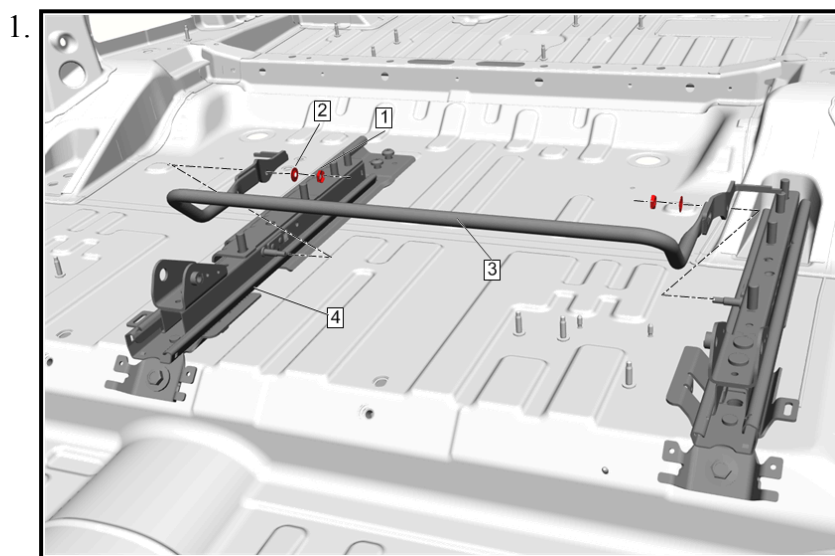


Install both rear seat supports (4) in the vehicle to set the cross-car width.

2. Rear Seat Cushion Bracket (3) - Install

3. Rear Seat Cushion Bracket Washer (2) - Install


CAUTION: Refer to [Fastener Caution](#) .

4. Rear Seat Cushion Bracket Fastener (1) - Install and tighten [2x] 2.5 N.m (22 lb in)

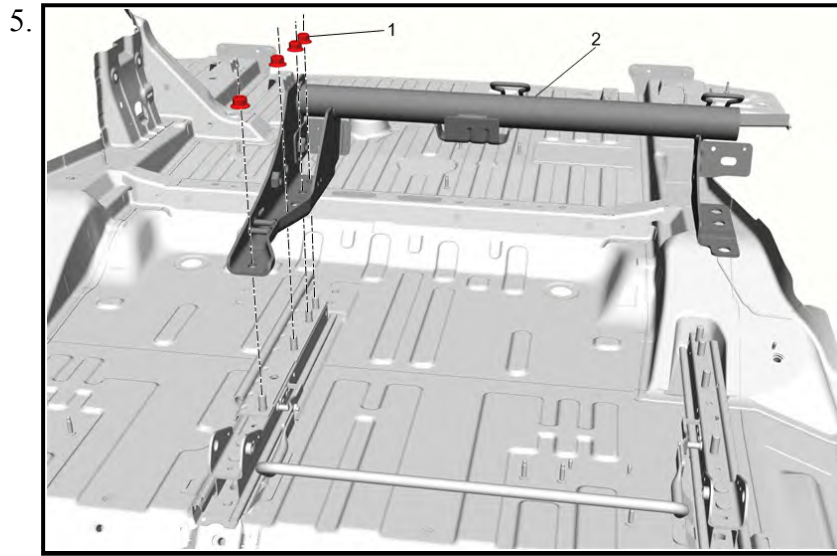

Rear Seat Frame Stanchion (2) - Install


6. Rear Seat Frame Nut (1) - Install and tighten [4x] 50 N.m (37 lb ft)

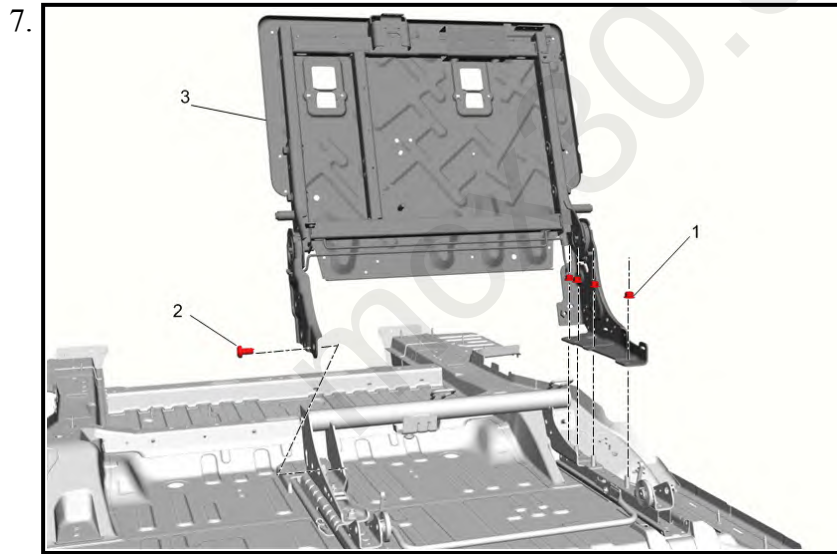


Rear Seat Back Panel (3) - Install

8. Rear Seat Frame Nut (1) - Install and tighten [4x] 50 N.m (37 lb ft)

 
9. Rear Seat Back Panel Bolt (2) - Install and tighten 75 N.m (55 lb ft)



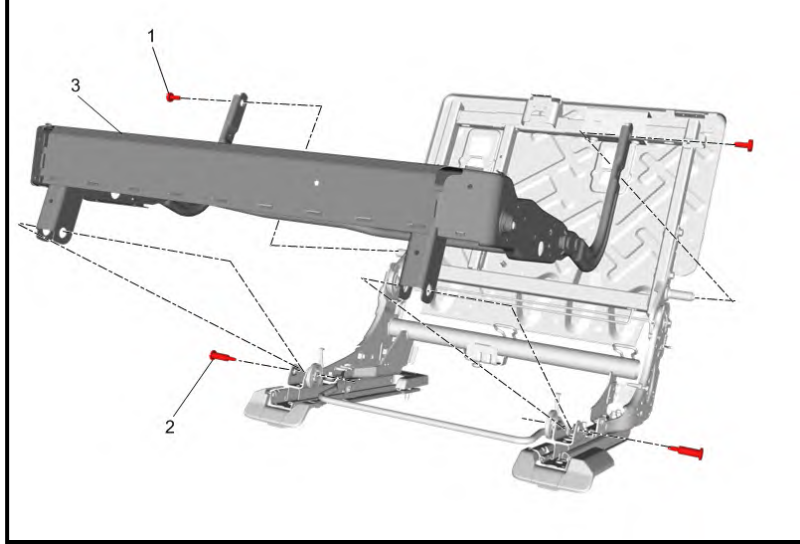


Rear Seat Cushion Frame (3) - Install

11. Rear Seat Cushion Frame Bolt - Front (2) - Install and tighten [2x] 32.5 N.m (24 lb ft)
12. Rear Seat Cushion Frame Bolt - Upper (1) - Install and tighten [2x] 32.5 N.m (24 lb ft)

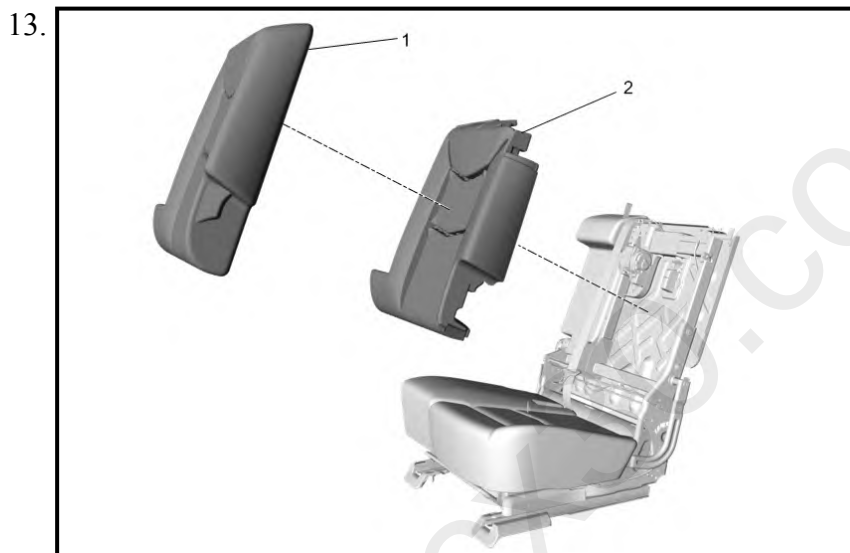


Rear Seat Back Cushion Cover and Pad (2) - Install - [Rear Seat Back Cushion Cover and Pad Replacement \(60%\)](#)

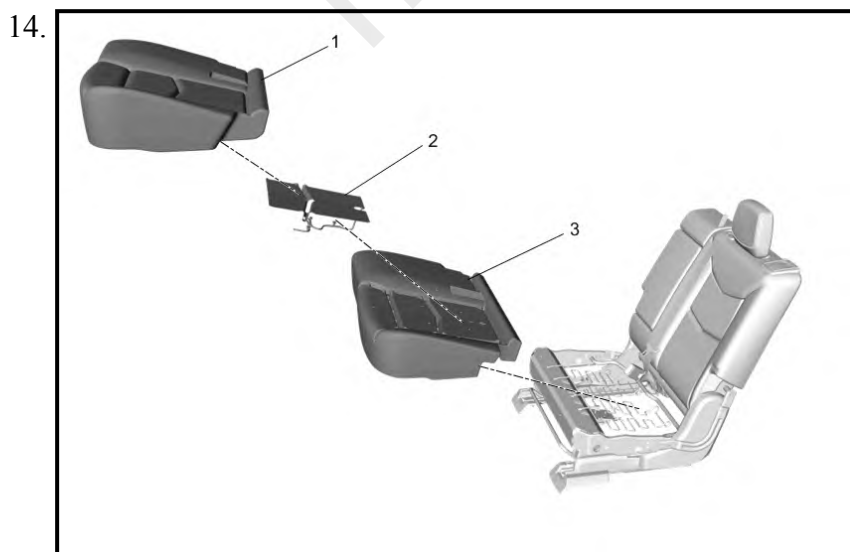


Rear Seat Cushion Cover and Pad (3) - Install - [Rear Seat Cushion Cover and Pad Replacement \(60%\)](#)

REAR SEAT FRAME REPLACEMENT (RIGHT BUCKET)


Removal Procedure

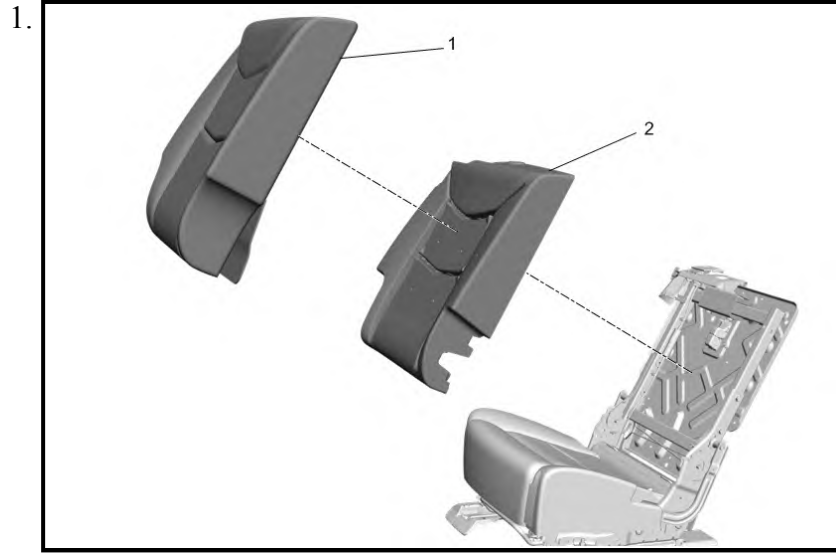


Rear Seat Back Cushion Cover and Pad (2) - Remove - [Rear Seat Back Cushion Cover and Pad Replacement \(Bucket\)](#)

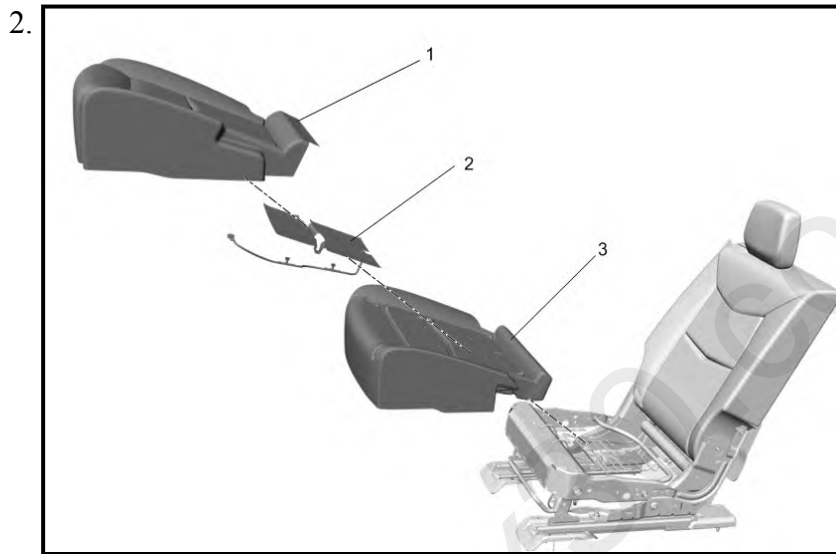

Rear Seat Cushion Cover and Pad (3) - Remove - [Rear Seat Cushion Cover and Pad Replacement \(Bucket\)](#)

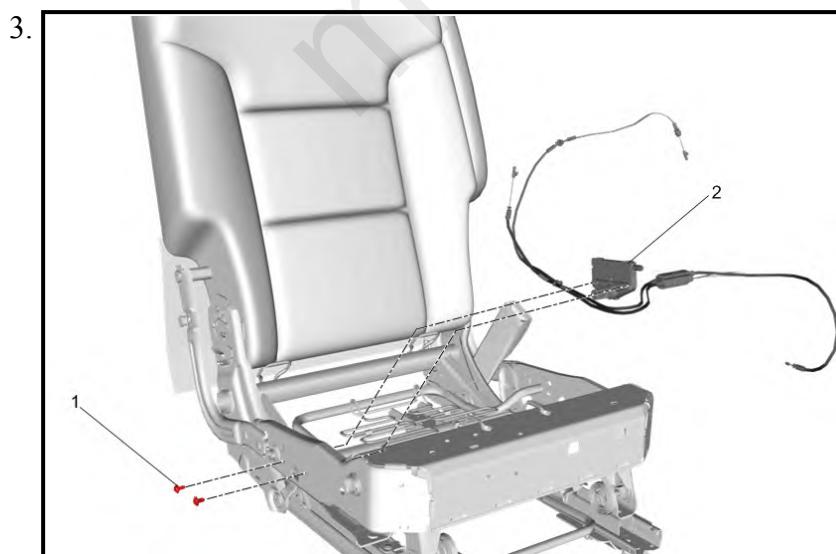


 Rear Seat Inner Recliner Cable - Lower (2) - Remove - [Rear Seat Inner Recliner Cable Replacement \(Lower\)](#)






Rear Seat Back Lower Support Wire (1) - Remove [2x]

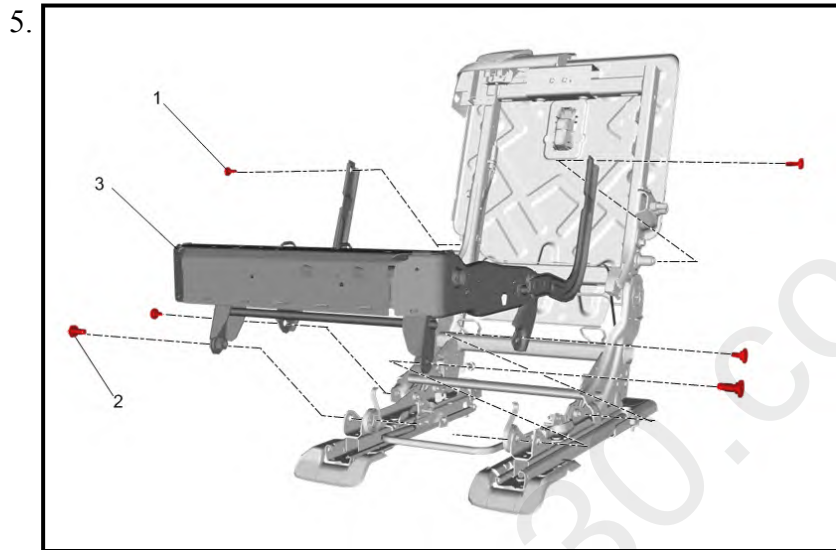

Rear Seat Cushion Frame Bolt - Upper (1) - Remove [2x]


6. Rear Seat Cushion Frame Bolt - Front (2) - Remove [4x]


7. Rear Seat Cushion Frame (3) - Remove

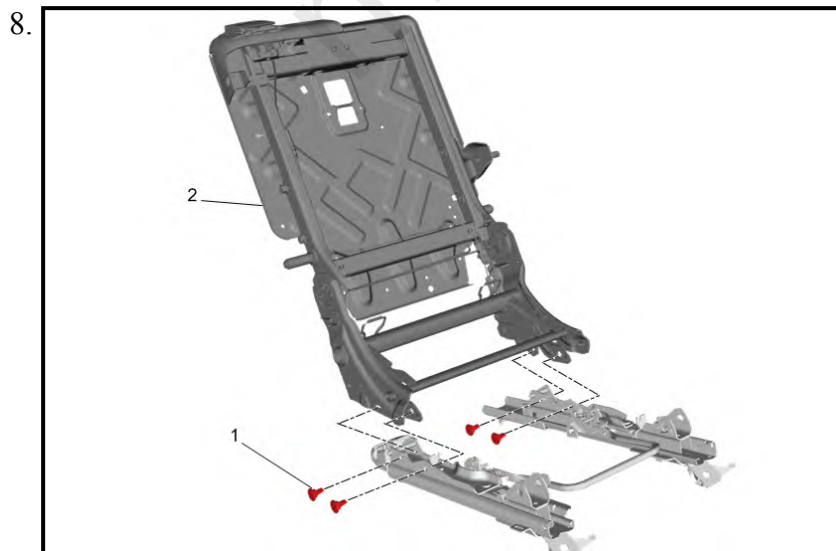

Rear Seat Back Frame Bolt (1) - Remove [4x]

9. Rear Seat Back Frame (2) - Remove

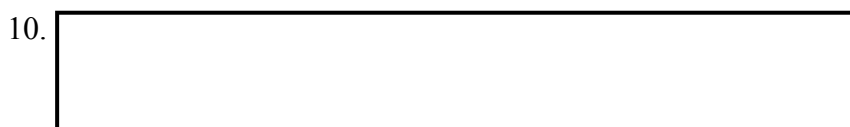


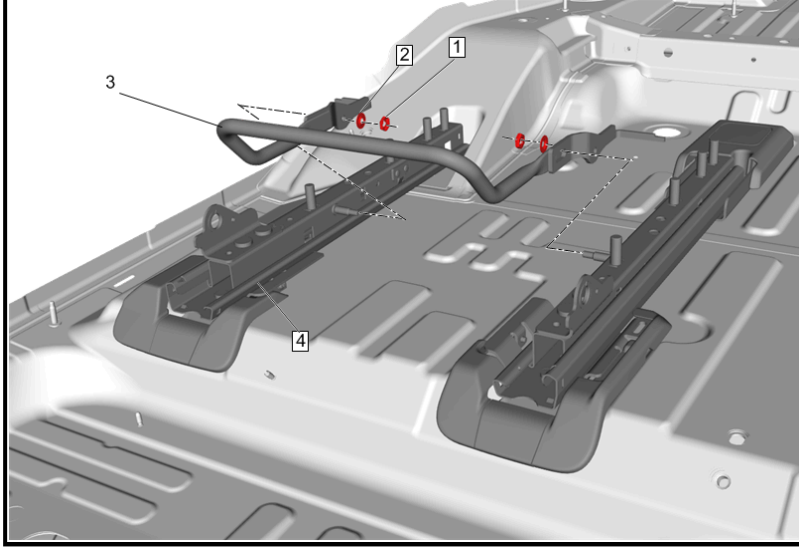

Rear Seat Cushion Bracket Fastener (1) - Remove [2x]

11. Rear Seat Cushion Bracket Washer (2) - Remove [2x]
12. Rear Seat Cushion Bracket (3) - Remove
13. Rear Seat Support (4) - Remove
14. Transfer components as necessary.

Installation Procedure

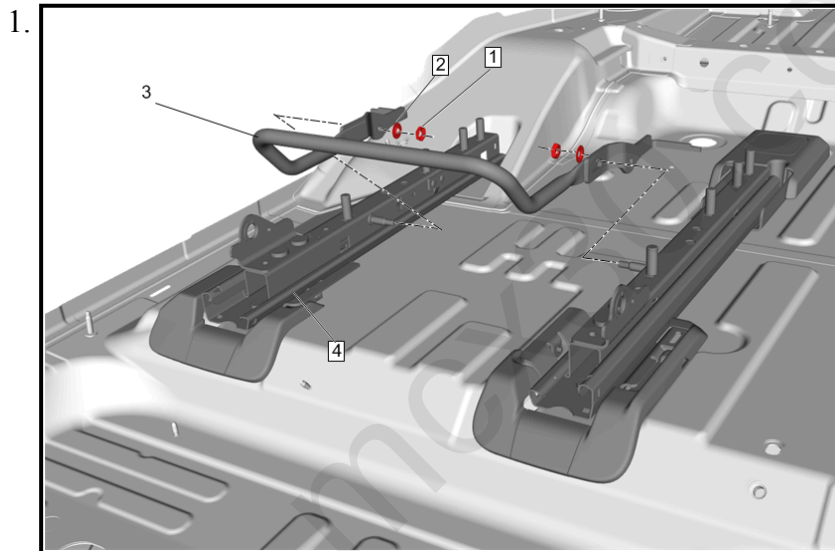


Install both rear seat supports (4) in the vehicle to set the cross-car width.

2. Rear Seat Cushion Bracket (3) - Install
3. Rear Seat Cushion Bracket Washer (2) - Install

CAUTION: Refer to Fastener Caution .


4. Rear Seat Cushion Bracket Fastener (1) - Install and tighten [2x] 2.5 N.m (22 lb in)



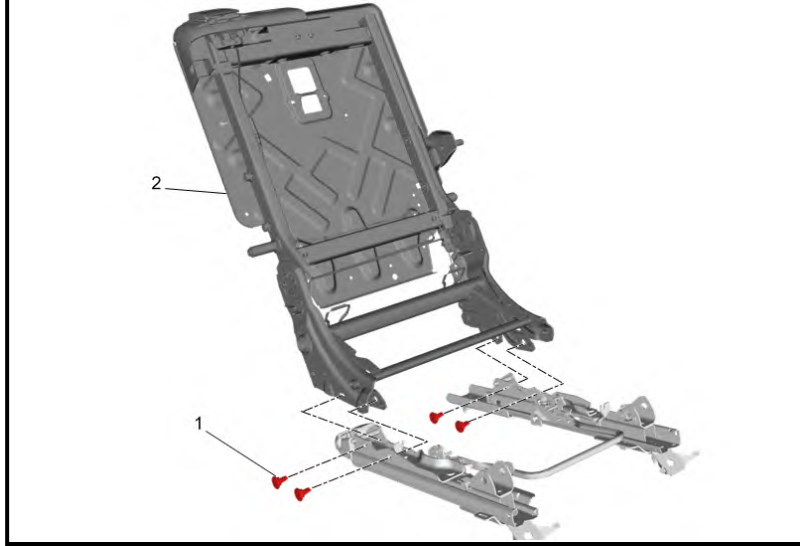

Rear Seat Back Frame (2) - Install


6. Rear Seat Back Frame Bolt (1) - Install and tighten 75 N.m (55 lb ft) [4x]

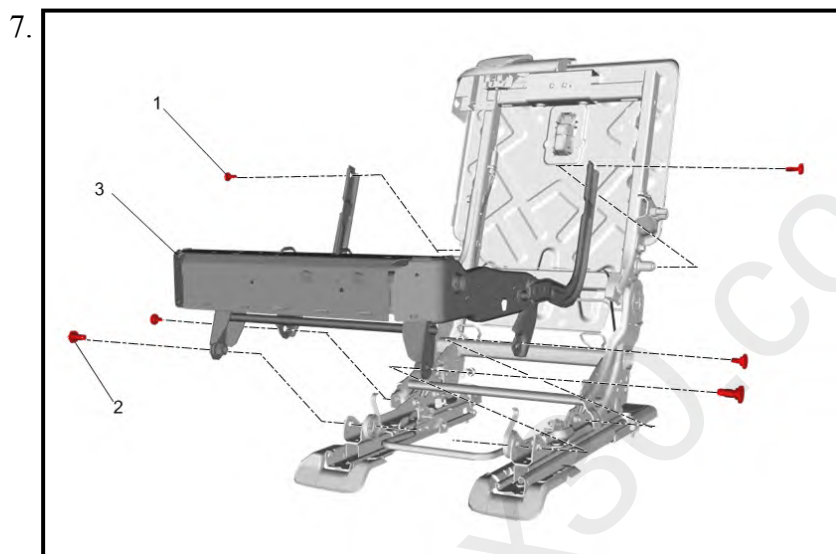


Rear Seat Cushion Frame (3) - Install


8. Rear Seat Cushion Frame Bolt - Front (2) - Install and tighten [4x] 32.5 N.m (24 lb ft)

9. Rear Seat Cushion Frame Bolt - Upper (1) - Install and tighten [2x] 32.5 N.m (24 lb ft)

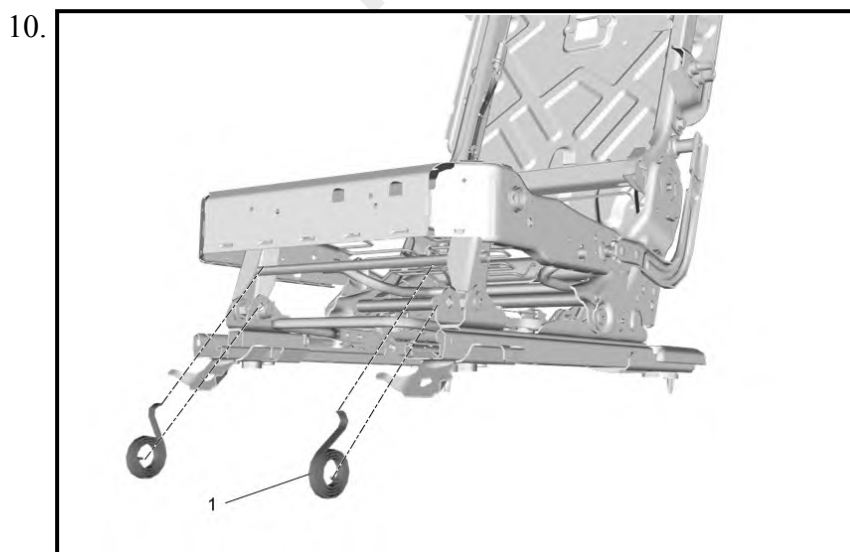


Rear Seat Back Lower Support Wire (1) - Install [2x]

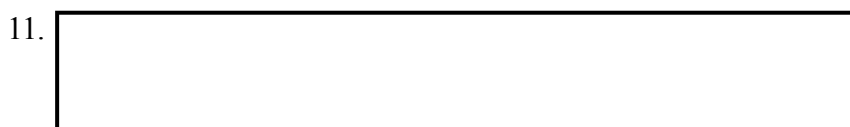


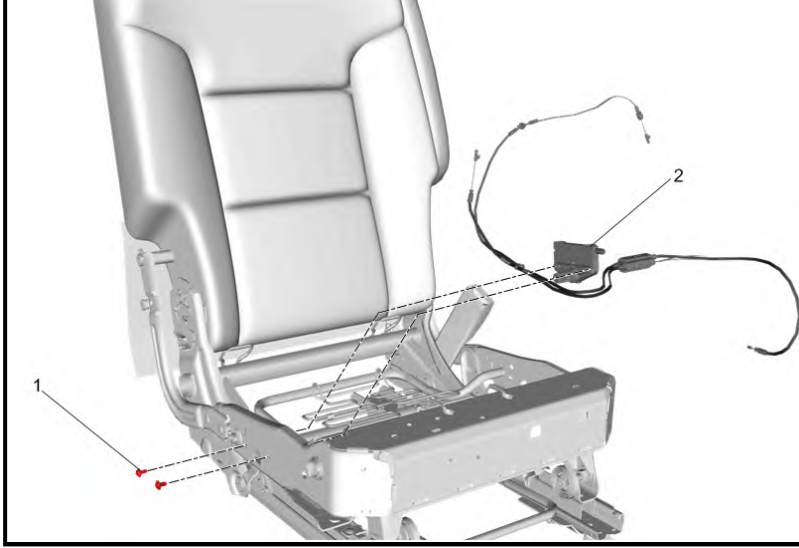

Rear Seat Inner Recliner Cable - Lower (2) - Install - [Rear Seat Inner Recliner Cable Replacement \(Lower\)](#)

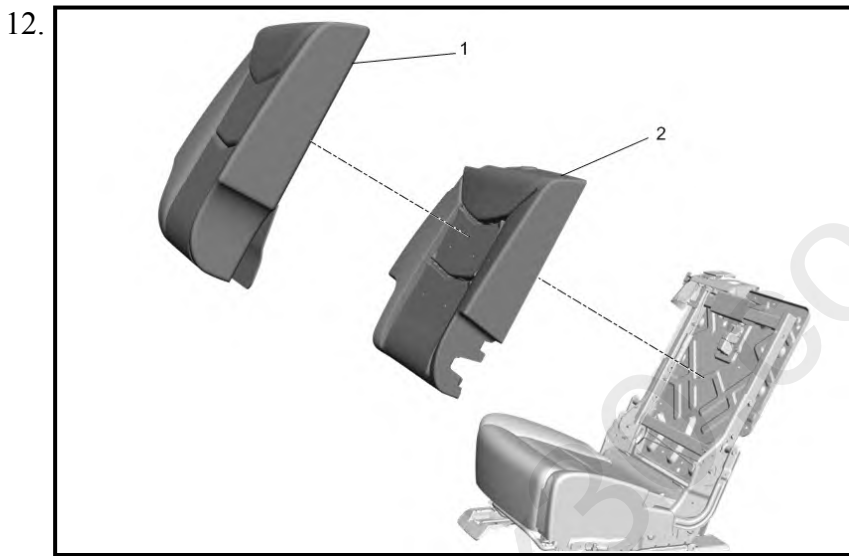

Rear Seat Back Cushion Cover and Pad (2) - Install - [Rear Seat Back Cushion Cover and Pad Replacement \(Bucket\)](#)

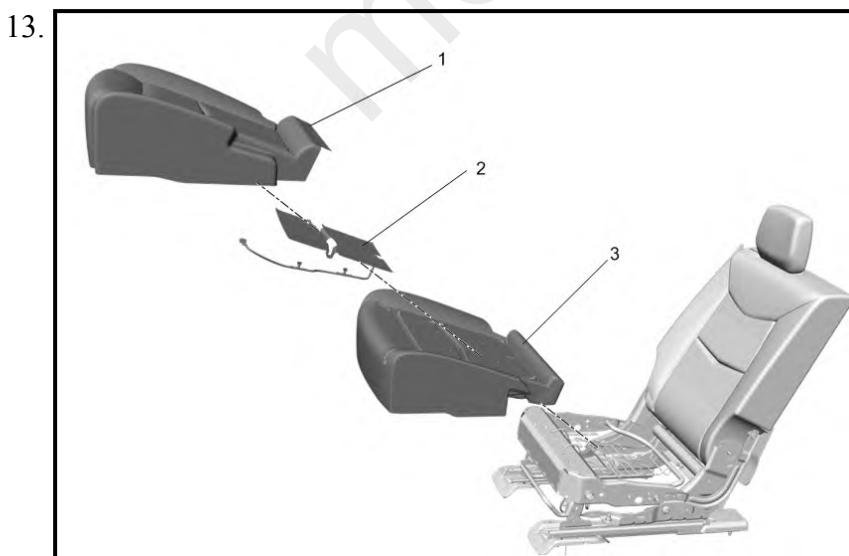


Rear Seat Cushion Cover and Pad (3) - Install - [Rear Seat Cushion Cover and Pad Replacement \(Bucket\)](#)


REAR SEAT FRAME REPLACEMENT (40%)

Removal Procedure




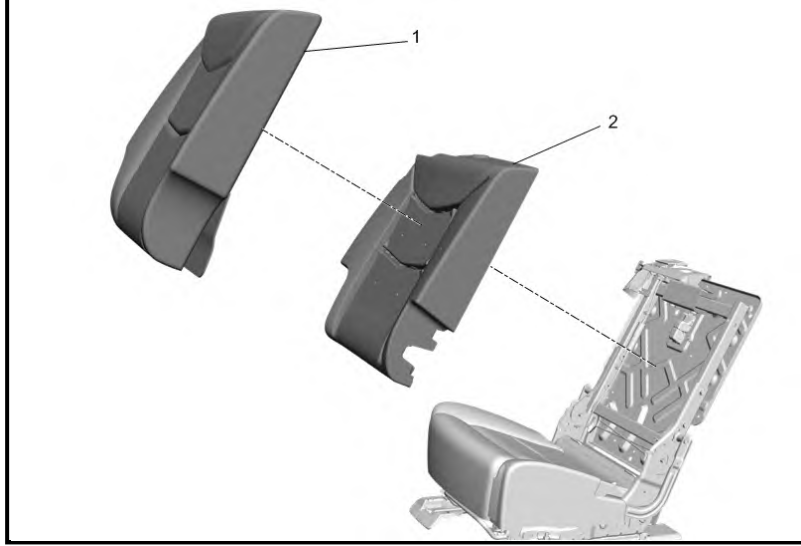

Rear Seat Back Cushion Cover and Pad (2) - Remove - [Rear Seat Back Cushion Cover and Pad Replacement \(40%\)](#)

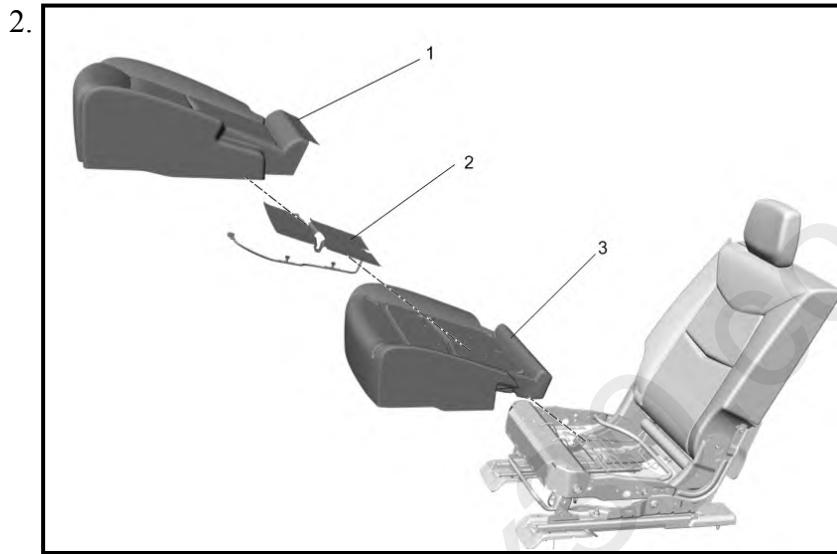

Rear Seat Cushion Cover and Pad (3) - Remove - [Rear Seat Cushion Cover and Pad Replacement \(40%\)](#)

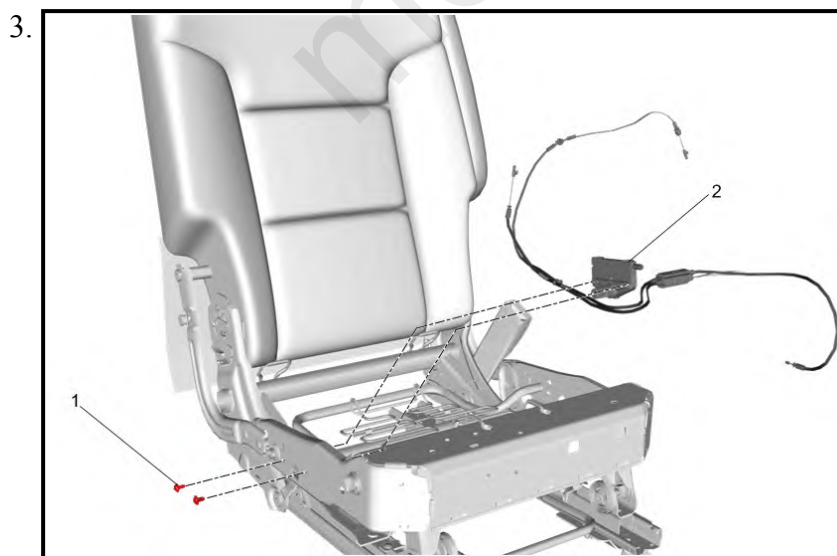


Rear Seat Inner Recliner Cable - Lower (2) - Remove - [Rear Seat Inner Recliner Cable Replacement \(Lower\)](#)






Rear Seat Back Lower Support Wire (1) - Remove [2x]

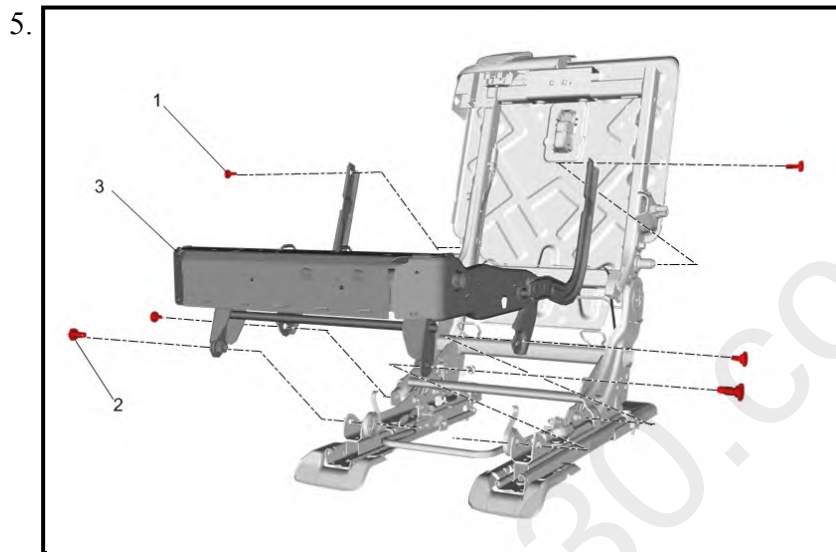

Rear Seat Cushion Frame Bolt - Upper (1) - Remove [2x]


6. Rear Seat Cushion Frame Bolt - Front (2) - Remove [4x]


7. Rear Seat Cushion Frame (3) - Remove

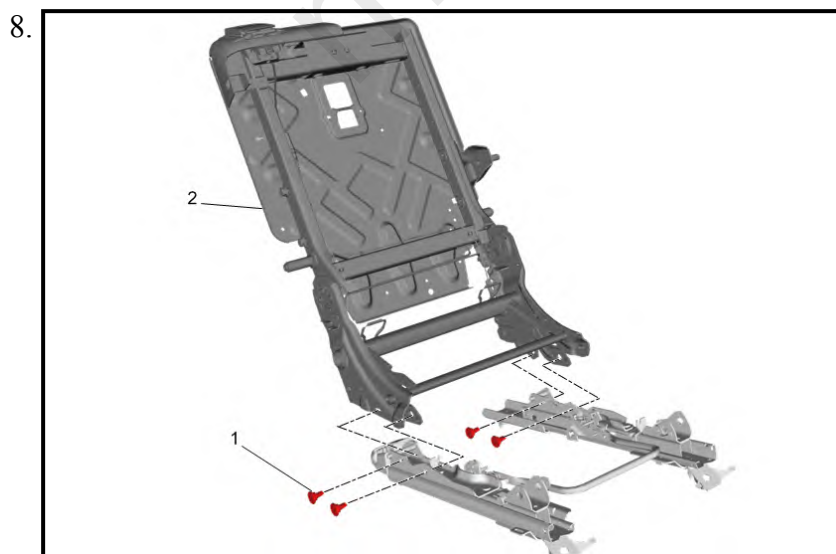

Rear Seat Back Frame Bolt (1) - Remove [4x]

9. Rear Seat Back Frame (2) - Remove

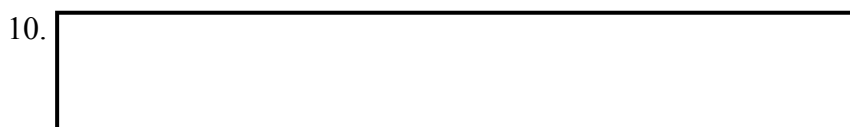


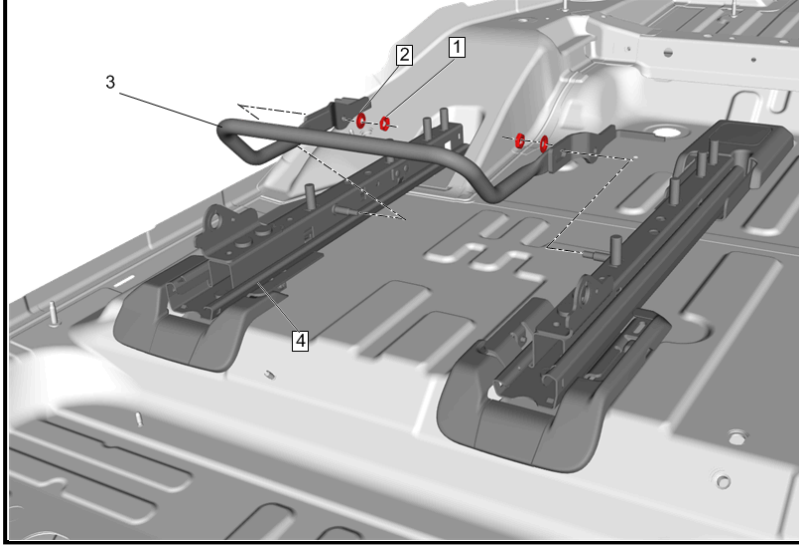

Rear Seat Cushion Bracket Fastener (1) - Remove [2x]

11. Rear Seat Cushion Bracket Washer (2) - Remove [2x]
12. Rear Seat Cushion Bracket (3) - Remove
13. Rear Seat Support (4) - Remove
14. Transfer components as necessary.

Installation Procedure

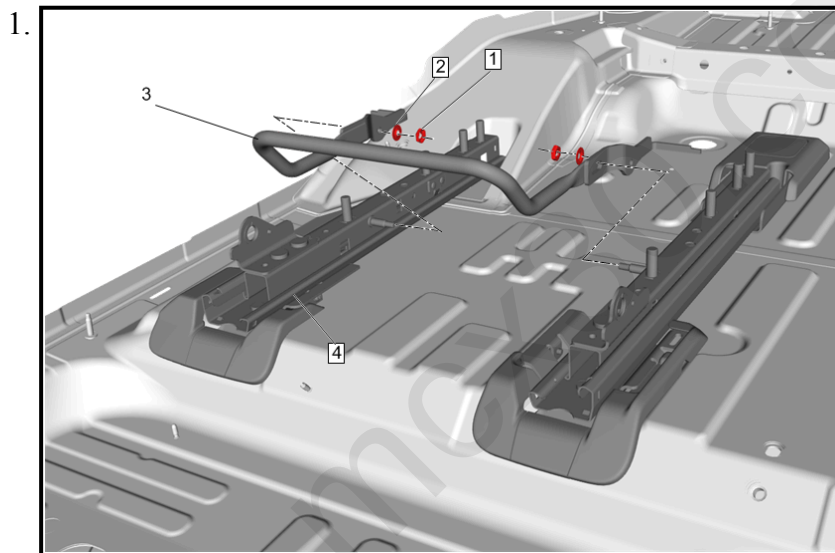


Install both rear seat supports (4) in the vehicle to set the cross-car width.

2. Rear Seat Cushion Bracket (3) - Install
3. Rear Seat Cushion Bracket Washer (2) - Install

CAUTION: Refer to Fastener Caution .


4. Rear Seat Cushion Bracket Fastener (1) - Install and tighten [2x] 2.5 N.m (22 lb in)



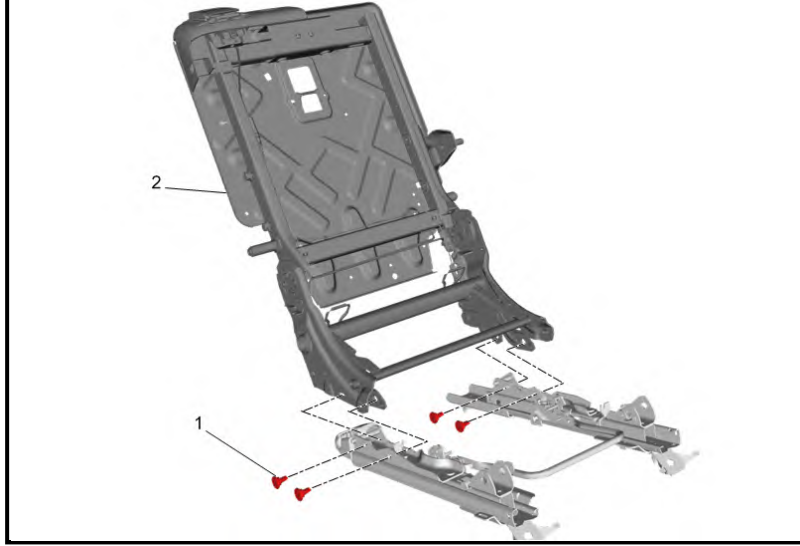

Rear Seat Back Frame (2) - Install


6. Rear Seat Back Frame Bolt (1) - Install and tighten [4x] 75 N.m (55 lb ft)

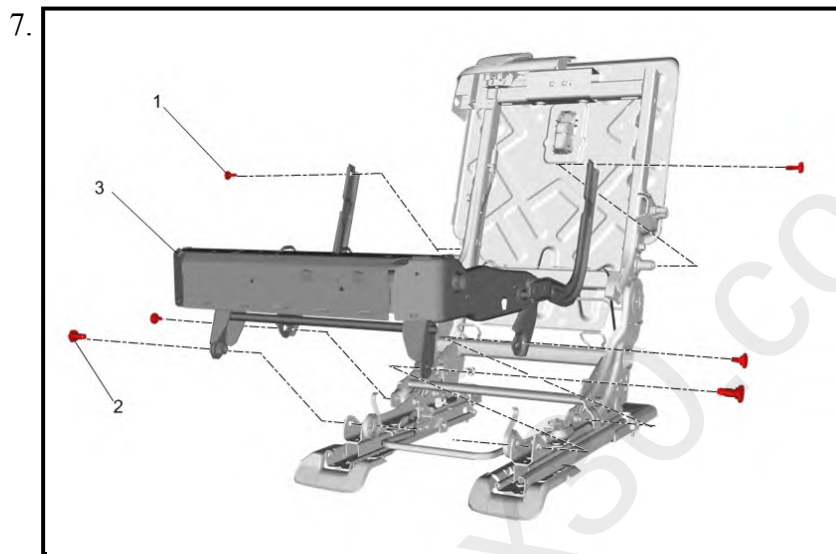


Rear Seat Cushion Frame (3) - Install


8. Rear Seat Cushion Frame Bolt - Front (2) - Install and tighten [4x] 32.5 N.m (24 lb ft)

9. Rear Seat Cushion Frame Bolt - Upper (1) - Install and tighten [2x] 32.5 N.m (24 lb ft)

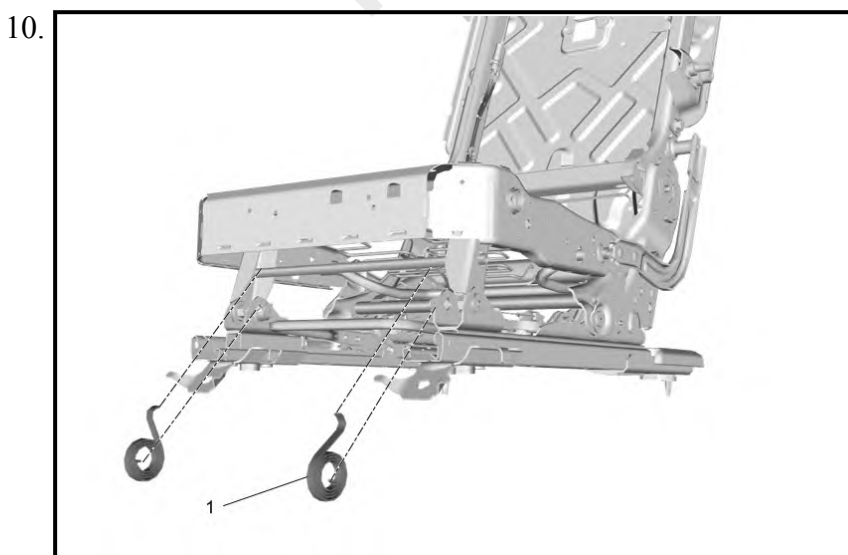


Rear Seat Back Lower Support Wire (1) - Install [2x]

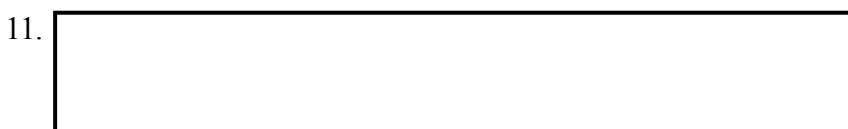


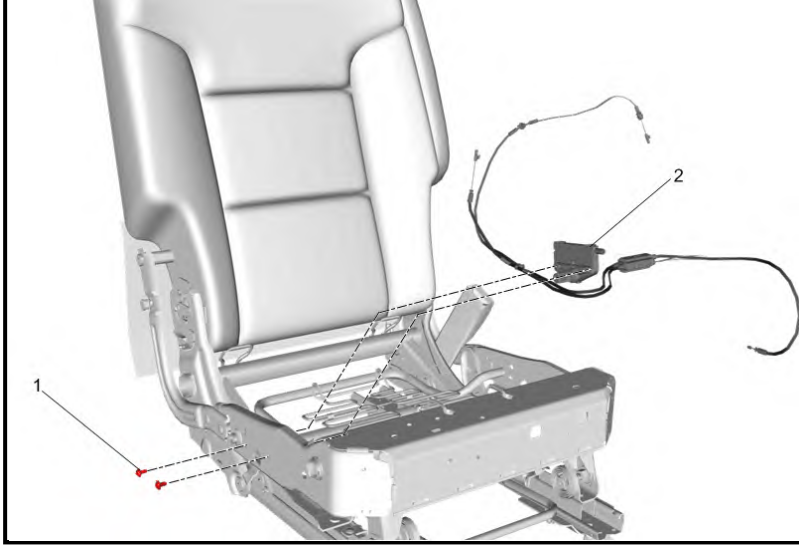

Rear Seat Inner Recliner Cable - Lower (2) - Install - [Rear Seat Inner Recliner Cable Replacement \(Lower\)](#)

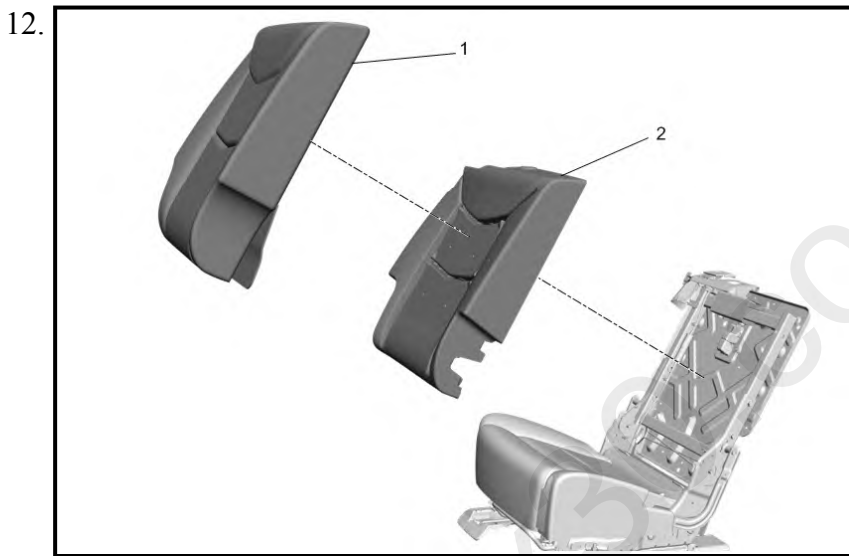


Rear Seat Back Cushion Cover and Pad (2) - Install - [Rear Seat Back Cushion Cover and Pad Replacement \(40%\)](#)

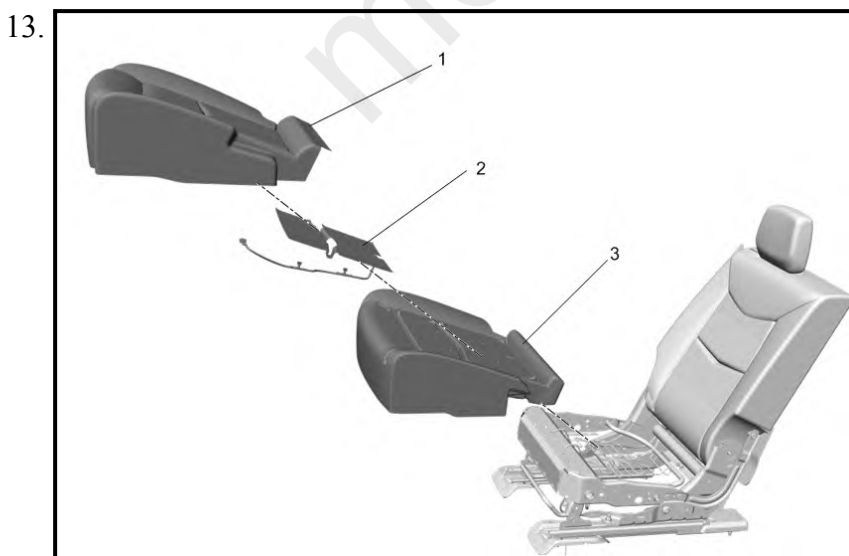


Rear Seat Cushion Cover and Pad (3) - Install - [Rear Seat Cushion Cover and Pad Replacement \(40%\)](#)

REAR SEAT CUSHION COVER AND PAD REPLACEMENT (BUCKET)

 
Removal Procedure



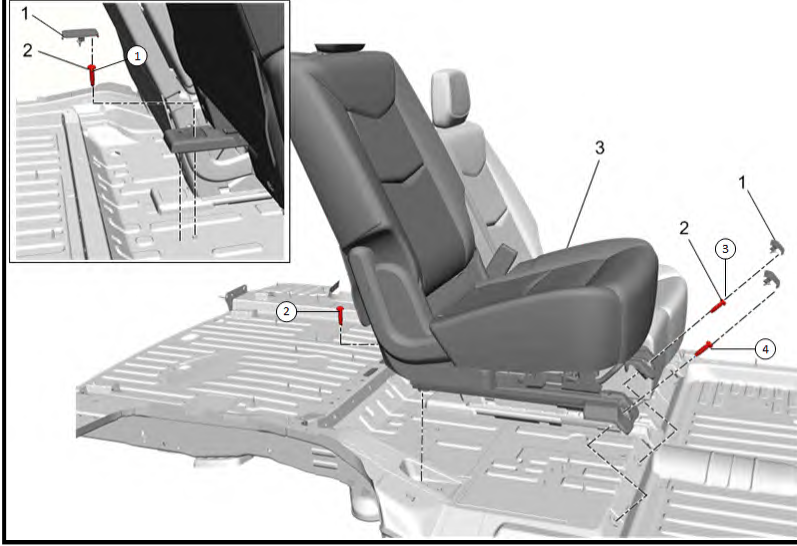

Rear Seat (3) - Remove - [Rear Seat Removal and Installation \(Bucket\)](#)

2. {If equipped} [Rear Seat Recliner Handle Replacement](#) - Remove

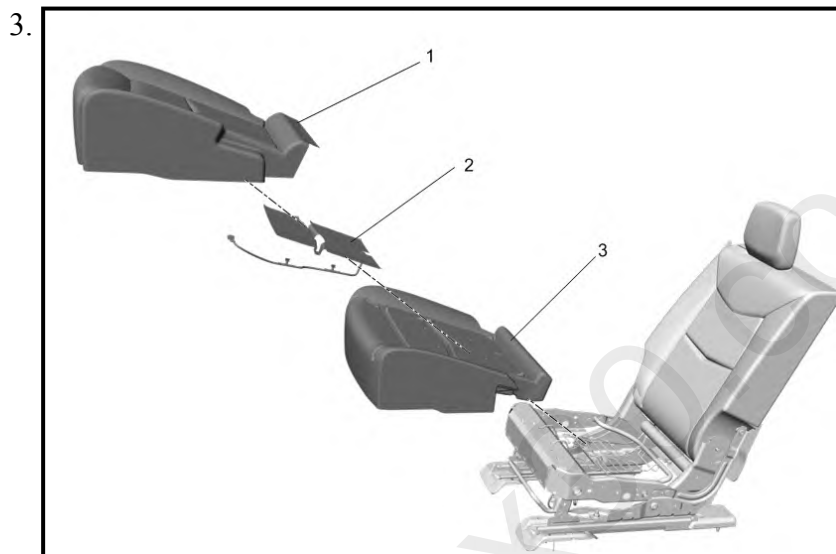


Disengage the J-channel retainers from the seat cushion frame.

4. Rear Seat Cushion Cover (1) - Remove

5. Rear Seat Cushion Heater (2) - Remove - [Rear Seat Cushion Heater Replacement](#)

6. Rear Seat Cushion Pad (3) - Remove

Installation Procedure

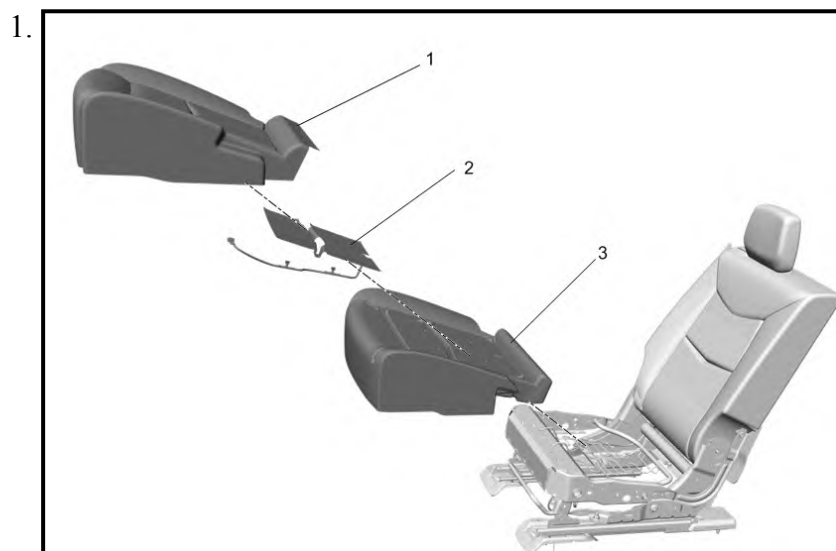


Rear Seat Cushion Pad (3) - Install

2. Rear Seat Cushion Heater (2) - Install - [Rear Seat Cushion Heater Replacement](#)

3. Rear Seat Cushion Cover (1) - Install

4. Connect the J-channel retainers.


5. {If equipped} [Rear Seat Recliner Handle Replacement](#) - Install

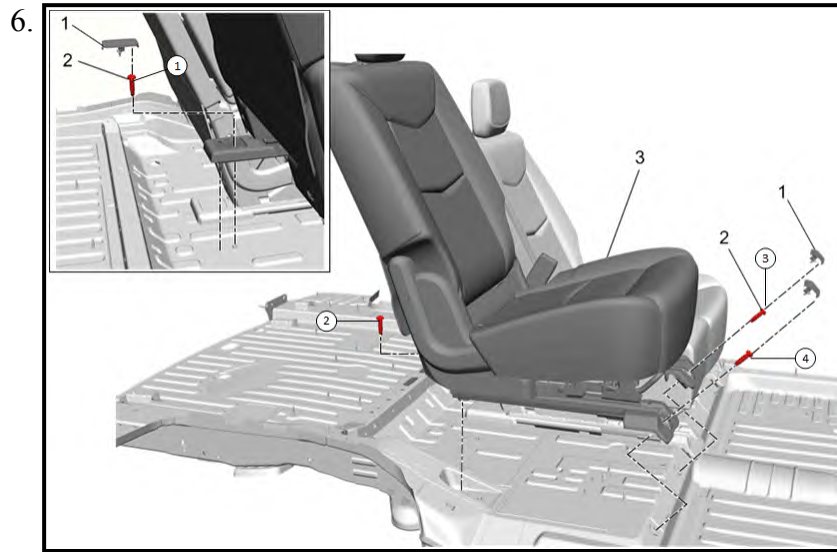


Rear Seat (3) - Install - [Rear Seat Removal and Installation \(Bucket\)](#)

REAR SEAT CUSHION COVER AND PAD REPLACEMENT (40%)


Removal Procedure

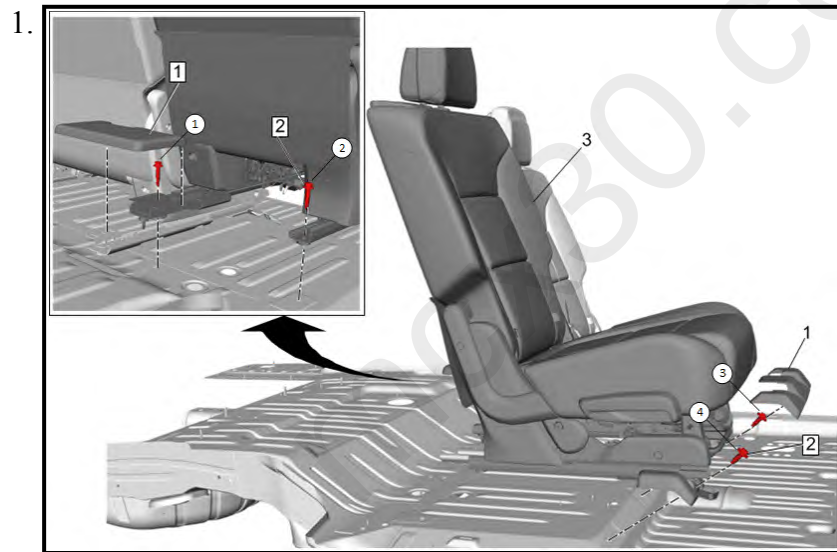

Rear Seat (3) - Remove - [Rear Seat Removal and Installation \(40%\)](#)

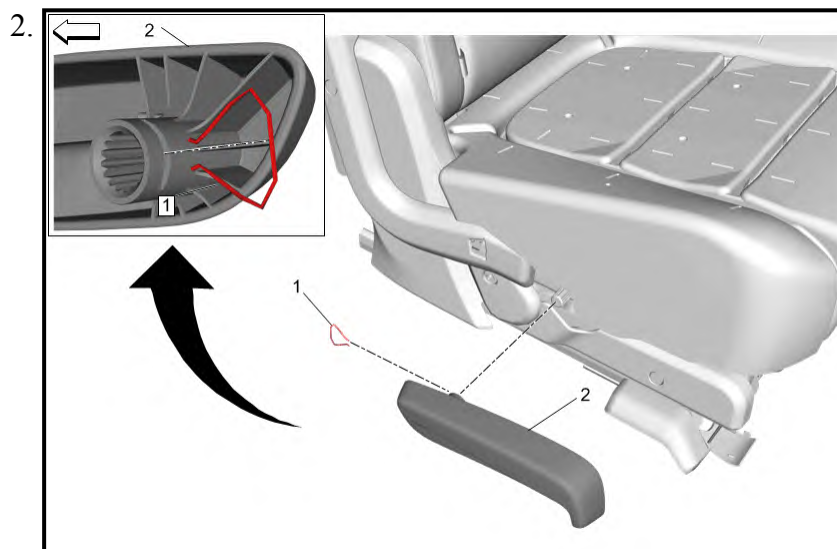

3.

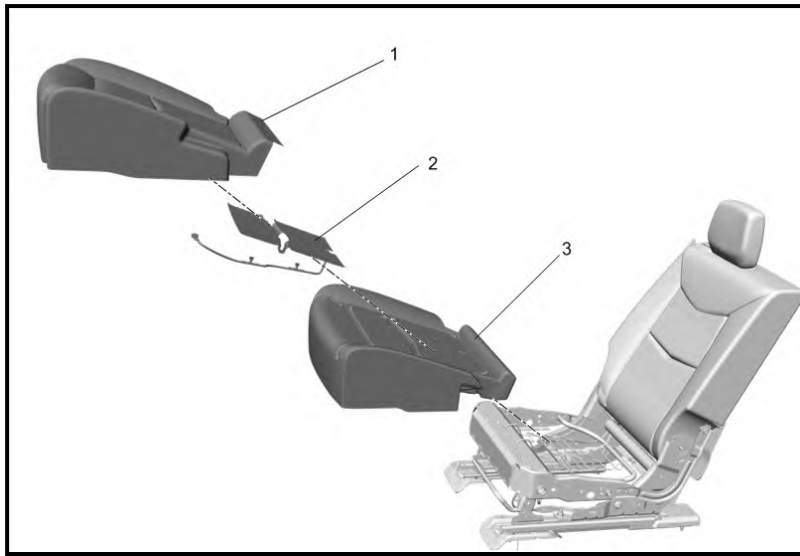

Disengage the J-channel retainers from the seat cushion frame.


4. Rear Seat Cushion Cover (1) - Remove

5. Rear Seat Cushion Heater (2) - Remove - [Rear Seat Cushion Heater Replacement](#)

6. Rear Seat Cushion Pad (3) - Remove

Installation Procedure

1.

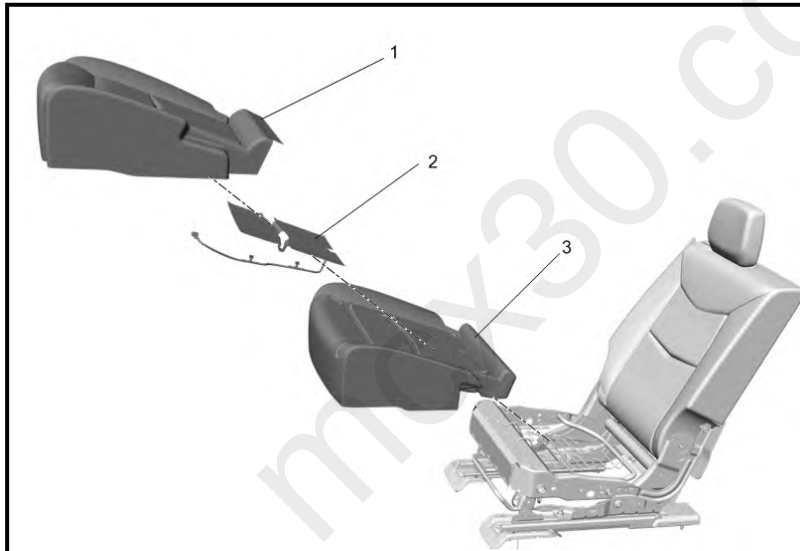

Rear Seat Cushion Pad (3) - Install


2. Rear Seat Cushion Heater (2) - Install - [Rear Seat Cushion Heater Replacement](#)

3. Rear Seat Cushion Cover (1) - Install


4. Connect the J-channel retainers.

5.



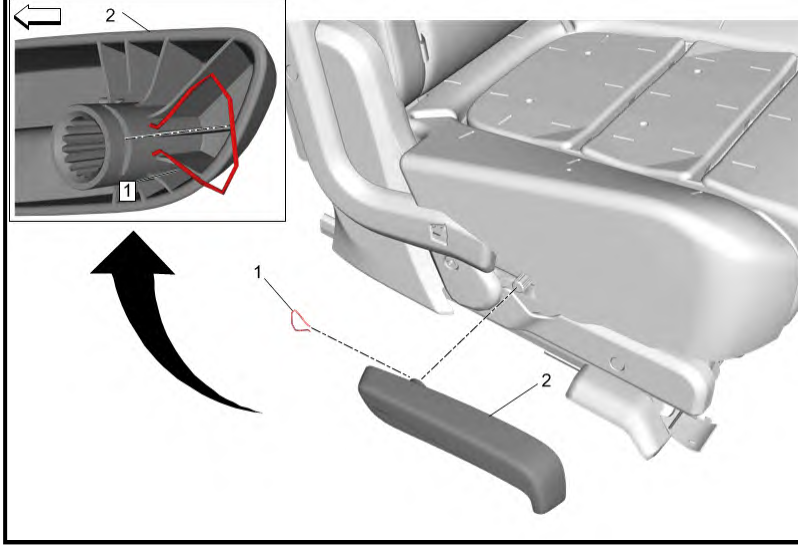

Rear Seat Recliner Handle (2) - Install - [Rear Seat Recliner Handle Replacement](#)

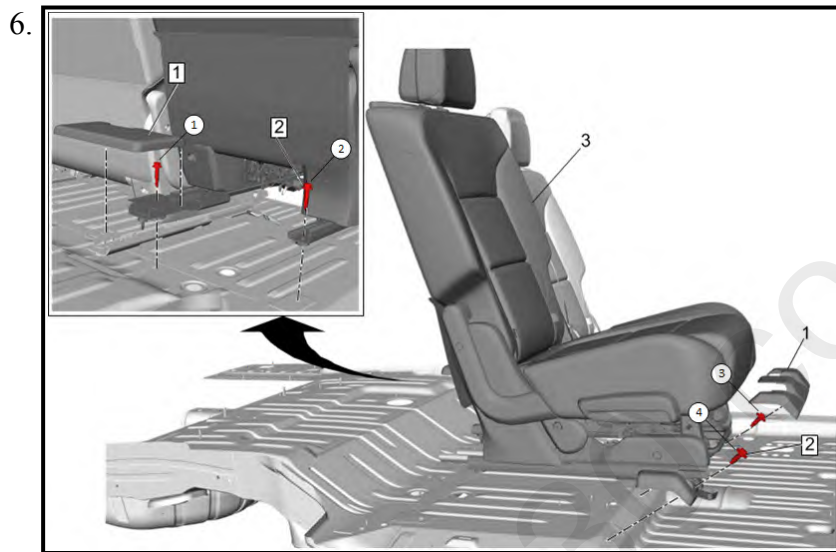

Rear Seat (3) - Install - [Rear Seat Removal and Installation \(40%\)](#)


REAR SEAT CUSHION COVER AND PAD REPLACEMENT (60%)

Removal Procedure




Rear Seat (3) - Remove - [Rear Seat Removal and Installation \(60%\)](#)



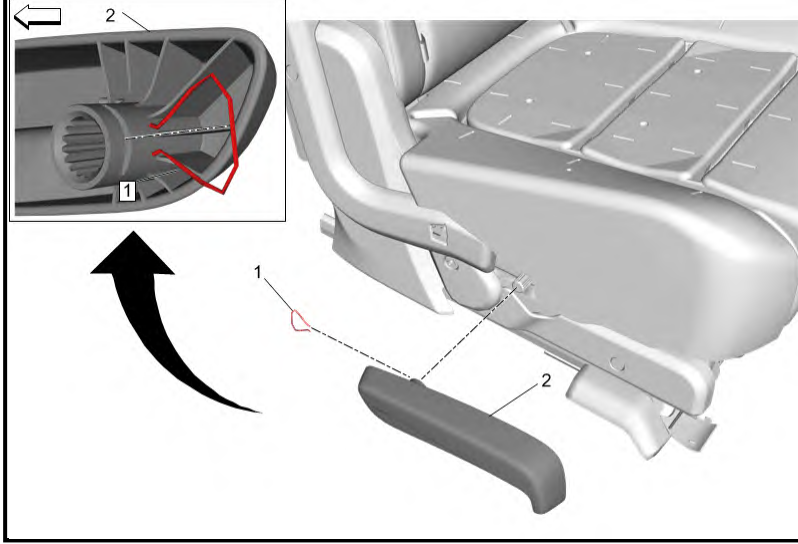

Rear Seat Recliner Handle (2) - Remove - [Rear Seat Recliner Handle Replacement](#)

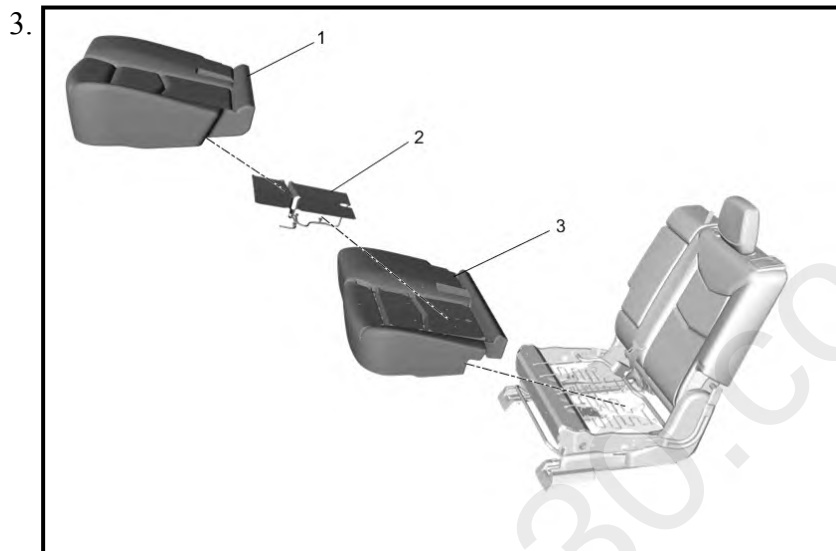


Disengage the J-channel retainers from the seat cushion frame.

4. Rear Seat Cushion Cover (1) - Remove

5. Rear Seat Cushion Heater (2) - Remove - [Rear Seat Cushion Heater Replacement](#)

6. Rear Seat Cushion Pad (3) - Remove

Installation Procedure

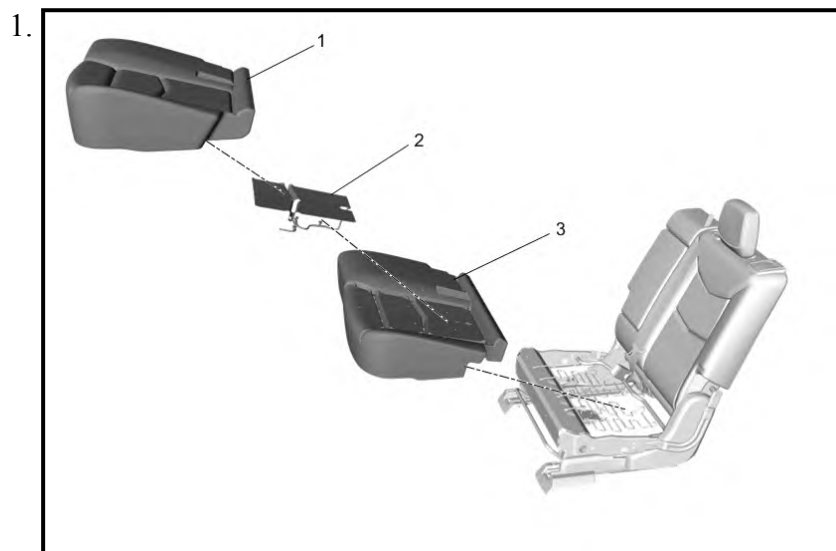


Rear Seat Cushion Pad (3) - Install

2. Rear Seat Cushion Heater (2) - Install - [Rear Seat Cushion Heater Replacement](#)

3. Rear Seat Cushion Cover (1) - Install

4. Connect the J-channel retainers.

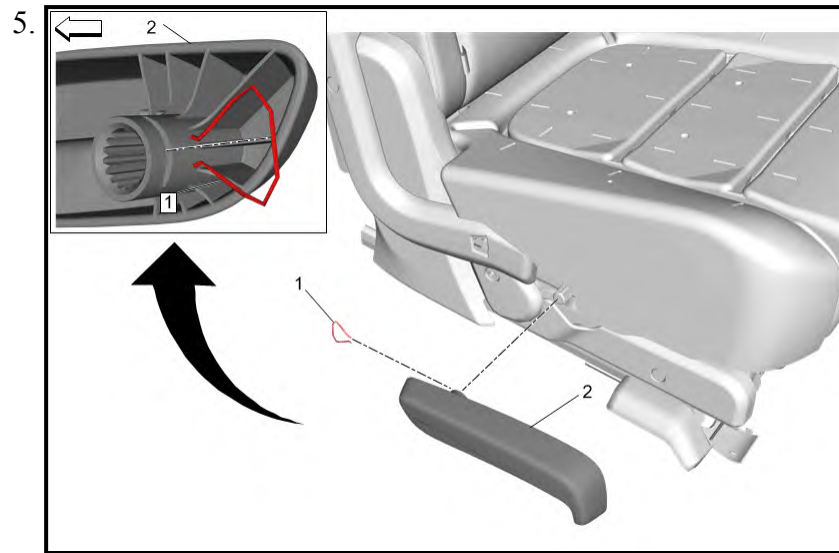


Rear Seat Recliner Handle (2) - Install - [Rear Seat Recliner Handle Replacement](#)



Rear Seat (3) - Install - [Rear Seat Removal and Installation \(60%\)](#)

REAR SEAT BELT OPENING BEZEL REPLACEMENT

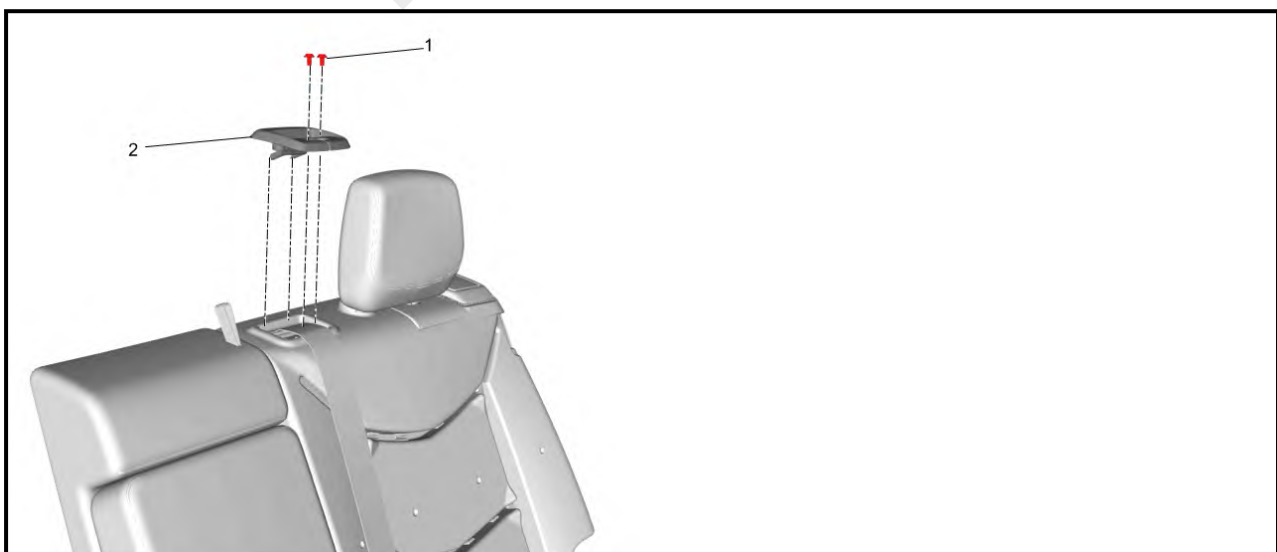


Callout	Component Name


Callout	Component Name
1	Rear Seat Belt Opening Bezel Fastener [2x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Rear Seat Belt Opening Bezel

REAR SEAT BACK CUSHION COVER AND PAD REPLACEMENT (40%)

Removal Procedure

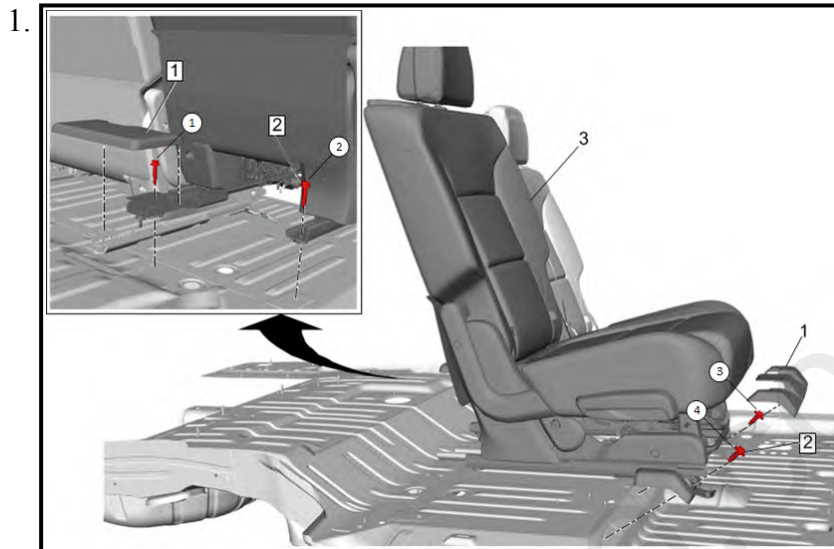


Rear Seat (3) - Remove - [Rear Seat Removal and Installation \(40%\)](#)

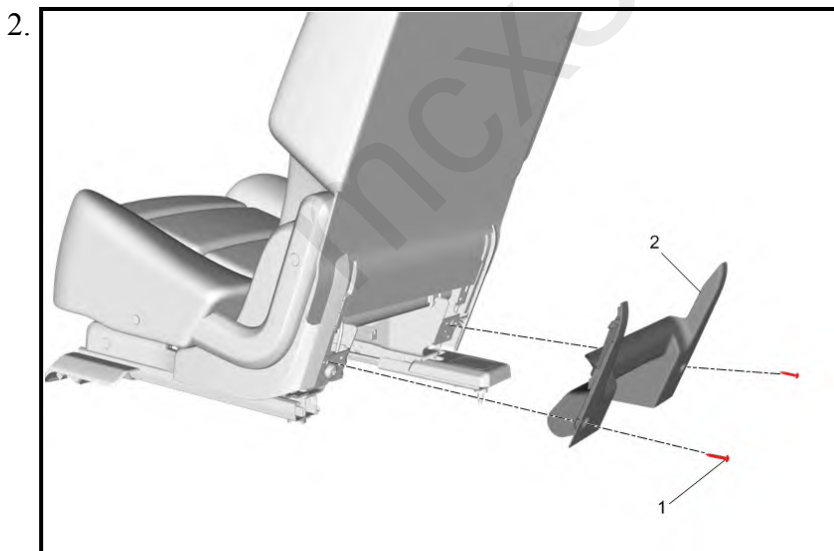


Rear Seat Back Center Bar Front Finish Cover (2) - Remove - [Rear Seat Back Center Bar Front Finish Cover Replacement \(40%\)](#)




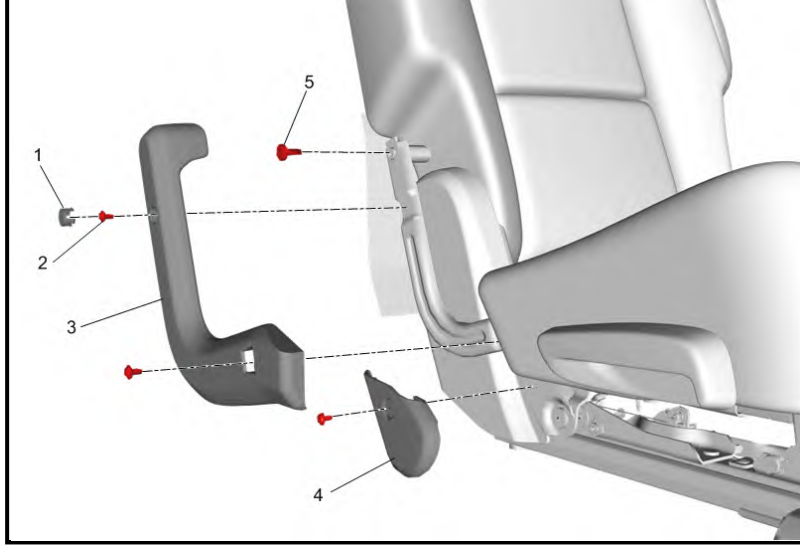

Rear Seat Outer Hinge Finish Cover (3) - Remove - [Rear Seat Outer Hinge Finish Cover Replacement \(40%\)](#)

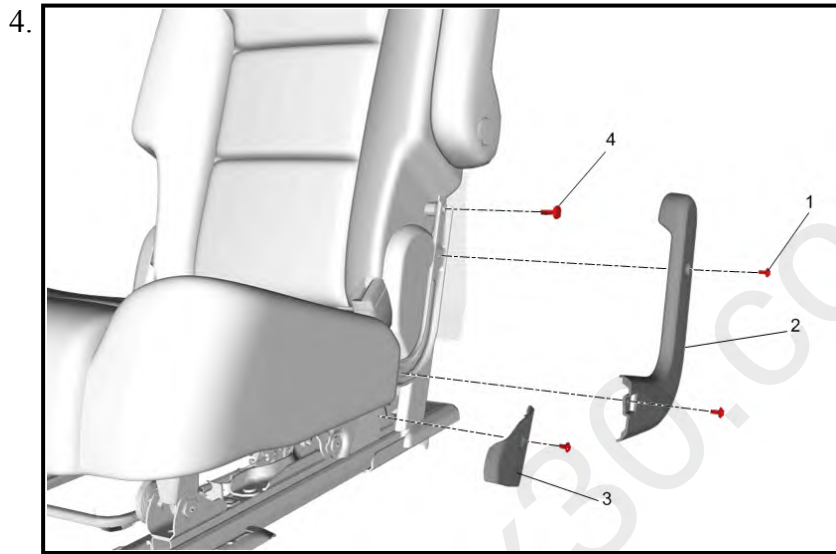

Rear Seat Inner Hinge Finish Cover (2) - Remove - [Rear Seat Inner Hinge Finish Cover Replacement \(40%\)](#)

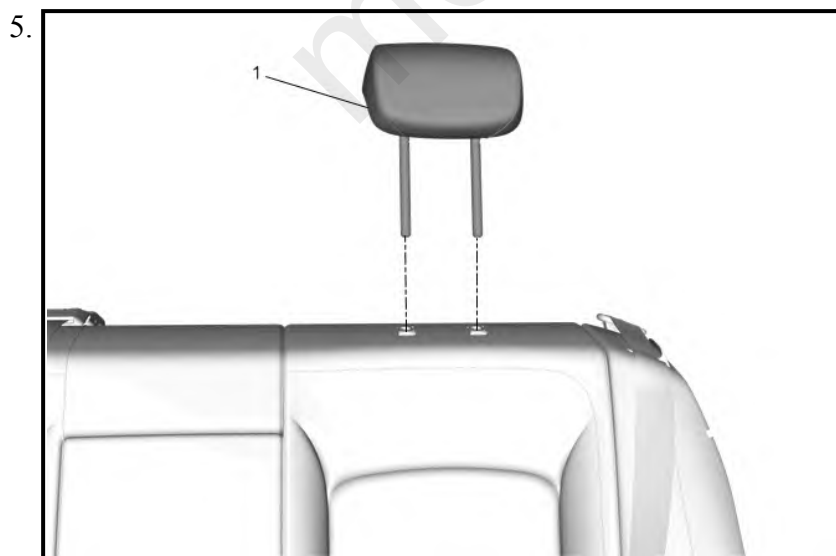


Rear Seat Head Restraint (1) - Remove - [Rear Seat Head Restraint Replacement](#)






Rear Seat Head Restraint Guide (1) - Remove - [Rear Seat Head Restraint Guide Replacement](#)

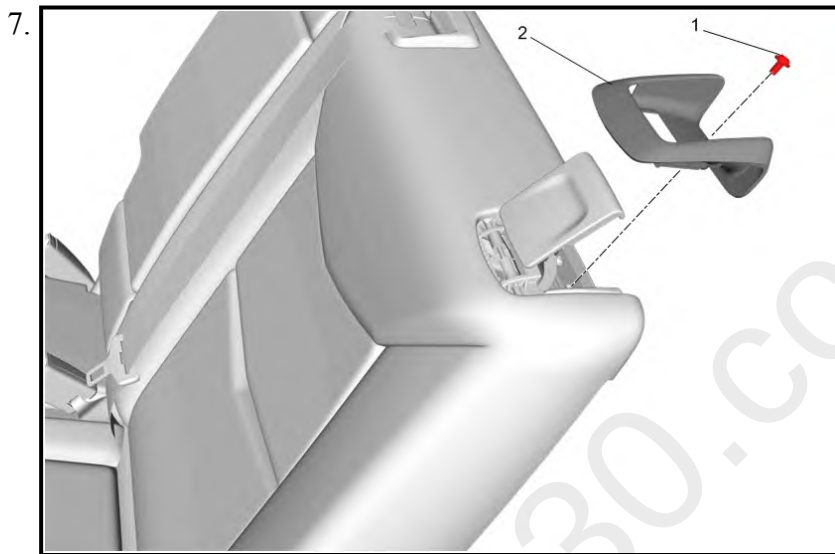

Rear Seat Back Cushion Latch Release Handle Bezel (2) - Remove - [Rear Seat Back Latch Release Handle Bezel Replacement \(40/60 Bench\)](#)

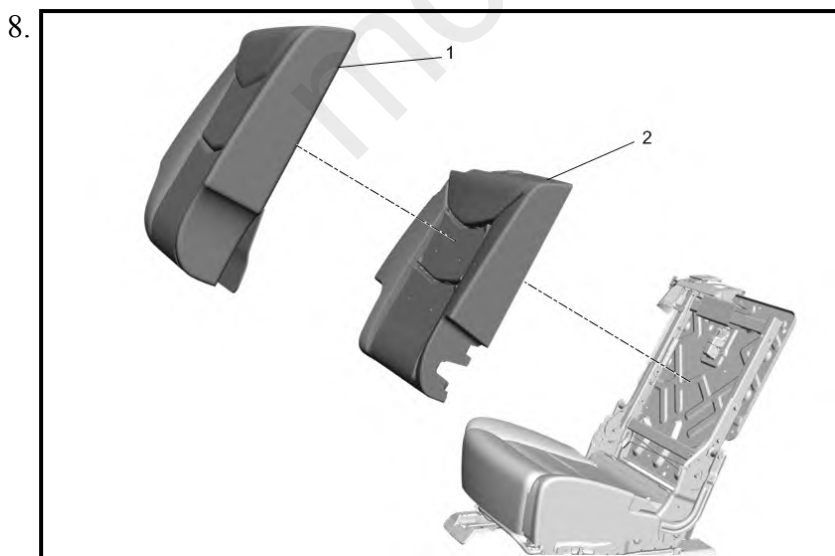


Unzip the zippers.

9. Disengage the J-channel retainers from the seat back cushion frame.

10. Rear Seat Back Cushion Cover (1) - Remove

11. Rear Seat Back Cushion Pad (2) - Remove

Installation Procedure

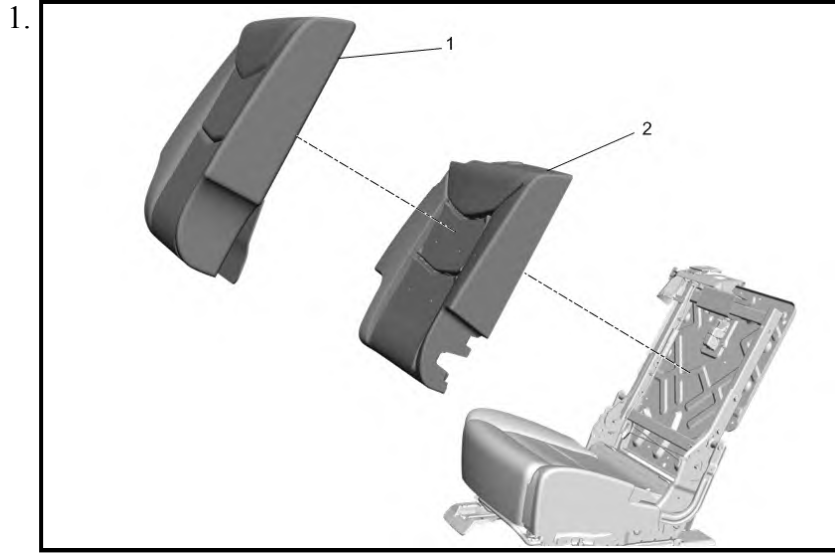


Rear Seat Back Cushion Pad (2) - Install


2. Rear Seat Back Cushion Cover (1) - Install

3. Connect the J-channel retainers.

4. Close the zippers.

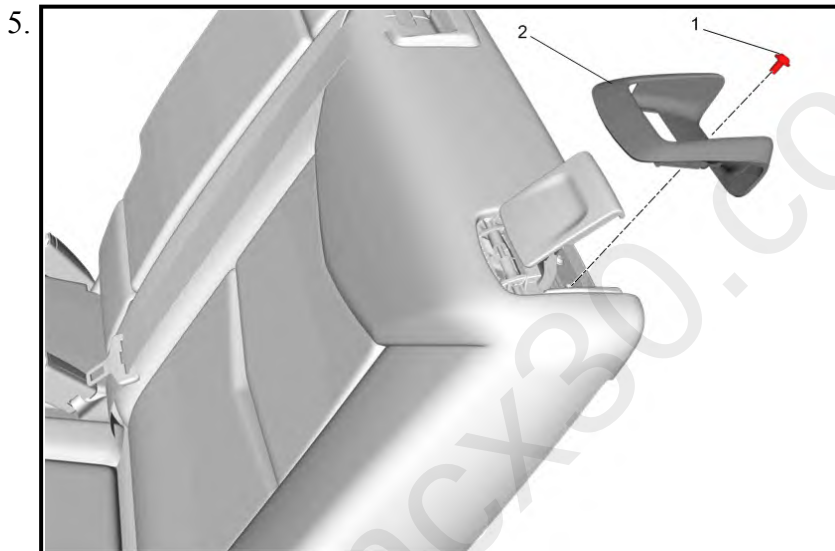


Rear Seat Back Cushion Latch Release Handle Bezel (2) - Install - [Rear Seat Back Latch Release Handle Bezel Replacement \(40/60 Bench\)](#)

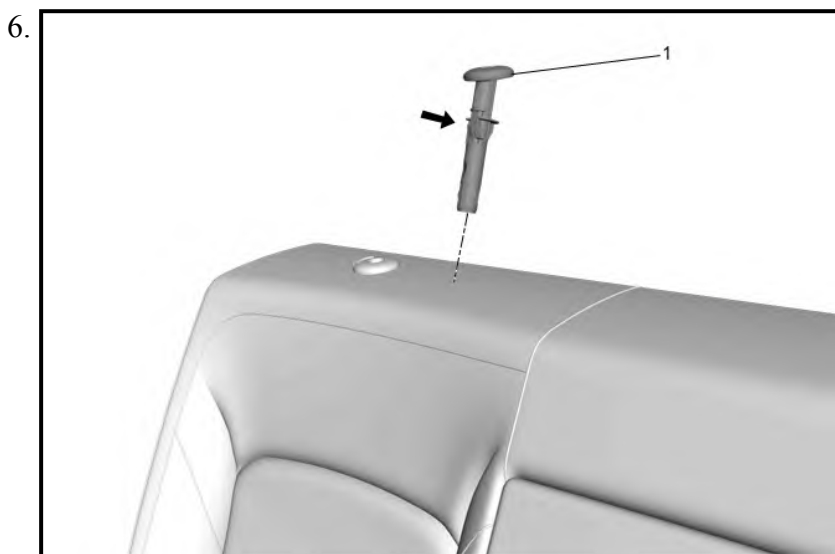


Rear Seat Head Restraint Guide (1) - Install - [Rear Seat Head Restraint Guide Replacement](#)




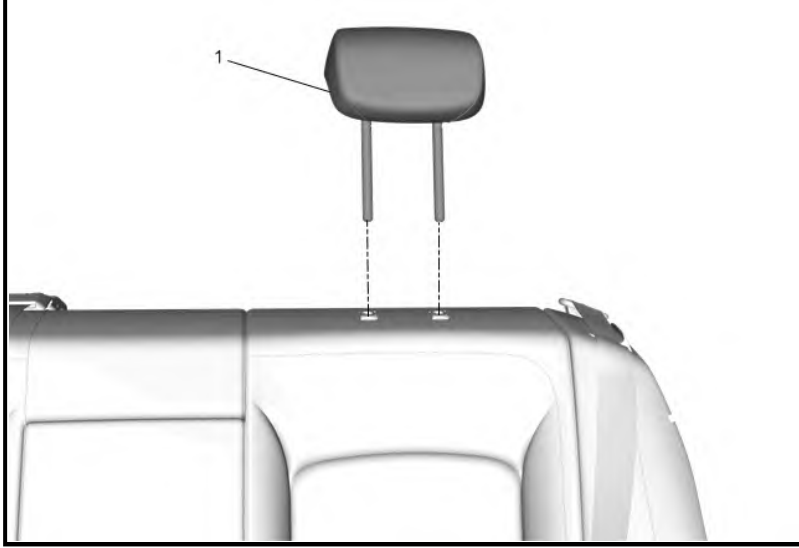

Rear Seat Head Restraint (1) - Install - [Rear Seat Head Restraint Replacement](#)

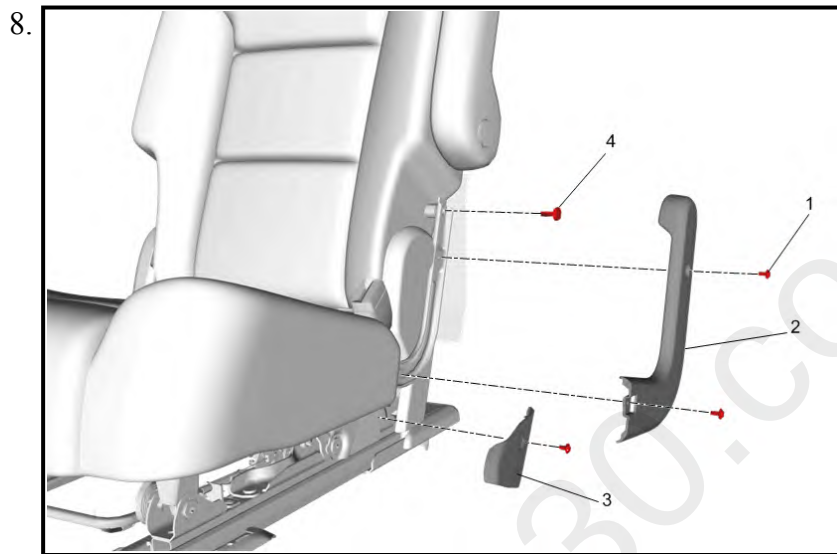


Rear Seat Inner Hinge Finish Cover (2) - Install - [Rear Seat Inner Hinge Finish Cover Replacement \(40%\)](#)

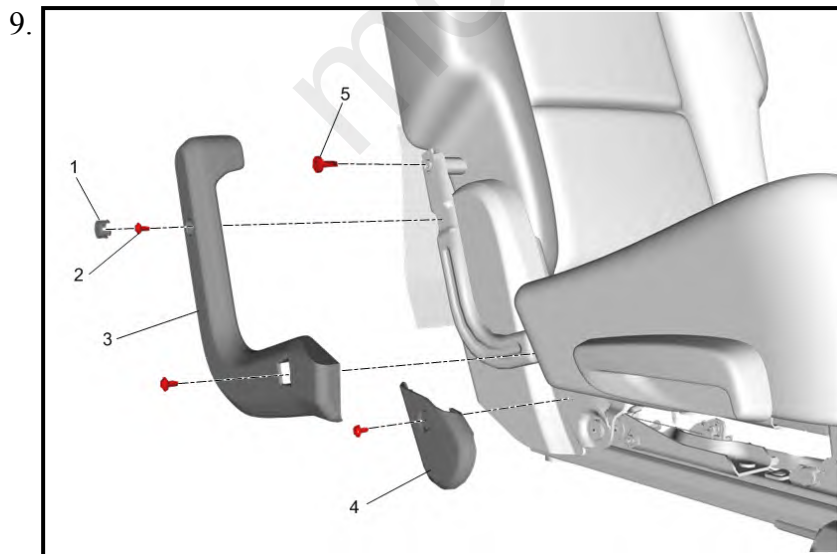


Rear Seat Outer Hinge Finish Cover (3) - Install - [Rear Seat Outer Hinge Finish Cover Replacement \(40%\)](#)



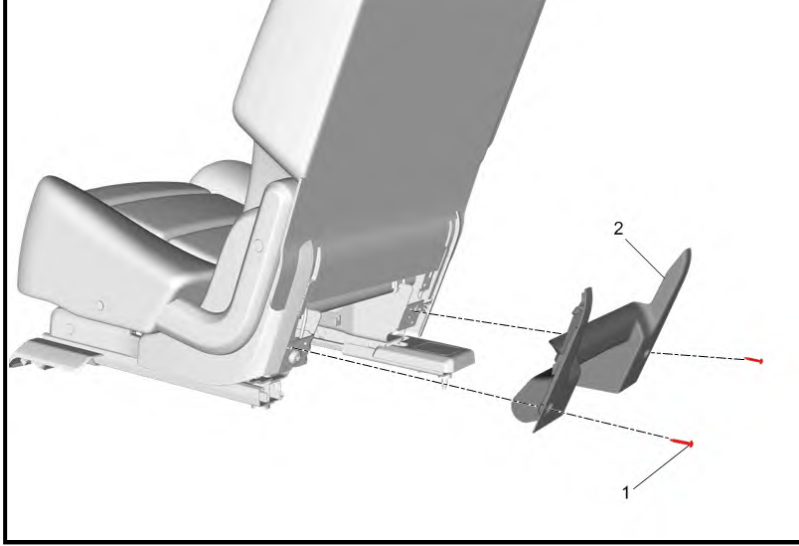

Rear Seat Back Center Bar Front Finish Cover (2) - Install - [Rear Seat Back Center Bar Front Finish Cover Replacement \(40%\)](#)

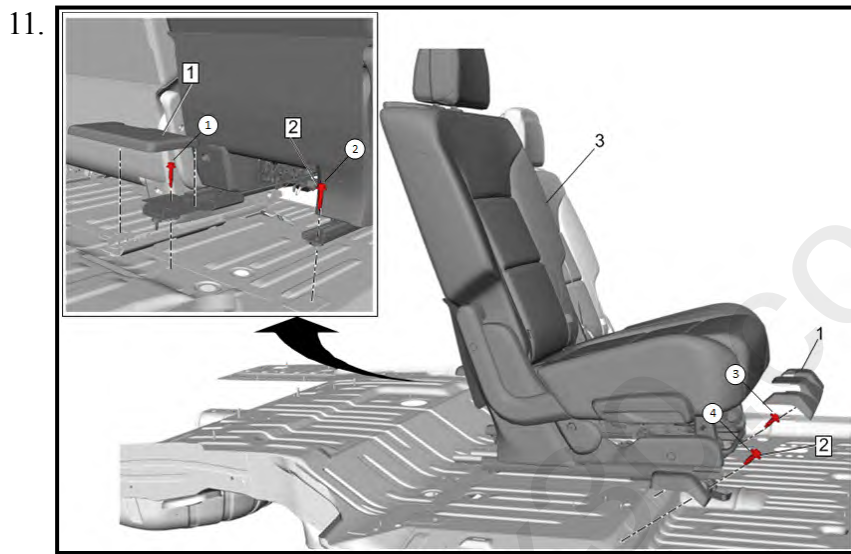


Rear Seat (3) - Install - [Rear Seat Removal and Installation \(40%\)](#)


REAR SEAT BACK CUSHION COVER AND PAD REPLACEMENT (60%)

Removal Procedure



Rear Seat (3) - Remove - [Rear Seat Removal and Installation \(60%\)](#)

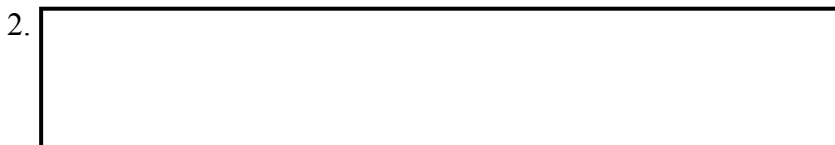


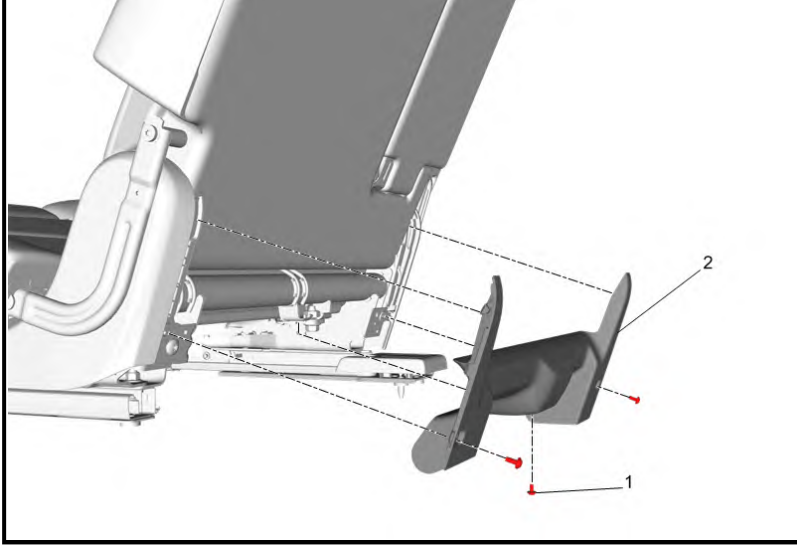

Rear Seat Back Center Bar Front Finish Cover (2) - Remove - [Rear Seat Back Center Bar Front Finish Cover Replacement \(60%\)](#)




Rear Seat Outer Hinge Finish Cover (3) - Remove - [Rear Seat Outer Hinge Finish Cover Replacement \(60%\)](#)

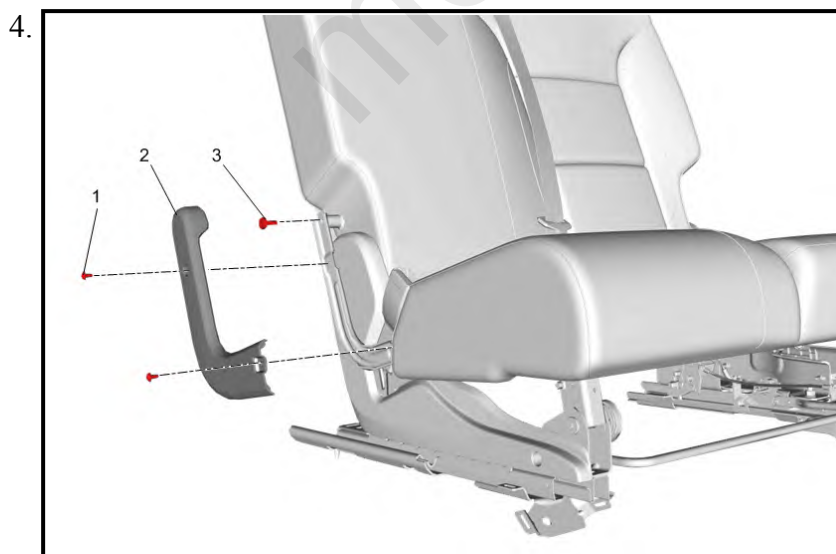


Rear Seat Inner Hinge Finish Cover (2) - Remove - [Rear Seat Inner Hinge Finish Cover Replacement \(60%\)](#)




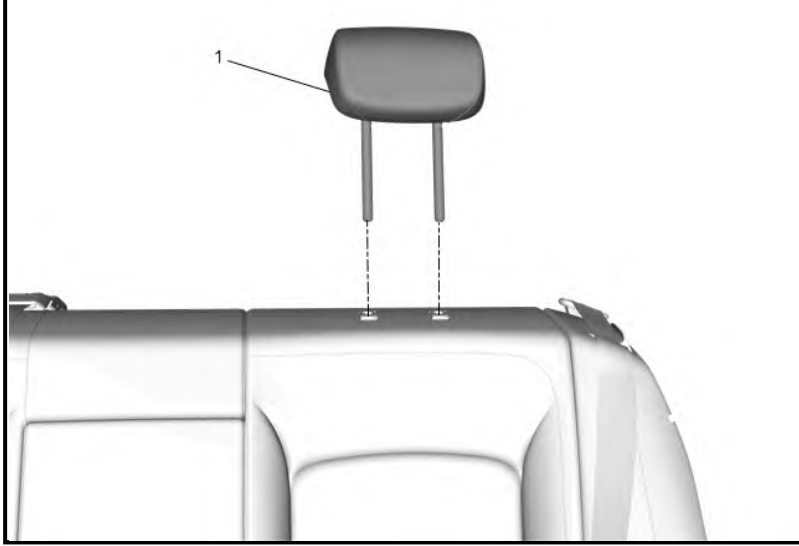

Rear Seat Head Restraint (1) - Remove - [Rear Seat Head Restraint Replacement](#)

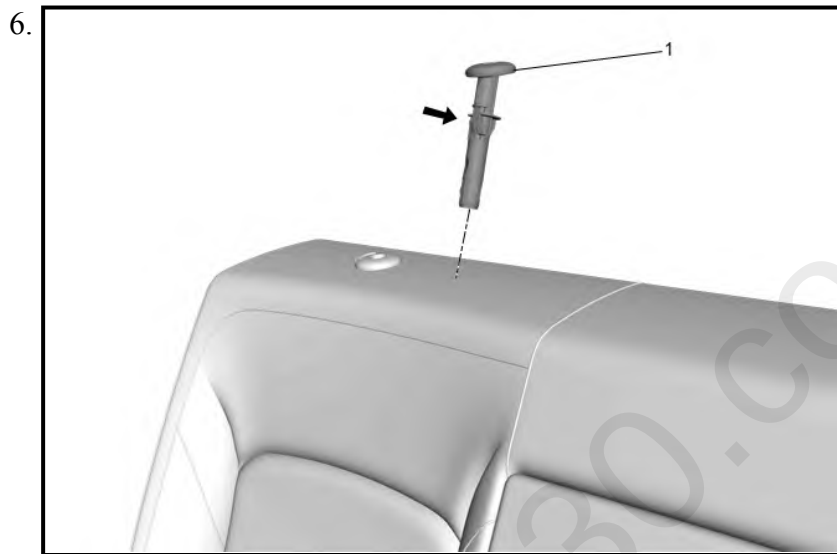


Rear Seat Head Restraint Guide (1) - Remove - [Rear Seat Head Restraint Guide Replacement](#)

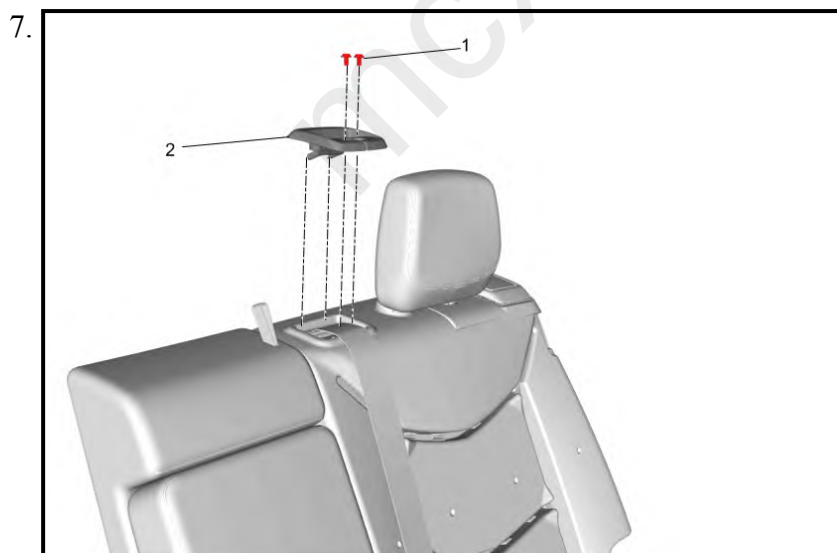


Rear Seat Belt Opening Bezel (2) - Remove - [Rear Seat Belt Opening Bezel Replacement](#)




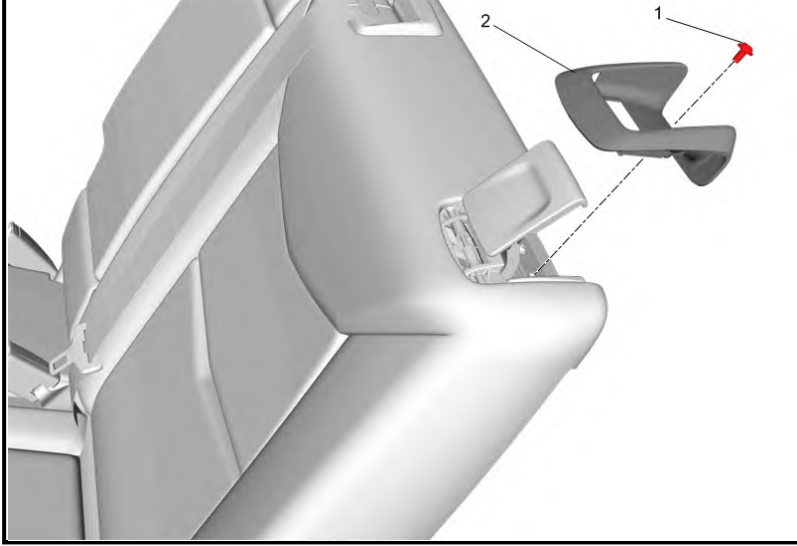

Rear Seat Back Cushion Latch Release Handle Bezel (2) - Remove - [Rear Seat Back Latch Release Handle Bezel Replacement \(40/60 Bench\)](#)

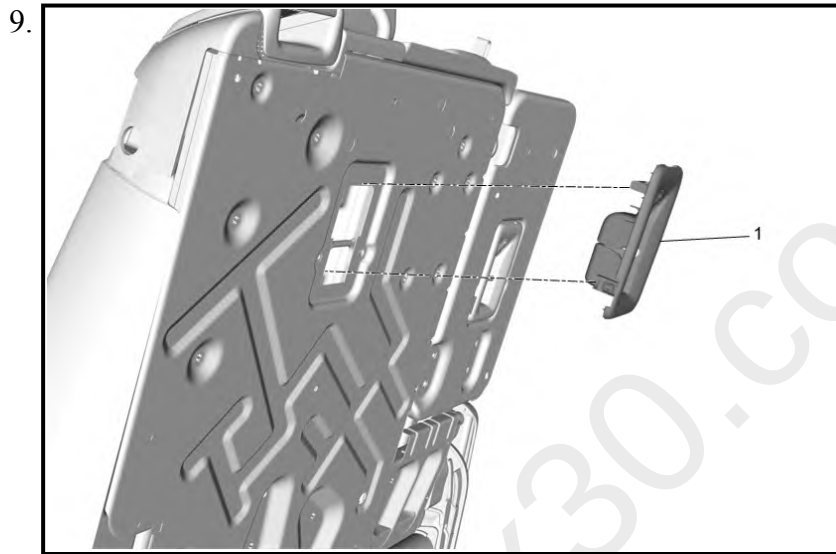

Rear Seat Anchor Plate Bezel (1) - Remove - [Rear Seat Anchor Plate Bezel Replacement](#)

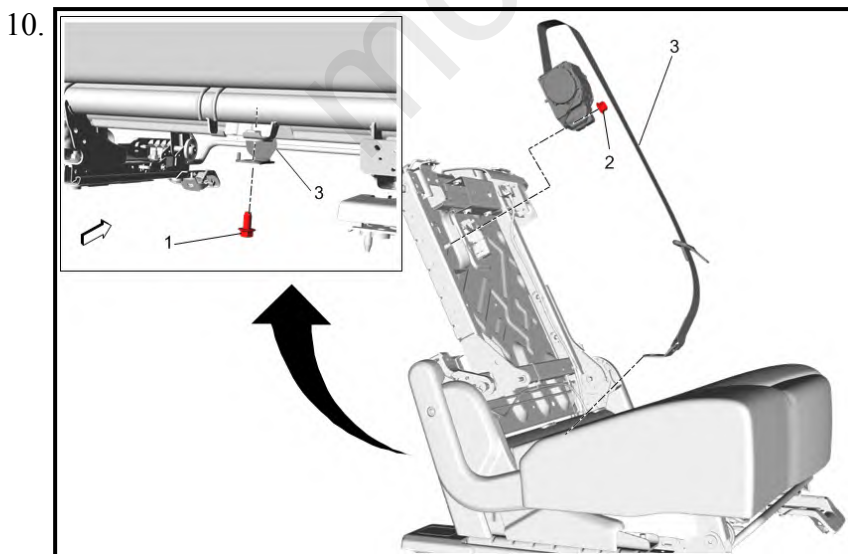

Rear Seat Belt Buckle Bolt (1) - Remove

11. Rear Center Seat Belt Retractor (3) - Reposition - [Rear Center Seat Belt Retractor Replacement](#)






Unzip the zippers.

13. Disengage the J-channel retainers from the seat back cushion frame.

14. Rear Seat Back Cushion Cover (1) - Remove

15. Rear Seat Back Cushion Pad (2) - Remove

Installation Procedure

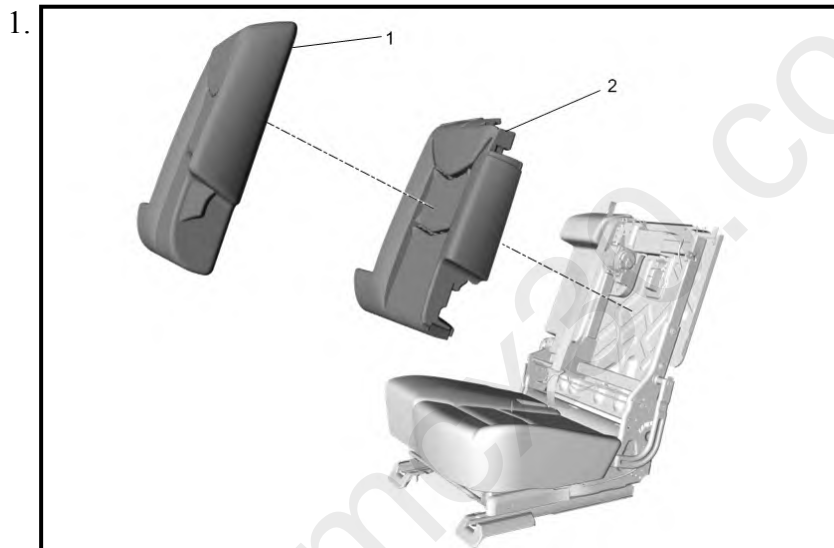


Rear Seat Back Cushion Pad (2) - Install

2. Rear Seat Back Cushion Cover (1) - Install


3. Connect the J-channel retainers.

4. Close the zippers.

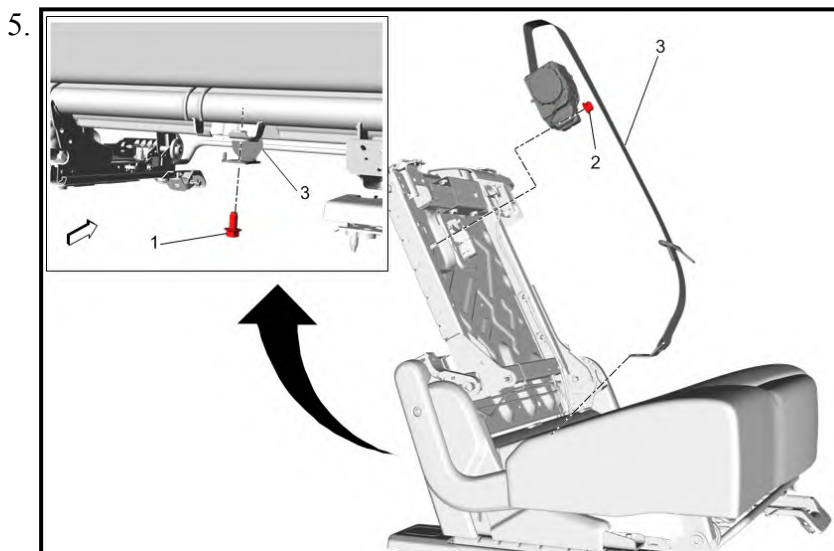


Rear Center Seat Belt Retractor (3) - Install


6. Rear Seat Belt Buckle Bolt (1) - Install and tighten - [Rear Center Seat Belt Retractor Replacement](#)

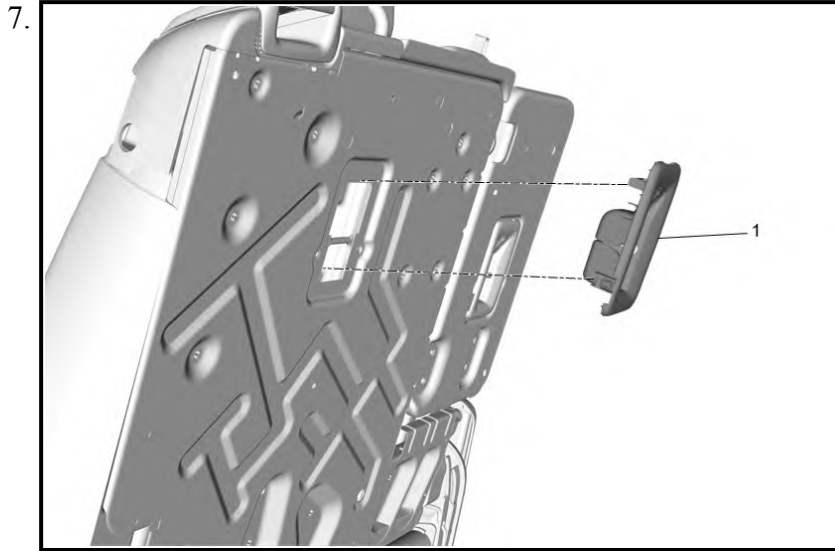

Rear Seat Anchor Plate Bezel (1) - Install - [Rear Seat Anchor Plate Bezel Replacement](#)

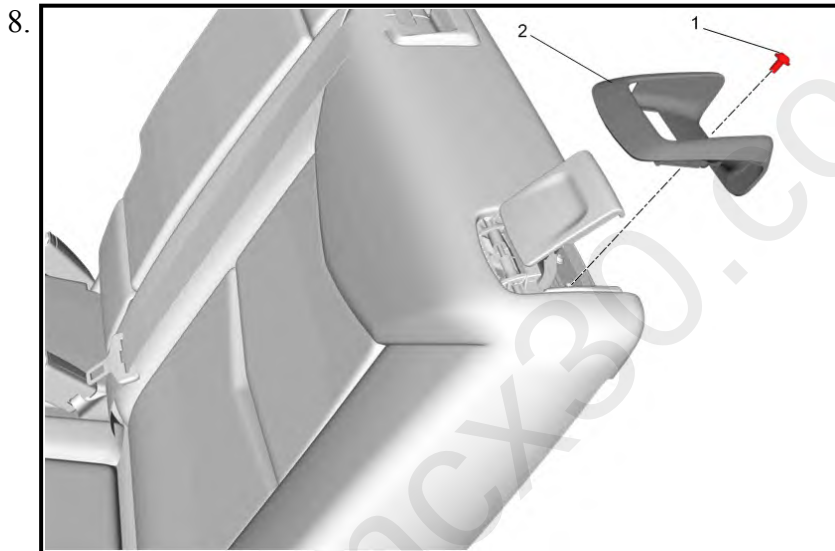

Rear Seat Back Cushion Latch Release Handle Bezel (2) - Install - [Rear Seat Back Latch Release Handle Bezel Replacement \(40/60 Bench\)](#)

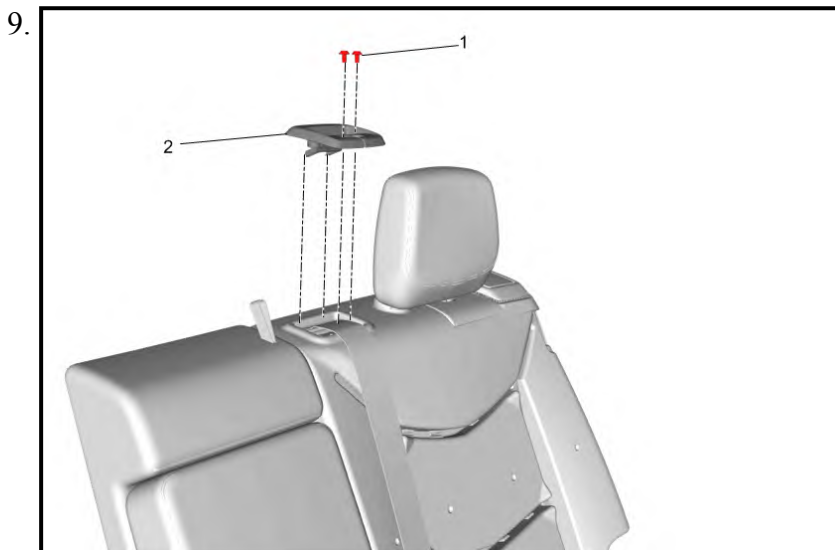


Rear Seat Belt Opening Bezel (2) - Install - [Rear Seat Belt Opening Bezel Replacement](#)






Rear Seat Head Restraint Guide (1) - Install - [Rear Seat Head Restraint Guide Replacement](#)

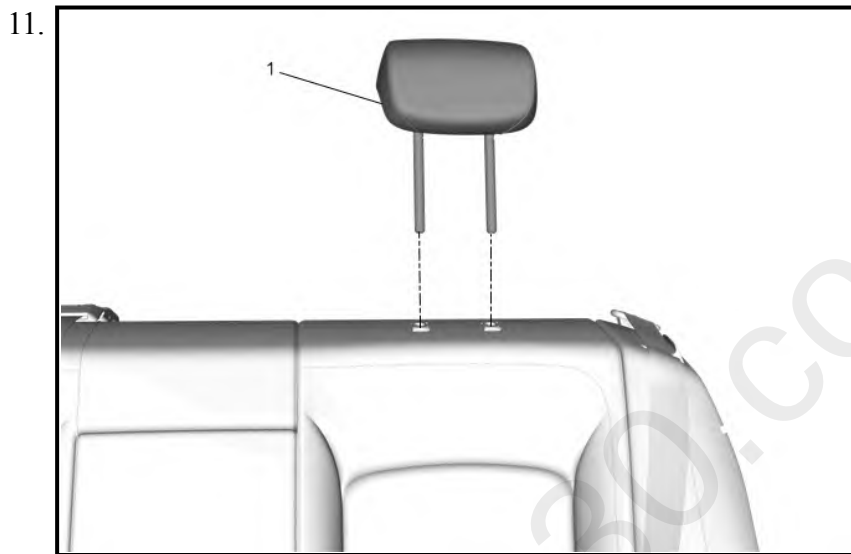


Rear Seat Head Restraint (1) - Install - [Rear Seat Head Restraint Replacement](#)

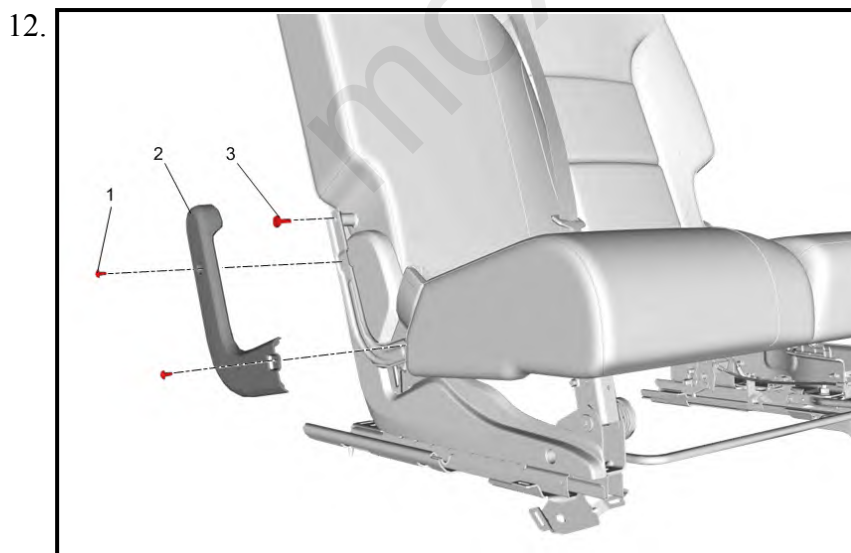


Rear Seat Inner Hinge Finish Cover (2) - Install - [Rear Seat Inner Hinge Finish Cover Replacement \(60%\)](#)



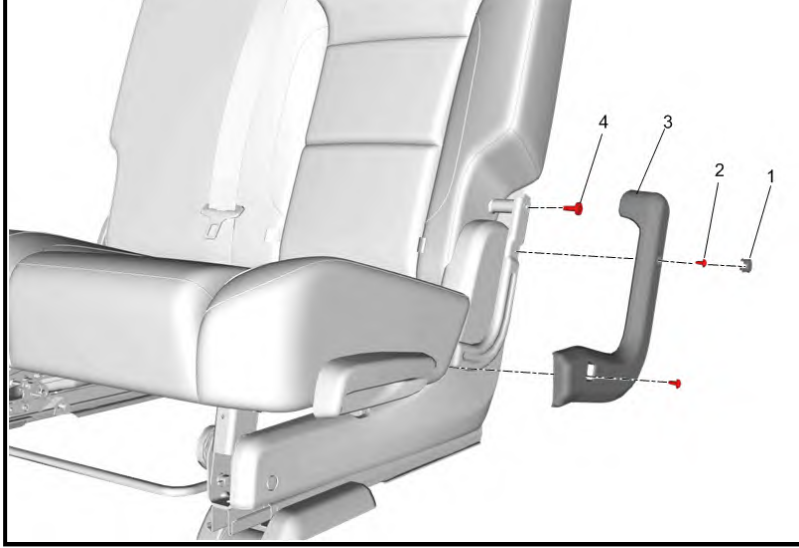

Rear Seat Outer Hinge Finish Cover (3) - Install - [Rear Seat Outer Hinge Finish Cover Replacement \(60%\)](#)

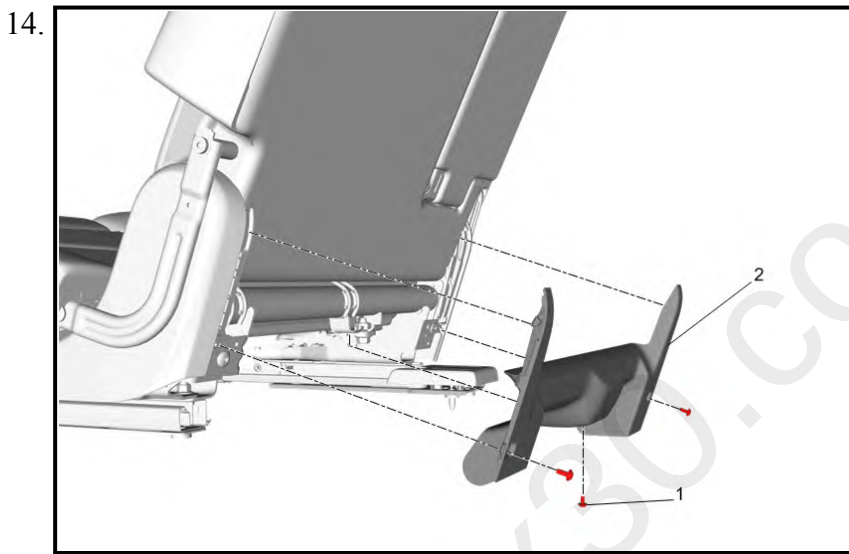

Rear Seat Back Center Bar Front Finish Cover (2) - Install - [Rear Seat Back Center Bar Front Finish Cover Replacement \(60%\)](#)




Rear Seat (3) - Install - [Rear Seat Removal and Installation \(60%\)](#)


REAR SEAT BACK CUSHION COVER AND PAD REPLACEMENT (BUCKET)

Removal Procedure




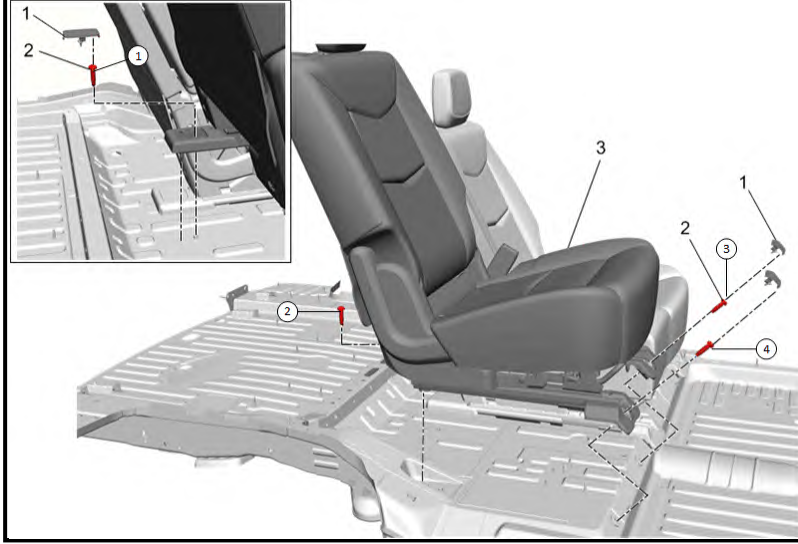


Rear Seat (3) - Remove - [Rear Seat Removal and Installation \(Bucket\)](#)

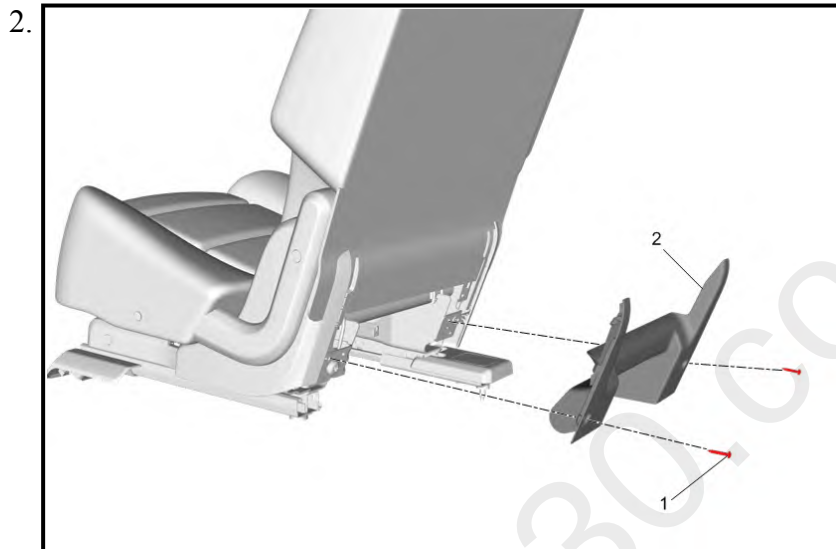


Rear Seat Back Center Bar Front Finish Cover (2) - Remove - [Rear Seat Back Center Bar Front Finish Cover Replacement \(Bucket\)](#)

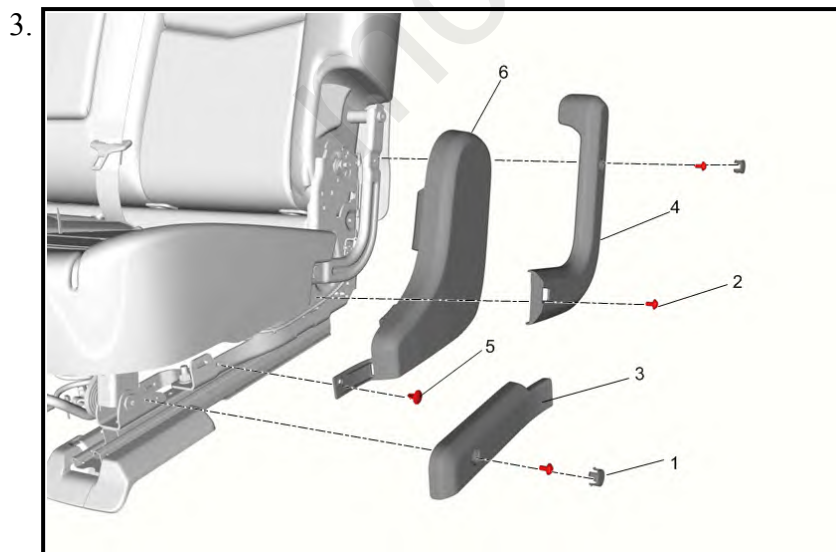


 Rear Seat Outer Hinge Finish Cover (3, 4, 6) - Remove - [Rear Seat Outer Hinge Finish Cover Replacement \(Left Bucket\)](#)[Rear Seat Outer Hinge Finish Cover Replacement \(Right Bucket\)](#)




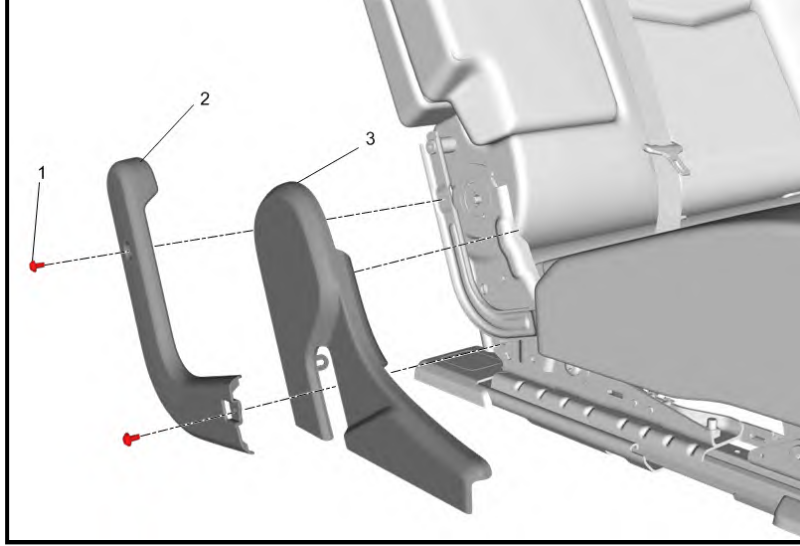

Rear Seat Inner Hinge Finish Cover (2, 3) - Remove - [Rear Seat Inner Hinge Finish Cover Replacement \(Left Bucket\)](#)[Rear Seat Inner Hinge Finish Cover Replacement \(Right Bucket\)](#)

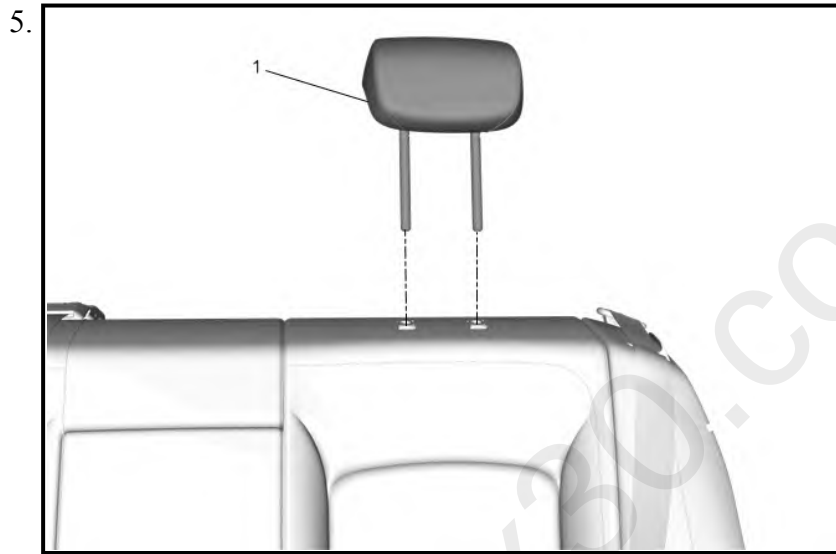


Rear Seat Head Restraint (1) - Remove - [Rear Seat Head Restraint Replacement](#)

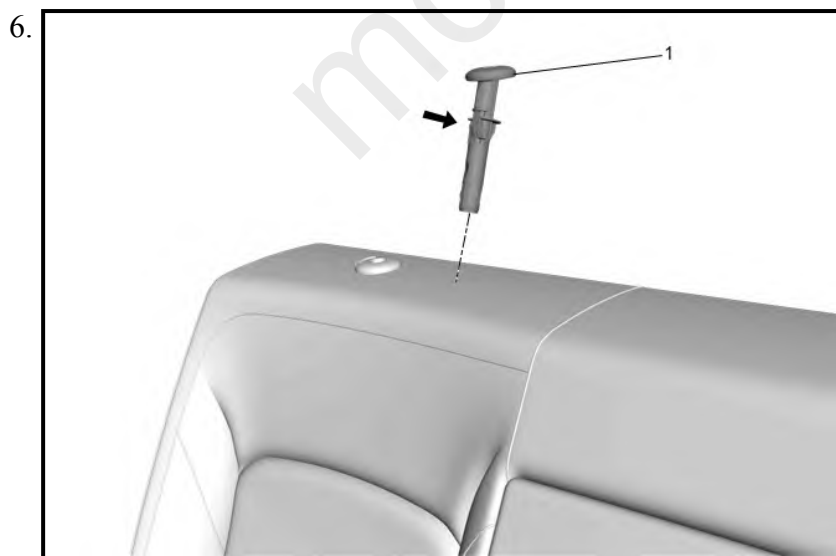


Rear Seat Head Restraint Guide (1) - Remove - [Rear Seat Head Restraint Guide Replacement](#)




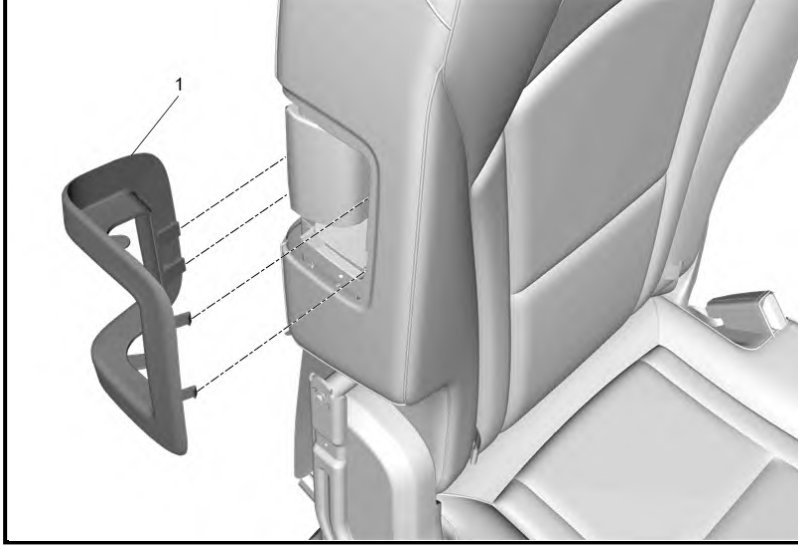

Rear Seat Back Latch Release Handle Bezel (1) - Remove - [Rear Seat Back Latch Release Handle Bezel Replacement \(Bucket\)](#)

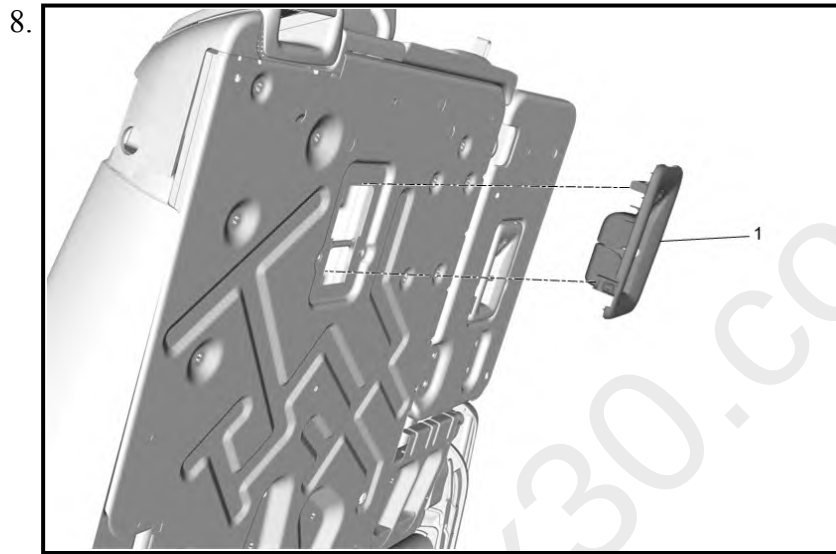


Rear Seat Anchor Plate Bezel (1) - Remove - [Rear Seat Anchor Plate Bezel Replacement](#)

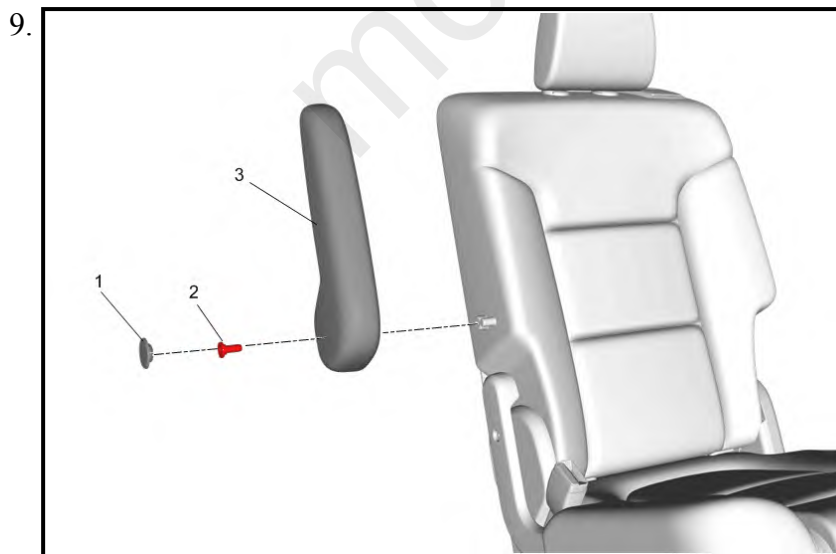

Rear Seat Armrest (3) - Remove - [Rear Seat Armrest Replacement \(Bucket\)](#)




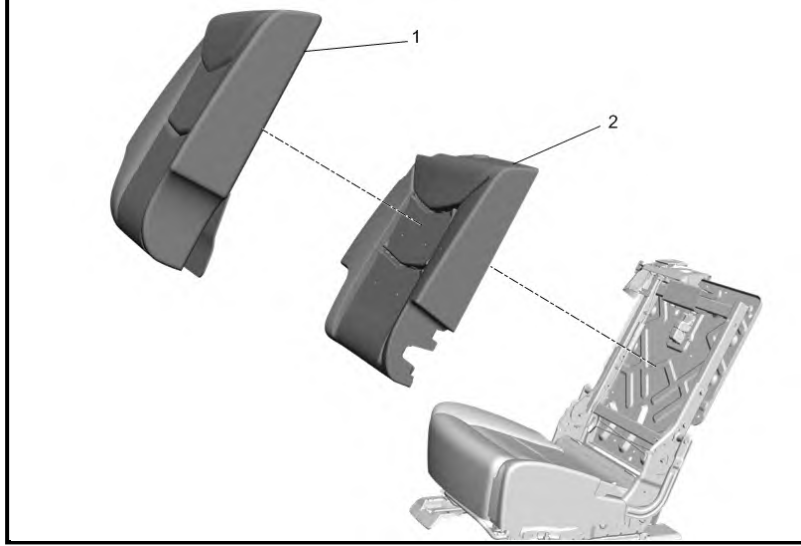

Unzip the zippers.

11. Disengage the J-channel retainers from the seat back cushion frame.
12. Remove the push in retainers.
13. Rear Seat Back Cushion Cover (1) - Remove
14. Rear Seat Back Cushion Pad (2) - Remove


Installation Procedure

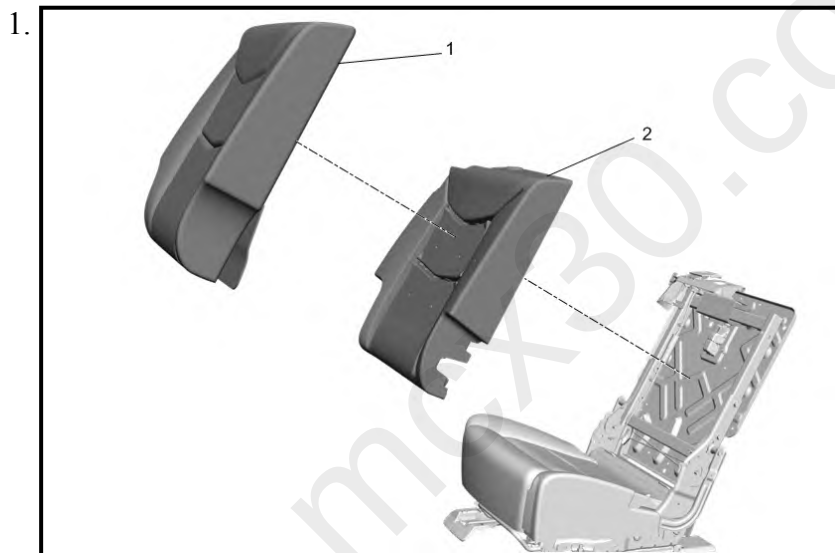


Rear Seat Back Cushion Pad (2) - Install

2. Rear Seat Back Cushion Cover (1) - Install
3. Install the push in retainers.
4. Connect the J-channel retainers.
5. Close the zippers.




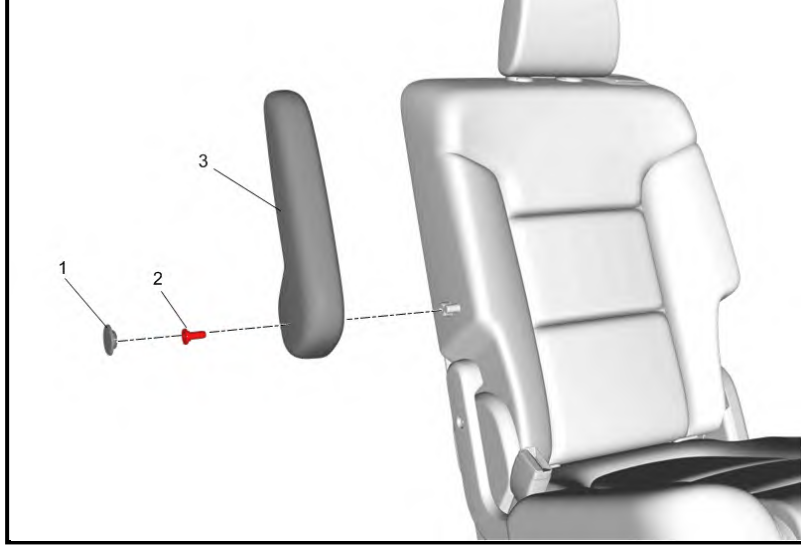

Rear Seat Armrest (3) - Install - [Rear Seat Armrest Replacement \(Bucket\)](#)

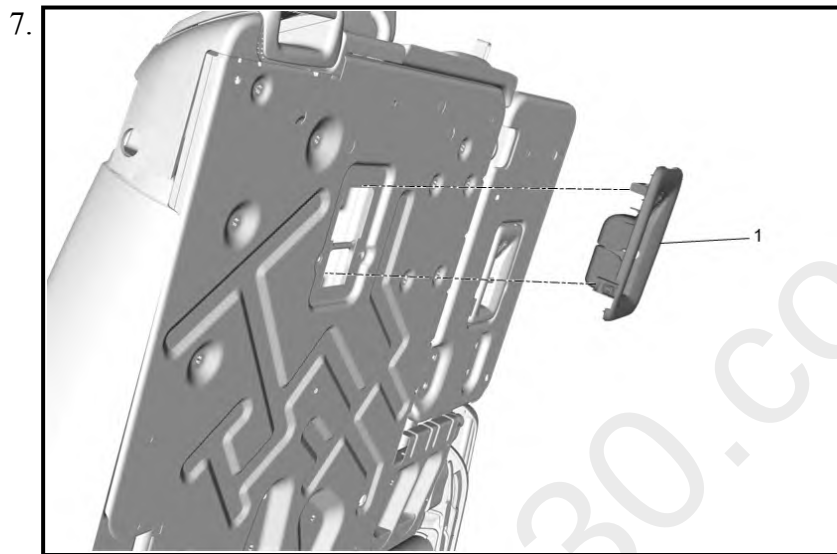

Rear Seat Anchor Plate Bezel (1) - Install - [Rear Seat Anchor Plate Bezel Replacement](#)

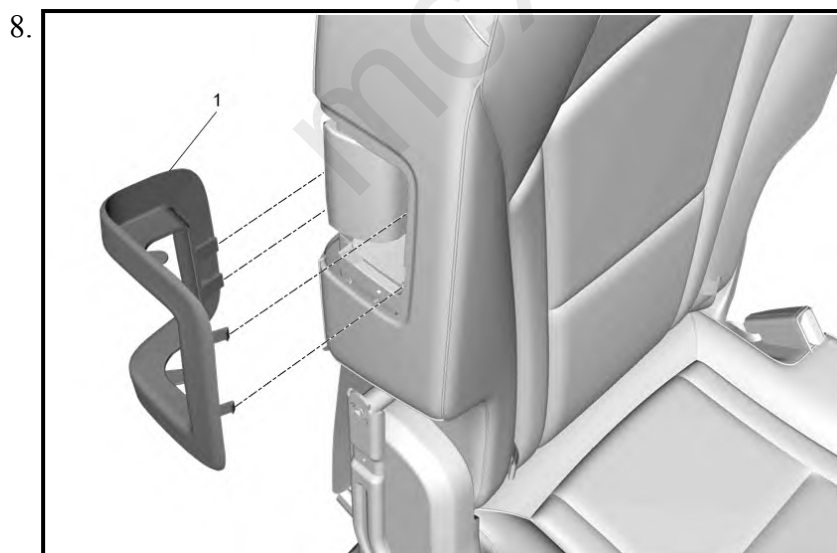


Rear Seat Back Latch Release Handle Bezel (1) - Install - [Rear Seat Back Latch Release Handle Bezel Replacement \(Bucket\)](#)






Rear Seat Head Restraint Guide (1) - Install - [Rear Seat Head Restraint Guide Replacement](#)

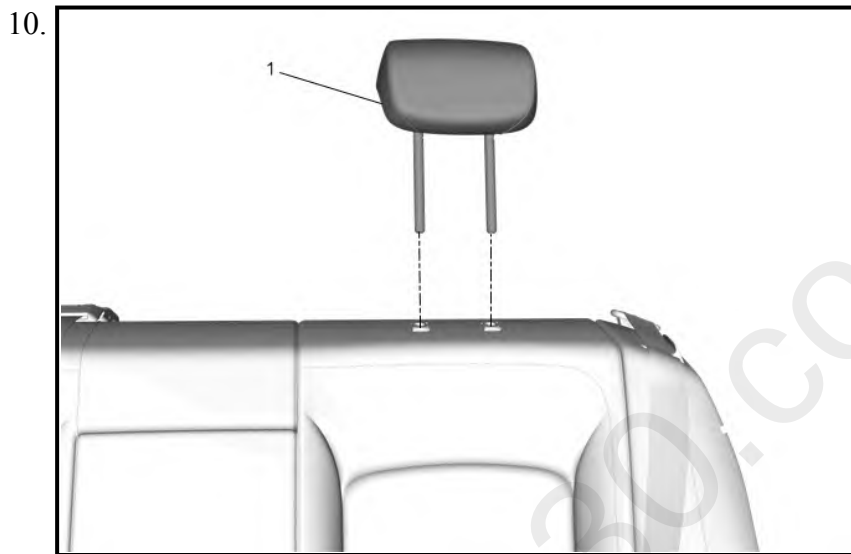


Rear Seat Head Restraint (1) - Install - [Rear Seat Head Restraint Replacement](#)

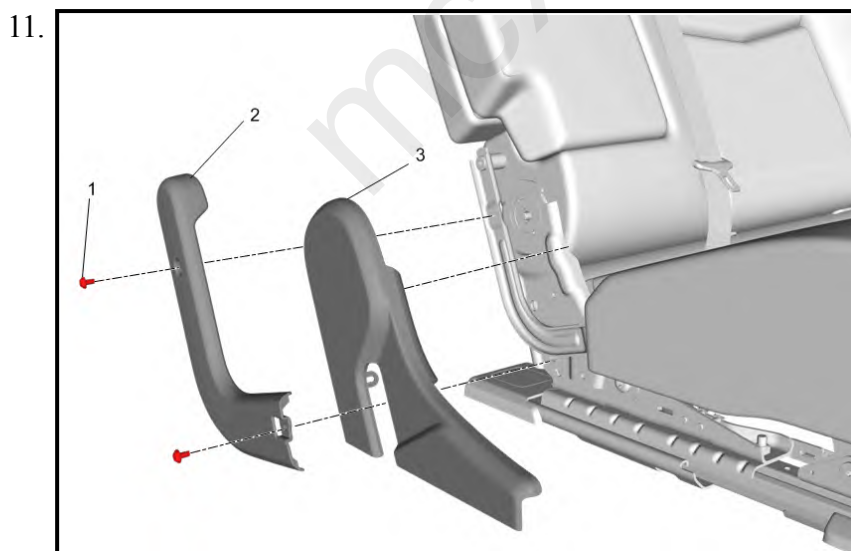


Rear Seat Inner Hinge Finish Cover (2, 3) - Install - [Rear Seat Inner Hinge Finish Cover Replacement \(Left Bucket\)](#)[Rear Seat Inner Hinge Finish Cover Replacement \(Right Bucket\)](#)




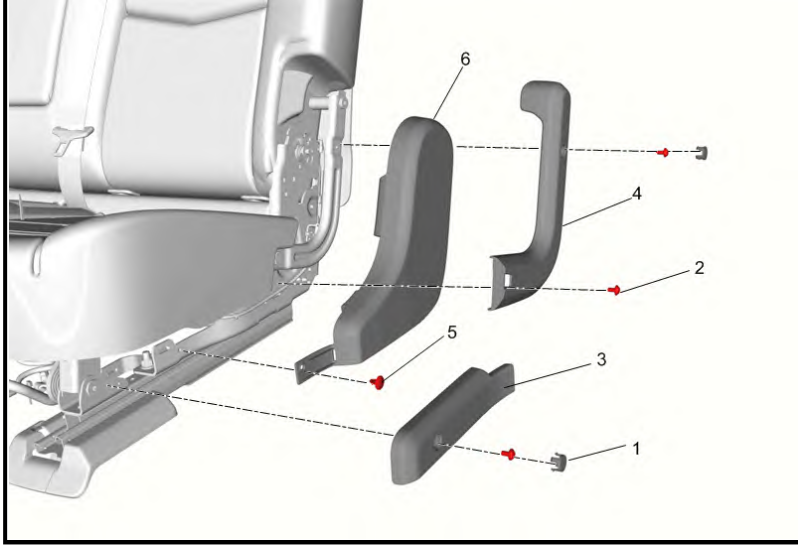

Rear Seat Outer Hinge Finish Cover (3, 4, 6) - Install - [Rear Seat Outer Hinge Finish Cover Replacement \(Left Bucket\)](#)[Rear Seat Outer Hinge Finish Cover Replacement \(Right Bucket\)](#)

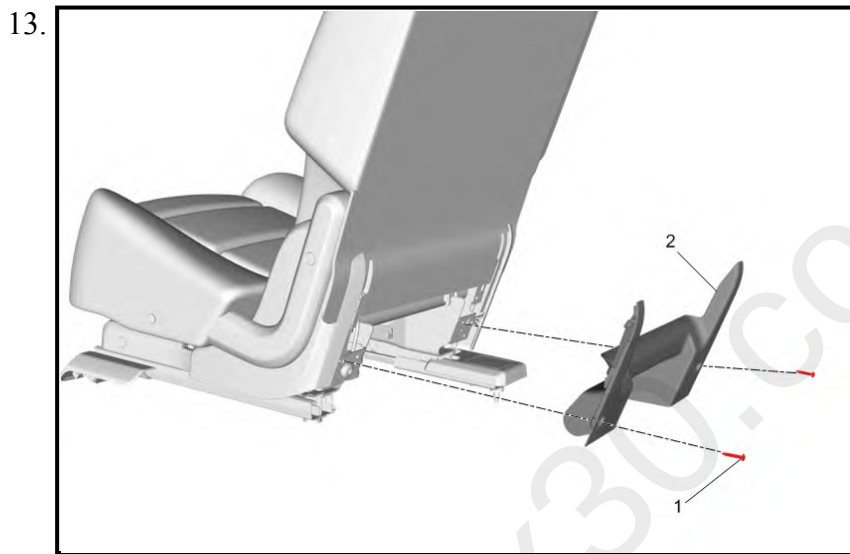


Rear Seat Back Center Bar Front Finish Cover (2) - Install - [Rear Seat Back Center Bar Front Finish Cover Replacement \(Bucket\)](#)

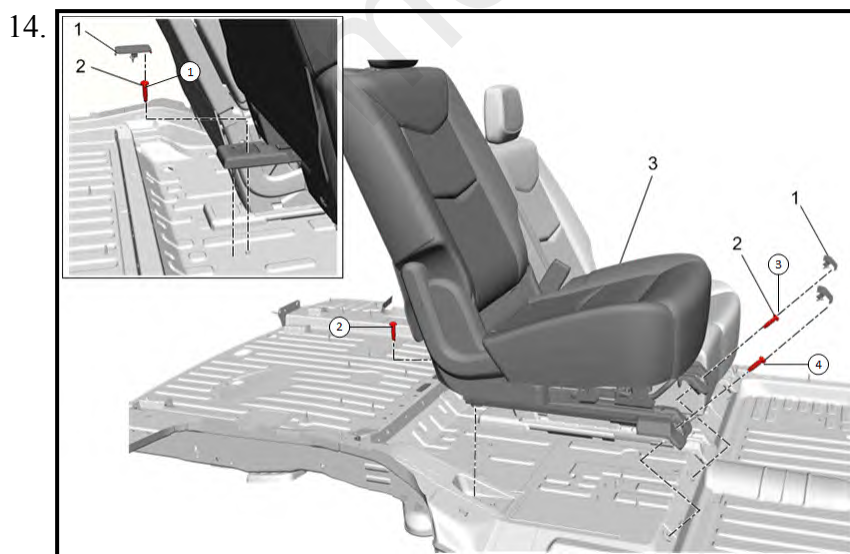

Rear Seat (3) - Install - [Rear Seat Removal and Installation \(Bucket\)](#)


REAR SEAT RECLINER HANDLE REPLACEMENT



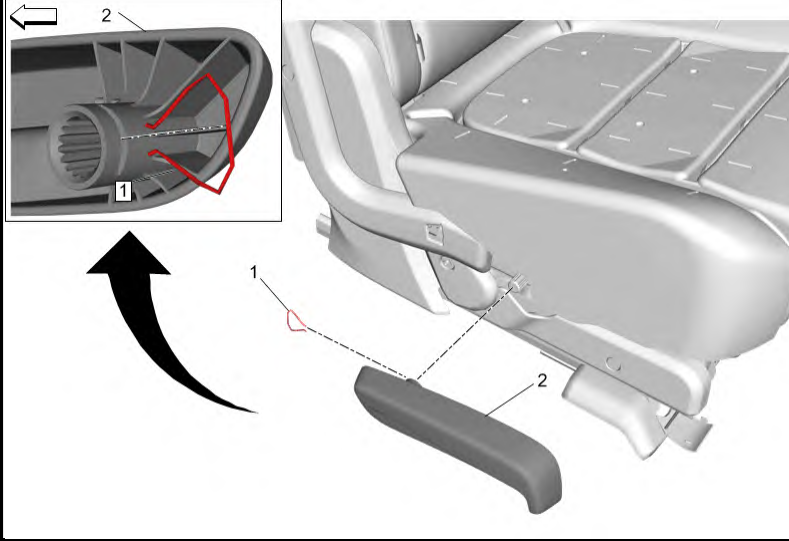

Callout	Component Name
1	Rear Seat Recliner Handle Retainer
2	Rear Seat Recliner Handle


REAR SEAT INNER RECLINER CABLE REPLACEMENT (UPPER)

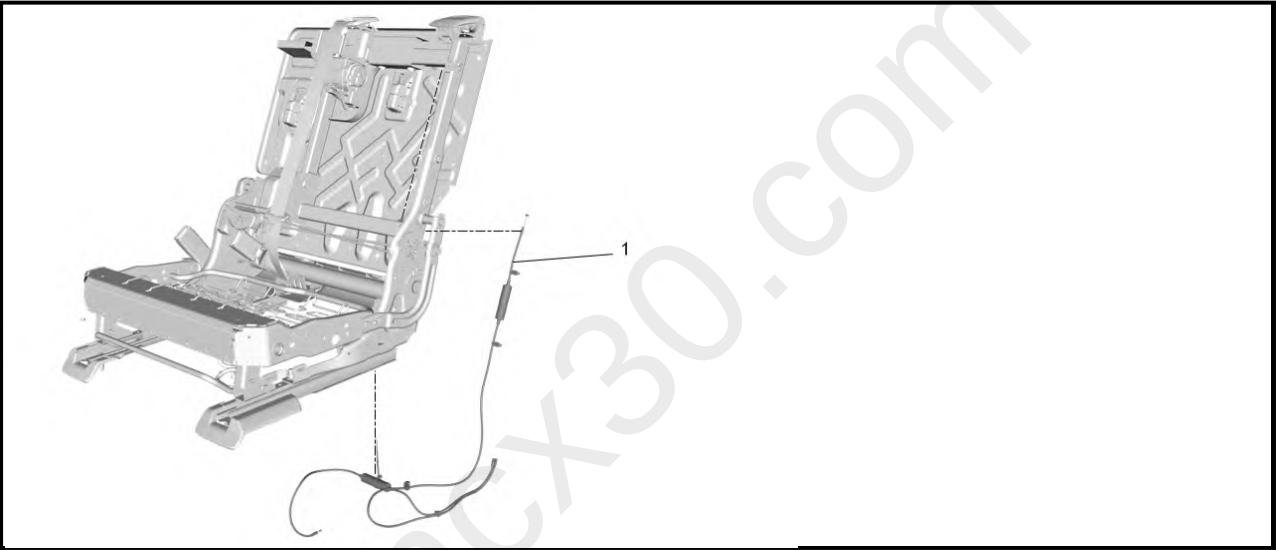

Callout	Component Name
Preliminary Procedure <u>Rear Seat Back Cushion Cover and Pad Replacement (40%)</u> <u>Rear Seat Back Cushion Cover and Pad Replacement (60%)</u> <u>Rear Seat Back Cushion Cover and Pad Replacement (Bucket)</u>	
1	Rear Seat Inner Recliner Cable Procedure 1. Note the location and routing of the cable prior to removal to ensure proper installation. 2. Release the retainers.


REAR SEAT INNER RECLINER CABLE REPLACEMENT (LOWER)



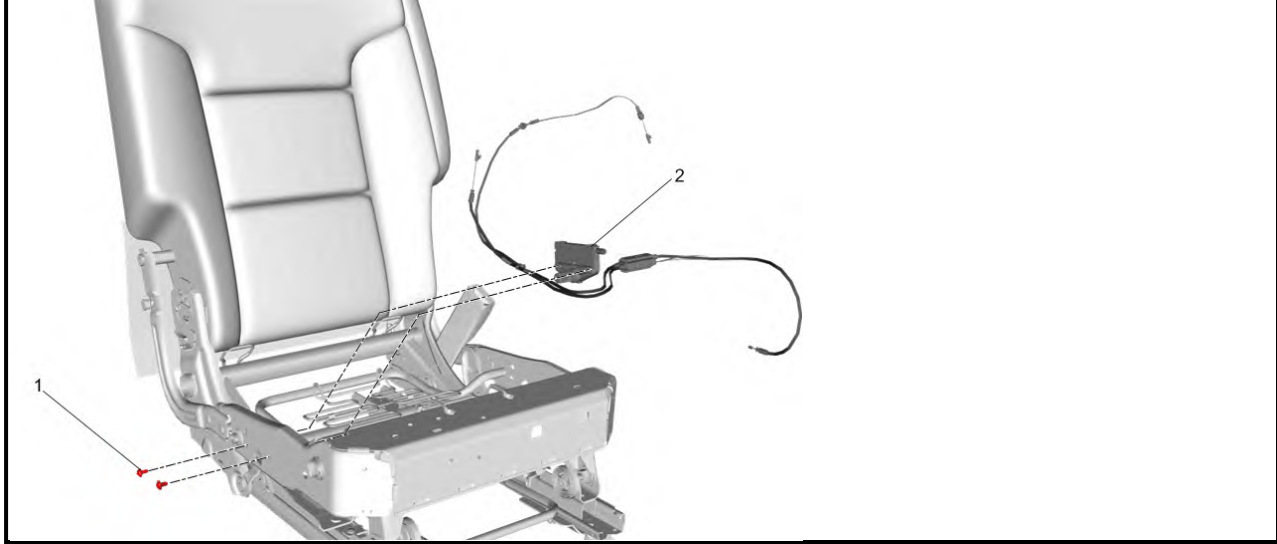

Callout	Component Name
Preliminary Procedure <u>Rear Seat Cushion Cover and Pad Replacement (Bucket)</u> <u>Rear Seat Cushion Cover and Pad Replacement (40%)</u> <u>Rear Seat Cushion Cover and Pad Replacement (60%)</u>	
1	Rear Seat Inner Recliner Cable Fastener [2x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
2	Rear Seat Inner Recliner Cable Procedure 1. Note the location and routing of the cable prior to removal to ensure proper installation. 2. Release the retainers.


REAR SEAT BACK CUSHION LATCH RELEASE HANDLE REPLACEMENT (40/60 BENCH)

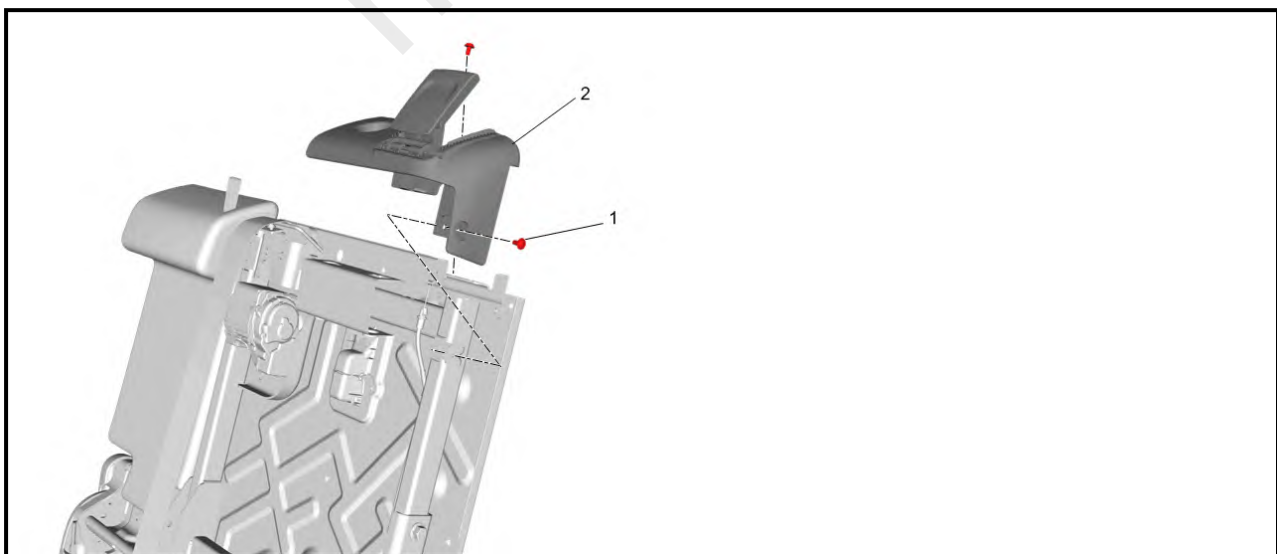

Callout	Component Name
Preliminary Procedure <u>Rear Seat Back Cushion Cover and Pad Replacement (40%)</u> <u>Rear Seat Back Cushion Cover and Pad Replacement (60%)</u>	

Callout	Component Name
1	Rear Seat Back Cushion Latch Release Handle Fastener [2x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 4.7 N.m (42 lb in)
2	Rear Seat Back Cushion Latch Release Handle Procedure Disconnect the cable.


REAR SEAT BACK CUSHION LATCH RELEASE HANDLE REPLACEMENT (BUCKET)

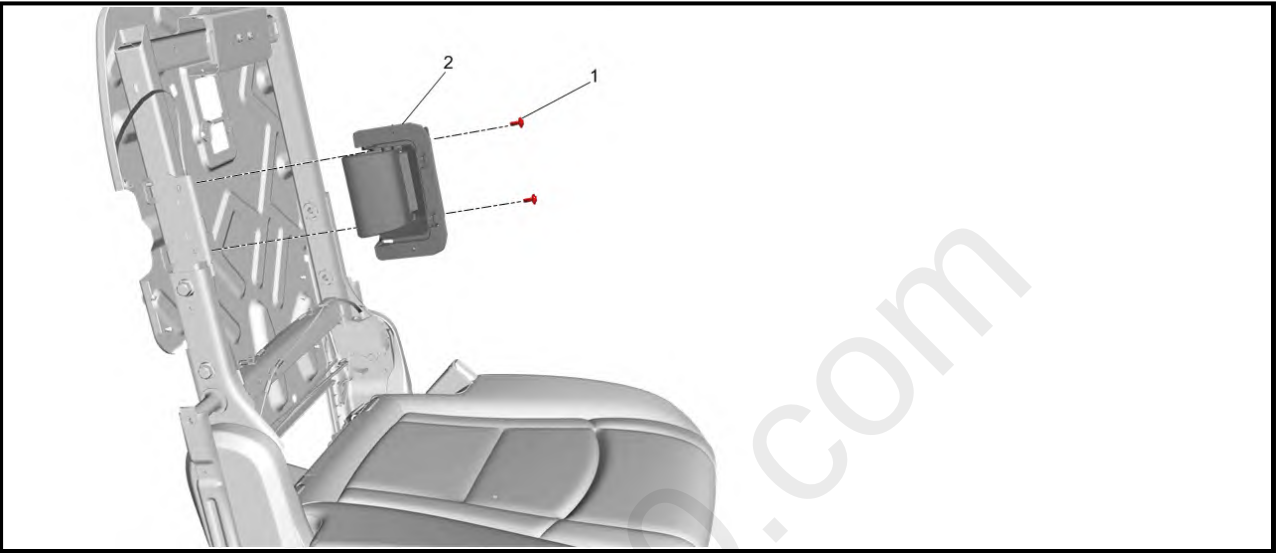

Callout	Component Name
Preliminary Procedure <u>Rear Seat Back Cushion Cover and Pad Replacement (Bucket)</u>	
1	Rear Seat Back Cushion Latch Release Handle Fastener [2x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 4.7 N.m (42 lb in)
2	Rear Seat Back Cushion Latch Release Handle Procedure Disconnect the cable.


REAR SEAT BACK LATCH RELEASE HANDLE BEZEL REPLACEMENT (40/60 BENCH)



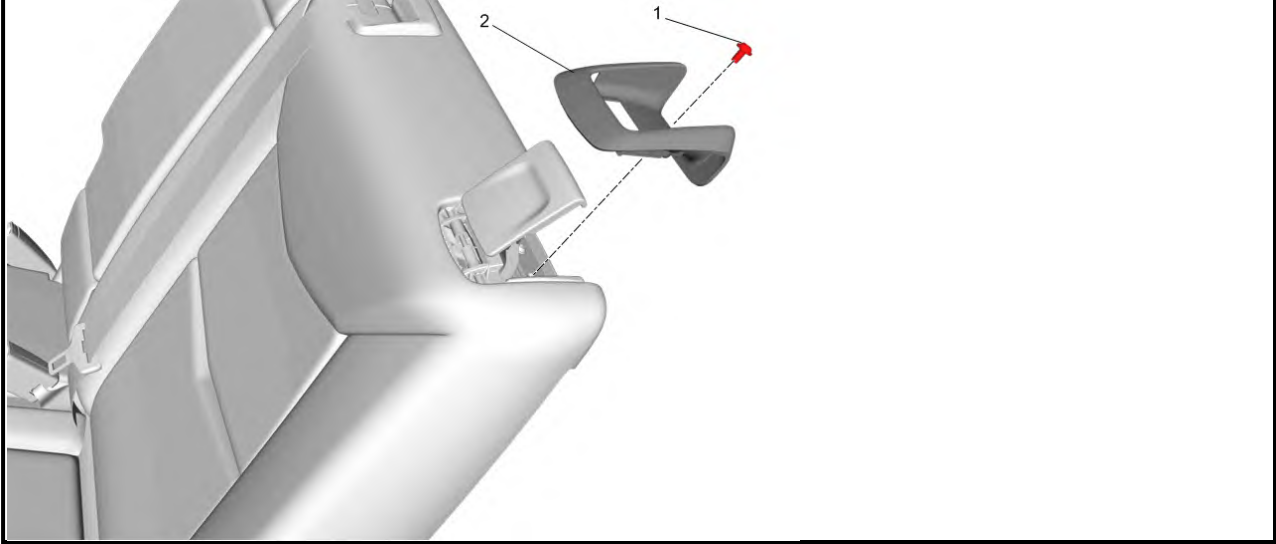

Callout	Component Name
1	Rear Seat Back Cushion Latch Release Handle Bezel Fastener CAUTION: Refer to Fastener Caution . Tighten 4.7 N.m (42 lb in)
2	Rear Seat Back Cushion Latch Release Handle Bezel


REAR SEAT BACK LATCH RELEASE HANDLE BEZEL REPLACEMENT (BUCKET)

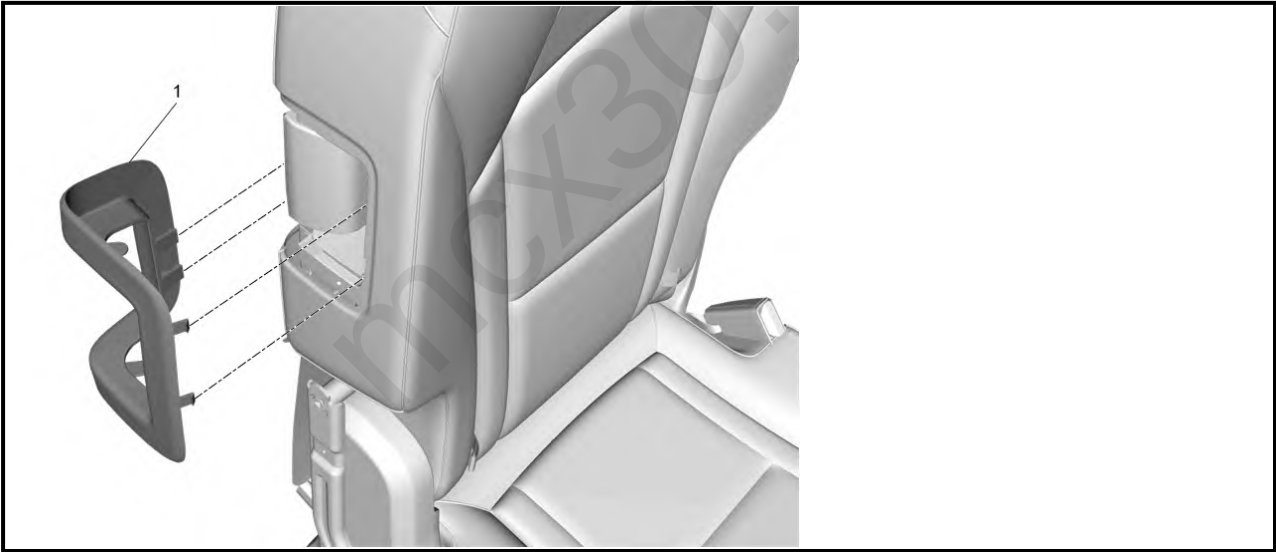

Callout	Component Name
1	Rear Seat Back Latch Release Handle Bezel Procedure Release the retaining tabs.


REAR SEAT ANCHOR PLATE BEZEL REPLACEMENT



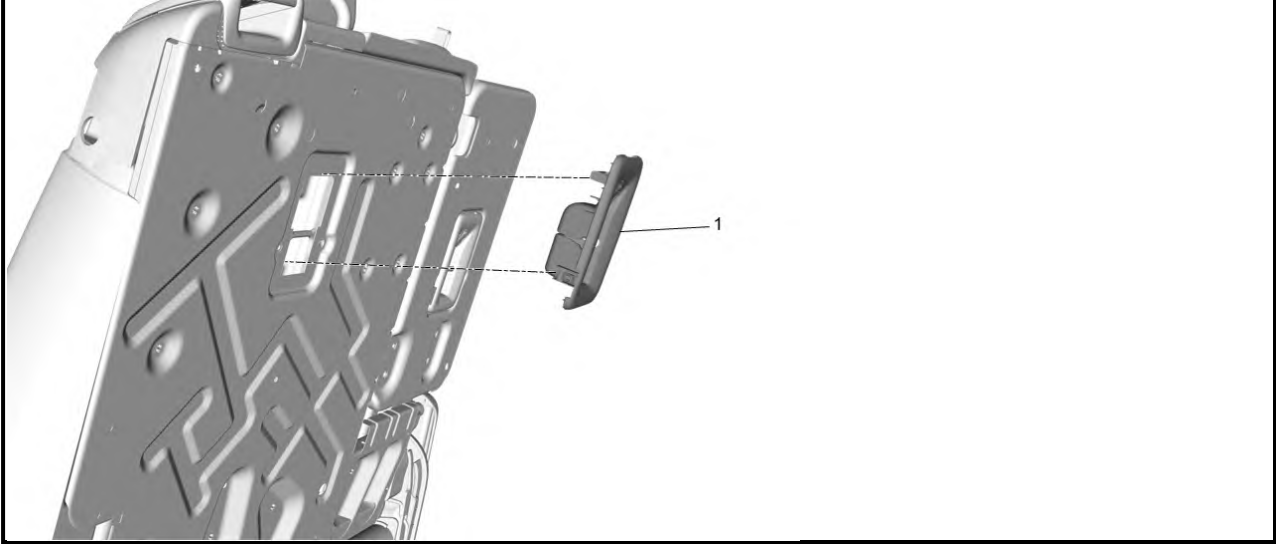

Callout	Component Name
1	Rear Seat Anchor Plate Bezel Procedure Use a flat bladed plastic trim tool to release the retaining tabs.


REAR SEAT BACK CENTER BAR FRONT FINISH COVER REPLACEMENT (BUCKET)

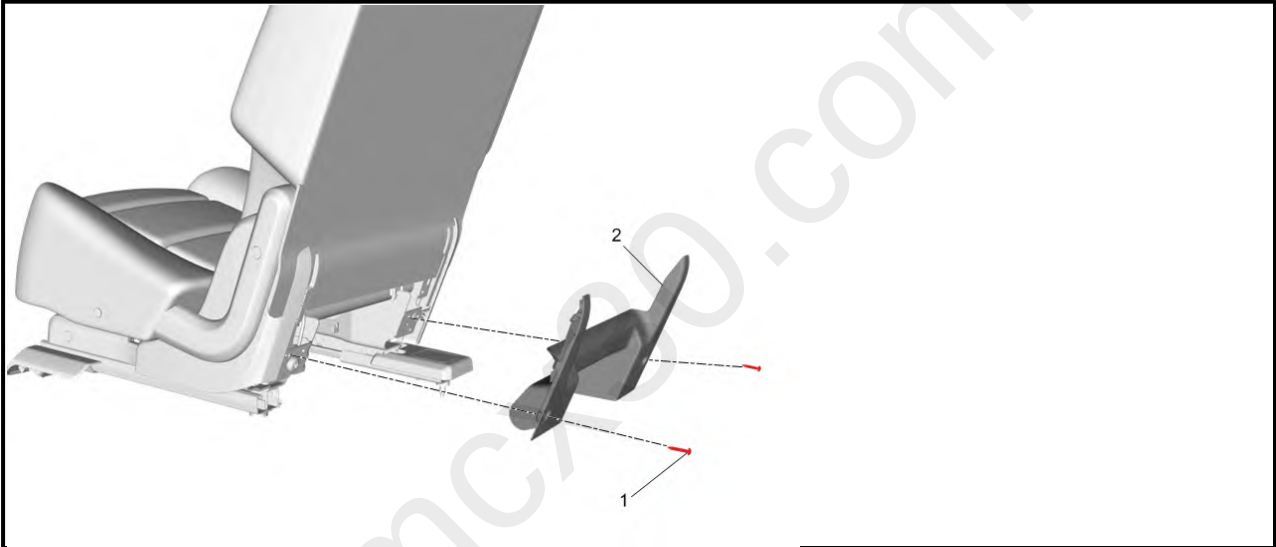

Callout	Component Name
Preliminary Procedure <u>Rear Seat Removal and Installation (Bucket)</u>	
1	Rear Seat Back Center Bar Front Finish Cover Fastener [2x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
2	Rear Seat Back Center Bar Front Finish Cover


REAR SEAT BACK CENTER BAR FRONT FINISH COVER REPLACEMENT (60%)



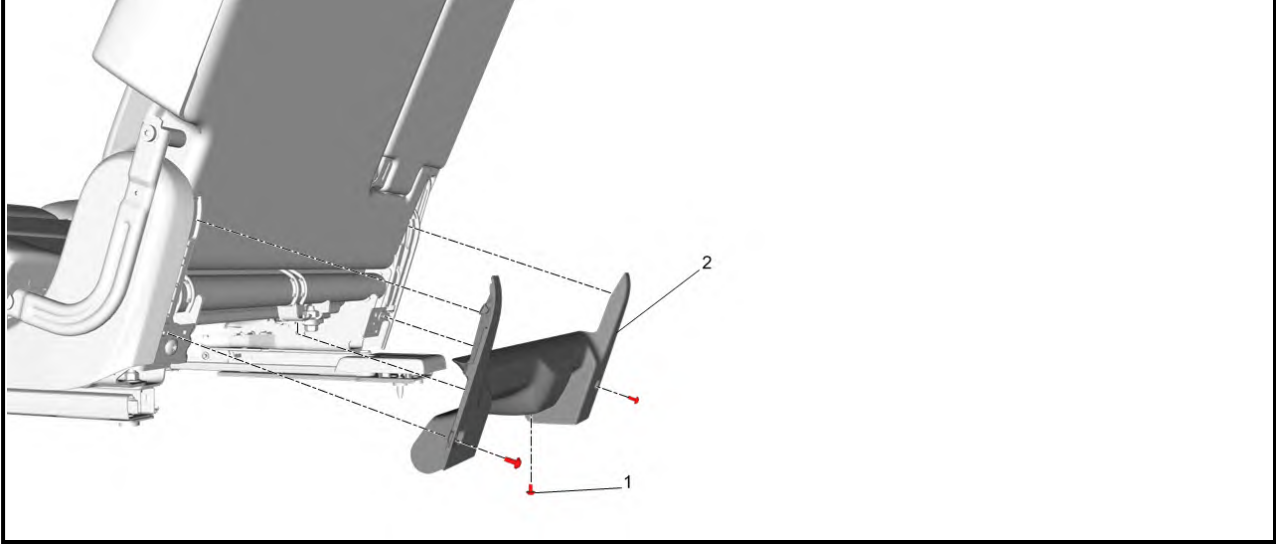

Callout	Component Name
Preliminary Procedures 1. <u>Rear Seat Removal and Installation (60%)</u> 2. Disconnect the rear seat back cover bungees.	
1	Rear Seat Back Center Bar Front Finish Cover Fastener [3x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
2	Rear Seat Back Center Bar Front Finish Cover


REAR SEAT BACK CENTER BAR FRONT FINISH COVER REPLACEMENT (40%)

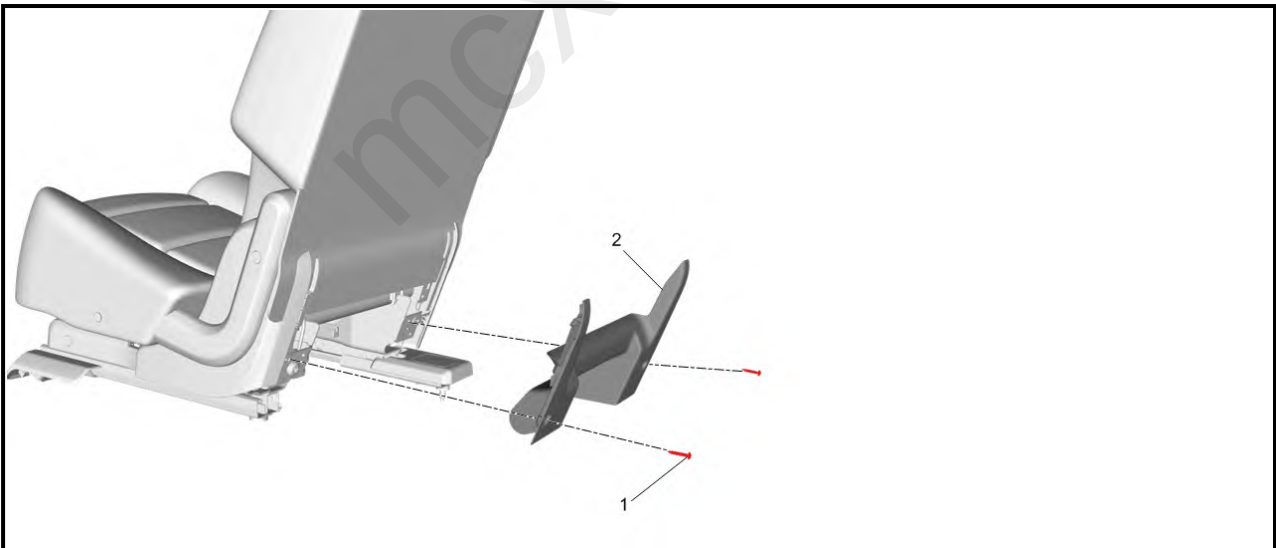

Callout	Component Name
Preliminary Procedures 1. <u>Rear Seat Removal and Installation (40%)</u> 2. Disconnect the rear seat back cover bungees.	

Callout	Component Name
1	Rear Seat Back Center Bar Front Finish Cover Fastener [2x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	Rear Seat Back Center Bar Front Finish Cover

3RD ROW SEAT REMOVAL AND INSTALLATION (POWER)

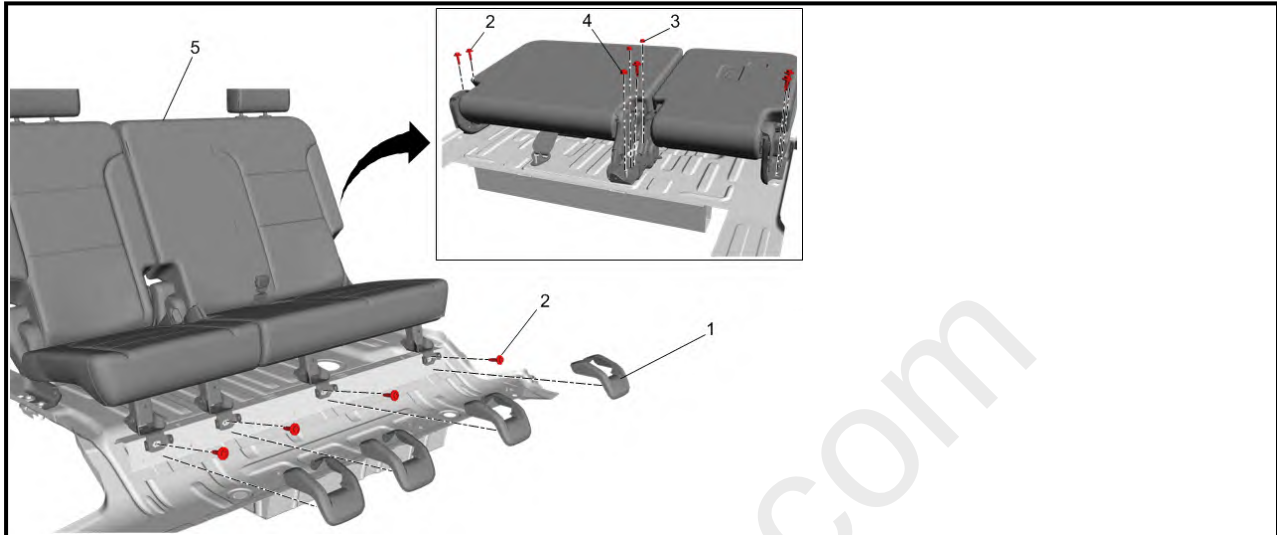


Callout	Component Name
Preliminary Procedures 1. Release the mini buckle. 3rd Row Center Seat Belt Retractor Replacement 2. Rear Compartment Floor Stowage Compartment Divider Replacement 3. Folding 3rd Row Seat Module Replacement	
1	3rd Row Seat Riser Cover [4x]
2	3rd Row Seat Bolt [9x] CAUTION: Refer to Fastener Caution . Tighten 45 N.m (33 lb ft)
3	3rd Row Seat Nut-Front [2x] Tighten 20 N.m (15 lb ft)
4	3rd Row Seat Nut-Rear Tighten 45 N.m (33 lb ft)
5	3rd Row Seat Procedure Remove the right side seat first.

3RD ROW SEAT REMOVAL AND INSTALLATION (MANUAL)


Removal Procedure

CAUTION: When the seat is removed from the vehicle, the inboard mounting bracket

must not be allowed to rotate. Keeping the seat back in the locked upright position will prevent the brackets from moving. Failure to follow this procedure could result in internal component damage. If any internal components are damaged, the frame must be replaced.

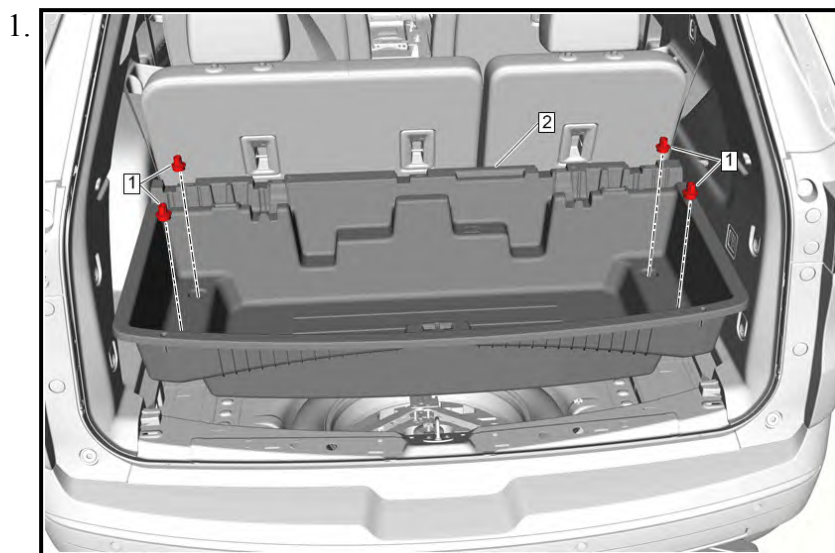


Rear Compartment Floor Stowage Compartment Divider (2) - Remove - [Rear Compartment Floor Stowage Compartment Divider Replacement](#)

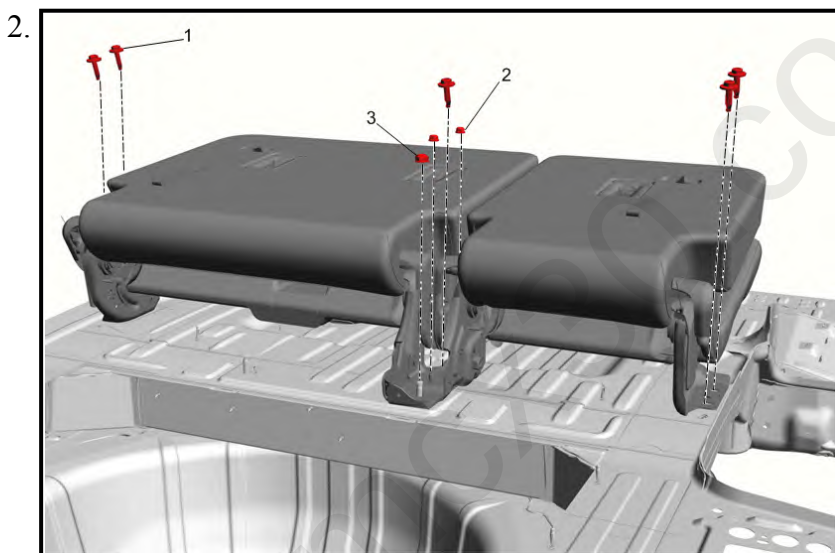

Pull the release strap and fold the seatback forward.


3. 3rd Row Seat Bolt (1) - Remove [5x]
4. 3rd Row Seat Nut-Front (2) - Remove [2x]
5. 3rd Row Seat Nut-Rear (3) - Remove

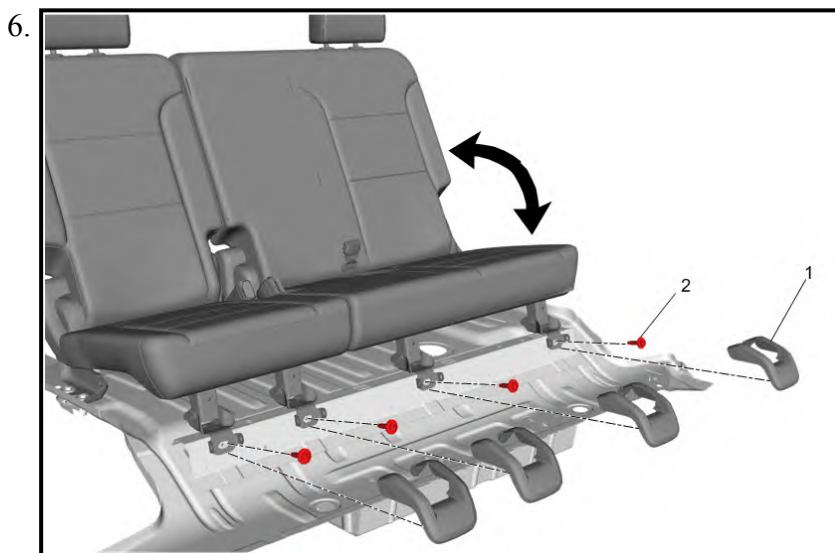

Pull the release strap and raise the seatback to the locked upright position.

7. 3rd Row Seat Riser Cover (1) - Remove [4x]

8. 3rd Row Seat Bolt (2) - Remove [4x]

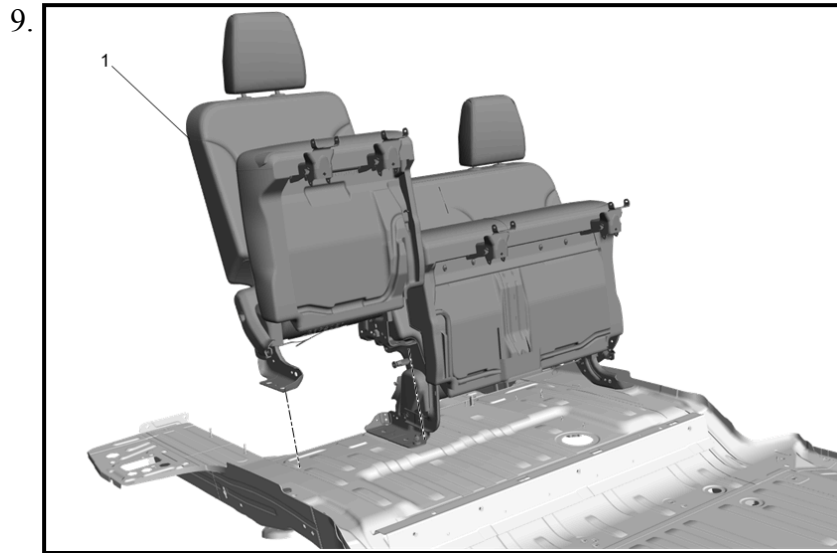

NOTE: Keep the seat back in the locked upright position as much as possible to prevent damaging the seat frame.

Fold the seat cushion up and remove the 40% seat (1) first, than the 60%.


10. Transfer components as necessary.

Installation Procedure



3rd Row Seat (1) - Install




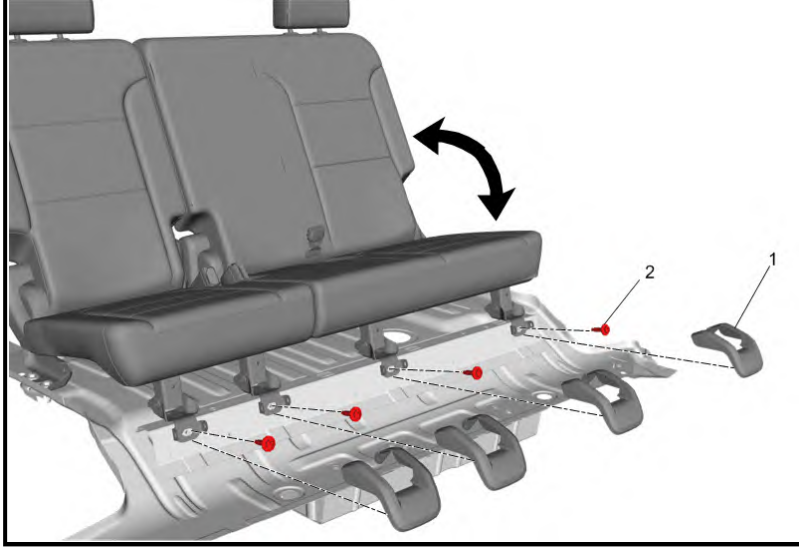

CAUTION: Refer to [Fastener Caution](#) .

3rd Row Seat Bolt (2) - Install and tighten [4x] 45 N.m (33 lb ft)

3. 3rd Row Seat Riser Cover (1) - Install [4x]

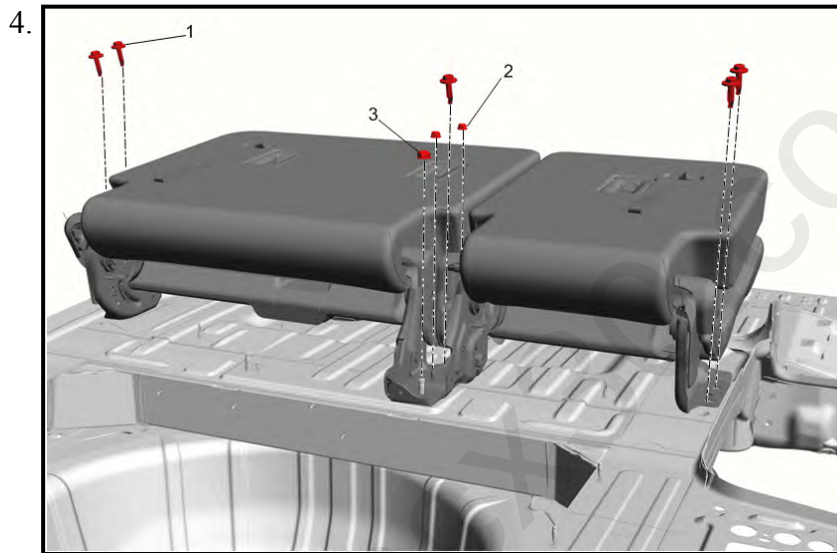


Pull the release strap and fold the seatback forward.

5. 3rd Row Seat Nut-Rear (3) - Install and tighten 45 N.m (33 lb ft)

6. 3rd Row Seat Nut-Front (2) - Install and tighten [2x] 20 N.m (15 lb ft)

7. 3rd Row Seat Bolt (1) - Install and tighten [5x] 45 N.m (33 lb ft)

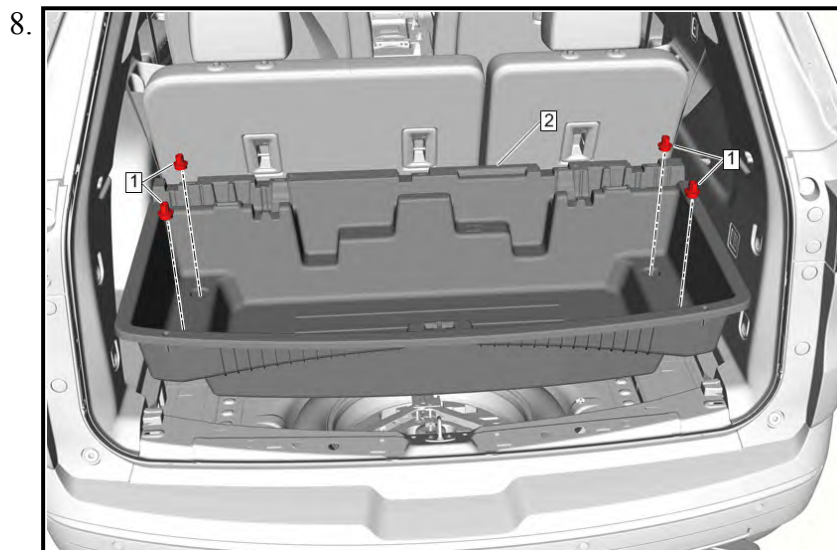


3RD ROW SEAT CUSHION COVER AND PAD REPLACEMENT



Callout	Component Name
Preliminary Procedure 3rd Row Seat Removal and Installation (Power) 3rd Row Seat Removal and Installation (Manual)	
1	3rd Row Seat Cushion Cover Procedure Disengage the J-channel retainers from the seat cushion frame.
2	3rd Row Seat Cushion Pad Procedure Disengage the hook and loop fasteners and separate the cover from the pad.


3RD ROW SEAT CUSHION FRAME REPLACEMENT

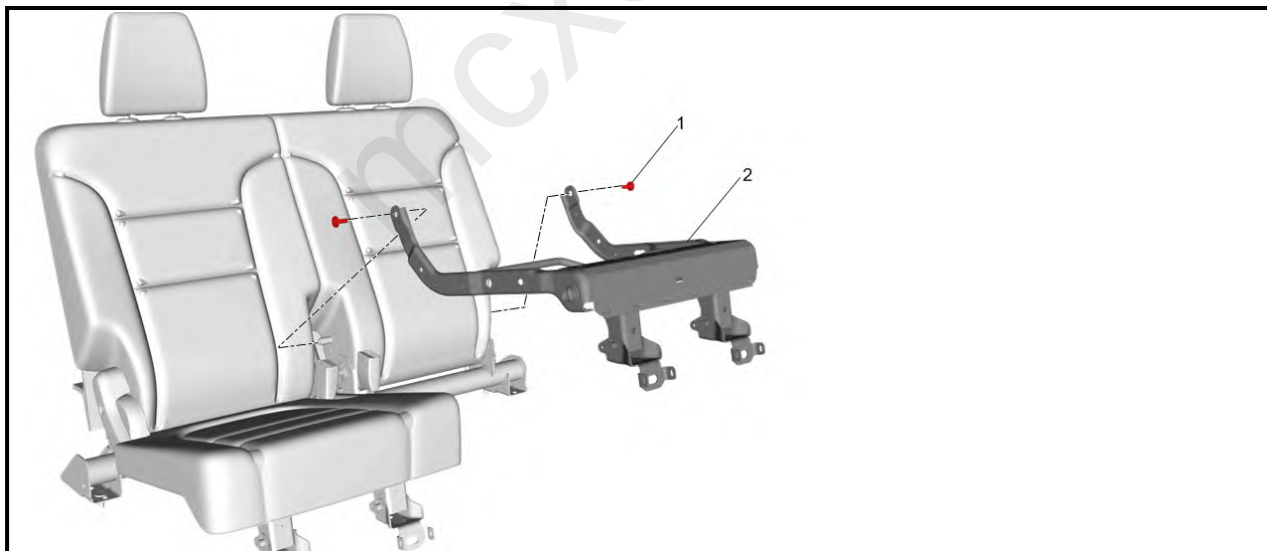

Callout	Component Name
Preliminary Procedures 1. 3rd Row Seat Cushion Cover and Pad Replacement 2. 3rd Row Seat Back Hinge Finish Cover Replacement (Outboard) 3rd Row Seat Back Hinge Finish Cover Replacement (Inboard)	

Callout	Component Name
1	3rd Row Seat Cushion Frame Bolt [2x] CAUTION: Refer to Fastener Caution . Tighten 25 N.m (18 lb ft)
2	3rd Row Seat Cushion Frame Procedure Transfer components as necessary.

3RD ROW SEAT PULL STRAP REPLACEMENT (POWER)

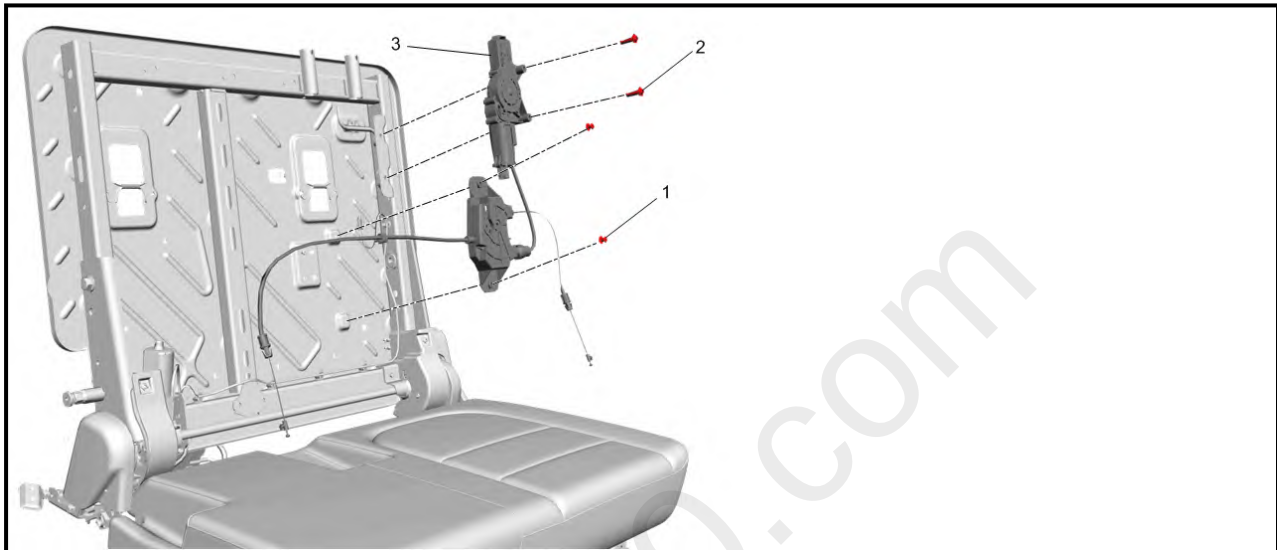


Callout	Component Name
Preliminary Procedure 3rd Row Seat Back Cover and Pad Replacement	
1	3rd Row Seat Pull Strap Rivet [2x] WARNING: Refer to Eye Protection Warning .
2	3rd Row Seat Pull Strap Bolt [2x] CAUTION: Refer to Fastener Caution . Tighten 4.5 N.m (40 lb in)
3	3rd Row Seat Pull Strap Procedure 1. Disconnect the electrical connectors. 2. Disconnect the cable.


3RD ROW SEAT PULL STRAP REPLACEMENT (MANUAL)

Removal Procedure


1.

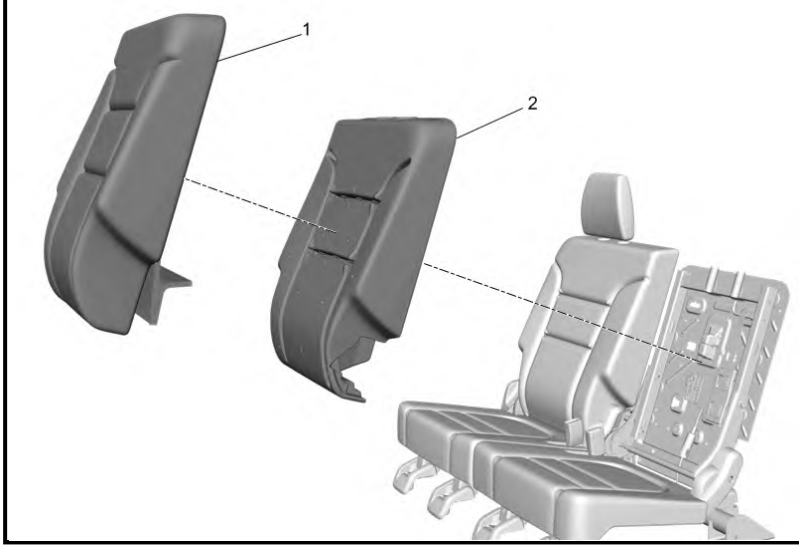

3rd Row Seat Back Cover and Pad (2) - Remove - [3rd Row Seat Back Cover and Pad Replacement](#)

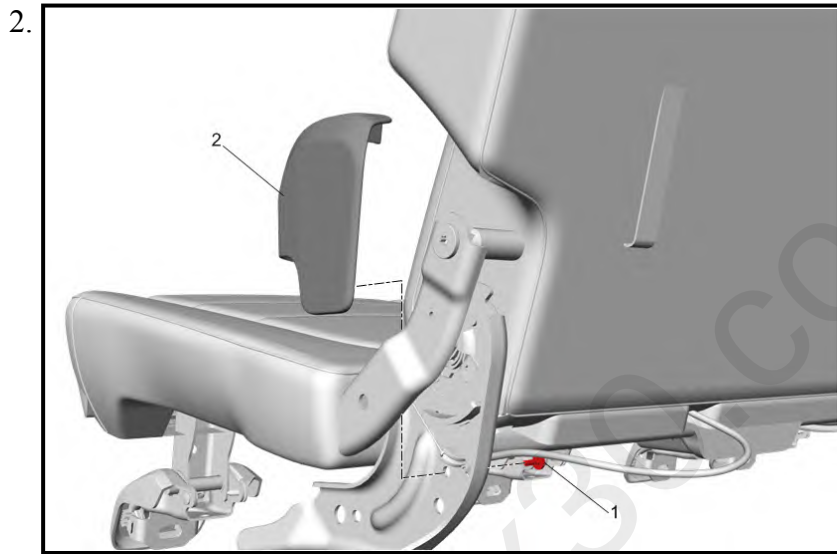


3rd Row Seat Hinge Finish Cover (2) - Remove - [3rd Row Seat Hinge Finish Cover Replacement](#)

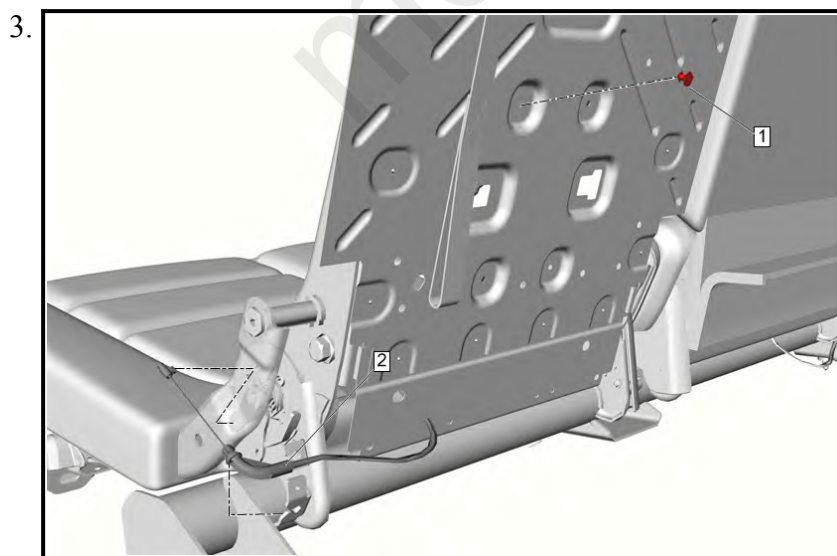


WARNING: Refer to [Eye Protection Warning](#) .

3rd Row Seat Pull Strap Rivet (1) - Remove

 
4. Disconnect the cable (2) from the recliner.



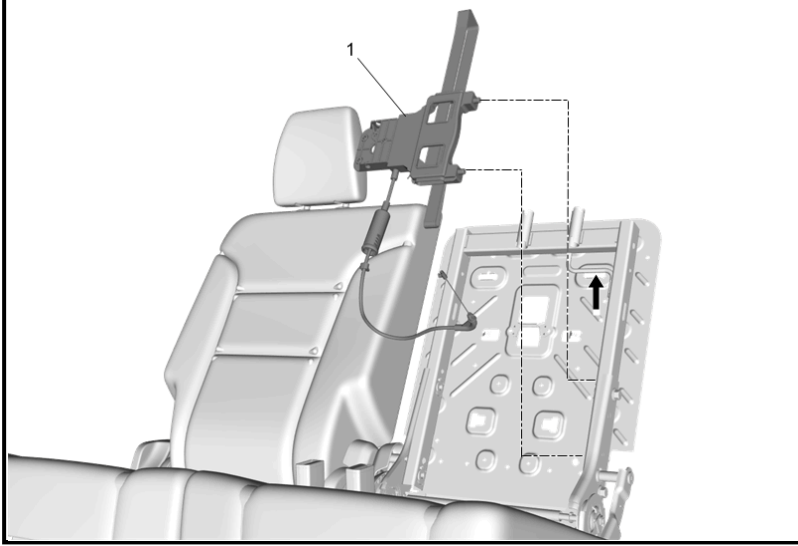


3rd Row Seat Pull Strap (1) - Remove

Installation Procedure

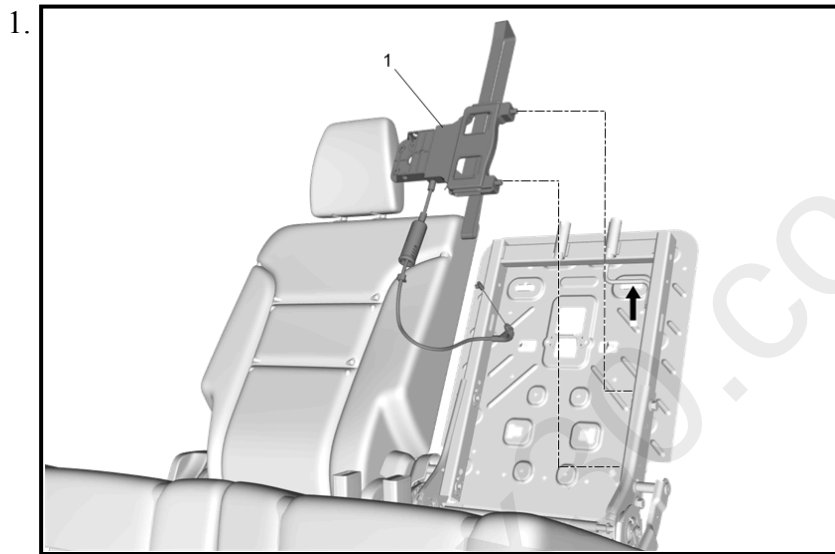


3rd Row Seat Pull Strap (1) - Install


2. Route the pull strap webbing over the pull strap wire and through the slot on the seat back frame.

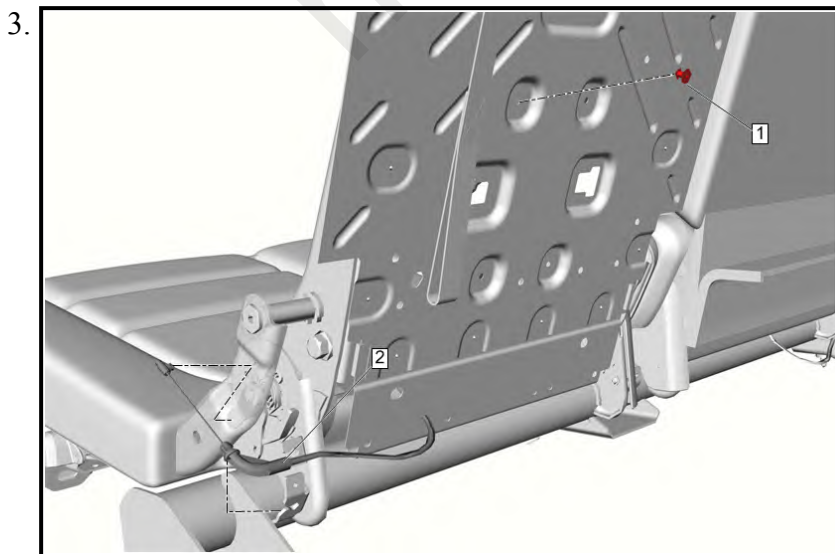


3rd Row Seat Pull Strap Rivet (1) - Install

 4. Connect the cable (2) to the recliner.



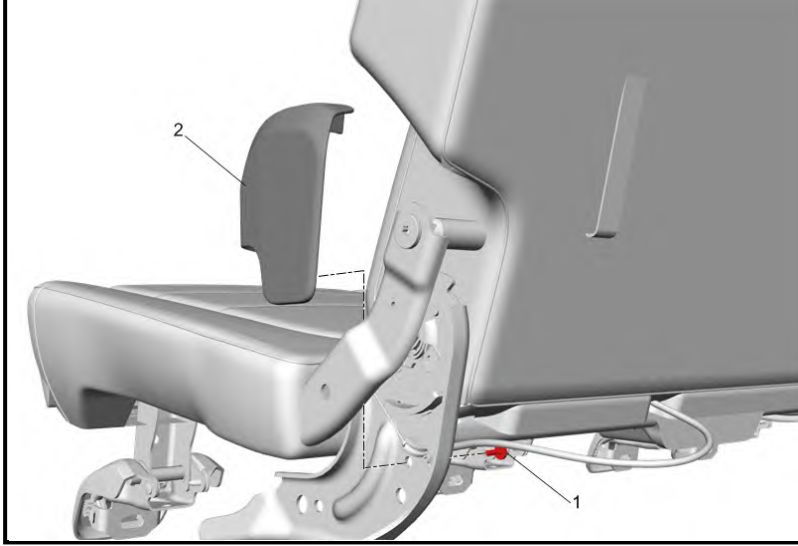


3rd Row Seat Hinge Finish Cover (2) - Install - [3rd Row Seat Hinge Finish Cover Replacement](#)

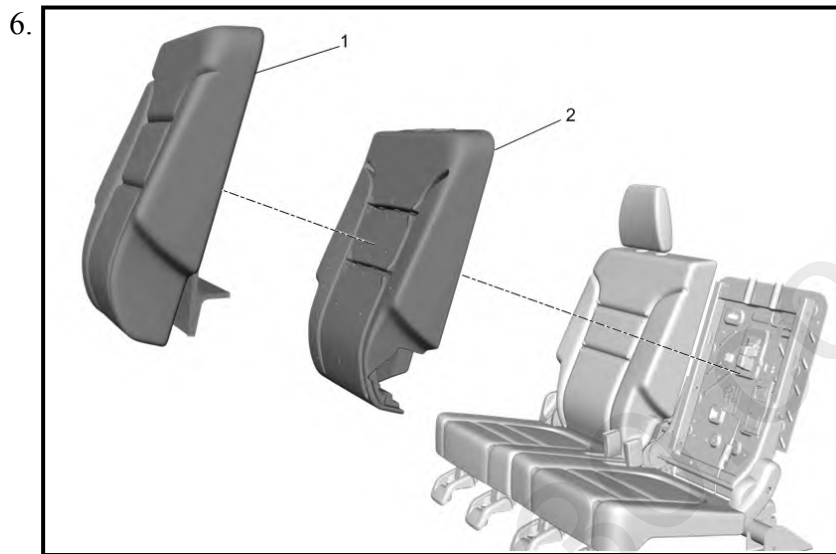

3rd Row Seat Back Cover and Pad (2) - Install - [3rd Row Seat Back Cover and Pad Replacement](#)


3RD ROW SEAT HEAD RESTRAINT REPLACEMENT

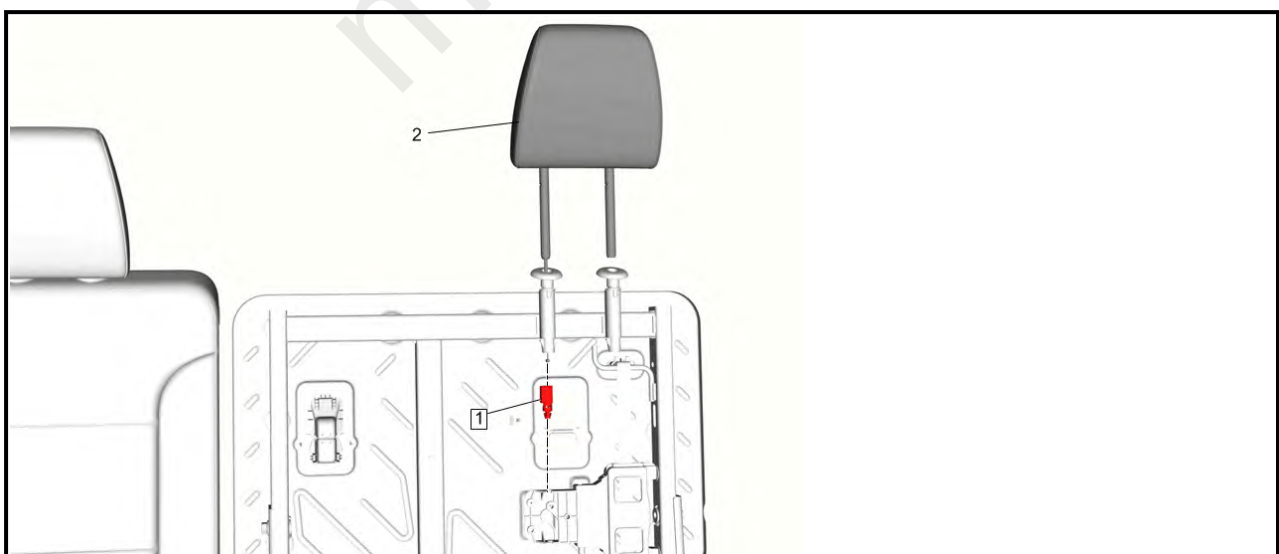

Callout	Component Name
Preliminary Procedure	
Reposition the seat back cover and pad. 3rd Row Seat Back Cover and Pad Replacement	

Callout	Component Name
1	3rd Row Seat Head Restraint Retainer Procedure 1. Disconnect the head restraint cable from the rear seat pull strap. 2. Remove the retainer from the head restraint cable.
2	3rd Row Seat Head Restraint Procedure Using a suitable pointed or flat bladed tool, push the head restraint clip rearward while pulling upward on the head restraint.


3RD ROW SEAT HEAD RESTRAINT GUIDE REPLACEMENT

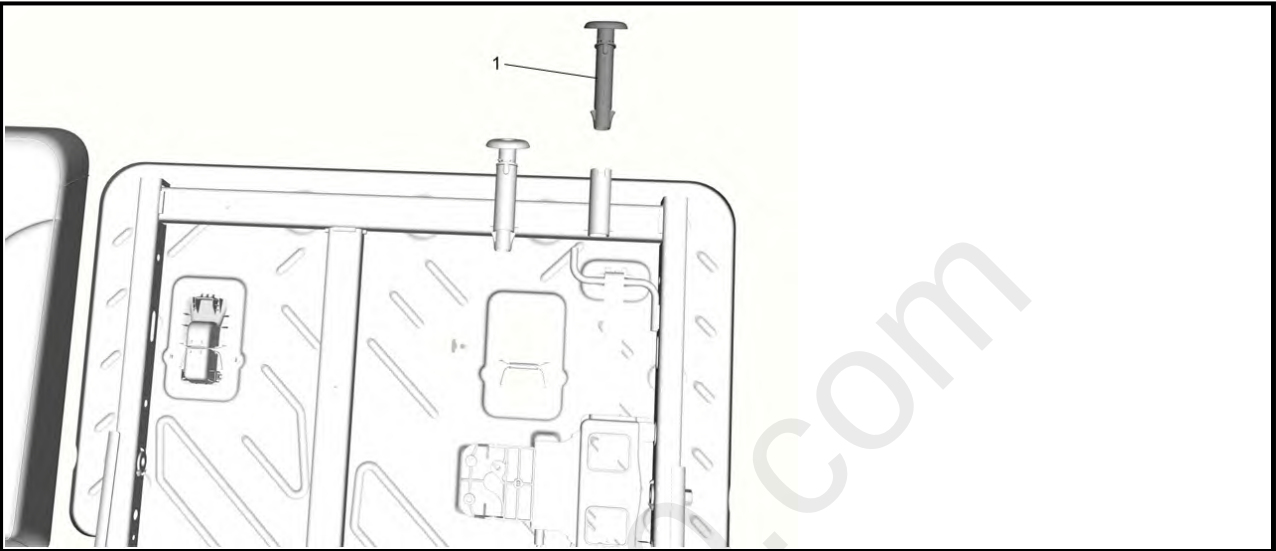

Callout	Component Name
Preliminary Procedure <u>3rd Row Seat Head Restraint Replacement.</u>	
1	3rd Row Seat Head Restraint Guide


3RD ROW SEAT BACK COVER AND PAD REPLACEMENT

Removal Procedure

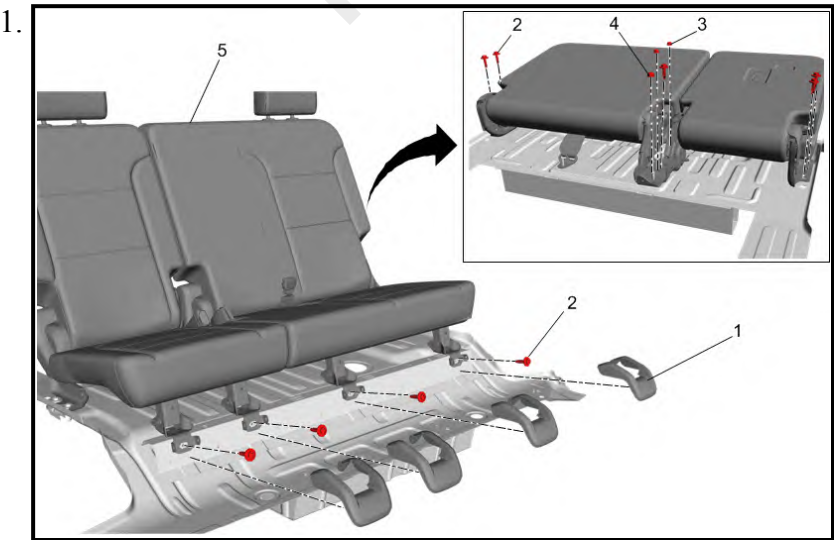


3rd Row Seat (5) - Remove - 3rd Row Seat Removal and Installation (Power)3rd Row Seat Removal and Installation (Manual)



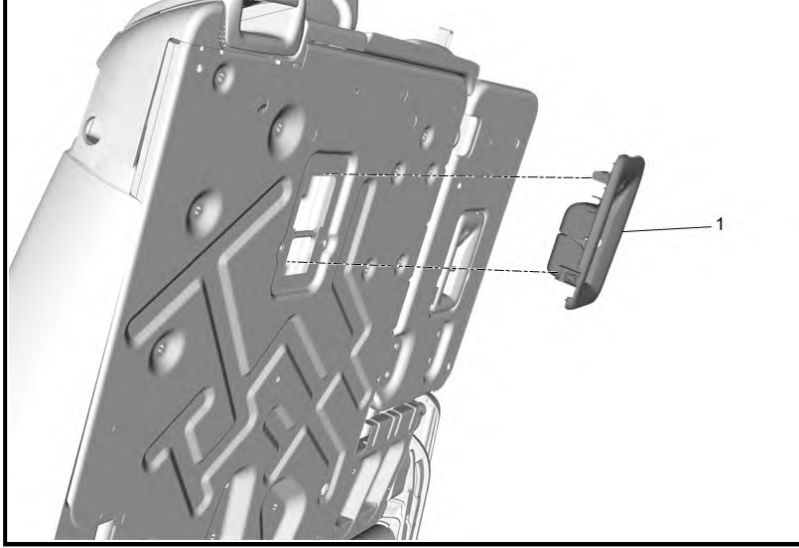


Rear Seat Anchor Plate Bezel (1) - Remove - [Rear Seat Anchor Plate Bezel Replacement](#)


3. Remove the pull strap bezel.
4. Disengage the J-channel retainers from the seat back cushion frame.
5. Open the seat back cushion cover zippers.

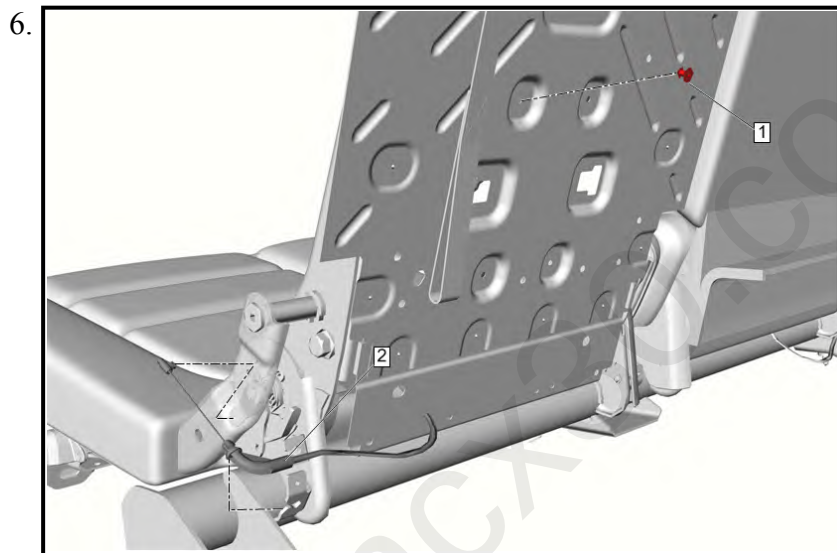


Disconnect the cable (2) from the recliner. - [3rd Row Seat Pull Strap Replacement \(Power\)](#)[3rd Row Seat Pull Strap Replacement \(Manual\)](#)

7. Remove the push-in retainers. [4x]
8. Reposition the seat back cover and pad.
9. Disconnect the head restraint cable from the rear seat pull strap.

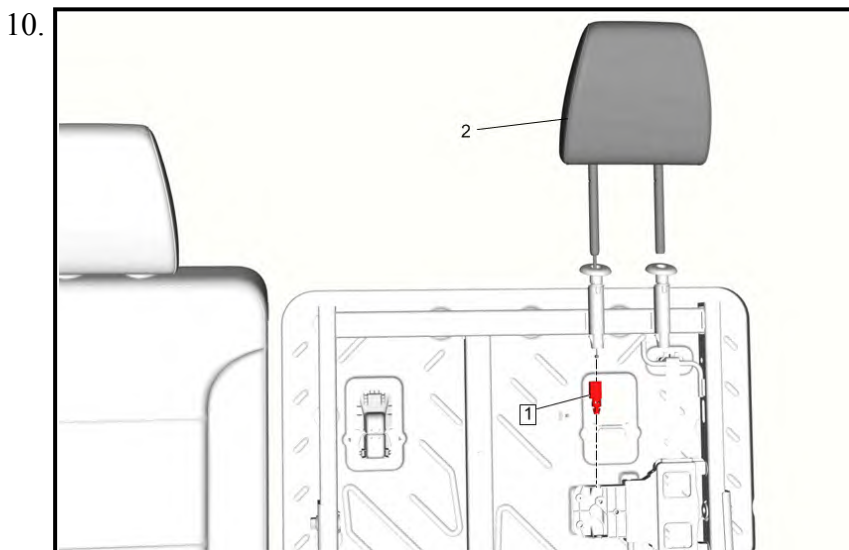

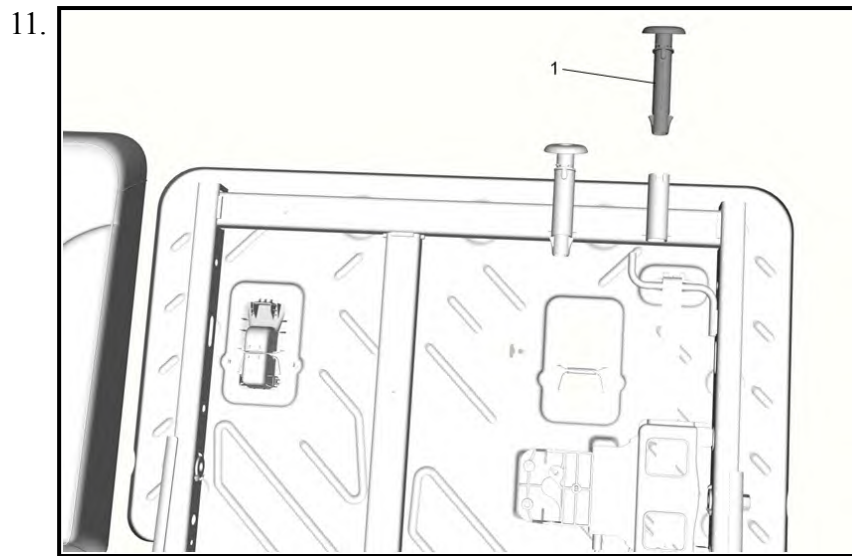

3rd Row Seat Head Restraint Guide (1) - Remove - [3rd Row Seat Head Restraint Guide Replacement](#)

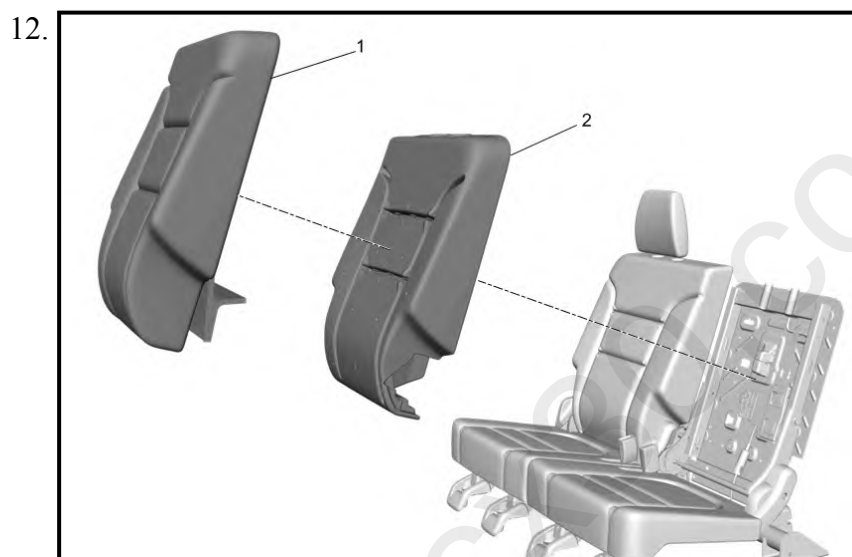


Remove the cushion cover and pad as an assembly.

13. Remove the hog rings retaining the cover to the pad.

14. 3rd Row Seat Back Cover (1) - Remove

15. 3rd Row Seat Back Pad (2) - Remove


Installation Procedure

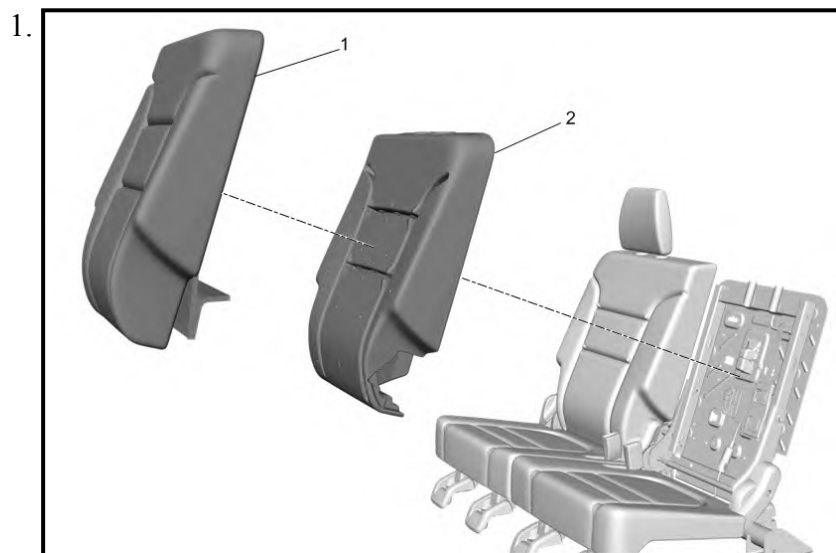


3rd Row Seat Back Pad (2) - Install

2. 3rd Row Seat Back Cover (1) - Install

3. Install the hog rings retaining the cover to the pad.

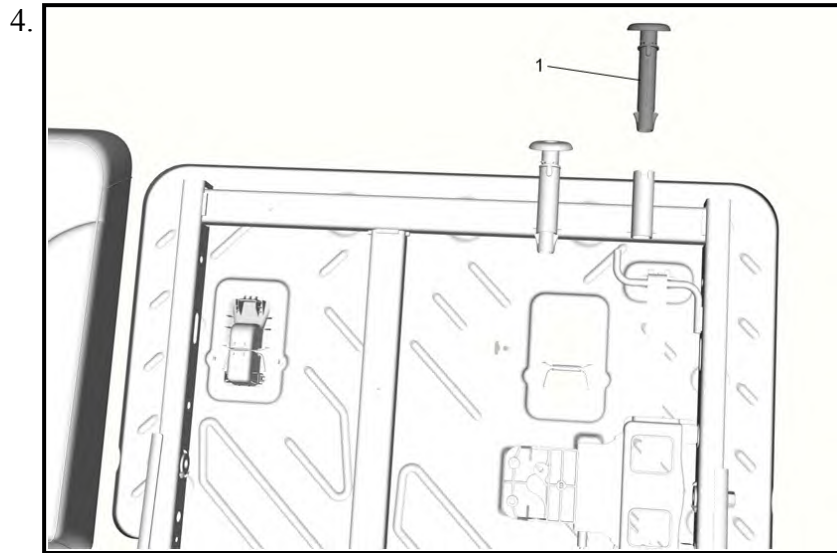


3rd Row Seat Head Restraint Guide (1) - Install - [3rd Row Seat Head Restraint Guide Replacement](#)

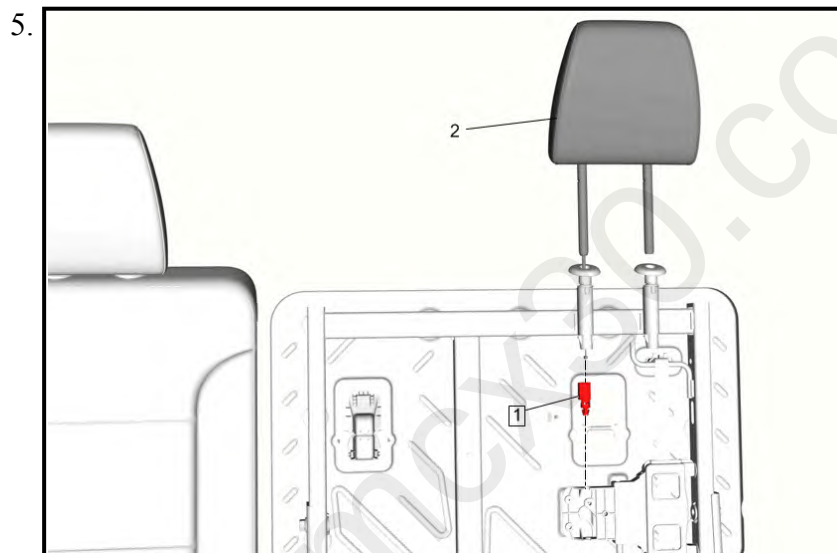


3rd Row Seat Head Restraint (2) - Install - [3rd Row Seat Head Restraint Replacement](#)

6. Connect the head restraint cable to the rear seat pull strap.


7. Install the push-in retainers. [4x]

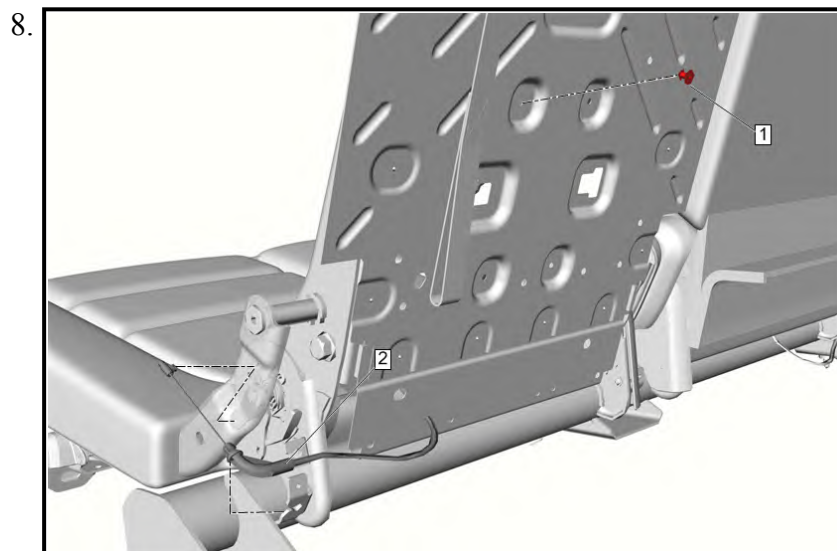

9. Close the seat back cushion cover zippers.
10. Engage the J-channel retainers to the seat back cushion frame.
11. Install the pull strap bezel.

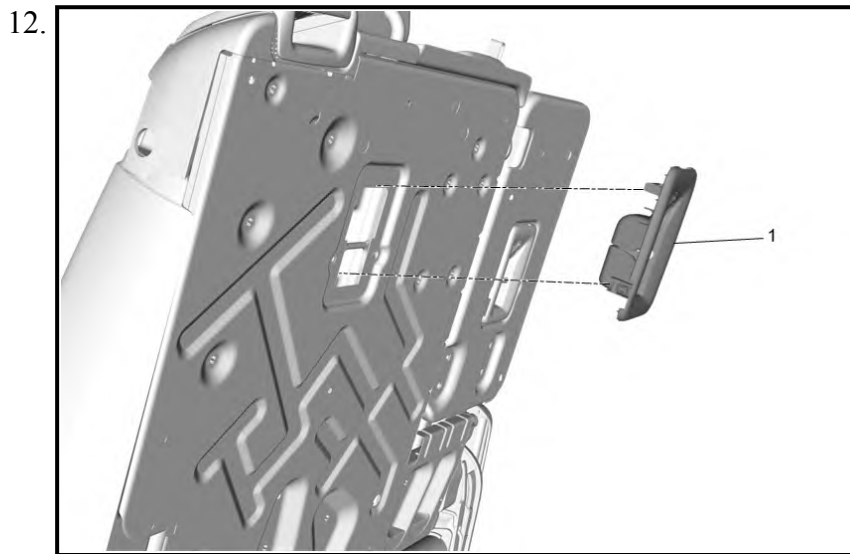

Rear Seat Anchor Plate Bezel (1) - Install - [Rear Seat Anchor Plate Bezel Replacement](#)

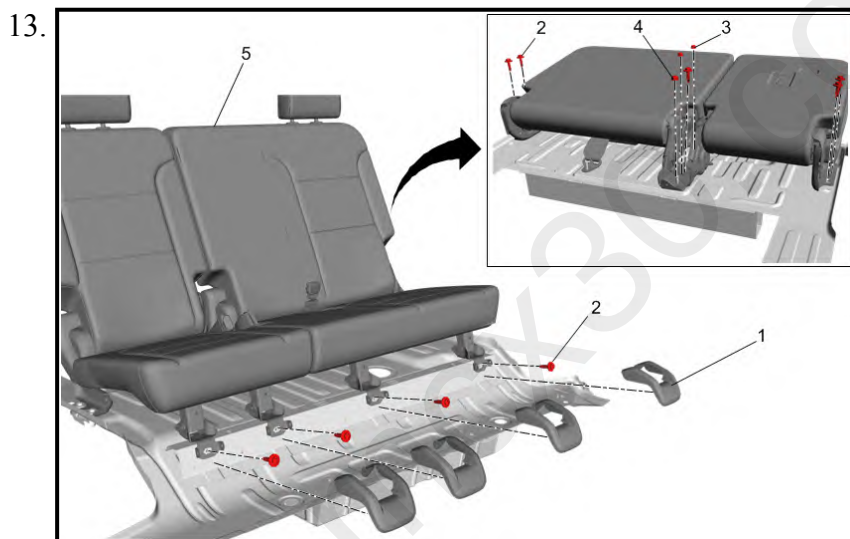


3rd Row Seat (5) - Install - [3rd Row Seat Removal and Installation \(Power\)](#)[3rd Row Seat Removal and Installation \(Manual\)](#)


3RD ROW SEAT BACK FRAME REPLACEMENT

Removal Procedure




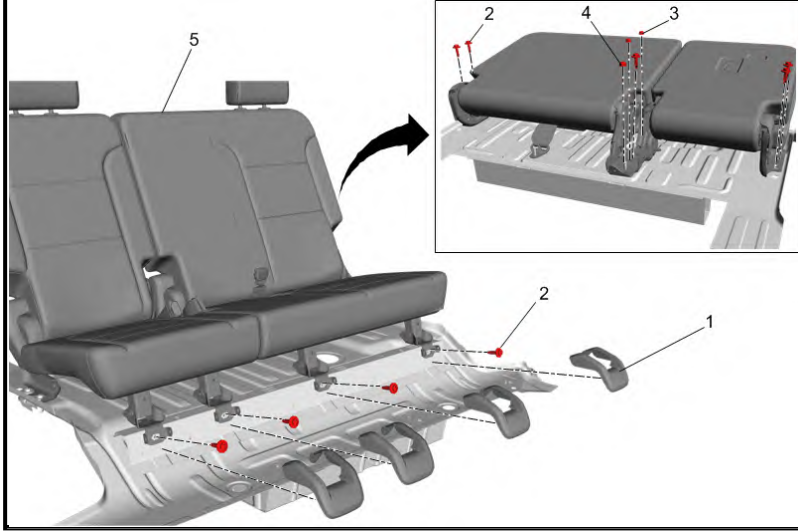

3rd Row Seat (5) - Remove - [3rd Row Seat Removal and Installation \(Power\)](#)[3rd Row Seat Removal and Installation \(Manual\)](#)

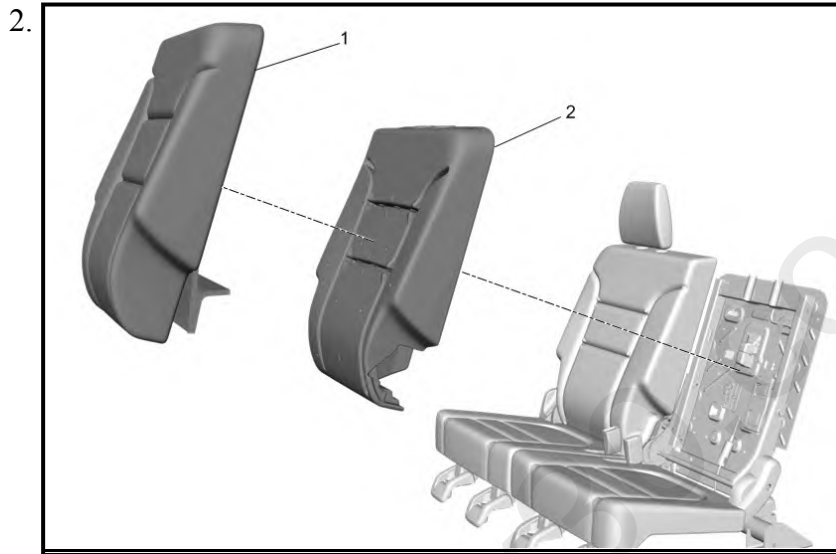


3rd Row Seat Back Cover (1) and Pad (2) - Remove - [3rd Row Seat Back Cover and Pad Replacement](#)

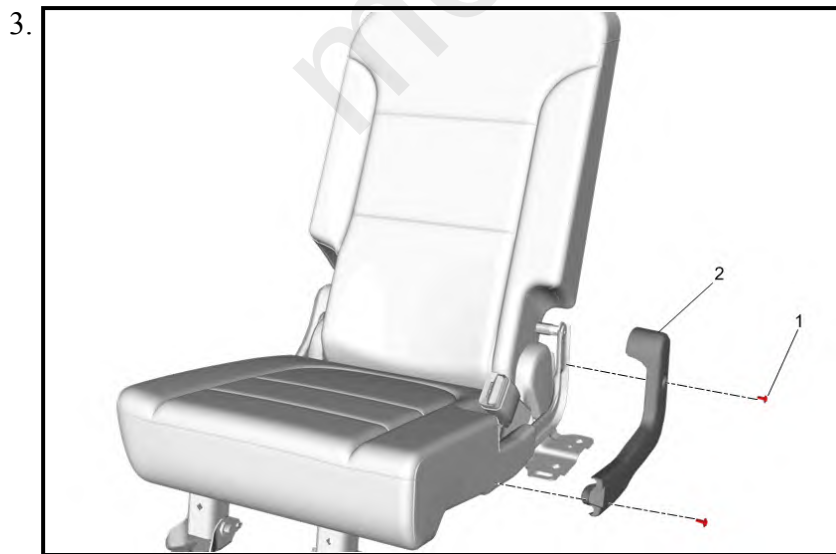


3rd Row Seat Back Hinge Finish Cover (Inboard) (2) - Remove - [3rd Row Seat Back Hinge Finish Cover Replacement \(Inboard\)](#)




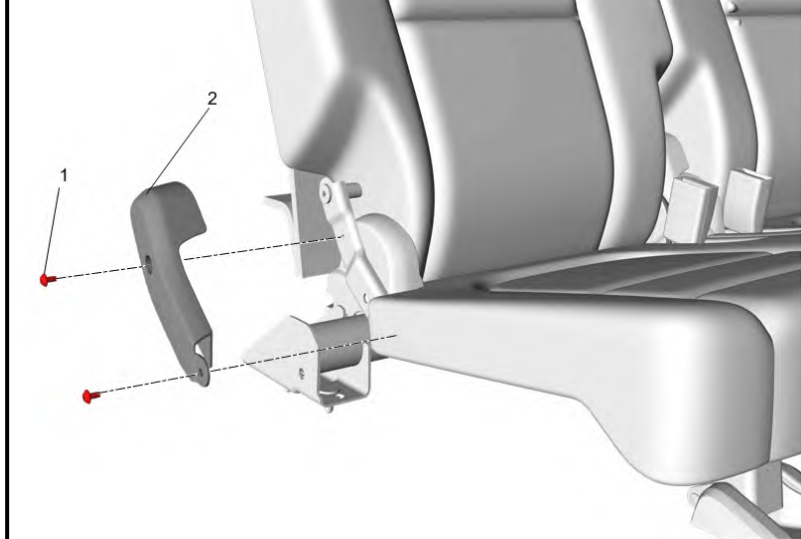

3rd Row Seat Back Hinge Finish Cover (Outboard) (2) - Remove - **3rd Row Seat Back Hinge Finish Cover Replacement (Outboard)**

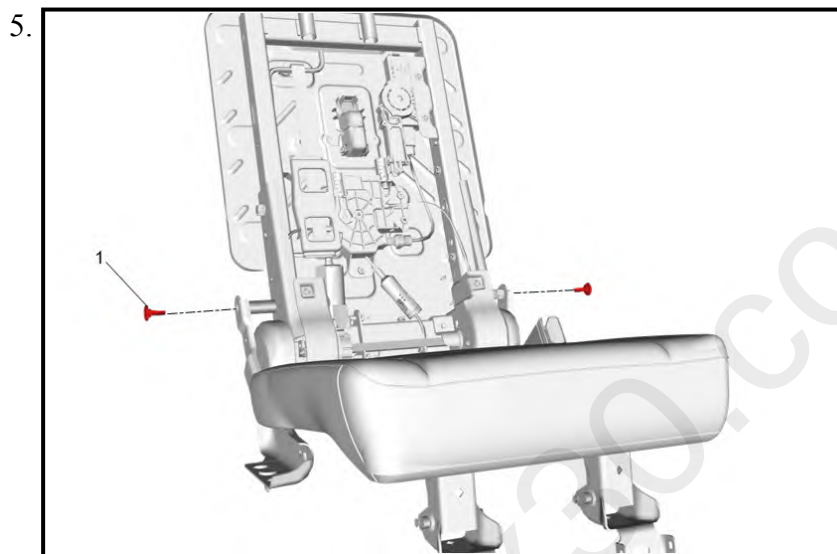

3rd Row Seat Cushion Frame Bolt (1) - Remove [2x]

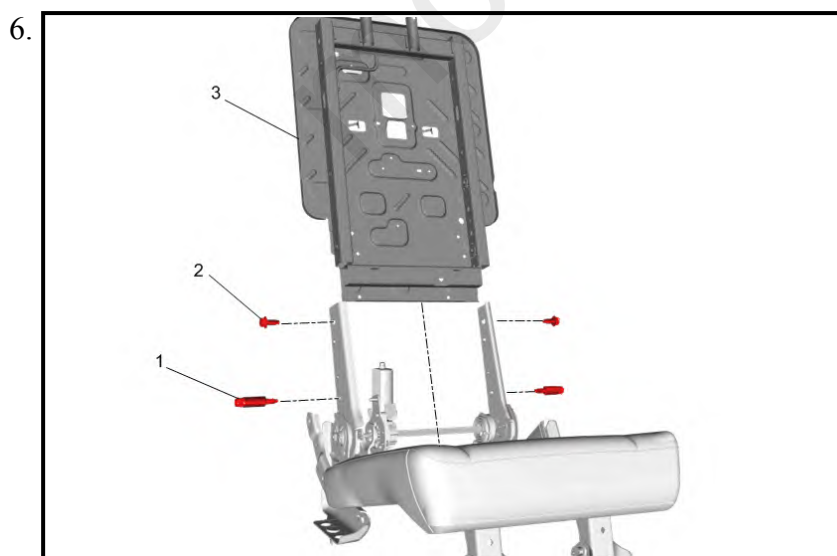


Rear Seat Spacer (1) - Remove [2x]

7. 3rd Row Seat Back Frame Bolt (2) - Remove [2x]

8. 3rd Row Seat Back Frame (3) - Remove

Installation Procedure




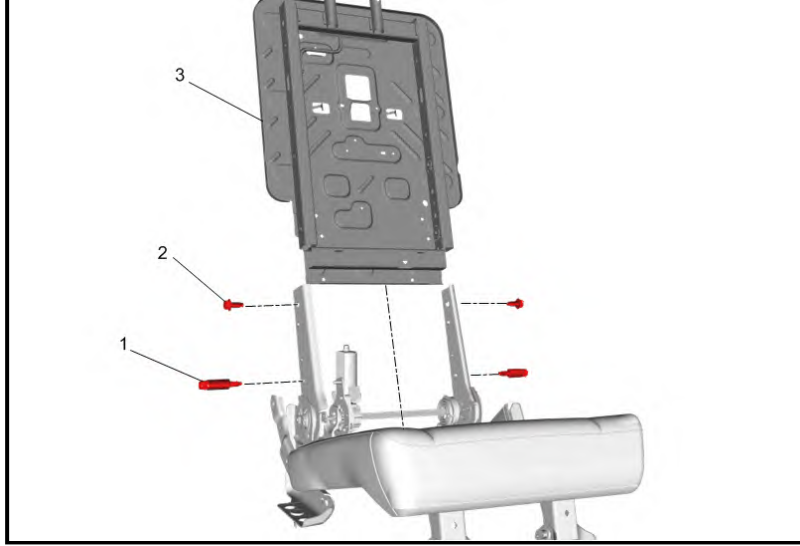


3rd Row Seat Back Frame (3) - Install

CAUTION: Refer to [Fastener Caution](#) .

2. 3rd Row Seat Back Frame Bolt (2) - Install and tighten [2x] 25 N.m (18 lb ft)
3. Rear Seat Spacer (1) - Install and tighten [2x] 25 N.m (18 lb ft)

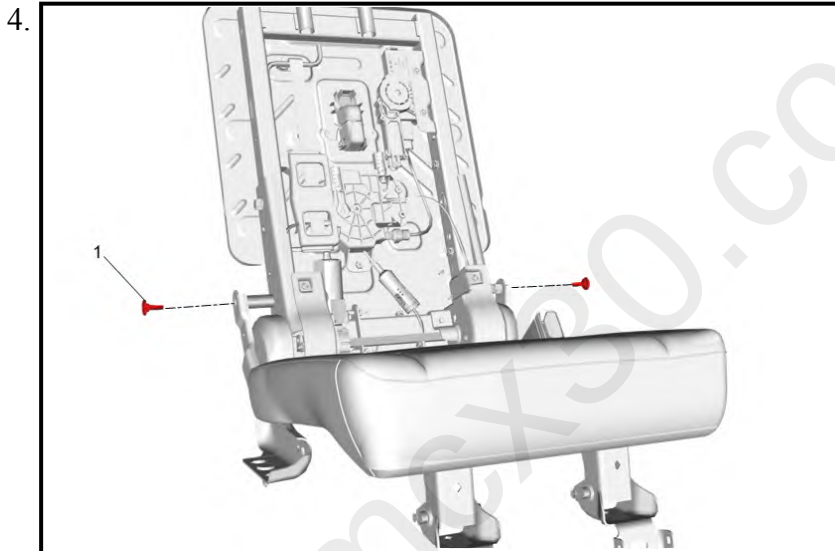


3rd Row Seat Cushion Frame Bolt (1) - Install [2x] - [3rd Row Seat Cushion Frame Replacement](#)

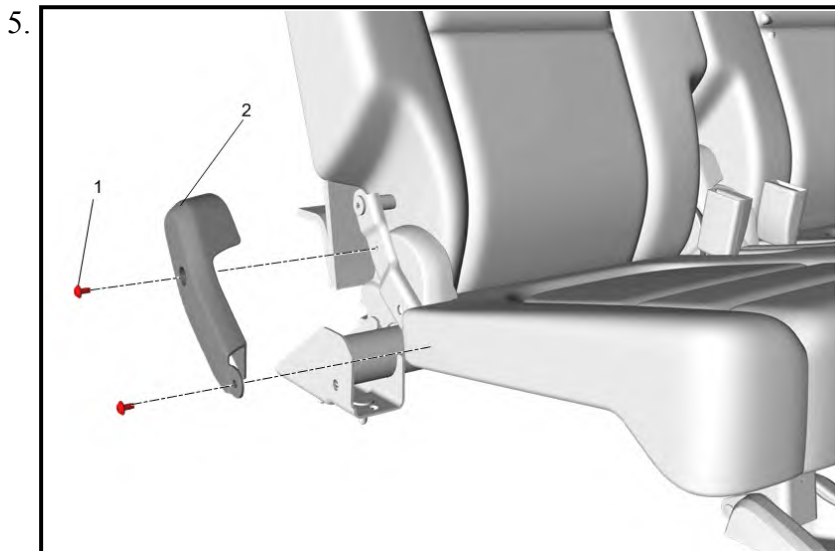


3rd Row Seat Back Hinge Finish Cover (Outboard) (2) - Install - [3rd Row Seat Back Hinge Finish Cover Replacement \(Outboard\)](#)



3rd Row Seat Back Hinge Finish Cover (Inboard) (2) - Install - [3rd Row Seat Back Hinge Finish Cover Replacement \(Inboard\)](#)

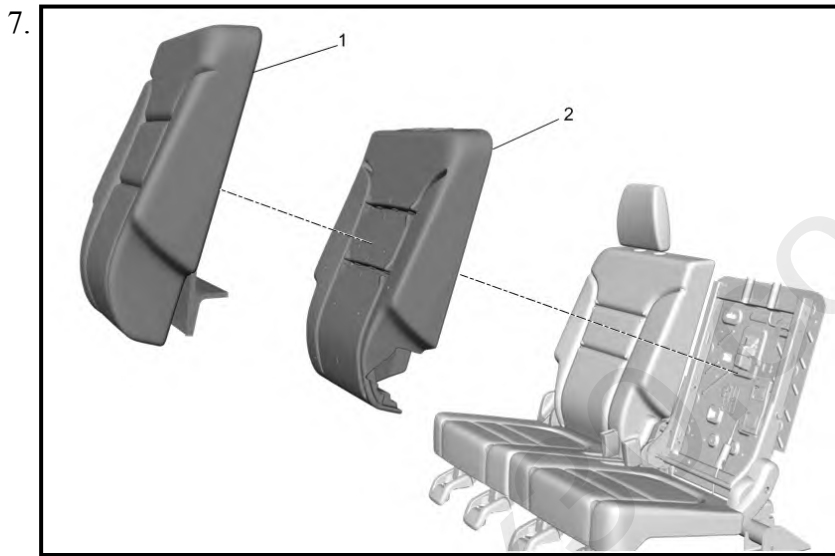



3rd Row Seat Back Cover (1) and Pad (2) - Install - [3rd Row Seat Back Cover and Pad Replacement](#)

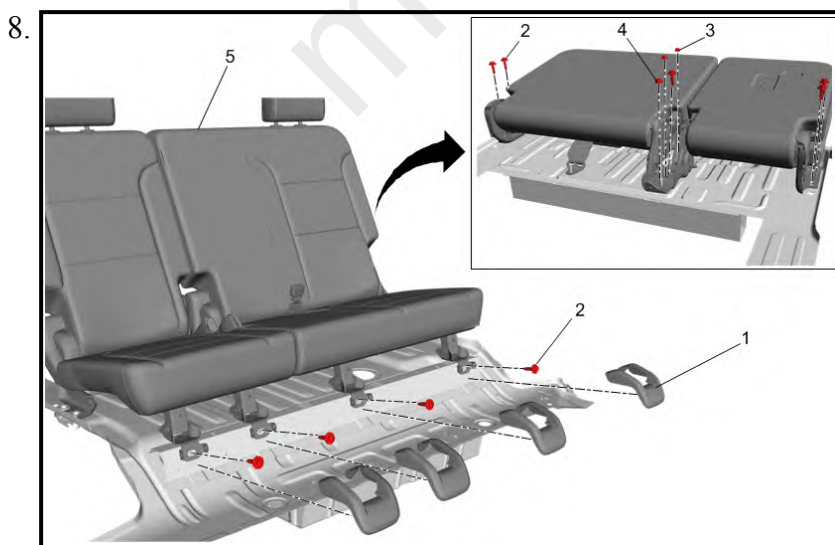

3rd Row Seat (5) - Install - [3rd Row Seat Removal and Installation \(Power\)](#)[3rd Row Seat Removal and Installation \(Manual\)](#)

 
3RD ROW SEAT HINGE FINISH COVER REPLACEMENT



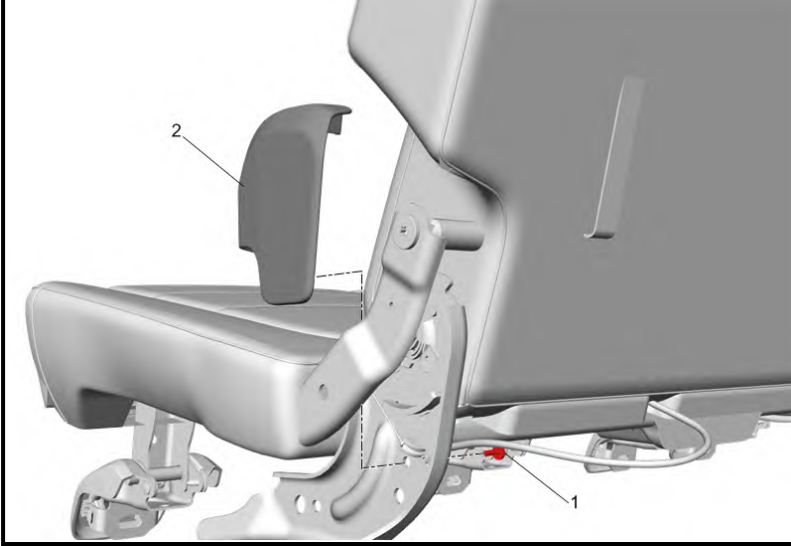

Callout	Component Name
Preliminary Procedure <u>3rd Row Seat Back Hinge Finish Cover Replacement (Outboard)</u> <u>3rd Row Seat Back Hinge Finish Cover Replacement (Inboard)</u>	
1	3rd Row Seat Hinge Finish Cover Fastener CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)
2	3rd Row Seat Hinge Finish Cover


3RD ROW SEAT BACK HINGE FINISH COVER REPLACEMENT (OUTBOARD)

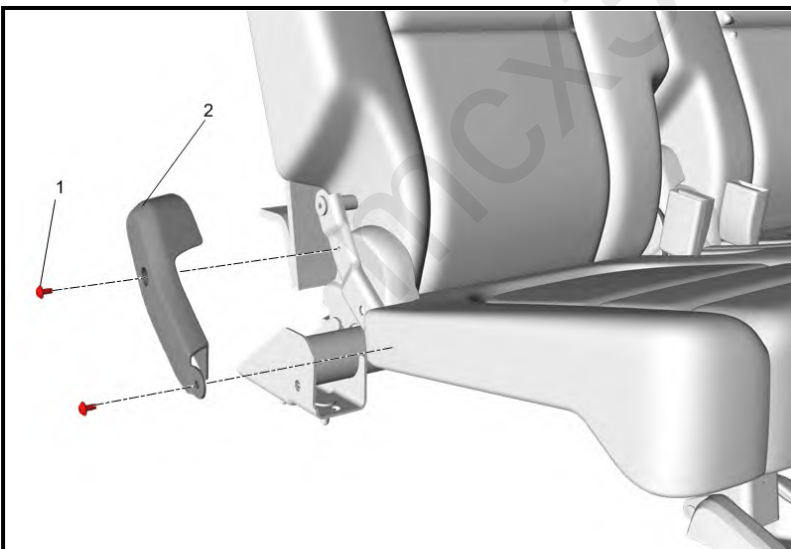

Callout	Component Name
Preliminary Procedure <u>3rd Row Seat Removal and Installation (Power)</u> <u>3rd Row Seat Removal and Installation (Manual)</u>	
1	3rd Row Seat Back Hinge Finish Cover Fastener [2x] CAUTION: Refer to <u>Fastener Caution</u> . Tighten 2.5 N.m (22 lb in)

Callout	Component Name
2	3rd Row Seat Back Hinge Finish Cover

3RD ROW SEAT BACK HINGE FINISH COVER REPLACEMENT (INBOARD)

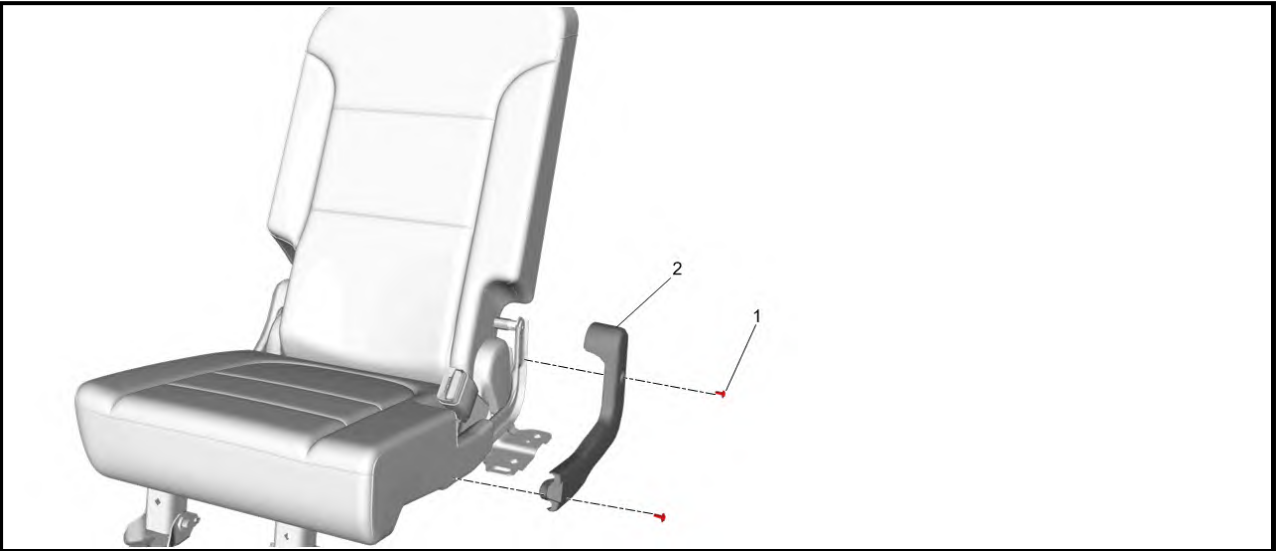

Callout	Component Name
Preliminary Procedure 3rd Row Seat Removal and Installation (Power) 3rd Row Seat Removal and Installation (Manual)	
1	3rd Row Seat Back Hinge Finish Cover Fastener [2x] CAUTION: Refer to Fastener Caution . Tighten 2.5 N.m (22 lb in)
2	3rd Row Seat Back Hinge Finish Cover