

2018 ELECTRICAL**Component Connector End View Index - Traverse****COMPONENT CONNECTOR END VIEWS****Component Connector End Views**

Description
<u>A3L Sunshade - Left</u>
<u>A3R Sunshade - Right</u>
<u>A7 Fuel Pump and Level Sensor Assembly</u>
<u>A10 Inside Rearview Mirror X1</u>
<u>A10 Inside Rearview Mirror X2</u>
<u>A11 Radio X4</u>
<u>A11 Radio X6</u>
<u>A11 Radio X1 (IO5/IO6)</u>
<u>A11 Radio X2 (IO5/IO6)</u>
<u>A11 Radio X3 (IO5/IO6)</u>
<u>A11 Radio X1 (IOA)</u>
<u>A11 Radio X2 (IOA)</u>
<u>A11 Radio X3 (IOA)</u>
<u>A22 Radio Controls X1 (IO5/IO6)</u>
<u>A22 Radio Controls X2 (IO5/IO6)</u>
<u>A23C Liftgate Latch Assembly</u>
<u>A23D Door Latch Assembly - Driver</u>
<u>A23LR Door Latch Assembly - Left Rear</u>
<u>A23P Door Latch Assembly - Passenger</u>
<u>A23RR Door Latch Assembly - Right Rear</u>
<u>A24D Door Handle Assembly - Driver Exterior (W49)</u>
<u>A24D Door Handle Assembly - Driver Exterior (X88)</u>
<u>A24LR Door Handle Assembly - Left Rear Exterior (W49)</u>
<u>A24LR Door Handle Assembly - Left Rear Exterior (X88)</u>
<u>A24P Door Handle Assembly - Passenger Exterior (W49)</u>
<u>A24P Door Handle Assembly - Passenger Exterior (X88)</u>
<u>A24RR Door Handle Assembly - Right Rear Exterior (W49)</u>
<u>A24RR Door Handle Assembly - Right Rear Exterior (X88)</u>
<u>A26 HVAC Controls</u>
<u>A34 HVAC Controls - Auxiliary</u>
<u>A98 Front Overhead Console Assembly</u>
<u>B1 A/C Refrigerant Pressure Sensor</u>
<u>B5LF Wheel Speed Sensor - Left Front</u>
<u>B5LF Wheel Speed Sensor - Left Front (X88)</u>
<u>B5LR Wheel Speed Sensor - Left Rear</u>
<u>B5RF Wheel Speed Sensor - Right Front</u>
<u>B5RF Wheel Speed Sensor - Right Front (X88)</u>
<u>B5RR Wheel Speed Sensor - Right Rear</u>
<u>B7C Air Temperature Sensor - Duct Lower Auxiliary</u>
<u>B7D Air Temperature Sensor - Duct Left Lower</u>
<u>B7E Air Temperature Sensor - Duct Right Lower</u>
<u>B7G Air Temperature Sensor - Duct Upper Auxiliary</u>
<u>B7H Air Temperature Sensor - Duct Left Upper</u>

Description
<u>B7J Air Temperature Sensor - Duct Right Upper</u>
<u>B9 Ambient Air Temperature Sensor</u>
<u>B10B Ambient Light/Sunload Sensor</u>
<u>B14A Transmission Output Shaft Speed Sensor (M3U)</u>
<u>B14A Transmission Output Shaft Speed Sensor (M3U/M3W)</u>
<u>B14E Transmission Input/Intermediate Shaft Speed Sensor (LFY)</u>
<u>B14E Transmission Input/Intermediate Shaft Speed Sensor (LTG)</u>
<u>B15 Transmission Internal Mode Switch (M3U)</u>
<u>B19B Brake Booster Vacuum Sensor</u>
<u>B20 Brake Fluid Level Switch</u>
<u>B22 Brake Pedal Position Sensor</u>
<u>B23A Camshaft Position Sensor - Bank 1 Exhaust (LFY)</u>
<u>B23B Camshaft Position Sensor - Bank 1 Intake (LFY)</u>
<u>B23C Camshaft Position Sensor - Bank 2 Exhaust (LFY)</u>
<u>B23D Camshaft Position Sensor - Bank 2 Intake (LFY)</u>
<u>B23E Camshaft Position Sensor - Exhaust (LTG)</u>
<u>B23F Camshaft Position Sensor - Intake (LTG)</u>
<u>B24 Mobile Telephone Microphone</u>
<u>B26 Crankshaft Position Sensor (LFY)</u>
<u>B26 Crankshaft Position Sensor (LTG)</u>
<u>B34 Engine Coolant Temperature Sensor (LFY)</u>
<u>B34 Engine Coolant Temperature Sensor (LTG)</u>
<u>B35 Engine Oil Level Switch (LFY)</u>
<u>B35 Engine Oil Level Switch (LTG)</u>
<u>B37 Engine Oil Pressure Switch</u>
<u>B37B Engine Oil Pressure Sensor</u>
<u>B39 A/C Evaporator Temperature Sensor</u>
<u>B46B Fuel Level Sensor - Secondary (F48)</u>
<u>B47 Fuel Pressure Sensor</u>
<u>B47B Fuel Rail Pressure Sensor</u>
<u>B52A Heated Oxygen Sensor 1</u>
<u>B52B Heated Oxygen Sensor 2</u>
<u>B52C Heated Oxygen Sensor - Bank 1 Sensor 1 (LFY)</u>
<u>B52D Heated Oxygen Sensor - Bank 1 Sensor 2 (LFY)</u>
<u>B52E Heated Oxygen Sensor - Bank 2 Sensor 1 (LFY)</u>
<u>B52F Heated Oxygen Sensor - Bank 2 Sensor 2 (LFY)</u>
<u>B55 Engine Hood Switch (W49)</u>
<u>B55 Engine Hood Switch (X88)</u>
<u>B59L Front Impact Sensor - Left</u>
<u>B59R Front Impact Sensor - Right</u>
<u>B61P Seat Belt Tension Sensor - Passenger</u>
<u>B63LF Side Impact Sensor - Left Front</u>
<u>B63LR Side Impact Sensor - Left Rear</u>
<u>B63RF Side Impact Sensor - Right Front</u>
<u>B63RR Side Impact Sensor - Right Rear</u>
<u>B68A Knock Sensor 1</u>
<u>B68B Knock Sensor 2</u>
<u>B70 Liftgate Close Switch</u>
<u>B71L Liftgate Object Sensor - Left</u>
<u>B71R Liftgate Object Sensor - Right (TB5/TC2)</u>
<u>B74 Manifold Absolute Pressure Sensor (LFY)</u>
<u>B74 Manifold Absolute Pressure Sensor (LTG)</u>

Description
<u>B75C Multifunction Intake Air Sensor</u>
<u>B77LF Radio Volume Compensator Interior Noise Microphone - Left Front</u>
<u>B77LR Radio Volume Compensator Interior Noise Microphone - Left Rear</u>
<u>B77RF Radio Volume Compensator Interior Noise Microphone - Right Front</u>
<u>B77RR Radio Volume Compensator Interior Noise Microphone - Right Rear</u>
<u>B80 Park Brake Switch (W49)</u>
<u>B80 Park Brake Switch (X88)</u>
<u>B87 Rearview Camera X1 (DRZ)</u>
<u>B87 Rearview Camera X2 (DRZ)</u>
<u>B87 Rearview Camera X1 (-DRZ)</u>
<u>B107 Accelerator Pedal Position Sensor</u>
<u>B110 Battery Sensor Module X1</u>
<u>B110 Battery Sensor Module X2</u>
<u>B111B Turbocharger Boost/Intake Air Temperature Sensor (LTG)</u>
<u>B118B Windshield Washer Fluid Level Switch (X88)</u>
<u>B118B Windshield Washer Fluid Level Switch (W49)</u>
<u>B150 Fuel Tank Pressure Sensor</u>
<u>B153D Seat Belt Buckle - Driver</u>
<u>B153P Seat Belt Buckle - Passenger</u>
<u>B160 Windshield Temperature and Inside Moisture Sensor</u>
<u>B161LF Vertical Suspension Acceleration Sensor - Left Front (F45)</u>
<u>B161RF Vertical Suspension Acceleration Sensor - Right Front</u>
<u>B174G Frontview Camera - Grille (UYH)</u>
<u>B218L Side Object Sensor Module - Left (UKC)</u>
<u>B218R Side Object Sensor Module - Right (UKC)</u>
<u>B225L Sideview Camera - Left</u>
<u>B225R Sideview Camera - Right</u>
<u>B233B Radar Sensor Module - Long Range (UGN)</u>
<u>B280 Automatic Transmission Accumulator Solenoid Valve (LFY)</u>
<u>B280 Automatic Transmission Accumulator Solenoid Valve (LTG)</u>
<u>B306A Parking Assist Sensor - Front Left Outer</u>
<u>B306B Parking Assist Sensor - Front Left Middle</u>
<u>B306C Parking Assist Sensor - Front Right Middle</u>
<u>B306D Parking Assist Sensor - Front Right Outer</u>
<u>B306E Parking Assist Sensor - Rear Left Outer</u>
<u>B306F Parking Assist Sensor - Rear Left Middle</u>
<u>B306G Parking Assist Sensor - Rear Right Middle</u>
<u>B306H Parking Assist Sensor - Rear Right Outer</u>
<u>B310 Fuel Pressure/Temperature Sensor</u>
<u>B315A Transmission Range Control Valve 1 Position Switch (M3W)</u>
<u>B315B Transmission Range Control Valve 2 Position Switch (M3W)</u>
<u>B316 Transmission Park Valve Position Switch (M3W)</u>
<u>C3 Telematics Communication Interface Control Module Battery</u>
<u>E1D Accent Lamp - Driver Door (W49)</u>
<u>E1GA Accent Lamp - Left Middle Instrument Panel</u>
<u>E1P Accent Lamp - Passenger Door (W49)</u>
<u>E2LF Side Marker Lamp - Left Front (W49)</u>
<u>E2LF Side Marker Lamp - Left Front (X88)</u>
<u>E2RF Side Marker Lamp - Right Front (W49)</u>
<u>E2RF Side Marker Lamp - Right Front (X88)</u>
<u>E4LF Turn Signal Lamp - Left Front (W49)</u>
<u>E4LF Turn Signal Lamp - Left Front (X88)</u>

Description
<u>E4RF Turn Signal Lamp - Right Front (W49).</u>
<u>E4RF Turn Signal Lamp - Right Front (X88).</u>
<u>E5AK Tail Lamp - Left Outer (W49).</u>
<u>E5AK Tail Lamp - Left Outer (X88+CZ3).</u>
<u>E5AK Tail Lamp - Left Outer (X88-CZ3).</u>
<u>E5AL Tail Lamp - Right Outer (W49).</u>
<u>E5AL Tail Lamp - Right Outer (X88+CZ3).</u>
<u>E5AL Tail Lamp - Right Outer (X88-CZ3).</u>
<u>E5G Tail Lamp - Left Inner (W49).</u>
<u>E5G Tail Lamp - Left Inner (X88).</u>
<u>E5H Tail Lamp - Right Inner (W49).</u>
<u>E5H Tail Lamp - Right Inner (X88).</u>
<u>E6 Center High Mounted Stop Lamp</u>
<u>E7L License Plate Lamp - Left (DRZ).</u>
<u>E7L License Plate Lamp - Left (-DRZ).</u>
<u>E7R License Plate Lamp - Right (DRZ).</u>
<u>E7R License Plate Lamp - Right (-DRZ).</u>
<u>E8D Door Courtesy Lamp - Driver (W49).</u>
<u>E8D Door Courtesy Lamp - Driver (X88).</u>
<u>E8P Door Courtesy Lamp - Passenger (W49).</u>
<u>E8P Door Courtesy Lamp - Passenger (X88).</u>
<u>E14A Seat Heating Element - Driver Back (KA1).</u>
<u>E14B Seat Heating Element - Driver Cushion (KA1).</u>
<u>E14C Seat Heating Element - Passenger Back (KA1).</u>
<u>E14D Seat Heating Element - Passenger Cushion (KA1).</u>
<u>E14F Seat Heating Element - Left Rear Cushion (KA6).</u>
<u>E14H Seat Heating Element - Right Rear Cushion (KA6).</u>
<u>E15 Steering Wheel Heater</u>
<u>E17D Outside Rearview Mirror Glass - Driver X1</u>
<u>E17D Outside Rearview Mirror Glass - Driver X2</u>
<u>E17D Outside Rearview Mirror Glass - Driver X4</u>
<u>E17P Outside Rearview Mirror Glass - Passenger X1</u>
<u>E17P Outside Rearview Mirror Glass - Passenger X2</u>
<u>E18 Rear Defogger Grid X1</u>
<u>E18 Rear Defogger Grid X2</u>
<u>E28 Center Console Compartment Lamp (X88).</u>
<u>E28 Center Console Compartment Lamp (W49).</u>
<u>E29LF Fog Lamp - Left Front (T3U).</u>
<u>E29R Fog Lamp - Rear</u>
<u>E29RF Fog Lamp - Right Front (T3U).</u>
<u>E33 Cargo Lamp</u>
<u>E37M Dome/Reading Lamps - Middle</u>
<u>E37R Dome/Reading Lamps - Rear</u>
<u>E40 Electrical Auxiliary Heater X1 (C32).</u>
<u>E40 Electrical Auxiliary Heater X2 (C32).</u>
<u>E55D Flood Lamp - Driver Door Pocket (1LZ/2LZ).</u>
<u>E55P Flood Lamp - Passenger Door Pocket (1LZ/2LZ).</u>
<u>E63D Flood Lamp - Driver Door Handle</u>
<u>E63P Flood Lamp - Passenger Door Handle</u>
<u>E72 Hands-Free Liftgate Sensor Lamp (TC2).</u>
<u>F101 Passenger Instrument Panel Air Bag X1</u>
<u>F101 Passenger Instrument Panel Air Bag X2</u>

Description
<u>F105L Roof Rail Air Bag - Left</u>
<u>F105R Roof Rail Air Bag - Right</u>
<u>F106D Seat Side Air Bag - Driver</u>
<u>F106DA Seat Side Air Bag - Driver Inboard</u>
<u>F106P Seat Side Air Bag - Passenger</u>
<u>F107 Steering Wheel Air Bag X1</u>
<u>F107 Steering Wheel Air Bag X2</u>
<u>F112D Seat Belt Retractor Pretensioner - Driver (X88)</u>
<u>F112D Seat Belt Retractor Pretensioner - Driver (W49)</u>
<u>F112P Seat Belt Retractor Pretensioner - Passenger (X88)</u>
<u>F112P Seat Belt Retractor Pretensioner - Passenger (W49)</u>
<u>F113D Seat Belt Anchor Pretensioner - Driver</u>
<u>F113P Seat Belt Anchor Pretensioner - Passenger</u>
<u>G10 Cooling Fan Motor</u>
<u>G13 Generator X1 (LFY)</u>
<u>G13 Generator X2 (LFY)</u>
<u>G13 Generator X1 (LTG)</u>
<u>G13 Generator X2 (LTG)</u>
<u>G18 High Pressure Fuel Pump (LFY)</u>
<u>G18 High Pressure Fuel Pump (LTG)</u>
<u>G19 Rear Window Washer Pump</u>
<u>G24 Windshield Washer Pump</u>
<u>G36 Auxiliary Heater Coolant Pump</u>
<u>K8A Blower Motor Control Module - Auxiliary X1</u>
<u>K8A Blower Motor Control Module - Auxiliary X2</u>
<u>K9 Body Control Module X1</u>
<u>K9 Body Control Module X2</u>
<u>K9 Body Control Module X3</u>
<u>K9 Body Control Module X4</u>
<u>K9 Body Control Module X5</u>
<u>K9 Body Control Module X6</u>
<u>K9 Body Control Module X7</u>
<u>K17 Electronic Brake Control Module</u>
<u>K19 Suspension Control Module (F45)</u>
<u>K20 Engine Control Module X1 (LFY)</u>
<u>K20 Engine Control Module X2 (LFY)</u>
<u>K20 Engine Control Module X3 (LFY)</u>
<u>K20 Engine Control Module X1 (LTG)</u>
<u>K20 Engine Control Module X2 (LTG)</u>
<u>K20 Engine Control Module X3 (LTG)</u>
<u>K29 Seat Heating Control Module X1 (KA1)</u>
<u>K29 Seat Heating Control Module X2 (KA1)</u>
<u>K29R Seat Heating Control Module - Rear X1 (KA6)</u>
<u>K29R Seat Heating Control Module - Rear X2 (KA6)</u>
<u>K32 Steering Wheel Heating Control Module X1 (W49+UVD)</u>
<u>K32 Steering Wheel Heating Control Module X2 (W49+UVD)</u>
<u>K32 Steering Wheel Heating Control Module (X88+UVD)</u>
<u>K33 HVAC Control Module X1</u>
<u>K33 HVAC Control Module X2</u>
<u>K33 HVAC Control Module X3</u>
<u>K33 HVAC Control Module X4</u>
<u>K36 Inflatable Restraint Sensing and Diagnostic Module X1</u>

Description
<u>K36 Inflatable Restraint Sensing and Diagnostic Module X2</u>
<u>K38 Chassis Control Module (M3W)</u>
<u>K39 Liftgate Control Module X2 (TB5/TC2)</u>
<u>K39 Liftgate Control Module X3 (TB5/TC2)</u>
<u>K39 Liftgate Control Module X1 (W49+(TB5/TC2))</u>
<u>K39 Liftgate Control Module X1 (X88+(TB5/TC2))</u>
<u>K40D Seat Memory Control Module - Driver X1 (AAB)</u>
<u>K40D Seat Memory Control Module - Driver X2 (AAB)</u>
<u>K40D Seat Memory Control Module - Driver X3 (AAB)</u>
<u>K40D Seat Memory Control Module - Driver X5 (AAB)</u>
<u>K40D Seat Memory Control Module - Driver X6 (AAB)</u>
<u>K43 Power Steering Control Module X1</u>
<u>K43 Power Steering Control Module X2</u>
<u>K43 Power Steering Control Module X3</u>
<u>K47 Rear Differential Clutch Control Module X1 (F48)</u>
<u>K47 Rear Differential Clutch Control Module X2 (F48)</u>
<u>K56 Serial Data Gateway Module X1</u>
<u>K56 Serial Data Gateway Module X2</u>
<u>K60 Steering Column Lock Module (N06)</u>
<u>K71 Transmission Control Module</u>
<u>K73 Telematics Communication Interface Control Module X5</u>
<u>K73 Telematics Communication Interface Control Module X7 (UE1/UE3/UI3)</u>
<u>K73 Telematics Communication Interface Control Module X1 (W49)</u>
<u>K73 Telematics Communication Interface Control Module X2 (W49)</u>
<u>K73 Telematics Communication Interface Control Module X1 (X88)</u>
<u>K73 Telematics Communication Interface Control Module X2 (X88)</u>
<u>K74 Human Machine Interface Control Module X1 (IO5/IO6)</u>
<u>K74 Human Machine Interface Control Module X2 (IO5/IO6)</u>
<u>K74 Human Machine Interface Control Module X3 (IO5/IO6)</u>
<u>K74 Human Machine Interface Control Module X4 (IO5/IO6)</u>
<u>K74 Human Machine Interface Control Module X5 (IO5/IO6)</u>
<u>K74 Human Machine Interface Control Module X7 (IO5/IO6)</u>
<u>K77 Remote Control Door Lock Receiver</u>
<u>K84 Keyless Entry Control Module X1 (X88)</u>
<u>K84 Keyless Entry Control Module X2</u>
<u>K84 Keyless Entry Control Module X1 (W49)</u>
<u>K85 Passenger Presence Module</u>
<u>K89 Immobilizer Control Module</u>
<u>K99 Steering Column Position Control Module X1 (N38)</u>
<u>K99 Steering Column Position Control Module X2 (N38)</u>
<u>K108 Active Noise Cancellation Module X1 (UQE)</u>
<u>K108 Active Noise Cancellation Module X2 (X88+UQE)</u>
<u>K108 Active Noise Cancellation Module X3 (W49+UQE)</u>
<u>K108 Active Noise Cancellation Module X3 (X88+UQE)</u>
<u>K109 Frontview Camera Module</u>
<u>K111 Fuel Pump Driver Control Module</u>
<u>K124 Active Safety Control Module X1 (UGN)</u>
<u>K124 Active Safety Control Module X2 (W49+UGN)</u>
<u>K124 Active Safety Control Module X2 (X88+UGN)</u>
<u>K157 Video Processing Control Module X1 (UVH)</u>
<u>K157 Video Processing Control Module X2 (W49+UVH)</u>
<u>K157 Video Processing Control Module X2 (X88+UVH)</u>

Description
<u>K169 Folding Seat Control Module - 3rd Row X1 (AS8).</u>
<u>K169 Folding Seat Control Module - 3rd Row X2 (AS8).</u>
<u>K171 Hands-Free Liftgate Sensor Control Module X2 (TC2).</u>
<u>K171 Hands-Free Liftgate Sensor Control Module X3 (TC2).</u>
<u>K171 Hands-Free Liftgate Sensor Control Module X1 (W49+TC2).</u>
<u>K171 Hands-Free Liftgate Sensor Control Module X1 (X88+TC2).</u>
<u>K182 Parking Assist Control Module X1 (UD5/UD7).</u>
<u>K182 Parking Assist Control Module X2 (UD5/UD7).</u>
<u>K182 Parking Assist Control Module X3 (UD5).</u>
<u>K188 Human Machine Interface Control Module Bypass Module X1 (UVH).</u>
<u>K188 Human Machine Interface Control Module Bypass Module X2 (UVH).</u>
<u>K188 Human Machine Interface Control Module Bypass Module X3 (UVH).</u>
<u>M6B Air Temperature Door Actuator - Auxiliary.</u>
<u>M6L Air Temperature Door Actuator - Left</u>
<u>M6R Air Temperature Door Actuator - Right</u>
<u>M8 Blower Motor</u>
<u>M8B Blower Motor - Auxiliary.</u>
<u>M9 Brake Booster Pump Motor</u>
<u>M17 Liftgate Motor Assembly (TB5/TC2)</u>
<u>M29L Headlamp Leveling Actuator - Left (TR6).</u>
<u>M29R Headlamp Leveling Actuator - Right (TR6).</u>
<u>M30 Liftgate Latch (-TB5/TC2).</u>
<u>M32 Differential Clutch Pump (F48).</u>
<u>M35D Window Motor Module - Driver (-DR9).</u>
<u>M37 Mode Door Actuator</u>
<u>M37B Mode Door Actuator - Auxiliary.</u>
<u>M45 Rear Wiper Motor</u>
<u>M46 Air Recirculation Door Actuator</u>
<u>M50D Seat Front Vertical Motor - Driver</u>
<u>M51D Seat Horizontal Motor - Driver</u>
<u>M51P Seat Horizontal Motor - Passenger</u>
<u>M53D Seat Lumbar Support Motor - Driver</u>
<u>M53P Seat Lumbar Support Motor - Passenger</u>
<u>M55D Seat Rear Vertical Motor - Driver</u>
<u>M55P Seat Rear Vertical Motor - Passenger</u>
<u>M56D Seat Recline Motor - Driver</u>
<u>M56P Seat Recline Motor - Passenger</u>
<u>M64 Starter Motor X1</u>
<u>M64 Starter Motor X2 (LFY).</u>
<u>M64 Starter Motor X2 (LTG).</u>
<u>M65 Steering Column Telescope Motor (N38).</u>
<u>M68 Steering Column Tilt Motor (N38).</u>
<u>M69 Sunroof Motor (C3U).</u>
<u>M73A Seat Blower Motor - Driver Back</u>
<u>M73B Seat Blower Motor - Passenger Back</u>
<u>M73C Seat Blower Motor - Driver Cushion</u>
<u>M73D Seat Blower Motor - Passenger Cushion</u>
<u>M74D Window Motor - Driver (DR9).</u>
<u>M74LR Window Motor - Left Rear (W49).</u>
<u>M74LR Window Motor - Left Rear (X88).</u>
<u>M74P Window Motor - Passenger (W49).</u>
<u>M74P Window Motor - Passenger (X88).</u>

Description
<u>M74RR Window Motor - Right Rear (W49).</u>
<u>M74RR Window Motor - Right Rear (X88).</u>
<u>M75 Windshield Wiper Motor</u>
<u>M96A Active Grille Air Shutter 1 Actuator (VTI/WMI).</u>
<u>M96B Active Grille Air Shutter 2 Actuator (WMI).</u>
<u>M97 Fuel Fill Door Lock Actuator</u>
<u>M104L Park Brake Actuator - Left</u>
<u>M104R Park Brake Actuator - Right</u>
<u>M108LR Folding Seat Motor - 3rd Row Left (AS8).</u>
<u>M108RR Folding Seat Motor - 3rd Row Right (AS8).</u>
<u>M109LR Folding Seat Back Unlatch Motor - 3rd Row Left (AS8).</u>
<u>M109RR Folding Seat Back Unlatch Motor - 3rd Row Right (AS8).</u>
<u>M115 Power Transfer Unit Shift Actuator (F48).</u>
<u>M123 Transmission Park Valve Lock Solenoid Actuator (M3W).</u>
<u>P2 Transmission Shift Lever Position Indicator</u>
<u>P12L Horn - Left</u>
<u>P12R Horn - Right</u>
<u>P16 Instrument Cluster</u>
<u>P19AC Speaker - Subwoofer (UQA).</u>
<u>P19AG Speaker - Left Front Door (UQA).</u>
<u>P19AG Speaker - Left Front Door (UQE).</u>
<u>P19AH Speaker - Right Front Door (UQA).</u>
<u>P19AH Speaker - Right Front Door (UQE).</u>
<u>P19AL Speaker - Left Rear Door (UQA).</u>
<u>P19AL Speaker - Left Rear Door (UQE).</u>
<u>P19AM Speaker - Right Rear Door (UQA).</u>
<u>P19AM Speaker - Right Rear Door (UQE).</u>
<u>P19AN Speaker - Left Rear Trim Panel</u>
<u>P19AP Speaker - Right Rear Trim Panel</u>
<u>P19B Speaker - Center Instrument Panel</u>
<u>P19J Speaker - Left Instrument Panel (UQA).</u>
<u>P19J Speaker - Left Instrument Panel (UQE).</u>
<u>P19W Speaker - Right Instrument Panel (UQA).</u>
<u>P19W Speaker - Right Instrument Panel (UQE).</u>
<u>P43 Collision Alert Indicators</u>
<u>P45LR Seat Haptic Movement Motor - Driver Left Rear</u>
<u>P45RR Seat Haptic Movement Motor - Driver Right Rear</u>
<u>P50 Emergency Call Backup Speaker</u>
<u>Q2 A/C Compressor Clutch</u>
<u>Q6A Camshaft Position Actuator Solenoid Valve - Bank 1 Exhaust (LFY).</u>
<u>Q6B Camshaft Position Actuator Solenoid Valve - Bank 1 Intake (LFY).</u>
<u>Q6C Camshaft Position Actuator Solenoid Valve - Bank 2 Exhaust (LFY).</u>
<u>Q6D Camshaft Position Actuator Solenoid Valve - Bank 2 Intake (LFY).</u>
<u>Q6E Camshaft Position Actuator Solenoid Valve - Exhaust (LTG).</u>
<u>Q6F Camshaft Position Actuator Solenoid Valve - Intake (LTG).</u>
<u>Q12 Evaporative Emission Purge Solenoid Valve (LFY).</u>
<u>Q12 Evaporative Emission Purge Solenoid Valve (LTG).</u>
<u>Q13 Evaporative Emission Vent Solenoid Valve</u>
<u>Q17A Fuel Injector 1</u>
<u>Q17B Fuel Injector 2</u>
<u>Q17C Fuel Injector 3</u>
<u>Q17D Fuel Injector 4</u>

Description
<u>Q17E Fuel Injector 5 (LFY).</u>
<u>Q17F Fuel Injector 6 (LFY).</u>
<u>Q37LF Shock Absorber Actuator - Left Front (F45).</u>
<u>Q37LR Shock Absorber Actuator - Left Rear (F45).</u>
<u>Q37RF Shock Absorber Actuator - Right Front (F45).</u>
<u>Q37RR Shock Absorber Actuator - Right Rear (F45).</u>
<u>Q38 Throttle Body.</u>
<u>Q40 Turbocharger Bypass Solenoid Valve</u>
<u>Q42 Turbocharger Wastegate Solenoid Valve</u>
<u>Q44 Engine Oil Pressure Control Solenoid Valve</u>
<u>Q46 A/C Compressor Solenoid Valve</u>
<u>Q49 Rear Differential Clutch Solenoid Valve (G99).</u>
<u>Q77A Transmission Control Solenoid Valve 1</u>
<u>Q77B Transmission Control Solenoid Valve 2</u>
<u>Q77C Transmission Control Solenoid Valve 3</u>
<u>Q77D Transmission Control Solenoid Valve 4</u>
<u>Q77E Transmission Control Solenoid Valve 5</u>
<u>Q77F Transmission Control Solenoid Valve 6</u>
<u>Q77G Transmission Control Solenoid Valve 7</u>
<u>Q77H Transmission Control Solenoid Valve 8</u>
<u>Q77J Transmission Control Solenoid Valve 9</u>
<u>Q77K Transmission Control Solenoid Valve 10</u>
<u>R6A Terminating Resistor - High Speed Bus (F48).</u>
<u>R6A Terminating Resistor - High Speed Bus (-F48).</u>
<u>R6E Terminating Resistor - High Speed Extension Bus 1</u>
<u>R6F Terminating Resistor - High Speed Extension Bus 2</u>
<u>R44 Radio AM Antenna Signal Filter Module - Center High Mounted Stop Lamp X1 (W49).</u>
<u>R44 Radio AM Antenna Signal Filter Module - Center High Mounted Stop Lamp X2 (W49).</u>
<u>R44 Radio AM Antenna Signal Filter Module - Center High Mounted Stop Lamp X2 (X49).</u>
<u>R44 Radio AM Antenna Signal Filter Module - Center High Mounted Stop Lamp X2 (X88).</u>
<u>S2L Transmission Manual Shift Switch - Left (M3W).</u>
<u>S2R Transmission Manual Shift Switch - Right (M3W).</u>
<u>S3 Transmission Shift Lever (M3V).</u>
<u>S3 Transmission Shift Lever (M3W).</u>
<u>S13D Door Lock Switch - Driver</u>
<u>S13P Door Lock Switch - Passenger</u>
<u>S25 Garage Door Opener (W49).</u>
<u>S25 Garage Door Opener (X88).</u>
<u>S26 Hazard Warning Switch (W49).</u>
<u>S26 Hazard Warning Switch (X88).</u>
<u>S30 Headlamp Switch</u>
<u>S33 Horn Switch X1</u>
<u>S33 Horn Switch X2</u>
<u>S38 Ignition Mode Switch (W49).</u>
<u>S38 Ignition Mode Switch (X88).</u>
<u>S45B Liftgate Control Switch - Interior</u>
<u>S46B Liftgate Unlatch Switch (W49).</u>
<u>S46B Liftgate Unlatch Switch (X88).</u>
<u>S47D Seat Memory Switch - Driver (AAB).</u>
<u>S64D Seat Adjuster Switch - Driver</u>
<u>S64P Seat Adjuster Switch - Passenger</u>
<u>S65D Seat Lumbar Support Switch - Driver</u>

Description
<u>S65P Seat Lumbar Support Switch - Passenger</u>
<u>S70E Steering Wheel Controls Switch - Radio Presets</u>
<u>S70F Steering Wheel Controls Switch - Radio Volume</u>
<u>S70L Steering Wheel Controls Switch - Left (W49)</u>
<u>S70L Steering Wheel Controls Switch - Left (X88)</u>
<u>S70R Steering Wheel Controls Switch - Right (W49)</u>
<u>S70R Steering Wheel Controls Switch - Right (X88)</u>
<u>S71 Steering Column Tilt and Telescope Switch</u>
<u>S78 Turn Signal/Multifunction Switch</u>
<u>S79D Window Switch - Driver</u>
<u>S79LR Window Switch - Left Rear (W49)</u>
<u>S79LR Window Switch - Left Rear (X88)</u>
<u>S79P Window Switch - Passenger</u>
<u>S79RR Window Switch - Right Rear (W49)</u>
<u>S79RR Window Switch - Right Rear (X88)</u>
<u>S82 Windshield Wiper/Washer Switch</u>
<u>S86 Vehicle Stability Control Switch (W49)</u>
<u>S126 Drive Mode Select Switch (X88)</u>
<u>S144B Folding Seat Control Switch - Rear Compartment 3rd Row (AS8)</u>
<u>T1 Accessory DC/AC Power Inverter Module (KI6)</u>
<u>T1 Accessory DC/AC Power Inverter Module (KI7)</u>
<u>T2RR Antenna - Roof Rear X1</u>
<u>T2RR Antenna - Roof Rear X2</u>
<u>T3 Audio Amplifier X1 (UQA)</u>
<u>T3 Audio Amplifier X2 (UQA)</u>
<u>T3 Audio Amplifier X3 (W49+UQA)</u>
<u>T3 Audio Amplifier X4 (W49+UQA)</u>
<u>T3 Audio Amplifier X3 (X88+UQA)</u>
<u>T3 Audio Amplifier X4 (X88+UQA)</u>
<u>T8A Ignition Coil 1 (LFY)</u>
<u>T8A Ignition Coil 1 (LTG)</u>
<u>T8B Ignition Coil 2 (LFY)</u>
<u>T8B Ignition Coil 2 (LTG)</u>
<u>T8C Ignition Coil 3 (LFY)</u>
<u>T8C Ignition Coil 3 (LTG)</u>
<u>T8D Ignition Coil 4 (LFY)</u>
<u>T8D Ignition Coil 4 (LTG)</u>
<u>T8E Ignition Coil 5 (LFY)</u>
<u>T8F Ignition Coil 6 (LFY)</u>
<u>T10E Keyless Entry Antenna - Rear Compartment</u>
<u>T10G Keyless Entry Antenna - Rear Fascia</u>
<u>T10K Keyless Entry Antenna - Center Console Rear</u>
<u>T10L Keyless Entry Antenna - Left Body</u>
<u>T10R Keyless Entry Antenna - Right Body</u>
<u>T10U Keyless Entry Antenna - Instrument Panel</u>
<u>T12 Automatic Transmission Assembly X1</u>
<u>T12 Automatic Transmission Assembly X2</u>
<u>T12 Automatic Transmission Assembly X3</u>
<u>T15 Navigation Antenna Signal Splitter X1</u>
<u>T15 Navigation Antenna Signal Splitter X2</u>
<u>T15 Navigation Antenna Signal Splitter X3</u>
<u>T19 Power Supply Transformer</u>

Description
<u>T22 Mobile Device Wireless Charger Module (K4C).</u>
<u>T23 Radio Antenna Amplifier X1</u>
<u>V1 Air Ionizer</u>
<u>X80C Accessory Power Receptacle - Cargo (W49).</u>
<u>X80C Accessory Power Receptacle - Cargo (X88).</u>
<u>X80D Accessory Power Receptacle - Center Console Compartment (W49).</u>
<u>X80F Accessory Power Receptacle - Front (X88).</u>
<u>X81 Accessory Power Receptacle - 110V AC X1</u>
<u>X81 Accessory Power Receptacle - 110V AC X2</u>
<u>X81B Accessory Power Receptacle - 220V AC X1</u>
<u>X81B Accessory Power Receptacle - 220V AC X2</u>
<u>X83 Auxiliary Audio Input X1 (W49).</u>
<u>X83 Auxiliary Audio Input X2 (W49).</u>
<u>X83 Auxiliary Audio Input X1 (X88).</u>
<u>X83 Auxiliary Audio Input X2 (X88).</u>
<u>X84 Data Link Connector</u>
<u>X85 Steering Wheel Air Bag Coil X1</u>
<u>X85 Steering Wheel Air Bag Coil X2</u>
<u>X88 Trailer Connector (V92).</u>
<u>X88 Trailer Connector (-V92).</u>
<u>X92 USB Receptacle (IO5/IO6).</u>
<u>X92C USB Receptacle - Center Console Rear</u>
<u>X92RL USB Receptacle - Rear Compartment Left</u>
<u>X92RR USB Receptacle - Rear Compartment Right</u>