


2018 ELECTRICAL

Component Locator - Door Component Views - Traverse

DOOR COMPONENT VIEWS


LEFT FRONT DOOR COMPONENTS (X88)

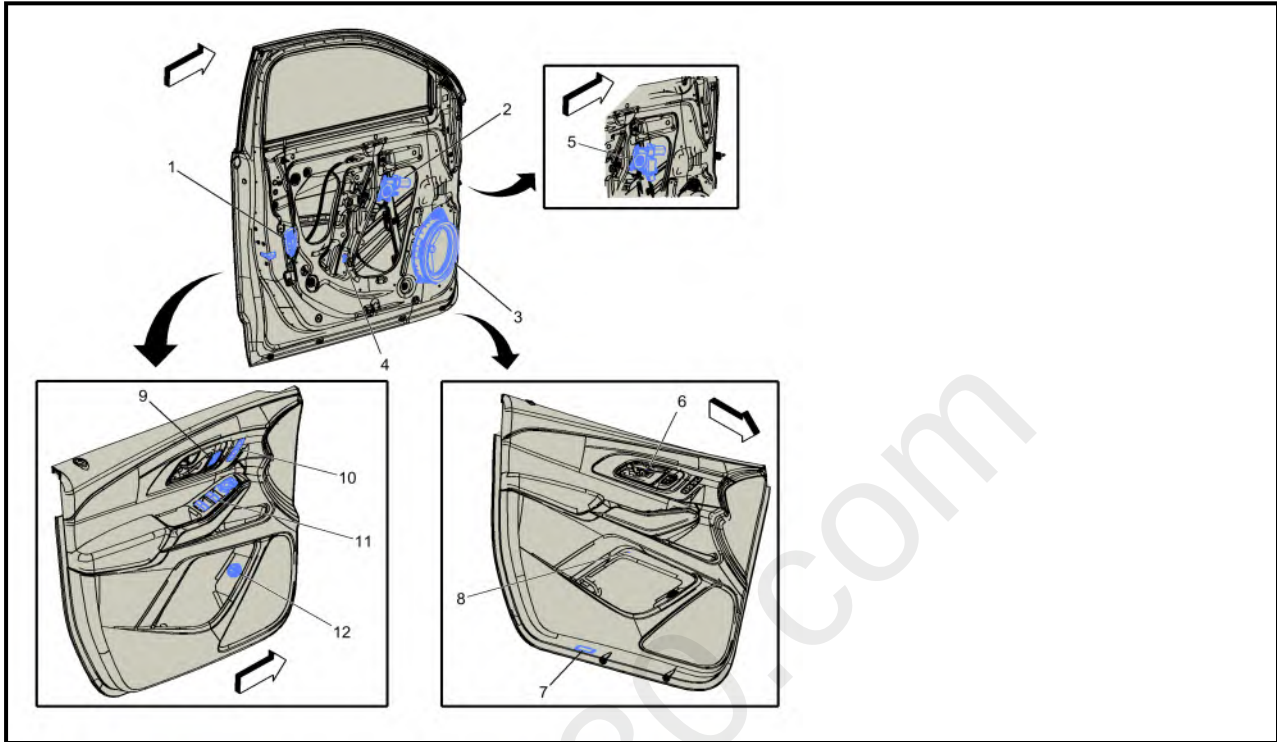

Items

1. A23D Door Latch Assembly - Driver [A23D Door Latch Assembly - Driver](#)
2. M74D Window Motor - Driver [M74D Window Motor - Driver \(DR9\)](#)
3. P19AG Speaker - Left Front Door [P19AG Speaker - Left Front Door \(UQA\)](#), [P19AG Speaker - Left Front Door \(UQF\)](#)
4. B63LF Side Impact Sensor - Left Front [B63LF Side Impact Sensor - Left Front](#)
5. M35D Window Motor Module - Driver (Without DR9) [M35D Window Motor Module - Driver \(-DR9\)](#)
6. E63D Flood Lamp - Driver Door Handle [E63D Flood Lamp - Driver Door Handle](#)
7. E8D Door Courtesy Lamp - Driver [E8D Door Courtesy Lamp - Driver \(W49\)](#), [E8D Door Courtesy Lamp - Driver \(X88\)](#)
8. E55D Flood Lamp - Driver Door Pocket (1LZ or 2LZ) [E55D Flood Lamp - Driver Door Pocket \(1LZ/2LZ\)](#)
9. S13D Door Lock Switch - Driver [S13D Door Lock Switch - Driver](#)
10. S47D Seat Memory Switch - Driver (AAB) [S47D Seat Memory Switch - Driver \(AAB\)](#)
11. S79D Window Switch - Driver [S79D Window Switch - Driver \(\)](#)
12. S45B Liftgate Control Switch - Interior (TB5 or TC2) [S45B Liftgate Control Switch - Interior \(\)](#)


LEFT FRONT DOOR COMPONENTS (W49)

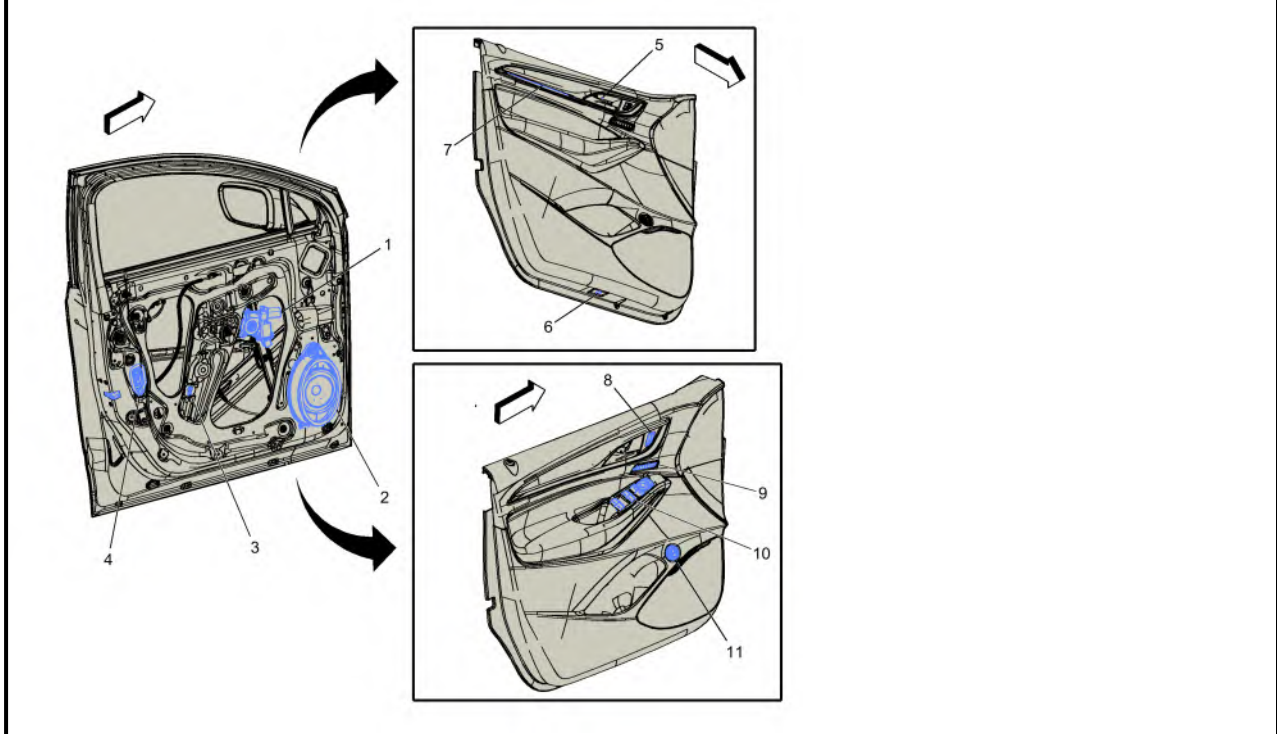

Items

1. M35D Window Motor Module - Driver (Without DR9) [M35D Window Motor Module - Driver \(-DR9\)](#)
2. P19AG Speaker - Left Front Door [P19AG Speaker - Left Front Door \(UQA\)](#) [P19AG Speaker - Left Front Door \(UQF\)](#)
3. B63LF Side Impact Sensor - Left Front [B63LF Side Impact Sensor - Left Front](#)
4. A23D Door Latch Assembly - Driver [A23D Door Latch Assembly - Driver](#)
5. E63D Flood Lamp - Driver Door Handle [E63D Flood Lamp - Driver Door Handle](#)
6. E8D Door Courtesy Lamp - Driver [E8D Door Courtesy Lamp - Driver \(W49\)](#) [E8D Door Courtesy Lamp - Driver \(X88\)](#)
7. E1D Accent Lamp - Driver Door (W49) [E1D Accent Lamp - Driver Door \(W49\)](#)
8. S13D Door Lock Switch - Driver [S13D Door Lock Switch - Driver](#)
9. S47D Seat Memory Switch - Driver (AAB) [S47D Seat Memory Switch - Driver \(AAB\)](#)
10. S79D Window Switch - Driver [S79D Window Switch - Driver \(\)](#)
11. S45B Liftgate Control Switch - Interior (TB5 or TC2) [S45B Liftgate Control Switch - Interior \(\)](#)


RIGHT FRONT DOOR COMPONENTS (X88)

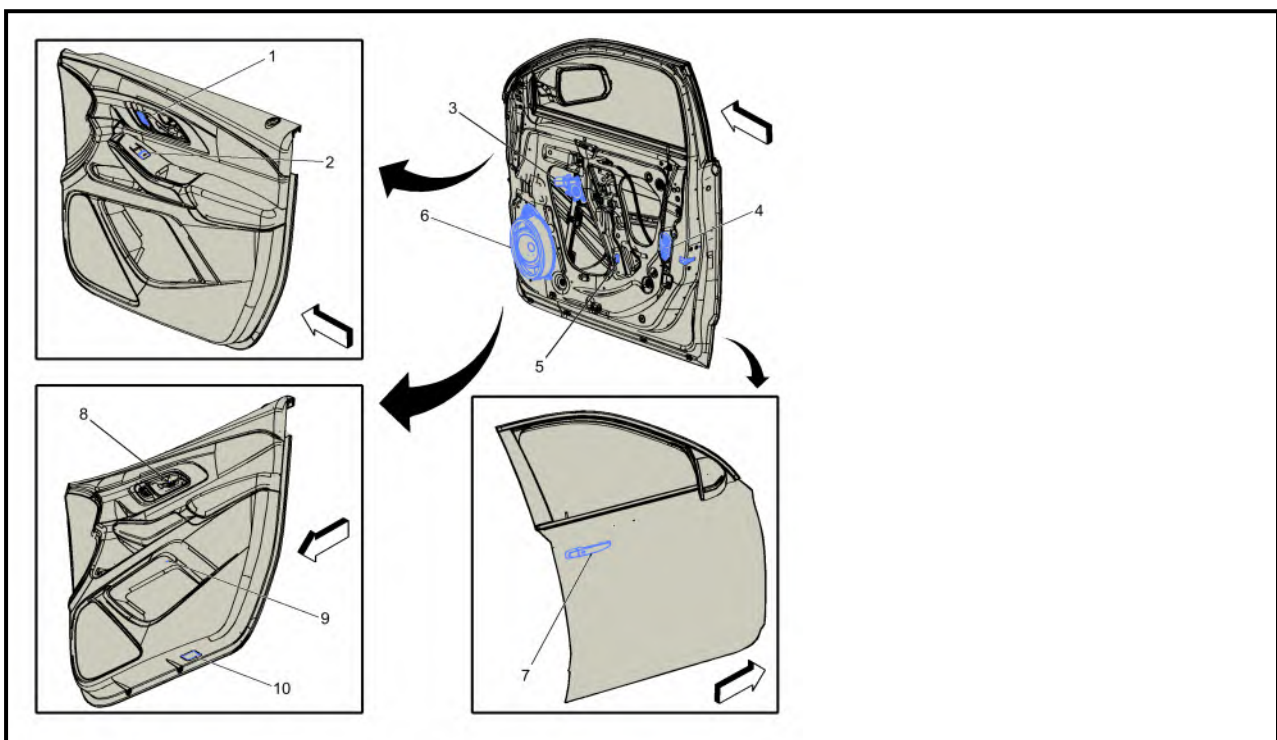

Items

1. S13P Door Lock Switch - Passenger [S13P Door Lock Switch - Passenger](#)
2. S79P Window Switch - Passenger [S79P Window Switch - Passenger \(\)](#)
3. M74P Window Motor - Passenger [M74P Window Motor - Passenger \(W49\)](#) [M74P Window Motor - Passenger \(X88\)](#)
4. A23P Door Latch Assembly - Passenger [A23P Door Latch Assembly - Passenger](#)
5. B63RF Side Impact Sensor - Right Front [B63RF Side Impact Sensor - Right Front](#)
6. P19AH Speaker - Right Front Door [P19AH Speaker - Right Front Door \(UQA\)](#) [P19AH Speaker - Right Front Door \(UQF\)](#)
7. A24P Door Handle Assembly - Passenger Exterior [A24P Door Handle Assembly - Passenger Exterior \(W49\)](#) [A24P Door Handle Assembly - Passenger Exterior \(X88\)](#)
8. E63P Flood Lamp - Passenger Door Handle [E63P Flood Lamp - Passenger Door Handle](#)
9. E55P Flood Lamp - Passenger Door Pocket (1LZ or 2LZ) [E55P Flood Lamp - Passenger Door Pocket \(1LZ/2LZ\)](#)
10. E8D Door Courtesy Lamp - Driver [E8D Door Courtesy Lamp - Driver \(W49\)](#) [E8D Door Courtesy Lamp - Driver \(X88\)](#)


RIGHT FRONT DOOR COMPONENTS (W49)

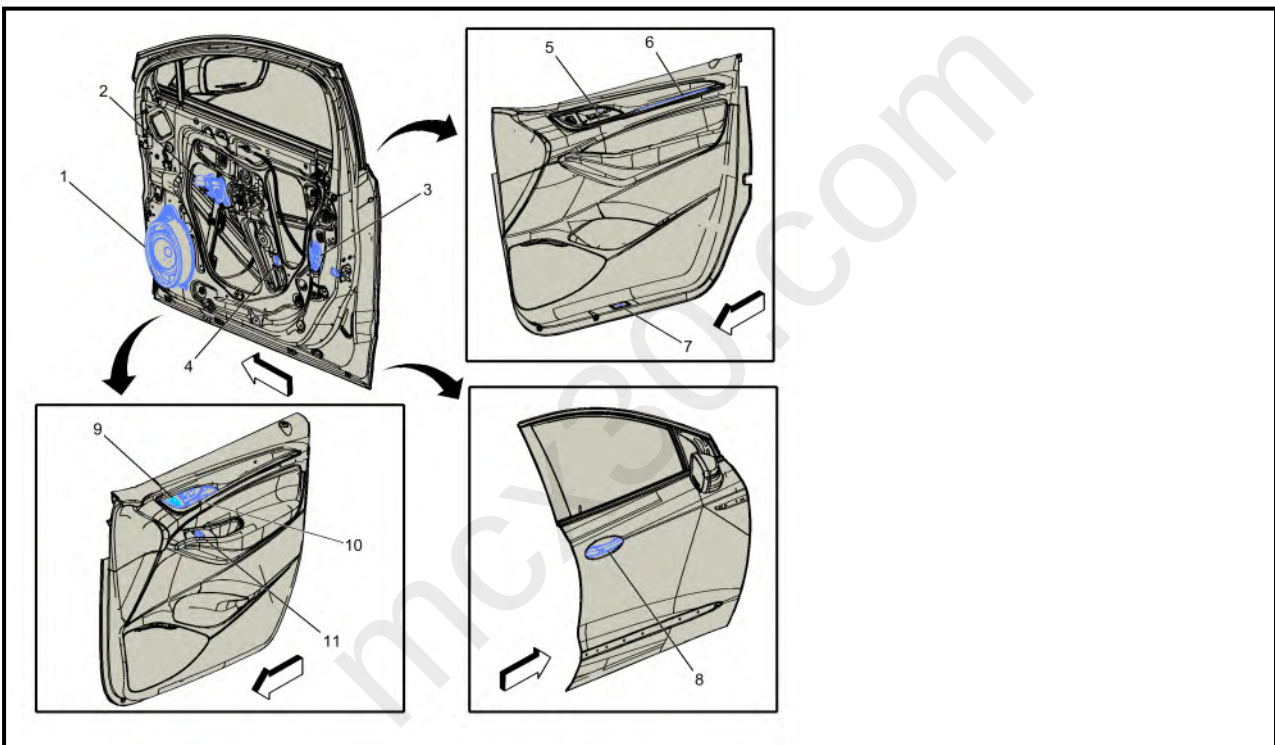

Items

1. P19AH Speaker - Right Front Door [P19AH Speaker - Right Front Door \(UQA\)](#) [P19AH Speaker - Right Front Door \(UQF\)](#)
2. M74P Window Motor - Passenger [M74P Window Motor - Passenger \(W49\)](#) [M74P Window Motor - Passenger \(X88\)](#)
3. A23P Door Latch Assembly - Passenger [A23P Door Latch Assembly - Passenger](#)
4. B63RF Side Impact Sensor - Right Front [B63RF Side Impact Sensor - Right Front](#)
5. E63P Flood Lamp - Passenger Door Handle [E63P Flood Lamp - Passenger Door Handle](#)
6. E1P Accent Lamp - Passenger Door (W49) [E1P Accent Lamp - Passenger Door \(W49\)](#)
7. E8P Door Courtesy Lamp - Passenger [E8P Door Courtesy Lamp - Passenger \(W49\)](#) [E8P Door Courtesy Lamp - Passenger \(X88\)](#)
8. A24P Door Handle Assembly - Passenger Exterior [A24P Door Handle Assembly - Passenger Exterior \(W49\)](#) [A24P Door Handle Assembly - Passenger Exterior \(X88\)](#)
9. S13P Door Lock Switch - Passenger [S13P Door Lock Switch - Passenger](#)
10. E63P Flood Lamp - Passenger Door Handle [E63P Flood Lamp - Passenger Door Handle](#)
11. S79P Window Switch - Passenger [S79P Window Switch - Passenger \(\)](#)


RIGHT REAR DOOR COMPONENTS

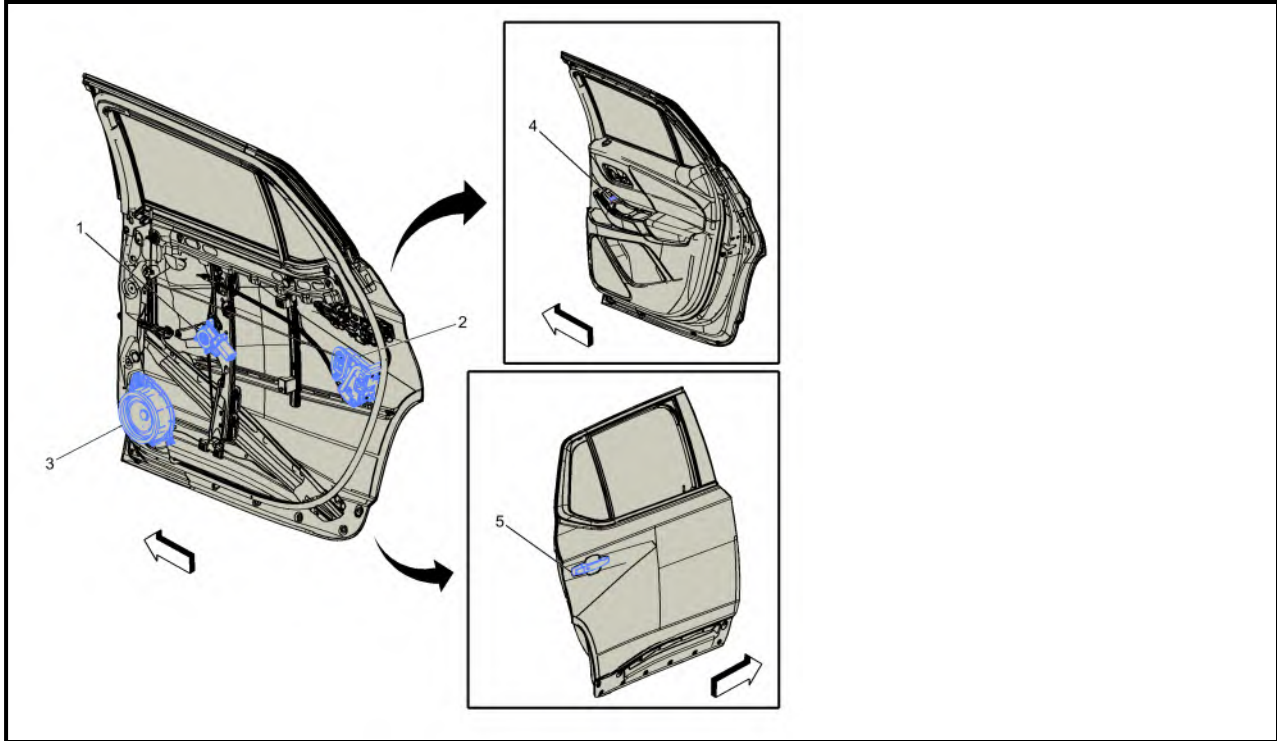

Items

1. M74RR Window Motor - Right Rear [M74RR Window Motor - Right Rear \(W49\)](#), [M74RR Window Motor - Right Rear \(X88\)](#)
2. A23RR Door Latch Assembly - Right Rear [A23RR Door Latch Assembly - Right Rear](#)
3. P19AM Speaker - Right Rear Door [P19AM Speaker - Right Rear Door \(UQA\)](#), [P19AM Speaker - Right Rear Door \(UQF\)](#)
4. S79RR Window Switch - Right Rear [S79RR Window Switch - Right Rear \(W49\)](#), [S79RR Window Switch - Right Rear \(X88\)](#)
5. A24RR Door Handle Assembly - Right Rear Exterior [A24RR Door Handle Assembly - Right Rear Exterior \(W49\)](#), [A24RR Door Handle Assembly - Right Rear Exterior \(X88\)](#)

LIFTGATE COMPONENTS (X88)

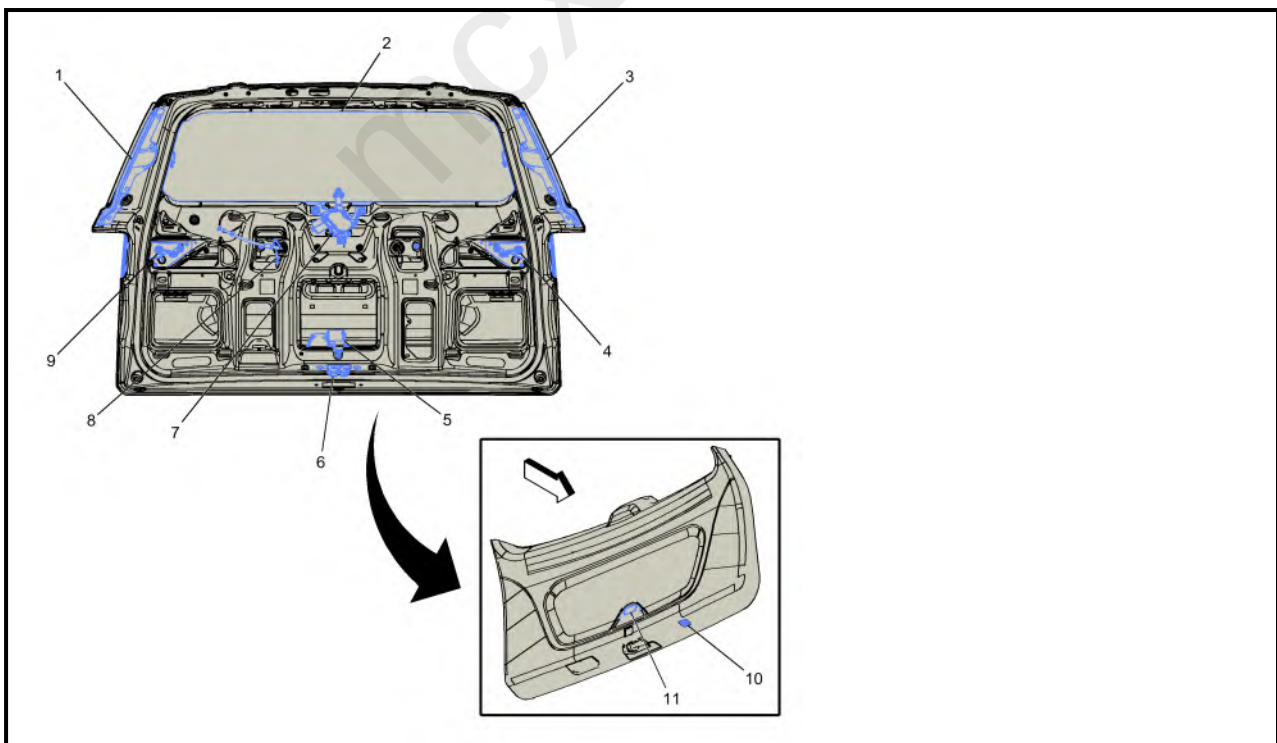


Items

1. B71R Liftgate Object Sensor - Right (TB5 or TC2) [B71R Liftgate Object Sensor - Right \(TB5/TC2\)](#)
2. E18 Rear Defogger Grid [E18 Rear Defogger Grid X1](#) [E18 Rear Defogger Grid X2](#)
3. B71L Liftgate Object Sensor - Left (TB5 or TC2) [B71L Liftgate Object Sensor - Left](#)

Items

4. E5G Tail Lamp - Left Inner [E5G Tail Lamp - Left Inner \(W49\)](#), [E5G Tail Lamp - Left Inner \(X88\)](#).
5. A23C Liftgate Latch Assembly ((TB5 or TC2) [A23C Liftgate Latch Assembly](#).
6. M30 Liftgate Latch (Without TB5 or TC2) [M30 Liftgate Latch \(-TB5/TC2\)](#).
7. M45 Rear Wiper Motor [M45 Rear Wiper Motor](#)
8. B87 Rearview Camera [B87 Rearview Camera X1 \(-DRZ\)](#), [B87 Rearview Camera X1 \(DRZ\)](#), [B87 Rearview Camera X2 \(DRZ\)](#).
9. E5H Tail Lamp - Right Inner [E5H Tail Lamp - Right Inner \(W49\)](#), [E5H Tail Lamp - Right Inner \(X88\)](#).
10. B70 Liftgate Close Switch (TB5 or TC2) [B70 Liftgate Close Switch](#)
11. E33 Cargo Lamp [E33 Cargo Lamp](#)

LIFTGATE COMPONENTS (W49)

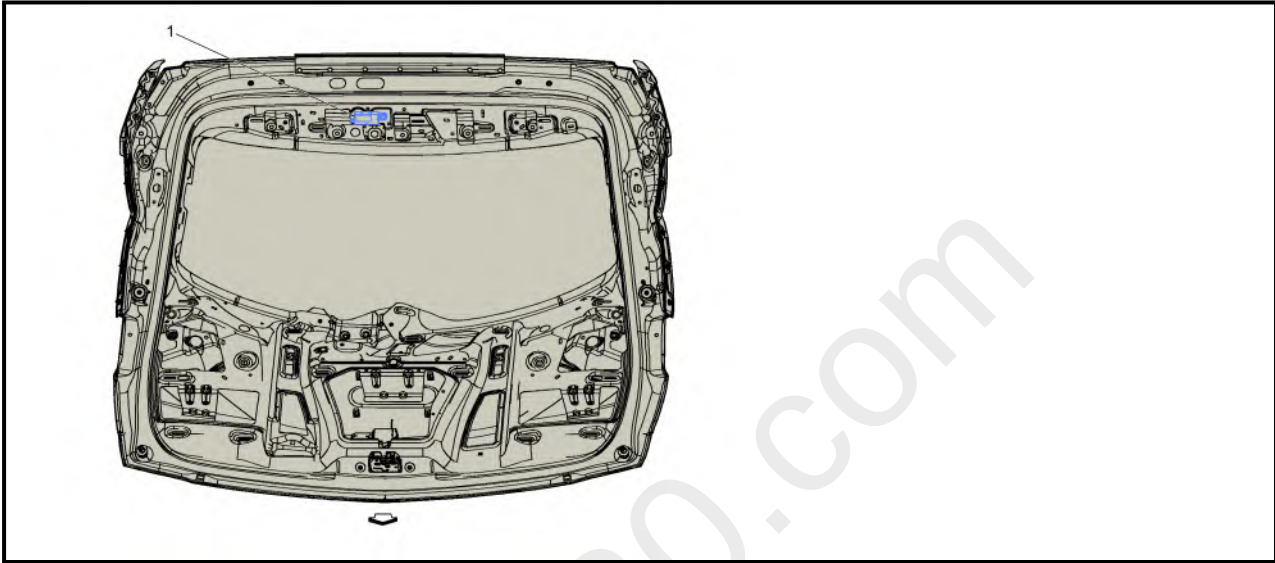

Items

1. T23 Radio Antenna Amplifier [T23 Radio Antenna Amplifier X1 \(\)](#).