


2018 ELECTRICAL

Component Locator - Front of Vehicle/Engine Compartment Component Views - Traverse

FRONT OF VEHICLE/ENGINE COMPARTMENT COMPONENT VIEWS

FRONT OF VEHICLE COMPONENTS (X88)

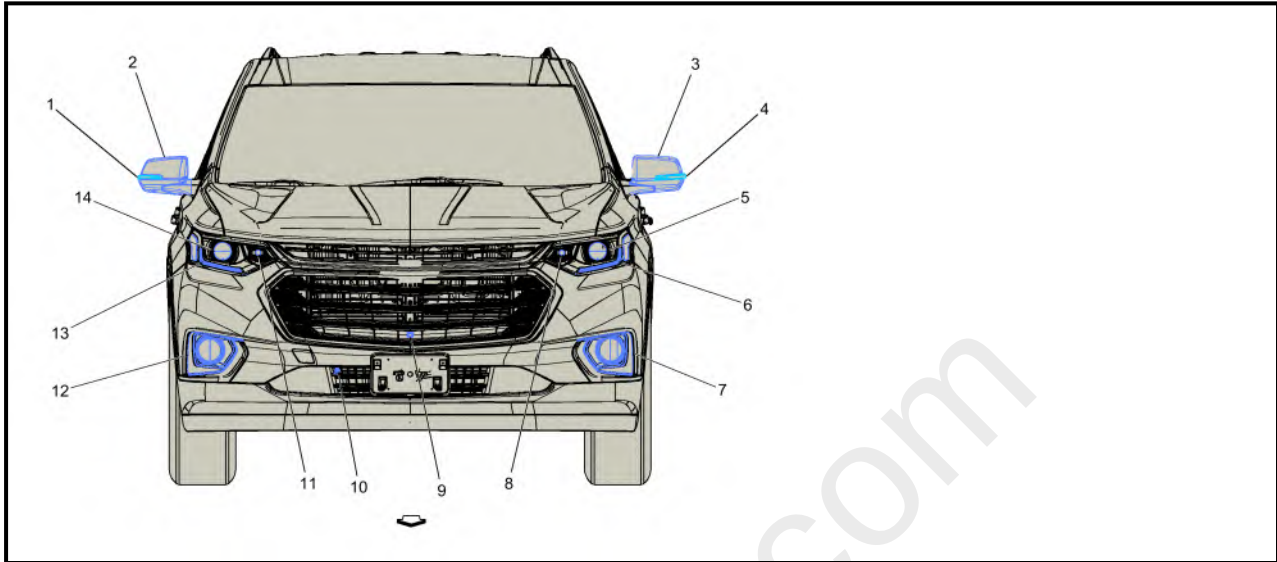


Items

1. E4Z Turn Signal Repeater Lamp - Right (DNP)
2. A9B Outside Rearview Mirror - Passenger
3. A9A Outside Rearview Mirror - Driver
4. E4Y Turn Signal Repeater Lamp - Left (DNP)
5. E4G Headlamp - Left Low Beam
6. E4AC Park/Daytime Running Lamp - Left
7. E29LF Fog Lamp - Left Front (T3U) [E29LF Fog Lamp - Left Front \(T3U\)](#)
8. E4LF Turn Signal Lamp - Left Front [E4LF Turn Signal Lamp - Left Front \(W49\)](#) [E4LF Turn Signal Lamp - Left Front \(X88\)](#)
9. B174G Frontview Camera - Grille (UVH) [B174G Frontview Camera - Grille \(UVH\)](#)
10. B9 Ambient Air Temperature Sensor [B9 Ambient Air Temperature Sensor](#)
11. E4RF Turn Signal Lamp - Right Front [E4RF Turn Signal Lamp - Right Front \(W49\)](#) [E4RF Turn Signal Lamp - Right Front \(X88\)](#)
12. E29RF Fog Lamp - Right Front (T3U) [E29RF Fog Lamp - Right Front \(T3U\)](#)
13. E4AD Park/Daytime Running Lamp - Right
14. E4H Headlamp - Right Low Beam

FRONT OF VEHICLE COMPONENTS (W49)



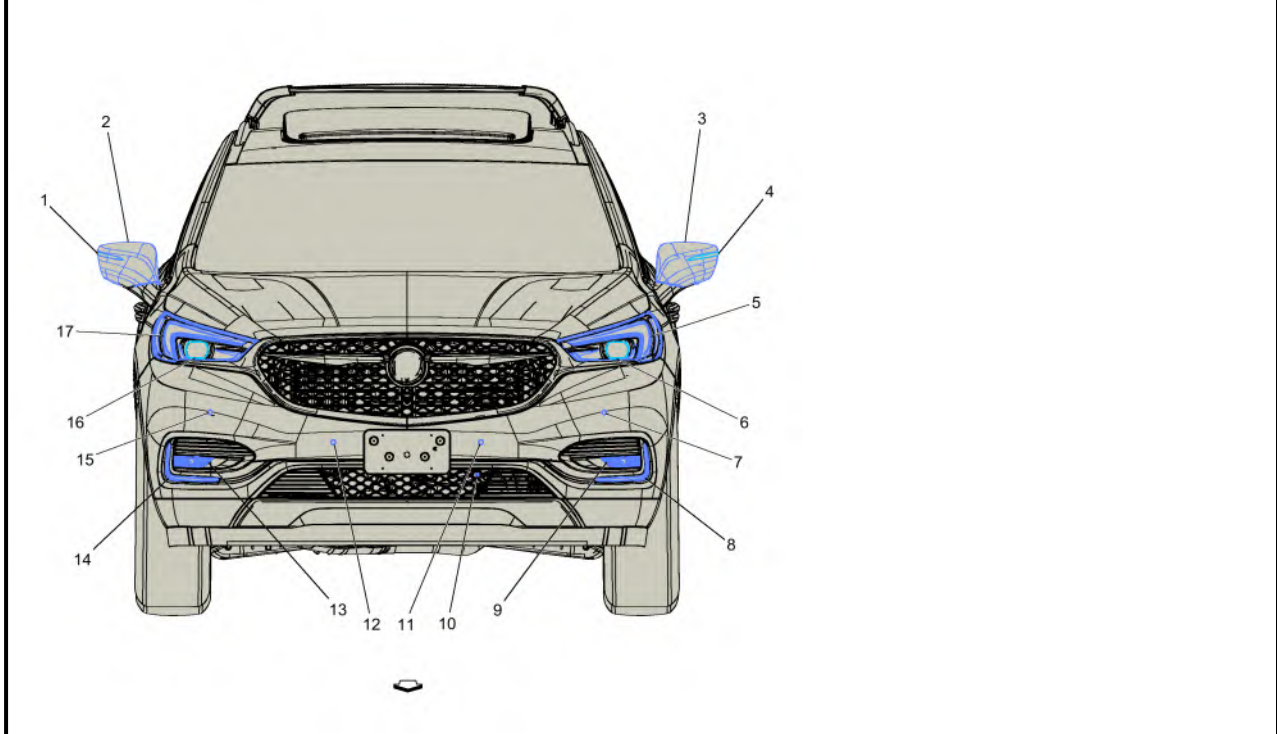


Items

1. E4Z Turn Signal Repeater Lamp - Right (DNP)
2. A9B Outside Rearview Mirror - Passenger
3. A9A Outside Rearview Mirror - Driver
4. E4Y Turn Signal Repeater Lamp - Left (DNP)
5. E67R Multifunction LED - Right Headlamp
6. E4G Headlamp - Left Low Beam
7. B306A Parking Assist Sensor - Front Left Outer (UD5) [B306A Parking Assist Sensor - Front Left Outer](#)
8. E2LF Side Marker Lamp - Left Front [E2LF Side Marker Lamp - Left Front \(W49\)](#), [E2LF Side Marker Lamp - Left Front \(X88\)](#)
9. E4LF Turn Signal Lamp - Left Front [E4LF Turn Signal Lamp - Left Front \(W49\)](#), [E4LF Turn Signal Lamp - Left Front \(X88\)](#)
10. B9 Ambient Air Temperature Sensor [B9 Ambient Air Temperature Sensor](#)
11. B306B Parking Assist Sensor - Front Left Middle (UD5) [B306B Parking Assist Sensor - Front Left Middle](#)
12. B306C Parking Assist Sensor - Front Right Middle (UD5) [B306C Parking Assist Sensor - Front Right Middle](#)
12. E4RF Turn Signal Lamp - Right Front [E4RF Turn Signal Lamp - Right Front \(W49\)](#), [E4RF Turn Signal Lamp - Right Front \(X88\)](#)
13. E2RF Side Marker Lamp - Right Front [E2RF Side Marker Lamp - Right Front \(W49\)](#), [E2RF Side Marker Lamp - Right Front \(X88\)](#)
14. B306D Parking Assist Sensor - Front Right Outer (UD5) [B306D Parking Assist Sensor - Front Right Outer](#)
15. E4H Headlamp - Right Low Beam
16. E67L Multifunction LED - Left Headlamp

LEFT SIDE OF ENGINE COMPARTMENT COMPONENTS



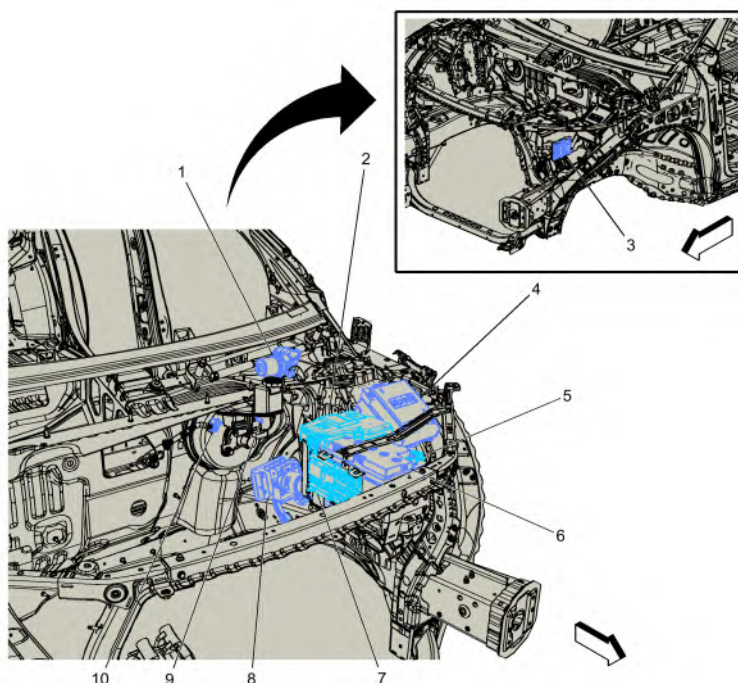

Items

1. M75 Windshield Wiper Motor [M75 Windshield Wiper Motor](#)
2. X50D Fuse Block - Battery [X50D Fuse Block - Battery X1 X50D Fuse Block - Battery X10 X50D Fuse Block - Battery X2 X50D Fuse Block - Battery X3 X50D Fuse Block - Battery X4 X50D Fuse Block - Battery X5 X50D Fuse Block - Battery X6 X50D Fuse Block - Battery X7 X50D Fuse Block - Battery X8 X50D Fuse Block - Battery X9](#)
3. K71 Transmission Control Module [K71 Transmission Control Module](#)
4. X50A Fuse Block - Underhood [X50A Fuse Block - Underhood X1 X50A Fuse Block - Underhood X2 X50A Fuse Block - Underhood X3 X50A Fuse Block - Underhood X4 X50A Fuse Block - Underhood X5](#)
5. B110 Battery Sensor Module [B110 Battery Sensor Module X1 B110 Battery Sensor Module X2](#)
6. C1 Battery
7. K20 Engine Control Module [K20 Engine Control Module X1 \(LFY\) K20 Engine Control Module X1 \(LTG\) K20 Engine Control Module X2 \(LFY\) K20 Engine Control Module X2 \(LTG\) K20 Engine Control Module X3 \(LFY\) K20 Engine Control Module X3 \(LTG\)](#)
8. K17 Electronic Brake Control Module [K17 Electronic Brake Control Module](#)
9. B20 Brake Fluid Level Switch [B20 Brake Fluid Level Switch](#)
10. B19B Brake Booster Vacuum Sensor [B19B Brake Booster Vacuum Sensor](#)