


2018 ELECTRICAL

Component Locator - Instrument Panel/Center Console Component Views - Traverse

INSTRUMENT PANEL/CENTER CONSOLE COMPONENT VIEWS


LEFT FOOTWELL COMPONENTS

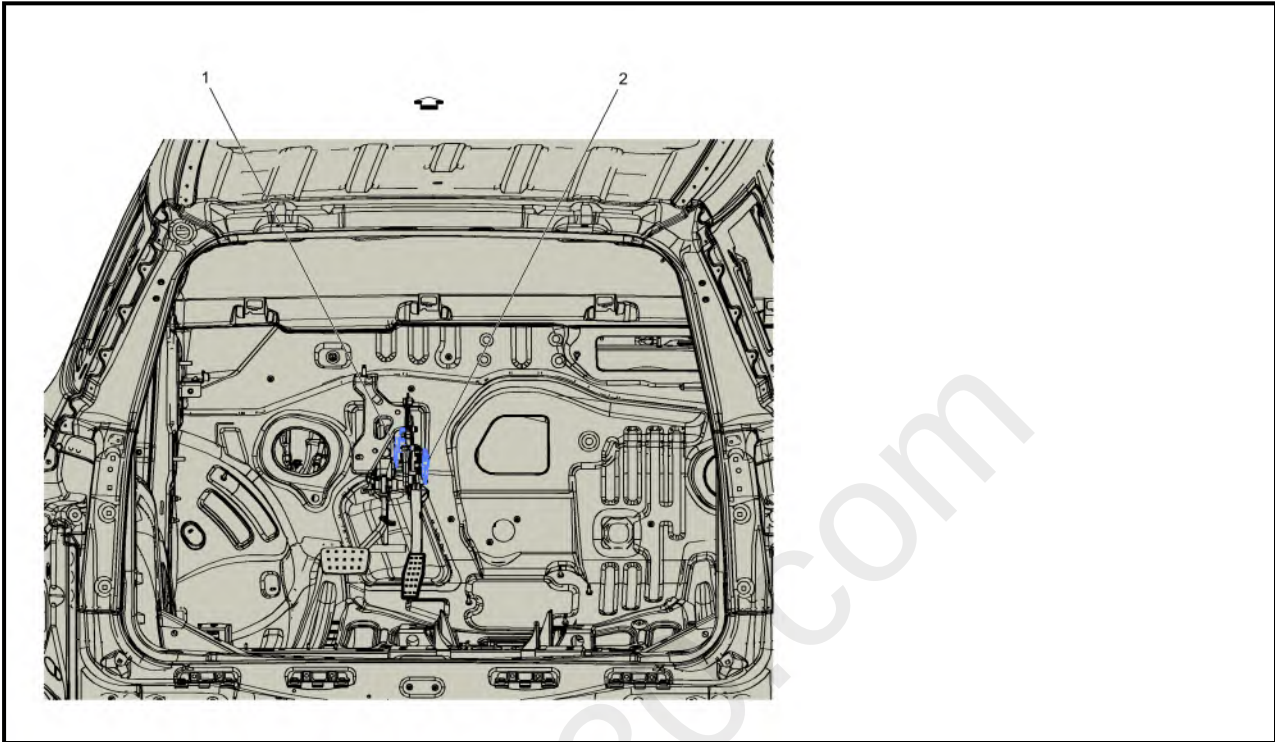

Items

1. B22 Brake Pedal Position Sensor [B22 Brake Pedal Position Sensor](#)
2. B107 Accelerator Pedal Position Sensor [B107 Accelerator Pedal Position Sensor](#)

BEHIND THE INSTRUMENT PANEL COMPONENTS (IOA)

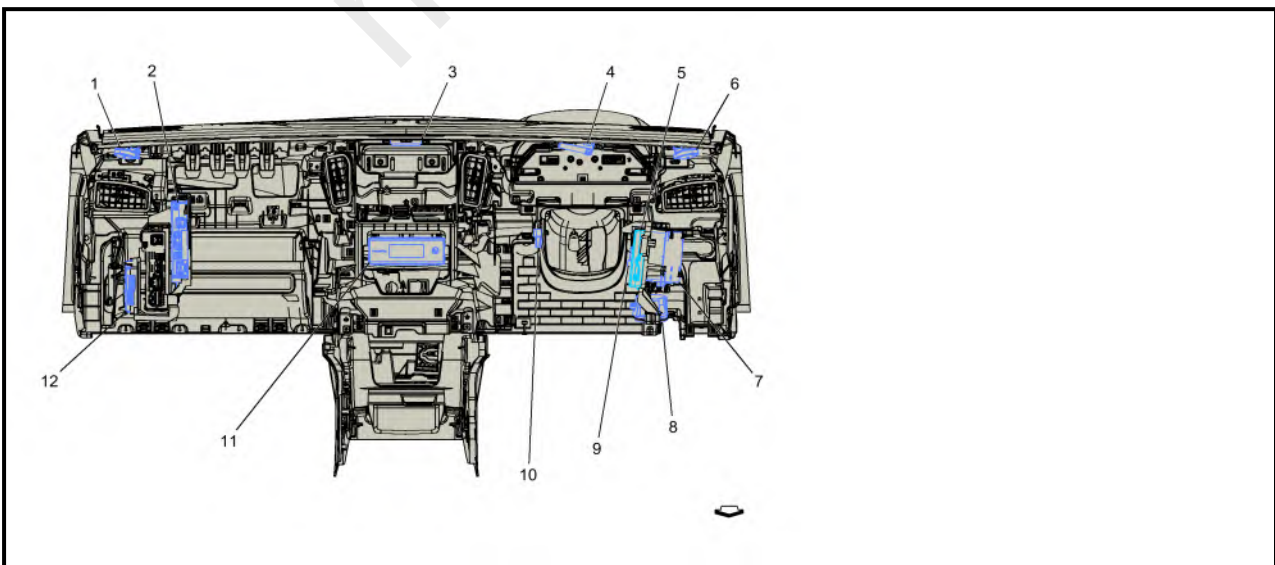


Items

1. P19W Speaker - Right Instrument Panel [P19W Speaker - Right Instrument Panel \(UQA\)](#)
[P19W Speaker - Right Instrument Panel \(UQE\)](#)

Items

2. K74 Human Machine Interface Control Module K74 Human Machine Interface Control Module X1 (IO5/IO6), K74 Human Machine Interface Control Module X2 (IO5/IO6), K74 Human Machine Interface Control Module X3 (IO5/IO6), K74 Human Machine Interface Control Module X4 (IO5/IO6), K74 Human Machine Interface Control Module X5 (IO5/IO6), K74 Human Machine Interface Control Module X7 (IO5/IO6).
3. P19B Speaker - Center Instrument Panel P19B Speaker - Center Instrument Panel
4. P16 Instrument Cluster P16 Instrument Cluster
5. C3 Telematics Communication Interface Control Module Battery (UE1) C3 Telematics Communication Interface Control Module Battery ().
6. P19J Speaker - Left Instrument Panel P19J Speaker - Left Instrument Panel (UQA), P19J Speaker - Left Instrument Panel (UQF)
7. K73 Telematics Communication Interface Control Module (UE1 or UI3) K73 Telematics Communication Interface Control Module X1 (W49), K73 Telematics Communication Interface Control Module X1 (X88), K73 Telematics Communication Interface Control Module X2 (W49), K73 Telematics Communication Interface Control Module X2 (X88), K73 Telematics Communication Interface Control Module X5 (), K73 Telematics Communication Interface Control Module X7 (UE1/UE3/UI3).
8. P50 Emergency Call Backup Speaker (UI3) P50 Emergency Call Backup Speaker ()
9. K56 Serial Data Gateway Module K56 Serial Data Gateway Module X1 K56 Serial Data Gateway Module X2
10. P43 Collision Alert Indicators (UEU) P43 Collision Alert Indicators ().
11. A11 Radio A11 Radio X1 (IO5/IO6), A11 Radio X1 (IOA), A11 Radio X2 (IO5/IO6), A11 Radio X2 (IOA), A11 Radio X3 (IO5/IO6), A11 Radio X3 (IOA), A11 Radio X4 A11 Radio X6
12. K188 Human Machine Interface Control Module Bypass Module K188 Human Machine Interface Control Module Bypass Module X1 (UVH), K188 Human Machine Interface Control Module Bypass Module X2 (UVH), K188 Human Machine Interface Control Module Bypass Module X3 (UVH).

BEHIND THE INSTRUMENT PANEL COMPONENTS (IO5/IO6)

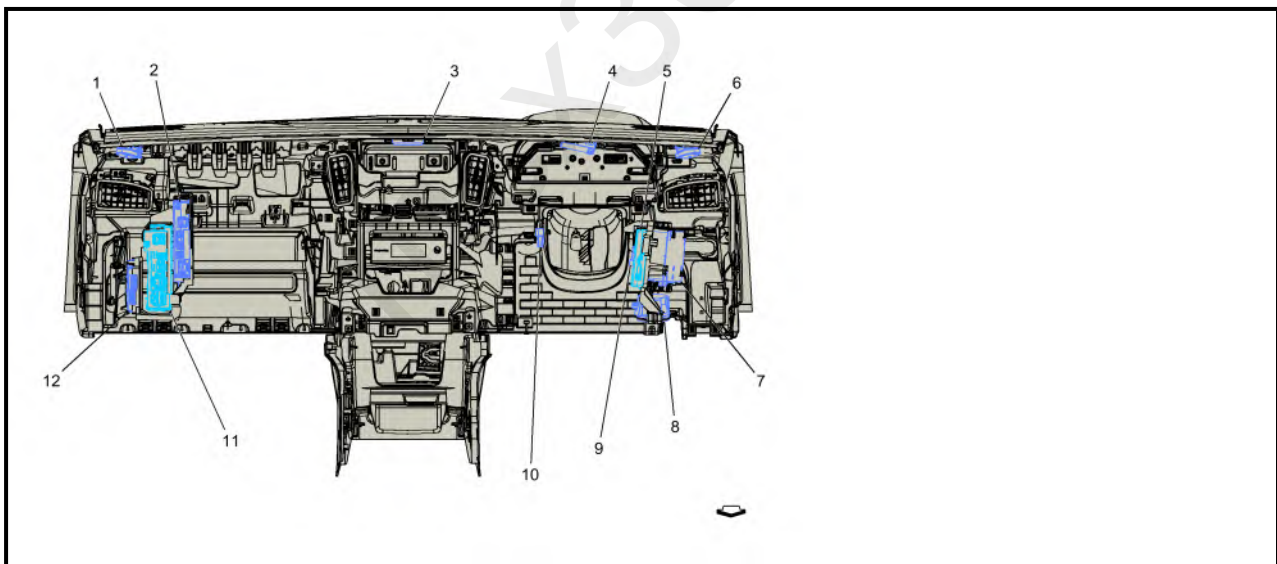


Items

1. P19W Speaker - Right Instrument Panel P19W Speaker - Right Instrument Panel (UQA), P19W Speaker - Right Instrument Panel (UQF).
2. K74 Human Machine Interface Control Module K74 Human Machine Interface Control Module X1 (IO5/IO6), K74 Human Machine Interface Control Module X2 (IO5/IO6), K74 Human Machine Interface Control Module X3 (IO5/IO6), K74 Human Machine Interface Control Module X4 (IO5/IO6), K74 Human Machine Interface Control Module X5 (IO5/IO6), K74 Human Machine Interface Control Module X7 (IO5/IO6).
3. P19B Speaker - Center Instrument Panel P19B Speaker - Center Instrument Panel
4. P16 Instrument Cluster P16 Instrument Cluster
5. C3 Telematics Communication Interface Control Module Battery (UE1) C3 Telematics Communication Interface Control Module Battery ().

Items

6. P19J Speaker - Left Instrument Panel [P19J Speaker - Left Instrument Panel \(UQA\)](#), [P19J Speaker - Left Instrument Panel \(UQF\)](#)
7. K73 Telematics Communication Interface Control Module (UE1 or UI3) [K73 Telematics Communication Interface Control Module X1 \(W49\)](#), [K73 Telematics Communication Interface Control Module X1 \(X88\)](#), [K73 Telematics Communication Interface Control Module X2 \(W49\)](#), [K73 Telematics Communication Interface Control Module X2 \(X88\)](#), [K73 Telematics Communication Interface Control Module X5 \(\)](#), [K73 Telematics Communication Interface Control Module X7 \(UE1/UE3/UI3\)](#)
8. P50 Emergency Call Backup Speaker (UI3) [P50 Emergency Call Backup Speaker \(\)](#)
9. K56 Serial Data Gateway Module [K56 Serial Data Gateway Module X1](#) [K56 Serial Data Gateway Module X2](#)
10. P43 Collision Alert Indicators (UEU) [P43 Collision Alert Indicators \(\)](#)
11. A11 Radio [A11 Radio X1 \(IO5/IO6\)](#), [A11 Radio X1 \(IOA\)](#), [A11 Radio X2 \(IO5/IO6\)](#), [A11 Radio X2 \(IOA\)](#), [A11 Radio X3 \(IO5/IO6\)](#), [A11 Radio X3 \(IOA\)](#), [A11 Radio X4](#) [A11 Radio X6](#)
12. K188 Human Machine Interface Control Module Bypass Module [K188 Human Machine Interface Control Module Bypass Module X1 \(UVH\)](#), [K188 Human Machine Interface Control Module Bypass Module X2 \(UVH\)](#), [K188 Human Machine Interface Control Module Bypass Module X3 \(UVH\)](#)

UNDER RIGHT SIDE OF INSTRUMENT PANEL COMPONENTS (1 OF 2)

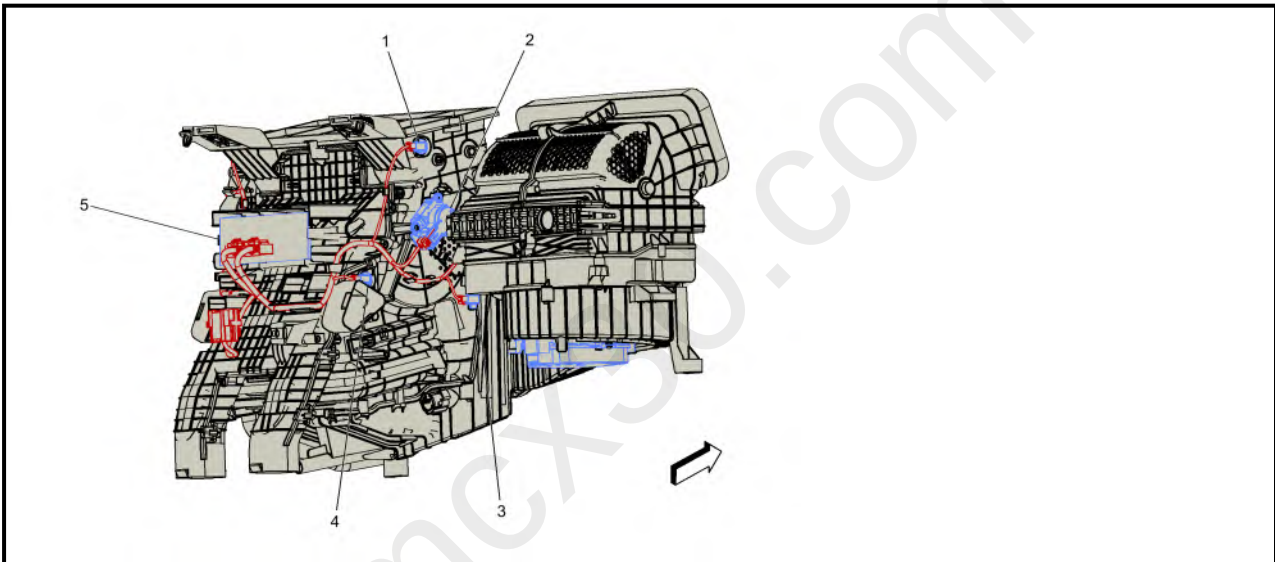


Items

1. B7J Air Temperature Sensor - Duct Right Upper [B7J Air Temperature Sensor - Duct Right Upper](#)
2. M6R Air Temperature Door Actuator - Right [M6R Air Temperature Door Actuator - Right \(\)](#)
3. B39 A/C Evaporator Temperature Sensor [B39 A/C Evaporator Temperature Sensor](#)
4. B7E Air Temperature Sensor - Duct Right Lower [B7E Air Temperature Sensor - Duct Right Lower](#)
5. K33 HVAC Control Module [K33 HVAC Control Module X1](#) [K33 HVAC Control Module X2 \(\)](#), [K33 HVAC Control Module X3](#) [K33 HVAC Control Module X4 \(\)](#)

UNDER RIGHT SIDE OF INSTRUMENT PANEL COMPONENTS (2 OF 2)




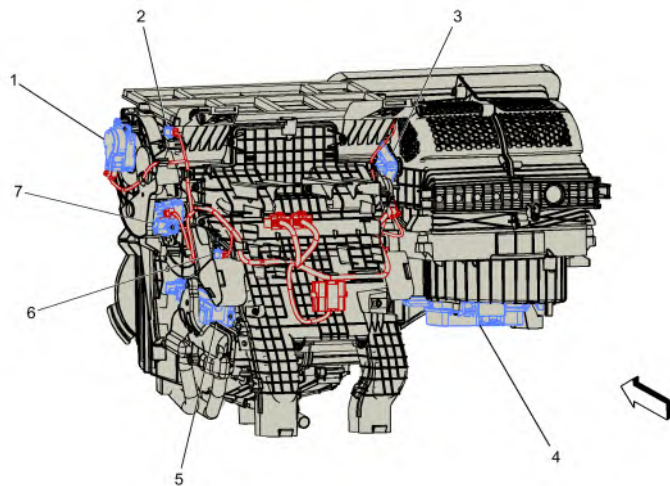

Items

1. M37 Mode Door Actuator [M37 Mode Door Actuator](#)
2. B7H Air Temperature Sensor - Duct Left Upper [B7H Air Temperature Sensor - Duct Left Upper](#)
3. M46 Air Recirculation Door Actuator [M46 Air Recirculation Door Actuator](#)
4. M8 Blower Motor [M8 Blower Motor](#)
5. E40 Electrical Auxiliary Heater (C32) [E40 Electrical Auxiliary Heater X1 \(C32\)](#) [E40 Electrical Auxiliary Heater X2 \(C32\)](#)
6. B7D Air Temperature Sensor - Duct Left Lower [B7D Air Temperature Sensor - Duct Left Lower](#)
7. M6L Air Temperature Door Actuator - Left [M6L Air Temperature Door Actuator - Left \(\)](#)

INSTRUMENT PANEL COMPONENTS

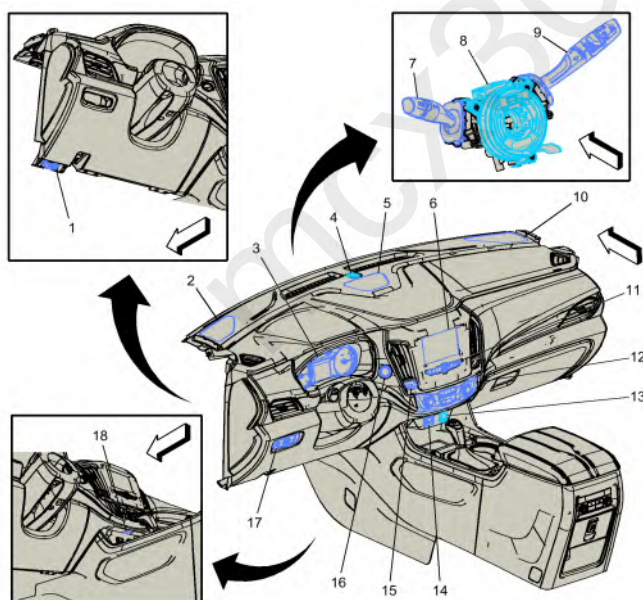


Items

1. X84 Data Link Connector [X84 Data Link Connector](#)
2. B80 Park Brake Switch [B80 Park Brake Switch \(W49\)](#) [B80 Park Brake Switch \(X88\)](#)
3. P19J Speaker - Left Instrument Panel [P19J Speaker - Left Instrument Panel \(UQA\)](#) [P19J Speaker - Left Instrument Panel \(UQE\)](#)
4. P16 Instrument Cluster [P16 Instrument Cluster](#)
5. B10B Ambient Light/Sunload Sensor [B10B Ambient Light/Sunload Sensor](#)
6. P19B Speaker - Center Instrument Panel [P19B Speaker - Center Instrument Panel](#)
7. A22 Radio Controls (IO5 or IO6) [A22 Radio Controls X1 \(IO5/IO6\)](#) [A22 Radio Controls X2 \(IO5/IO6\)](#)
8. S78 Turn Signal/Multifunction Switch [S78 Turn Signal/Multifunction Switch](#)

Items

9. X85 Steering Wheel Air Bag Coil [X85 Steering Wheel Air Bag Coil X1 \(\)](#), [X85 Steering Wheel Air Bag Coil X2 \(\)](#).
10. S82 Windshield Wiper/Washer Switch [S82 Windshield Wiper/Washer Switch](#)
11. P19W Speaker - Right Instrument Panel [P19W Speaker - Right Instrument Panel \(UQA\)](#), [P19W Speaker - Right Instrument Panel \(UQF\)](#).
12. A11 Radio [A11 Radio X1 \(IO5/IO6\)](#), [A11 Radio X1 \(IOA\)](#), [A11 Radio X2 \(IO5/IO6\)](#), [A11 Radio X2 \(IOA\)](#), [A11 Radio X3 \(IO5/IO6\)](#), [A11 Radio X3 \(IOA\)](#), [A11 Radio X4](#), [A11 Radio X6](#)
13. A26 HVAC Controls [A26 HVAC Controls](#)
14. X80F Accessory Power Receptacle - Front (X88) [X80F Accessory Power Receptacle - Front \(X88\)](#).
15. X83 Auxiliary Audio Input [X83 Auxiliary Audio Input X1 \(W49\)](#), [X83 Auxiliary Audio Input X1 \(X88\)](#), [X83 Auxiliary Audio Input X2 \(W49\)](#), [X83 Auxiliary Audio Input X2 \(X88\)](#).
16. S26 Hazard Warning Switch [S26 Hazard Warning Switch \(W49\)](#), [S26 Hazard Warning Switch \(X88\)](#).
17. S38 Ignition Mode Switch [S38 Ignition Mode Switch \(W49\)](#), [S38 Ignition Mode Switch \(X88\)](#).
18. S30 Headlamp Switch [S30 Headlamp Switch](#)
19. E1GA Accent Lamp - Left Middle Instrument Panel [E1GA Accent Lamp - Left Middle Instrument Panel](#)


CENTER CONSOLE COMPONENTS

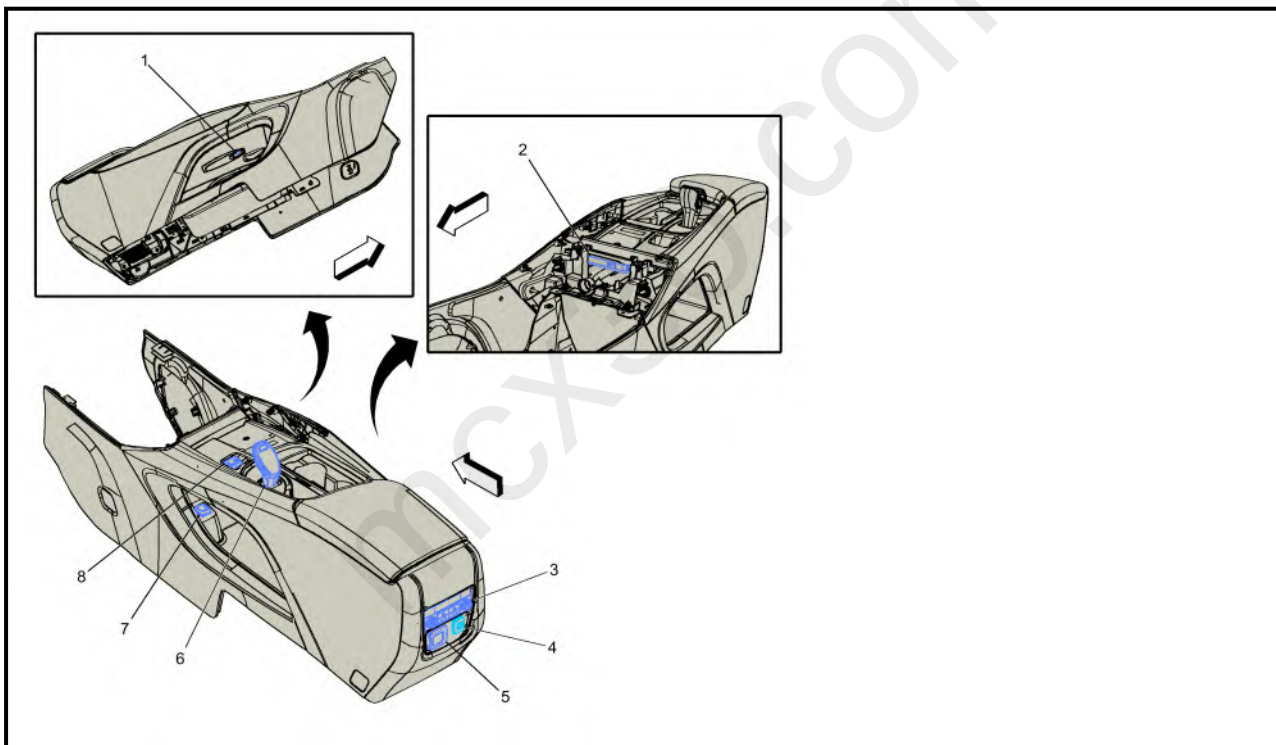

Items

1. E28 Center Console Compartment Lamp [E28 Center Console Compartment Lamp \(W49\)](#)
2. T22 Mobile Device Wireless Charger Module (K4C) [T22 Mobile Device Wireless Charger Module \(K4C\)](#).
3. A34 HVAC Controls - Auxiliary [A34 HVAC Controls - Auxiliary](#).
4. X92C USB Receptacle - Center Console Rear [X92C USB Receptacle - Center Console Rear](#)
5. X81 Accessory Power Receptacle - 110V AC (KI6) [X81 Accessory Power Receptacle - 110V AC X1 \(\)](#), [X81 Accessory Power Receptacle - 110V AC X2 \(\)](#).
6. S3 Transmission Shift Lever [S3 Transmission Shift Lever \(M3V\)](#), [S3 Transmission Shift Lever \(M3W\)](#).
7. X80D Accessory Power Receptacle - Center Console Compartment (W49) [X80D Accessory Power Receptacle - Center Console Compartment \(W49\)](#).
8. X83 Auxiliary Audio Input [X83 Auxiliary Audio Input X1 \(W49\)](#), [X83 Auxiliary Audio Input X1 \(X88\)](#), [X83 Auxiliary Audio Input X2 \(W49\)](#), [X83 Auxiliary Audio Input X2 \(X88\)](#).


CENTER CONSOLE COMPONENTS (X88)

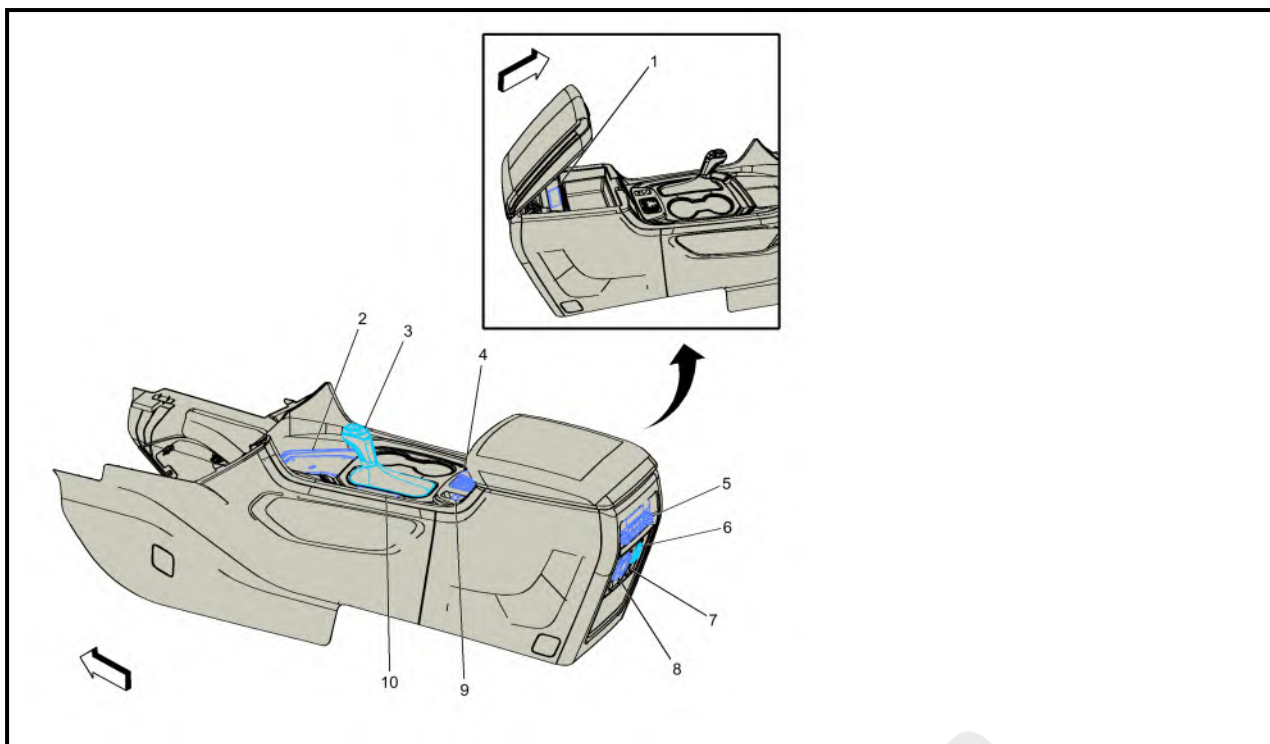

Items

1. E27 Instrument Panel Compartment Lamp (X88) [E28 Center Console Compartment Lamp \(X88\)](#)
2. T22 Mobile Device Wireless Charger Module (K4C) [T22 Mobile Device Wireless Charger Module \(K4C\)](#)
3. S3 Transmission Shift Lever [S3 Transmission Shift Lever \(M3V\)](#) [S3 Transmission Shift Lever \(M3W\)](#)
4. S126 Drive Mode Select Switch (X88) [S126 Drive Mode Select Switch \(X88\)](#)
5. A34 HVAC Controls - Auxiliary [A34 HVAC Controls - Auxiliary](#)
6. X92C USB Receptacle - Center Console Rear [X92C USB Receptacle - Center Console Rear](#)
7. X81 Accessory Power Receptacle - 110V AC (KI6) [X81 Accessory Power Receptacle - 110V AC X1 \(\)](#) [X81 Accessory Power Receptacle - 110V AC X2 \(\)](#)
8. X81B Accessory Power Receptacle - 220V AC (KI7) [X81B Accessory Power Receptacle - 220V AC X1 \(\)](#) [X81B Accessory Power Receptacle - 220V AC X2 \(\)](#)
9. B80 Park Brake Switch [B80 Park Brake Switch \(W49\)](#) [B80 Park Brake Switch \(X88\)](#)
10. P2 Transmission Shift Lever Position Indicator [P2 Transmission Shift Lever Position Indicator](#)

INSIDE REAR OF CENTER CONSOLE COMPONENTS

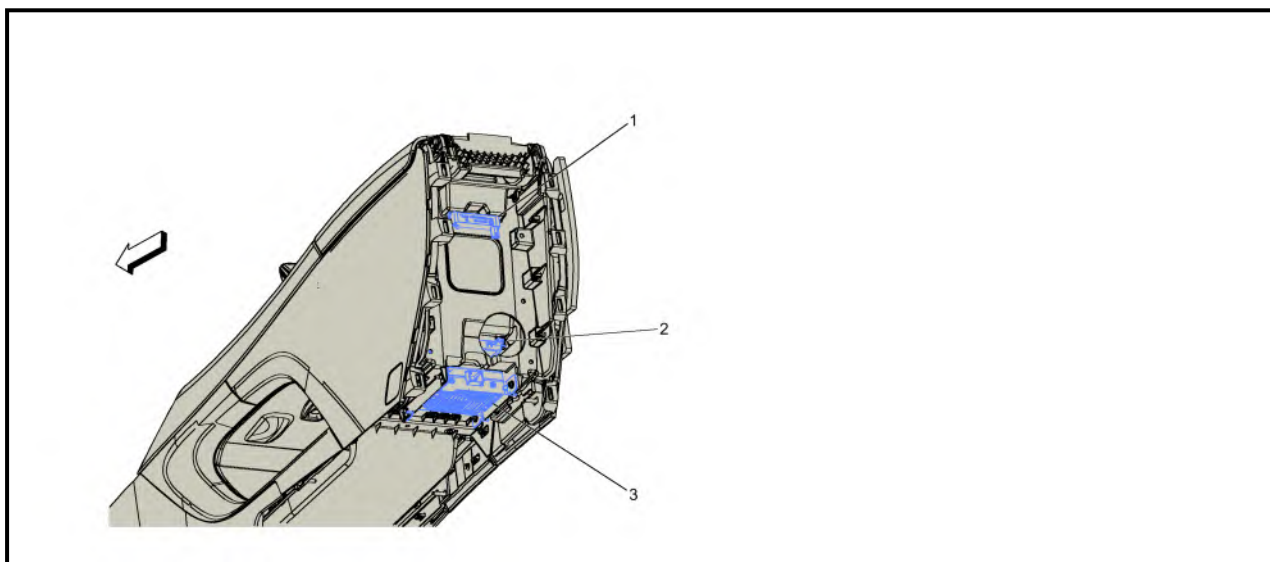

Items

1. T10K Keyless Entry Antenna - Center Console Rear [T10K Keyless Entry Antenna - Center Console Rear](#)
 2. K89 Immobilizer Control Module [K89 Immobilizer Control Module](#)
 3. T1 Accessory DC/AC Power Inverter Module (KI6 or KI7) [T1 Accessory DC/AC Power Inverter Module \(KI6\)](#) [T1 Accessory DC/AC Power Inverter Module \(KI7\)](#)
-

mcx30.com