

## EMISSION CONTROL ABBREVIATIONS

### Gasoline & Diesel

#### "A"

##### A/C

Air Conditioning

##### A/C-ISUS

A/C Idle Speed-Up Solenoid

##### A/F

Air/Fuel

##### AAI

Air Assist Injector

##### ACL

Air Cleaner (Thermostatic Air Cleaner)

##### ACL-BMS

ACL Bimetallic Sensor

##### ACL-CKV

ACL Check Valve

##### ACL-DV

ACL Delay Valve

##### ACL-ESC

Electronic Spark Control

##### ACL-PVS

ACL Ported Vacuum Switch

##### ACL-RDV

ACL Reverse Delay Valve

##### ACL-RDVS

ACL Reverse Delay Valve (Single)

##### ACL-TCV

ACL Thermal Control Valve

##### ACL-TS

ACL Temperature Sensor

### **ACL-TSOV**

ACL Temperature Sensor Override Valve

### **ACL-TVS**

ACL Thermal Vacuum Switch

### **ACL-TVV**

ACL Thermal Vacuum Valve

### **ACL-VCDV**

ACL Vacuum Control Delay Valve

### **ACL-VCV**

ACL Vacuum Control Valve

### **ACL-VM**

ACL Vacuum Motor

### **ACL-WP**

ACL Wax Pellet Type Motor

### **ADS**

Anti-Dieseling Solenoid

### **AFR**

Air/Fuel Ratio Sensor

### **AFS**

Air/Fuel Ratio Sensor

### **AIH**

Air Intake Heaters

### **AIH-TS**

AIH Temperature Sensor

### **AIR**

Air Injection System

### **AIS**

Air Injection System

### **AIS-ACV**

AIS Air Control Valve

### **AIS-AF**

Air Injection System Air Filter

**AIS-AMV**

AIS Air Management Valve

**AIS-ASV**

AIS Air Switching Valve

**AIS-BPV**

AIS By-Pass Valve

**AIS-CC**

AIS Computer Controlled

**AIS-CKV**

AIS Check Valve

**AIS-CSV**

AIS Control Solenoid Valve

**AIS-CV**

AIS Combination Valve

**AIS-DV**

AIS Diverter Valve

**AIS-IMCV**

AIS Intake Manifold Change-Over Valve

**AIS-MCV**

AIS Manifold Change-Over Valve

**AIS-OWV**

AIS One Way Valve

**AIS-PAF**

AIS Pulse Air Feeder

**AIS-PM**

AIS Pump Motor

**AIS-PV**

AIS Pneumatic Valve

**AIS-RV**

AIS Relief Valve

**AIS-SAV**

AIS Secondary Air Valve

**AIS-SOL**

AIS Solenoid

**AIS-SV**

AIS Solenoid Valve

**AIS-VCV**

AIS Vacuum Control Valve

**AIS-VSV**

AIS Vacuum Switching Valve

**AIS-VT**

AIS Vacuum Tank

**AIS-VCV**

AIS Vacuum Control Valve

**AIS-VSV**

AIS Vacuum Switching Valve

**AIV**

Air Injection Valve

**AIV-SOL**

Air Injection Valve Solenoid

**ALVW**

Adjusted Loaded Vehicle Weight

**AMV**

Air Management Valve

**AP**

Air Pump Injection System

**AP-ABV**

Air Pump Air Bypass Valve

**AP-ACV**

AP Air Control Valve

**AP-AMV**

AP Air Management Valve

**AP-ASRV**

AP Air Switching Relief Valve

**AP-ASS**

AP Air Switching Solenoid

**AP-ASV**

AP Air Switching Valve

**AP-BP**

AP By-Pass Valve

**AP-BPV**

AP By-Pass Valve

**AP-CKV**

AP Check Valve

**AP-CS**

AP Control Solenoid

**AP-CV**

AIR Cut-Off Valve

**AP-DCTO**

AP Dual Coolant Temperature Override

**AP-DLY**

AP Delay Valve

**AP-DV**

AP Diverter Valve

**AP-EADV**

AP Electric Air Control Diverter Valve

**AP-EAMR**

AP Electric Air Management Relay

**AP-EAMS**

AP Electric Air Management Solenoid

**AP-EAP**

AP Electric Air Pump

**AP-EC**

AP Electromagnetic Clutch

**AP-ERLY**

AP Electric Air Pump Relay

**AP/PAIR**

Pulsed Secondary Air Injection

**AP-RDV**

AP Reed Valve

**AP-RV**

AP Relief Valve

**AP-SOL**

AP Solenoid

**AP-SOV**

AP Shut-Off Valve

**AP-SV**

AP Solenoid Valve

**AP-SWV**

AP Switchover Valve

**AP-TV**

AP Transmitting Valve

**AP-VCS**

AP Vacuum Control Solenoid

**AP-VCSV**

AP Vacuum Controlled Air Shut-Off Valve

**AP-VCV**

AP Vacuum Control Valve

**AP-VSV**

AP Vacuum Switching Valve

**A/T**

Automatic Transmission

**ATCV**

Air Temperature Control Valve

**"B"****BP/EGR**

Backpressure EGR System

**BP/EGR-BPS**

BP/EGR Backpressure Sensor

**BP/EGR-BPT**

BP/EGR Backpressure Transducer

**BP/EGR-BPV**

BP/EGR Backpressure Valve

**BP/EGR-BS**

BP/EGR Bleed Solenoid

**BP/EGR-BVSV**

BP/EGR Bimetallic Vacuum Switching Valve

**BP/EGR-C**

BP/EGR Controller

**BP/EGR-CLR**

BP/EGR Cooler

**BP/EGR-CS**

BP/EGR Control Solenoid

**BP/EGR-CTO**

BP/EGR Coolant Temperature Override

**BP/EGR-CV**

BP/EGR Control Valve

**BP/EGR-DCTO**

BP/EGR Dual Coolant Temperature Override

**BP/EGR-DS**

BP/EGR Diagnostic Solenoid

**BP/EGR-DSOL**

BP/EGR Duty Solenoid

**BP/EGR-DTVSW**

BP/EGR Distributor Thermal Vacuum Switch

**BP/EGR-DV**

BP/EGR Delay Valve

**BP/EGR-EET**

BP/EGR Electric Transducer

**BP/EGR-EPV**

BP/EGR External Pressure Valve

**BP/EGR-FDV**

BP/EGR Forward Delay Valve

**BP/EGR-LCV**

BP/EGR Vacuum Control Valve

### **BP/EGR-LC**

BP/EGR Load Control Valve

### **BP/EGR-OVS**

BP/EGR Orifice Valve Sensing

### **BP/EGR-PS**

BP/EGR Position Sensor

### **BP/EGR-PT**

BP/EGR Pressure Transducer

### **BP/EGR-PVS**

BP/EGR Ported Vacuum Switch

### **BP/EGR-RES**

BP/EGR Reservoir

### **BP/EGR-RST**

BP/EGR Restrictor

### **BP/EGR-SOL**

BP/EGR Solenoid

### **BP/EGR-TCTVS**

BP/EGR Torque Converter Thermal Vacuum Switch

### **BP/EGR-TCV**

BP/EGR Thermal Control Valve

### **BP/EGR-TCVLV**

BP/EGR Temperature Control Valve

### **BP/EGR-T**

BP/EGR Temperature Sensor

### **BP/EGR-TS**

BP/EGR Temperature Sensor

### **BP/EGR-TVC**

BP/EGR Thermal Control Valve

### **BP/EGR-TVS**

BP/EGR Thermal Vacuum Switch

### **BP/EGR-TVV**

BP/EGR Thermal Vacuum Valve

## **BP/EGR-VC**

BP/EGR Diagnostic Valve

## **BP/EGR-VCV**

BP/EGR Vacuum Control Valve

## **BP/EGR-VM**

BP/EGR Vacuum Modulator

## **BP/EGR-VRV**

BP/EGR Vacuum Regulator Valve

## **BP/EGR-VS**

BP/EGR Vacuum Switch

## **BP/EGR-VSOL**

BP/EGR Vent Solenoid

## **BP/EGR-VSV**

BP/EGR Vacuum Switching Valve

## **"C"**

## **C-4**

Computer Controlled Catalytic Converter

## **CAC**

Charge Air Cooler

## **CAS**

Clean Air System

## **CB**

Crankcase Breather

## **CB-VC**

Crankcase Breather-Vapor Canister

## **CBPS**

Coasting By-Pass System

## **CBVC**

Crankcase Breather Vapor Canister

## **CCIEV**

Coolant Controlled Idle Enrichment Valve

## **CCO**

Computerized Engine Controls

**CCS**

Controlled Combustion System

**CCV**

Closed Crankcase Ventilation

**CD-REGVLV**

Crankcase Depression Regulator Valve

**CDRV**

Crankcase Depression Relief Valve

**CEAB**

Cold Engine Air Bleed

**CEAB-TVS**

CEAB Thermal Vacuum Switch

**CEAB-TVV**

CEAB Thermal Vacuum Valve

**CEC**

Computerized Engine Controls

**CESS**

Cold Engine Sensor Switch

**CETS**

Cold Engine Temperature Switch

**CFI**

Continuous Fuel Injection

**CMH**

Cold Mixture Heater

**CNG**

Compressed Natural Gas

**CO**

Carbon Monoxide

**CO2**

Carbon Dioxide

**CPI**

Central Port Injection

**CRV**

Coasting Richer Valve

## **CSI**

Central Sequential Injection

## **CTAVS**

Cold Temperature Activated Vacuum System

## **CTOX**

Continuous Trap Oxidizer

## **CVOT**

Crankcase Ventilation Orifice Tube

## **CVOT-CKV**

Crankcase Ventilation Orifice Tube Check Valve

## **"D"**

### **DCLV**

Deceleration Valve

### **DCS**

Deceleration Control System

### **DDI**

Direct Diesel Injection

### **DFI**

Direct Diesel Injection

### **DI**

Direct Injection

### **DKV**

Deceleration Kick Valve

### **DLCV**

Deceleration Mixture Control Valve

### **DM-TL**

Diagnostic Module Tank Leakage

### **DMS**

Dual Manifold System

### **DOC**

Diesel Oxidation Catalyst

### **DOHC**

Dual Overhead Cam

## **DPD**

Dual Point Distributor

## **DPF**

Diesel Particulate Filter

## **DPF/TWC**

Combination Diesel Particulate Filter and Three Way Catalyst

## **DPFE**

Differential Pressure Feedback EGR Valve

## **DPFEGR**

Differential Pressure Feedback EGR Valve

## **DTM**

Deceleration Throttle Modulator

## **"E"**

## **EAIR**

Electric Air Injection System

## **EAIR-DV**

EAIR Diverter Valve

## **EC**

Computerized Engine Controls

## **ECM**

Electronic Control Module

## **ECU**

Electronic Control Unit

## **EDC**

Electronic Diesel Control

## **EDS**

Electronic Diesel System

## **EEC**

Electronic Engine Control

## **EFE**

Early Fuel Evaporation

## **EFE-CKV**

EFE Check Valve

### **EFE-CV**

EFE Control Valve

### **EFE-DTVS**

EFE Delay Thermal Vacuum Switch

### **EFE-HTR**

EFE Heater

### **EFE-HCV**

EFE Heat Control Valve

### **EFE-OTS**

EFE Oil Temperature Switch

### **EFE-PTC**

EFE Positive Temperature Coefficient (Intake Heater Grid)

### **EFE-PVS**

EFE Ported Vacuum Switch

### **EFE-SOL**

EFE Solenoid

### **EFE-TVS**

EFE Thermal Vacuum Switch

### **EFE-TVV**

EFE Thermal Vacuum Valve

### **EFE-VSV**

EFE Vacuum Switching Valve

### **EFI**

Electronic Fuel Injection

### **EFI-MA**

EFI Mass Airflow Sensor

### **EFI-MAF**

EFI Mass Airflow Sensor

### **EGR**

Exhaust Gas Recirculation System

### **EGR-BCS**

EGR Boost Check Solenoid

#### **EGR-BPBV**

EGR By-Pass Backpressure Valve

#### **EGR-BPT**

EGR Backpressure Transducer

#### **EGR-BPV**

EGR By-Pass Valve

#### **EGR-BS**

EGR Bleed Solenoid

#### **EGR-BSSV**

EGR Boost Sensor Solenoid Valve

#### **EGR-BV**

EGR Bypass Valve

#### **EGR-BVSV**

EGR Bimetallic Vacuum Switching Valve

#### **EGR-C**

EGR Controller

#### **EGR-CC**

EGR Coolant Controlled

#### **EGR-CLR**

EGR Cooler

#### **EGR-VSOL**

EGR Vacuum Solenoid

#### **EGR-CKV**

EGR Check Valve

#### **EGR-CS**

EGR Control Solenoid

#### **EGR-CSOL**

EGR Cut-Off Solenoid

#### **EGR-CSV**

EGR Control Solenoid

#### **EGR-CTO**

EGR Coolant Temperature Override

#### **EGR-CTS**

EGR Charge Temperature Sensor

### **EGR-CTSW**

EGR Charge Temperature Switch

### **EGR-CTTS**

EGR Coolant Temperature Thermoswitch

### **EGR-CV**

EGR Control Valve

### **EGR-CVCV**

EGR Constant Vacuum Control Valve

### **EGR-CVS**

EGR Control Vent Solenoid

### **EGR-DC**

EGR Digital Control

### **EGR-DCTO**

EGR Dual Coolant Temperature Override

### **EGR-DPFE**

Differential Pressure Feedback EGR Sensor

### **EGR-DPFS**

EGR Differential Pressure Feedback Sensor

### **EGR-DS**

EGR Diagnostic Solenoid

### **EGR-DSOL**

EGR Duty Solenoid

### **EGR-DTVS**

EGR Delay Thermal Vacuum Switch

### **EGR-DTVSW**

EGR Distributor Thermal Vacuum Switch

### **EGR-DV**

EGR Delay Valve

### **EGR-EPRS**

EGR Exhaust Pressure Regulator Solenoid

### **EGR-EPRV**

EGR Exhaust Pressure Regulator Valve

**EGR-EPV**

EGR External Pressure Valve

**EGR/EVAP-CSV**

EGR/EVAP Control Solenoid Valve

**EGR-EVR**

EGR Vacuum Regulator

**EGR-EVRV**

EGR Electronic Vacuum Regulator Valve

**EGR-FDV**

EGR Forward Delay Valve

**EGR-FJS**

EGR Floor Jet System

**EGR-FPS**

EGR Feedback Pressure Sensor

**EGR-LCV**

EGR Load Control Valve

**EGR-MAP**

EGR Manifold Absolute Pressure Sensor

**EGR-PFE**

EGR-PFE Sensor

**EGR-PS**

EGR Position Sensor

**EGR-PSW**

EGR Pulse Switch

**EGR-PVS**

EGR Ported Vacuum Switch

**EGR-REG**

EGR Regulator

**EGR-RES**

EGR Reservoir

**EGR-RST**

EGR Restrictor

**EGR-SC**

EGR Signal Converter

### **EGR-SEC**

EGR, Secondary

### **EGR-SEN**

EGR Sensor

### **EGR-SM**

EGR Stepper Motor

### **EGR-SOL**

EGR Solenoid

### **EGR-SU**

EGR Switchover Valve

### **EGR-SUB**

Sub-EGR Valve

### **EGR-SV**

EGR Switchover Valve

### **EGR-SVV**

EGR Solenoid Vacuum Valve

### **EGR-T**

EGR Temperature Sensor

### **EGR-TC**

EGR Transmission Controlled

### **EGR-TCTVS**

EGR Torque Converter Thermal Vacuum Switch

### **EGR-TCV**

EGR Thermal Control Valve

### **EGR-TCVLV**

EGR Temperature Control Valve

### **EGR-TRANS**

EGR Transducer

### **EGR-TS**

EGR Temperature Sensor

### **EGR-TSW**

EGR Temperature Switch

## **EGR-TV**

EGR Thermal Valve

## **EGR-TVD**

EGR Throttle Valve Diaphragm

## **EGR-TVS**

EGR Thermal Vacuum Switch

## **EGR-TVSOL**

EGR Throttle Valve Solenoid

## **EGR-TVV**

EGR Thermal Vacuum Valve

## **EGR-V**

EGR Valve

## **EGR-VA**

EGR Vacuum Amplifier

## **EGR-VCV**

EGR Vacuum Control Valve

## **EGR-VM**

EGR Vacuum Modulator

## **EGR-VR**

EGR Vacuum Regulator

## **EGR-VRS**

EGR Vacuum Regulator Solenoid

## **EGR-VRSV**

EGR Vacuum Regulator Solenoid Valve

## **EGR-VRV**

EGR Vacuum Regulator Valve

## **EGR-VS**

EGR Vacuum Switch

## **EGR-VSDV**

EGR Vacuum Switch Dump Valve

## **EGR-VSEN**

EGR Vacuum Sensor

## **EGR-VSOL**

EGR Vent Solenoid

## **EGR-VSS**

EGR Vacuum Switching Solenoid

## **EGR-VST**

EGR Vacuum Surge Tank

## **EGR-VSV**

EGR Vacuum Switching Valve

## **EGR-VVCS**

EGR Venturi Vacuum Control System

## **EGRB**

EGR Boost Sensor

## **EGRC**

EGR Control Solenoid

## **EGRC-BPT**

EGR Control Backpressure Transducer

## **EGRC-SV**

EGR Control Solenoid Valve

## **EHOC**

Electronically Heated Oxidation Catalyst

## **EHTWC**

Electronically Heated Three-Way Catalyst

## **EI**

Electronic Ignition System

## **EIS**

Electronic Ignition System

## **ELB**

Electronic Lean Burn

## **EPR**

Exhaust Pressure Regulator

## **EPR-SOL**

EPR Solenoid

## **ESA**

Electronic Spark Advance

## **ESIM**

Evaporative System Integrity Monitor

## **EVAP**

Fuel Evaporative System

## **EVAP-AAC**

EVAP Auxiliary Air Control

## **EVAP-BPSV**

EVAP By-Pass Solenoid Valve

## **EVAP-BVSV**

EVAP Bimetallic Vacuum Switching Valve

## **EVAP-CAV**

EVAP Canister Air Valve

## **EVAP-CCV**

EVAP Control Canister Close Valve

## **EVAP-CCVSV**

EVAP Control Canister Vent Shut Valve

## **EVAP-CCVSV**

EVAP Closed Canister Valve Vacuum Switching Valve

## **EVAP-CDCV**

EVAP Canister Drain Cut Valve

## **EVAP-CKV**

EVAP Check Valve

## **EVAP-CPCS**

EVAP Canister Purge Control Solenoid

## **EVAP-CPCSV**

EVAP Canister Purge Control Solenoid Valve

## **EVAP-CPCV**

EVAP Canister Purge Control Valve

## **EVAP-CPRV**

EVAP Canister Purge Regulator Valve

## **EVAP-CPSV**

EVAP Canister Vent Shut Valve

## **EVAP-CPT**

EVAP Canister Purge Timer

### **EVAP-CPTVS**

EVAP Canister Purge Thermal Vacuum Switch

### **EVAP-CPV**

EVAP Canister Vent Valve

### **EVAP-CPVCSV**

EVAP Canister Purge Volume Control

### **EVAP-CPVCV**

EVAP Canister Purge Volume Control Valve

### **EVAP-CPVDV**

EVAP Canister Purge Vacuum Delay Valve

### **EVAP-CPVR**

EVAP Canister Purge Valve Resonator

### **EVAP-CS**

EVAP Control Solenoid

### **EVAP-CSPS**

EVAP Control System Pressure Sensor

### **EVAP-CSPV**

EVAP Canister Purge Valve

### **EVAP-CST**

EVAP Canister Surge Tank

### **EVAP-CSV**

EVAP Control Solenoid Valve

### **EVAP-CT**

EVAP Catch Tank

### **EVAP-CV**

EVAP Control Solenoid Valve

### **EVAP-CVCS**

EVAP Canister Vent Control Solenoid

### **EVAP-CVCSV**

EVAP Canister Vent Control Solenoid Valve

### **EVAP-CVCV**

EVAP Canister Vent Control Valve

## **EVAP-CVS**

EVAP Canister Vent Solenoid

## **EVAP-CVSV**

EVAP Carburetor Vent Switching Valve

## **EVAP-CVV**

EVAP Canister Vent Valve

## **EVAP-DCTO**

EVAP Dual Coolant Temperature Override

## **EVAP-DF**

EVAP Drain Filter

## **EVAP-DPS**

EVAP Differential Pressure Sensor

## **EVAP-DV**

EVAP-Drain Valve

## **EVAP-ESIM**

Evaporative System Integrity Monitor

## **EVAP-EV**

EVAP Emission Valve

## **EVAP-FBVV**

EVAP Fuel Bowl Vent Valve

## **EVAP-FBVS**

EVAP Fuel Bowl Vent Solenoid

## **EVAP-FCV**

EVAP Fuel Cut Valve

## **EVAP-FLS**

EVAP Fuel Level Sensor

## **EVAP-FOLV**

EVAP Fuel Overflow Limiter Valve

## **EVAP-FR/FTPS**

EVAP Rollover Valve/Fuel Tank

## **EVAP-FS**

EVAP Flow Switch

## **EVAP-FSV**

EVAP Flow Switchover Valve

#### **EVAP-FTCV**

EVAP Tank Pressure Control Valve

#### **EVAP-FTEV**

EVAP Fuel Tank EVAP Valve

#### **EVAP-FTPCSV**

EVAP Fuel Tank Pressure Control Solenoid Valve

#### **EVAP-FTPS**

EVAP Fuel Tank Pressure Sensor

#### **EVAP-FTS**

EVAP Fuel Temperature Sensor

#### **EVAP-FVCV**

EVAP Fuel Vapor Control Valve

#### **EVAP-FVS**

EVAP Fuel Vapor Separator

#### **EVAP-FVTS**

EVAP Fuel Vapor Temperature Sensor

#### **EVAP-FVV**

EVAP Fuel Vent Valve

#### **EVAP-FVVV**

EVAP Fuel Vapor Vent Valve

#### **EVAP-FWV**

EVAP Fuel Vent Valve

#### **EVAP-IVS**

EVAP Inner Vent Solenoid

#### **EVAP-LDAF**

EVAP Leak Detection Pump Air Filter

#### **EVAP-LDP**

EVAP Leak Detection Pump

#### **EVAP-LDPAF**

EVAP Leak Detection Pump Air Filter

#### **EVAP-LDPF**

EVAP Leak Detection Pump Filter

#### **EVAP-LDPVV**

EVAP Leak Detection Pump Vent Valve

#### **EVAP-LSEP**

EVAP Liquid Separator

#### **EVAP-NVLD**

EVAP Natural Vacuum Leak Detection

#### **EVAP-ORVR**

Evaporative On-Board Refueling Vapor Recovery System

#### **EVAP-ORVRCV**

Evaporative On-Board Refueling Vapor Recovery Check Valve

#### **EVAP-ORVRFTVRV**

EVAP-ORVR Fuel Tank Vapor Recirculation

#### **EVAP-OVCV**

EVAP Outer Vent Control Valve

#### **EVAP-OWV**

EVAP One-Way Valve

#### **EVAP-PCDV**

EVAP Purge Control Diaphragm Valve

#### **EVAP-PCS**

EVAP Purge Control Solenoid Valve

#### **EVAP-PCSV**

EVAP Purge Cut-Off Solenoid Valve

#### **EVAP-PFS**

EVAP Purge Flow Sensor

#### **EVAP-PFSVSV**

EVAP Purge Flow Switching Valve Vacuum Switching Valve

#### **EVAP-PPS**

EVAP Proportional Purge Solenoid

#### **EVAP-PR**

EVAP Purge Resonator

#### **EVAP-PRRV**

EVAP Pressure Relief Rollover Valve

#### **EVAP-PRV**

EVAP Pressure Relief Valve

### **EVAP-PS**

EVAP Purge Solenoid

### **EVAP-PSOL**

EVAP Purge Solenoid

### **EVAP-PSSV**

EVAP Pressure Switching Solenoid

### **EVAP-PSVVS**

EVAP Pressure Switching Valve Vacuum Switching Valve

### **EVAP-PV**

EVAP Purge (Frequency) Valve

### **EVAP-PVS**

EVAP Ported Vacuum Switch

### **EVAP-RV**

EVAP Rollover Valve

### **EVAP-RV/FTPS**

EVAP Rollover Valve/Fuel Tank

### **EVAP-RVSV**

EVAP Rollover Vapor Separator Valve

### **EVAP-SNR**

EVAP Canister Sensor

### **EVAP-SOL**

EVAP Solenoid

### **EVAP-SOV**

EVAP Shutoff Valve

### **EVAP-SSV**

EVAP Shut-Off Solenoid Valve

### **EVAP-SV**

EVAP Solenoid Valve

### **EVAP-TC**

EVAP Trap Canister

### **EVAP-TS**

EVAP Temperature Switch

#### **EVAP-TPBPV**

EVAP Tank Pressure By-Pass Valve

#### **EVAP-TPCS**

EVAP Tank Pressure Control Solenoid

#### **EVAP-TPCV**

EVAP Tank Pressure Control Valve

#### **EVAP-TRWV**

EVAP Tree-Way Valve

#### **EVAP-TV**

EVAP Thermal Valve

#### **EVAP-TVS**

EVAP Thermal Vacuum Switch

#### **EVAP-TVV**

EVAP Thermal Vacuum Valve

#### **EVAP-TWV**

EVAP Two-Way Valve

#### **EVAP-VC**

EVAP Vapor Canister

#### **EVAP-VCAT**

EVAP Vapor Canister Air Tank

#### **EVAP-VCF**

EVAP Vapor Canister Filter

#### **EVAP-VCSV**

EVAP Vapor Canister Shut-off Valve

#### **EVAP-VCTV**

EVAP Vacuum Control Valve

#### **EVAP-VCV**

EVAP Vacuum Canister Valve

#### **EVAP-VCVS**

EVAP Vapor Canister Vent Solenoid

#### **EVAP-VLFR**

EVAP Vent Line Flow Restrictor

#### **EVAP-VM**

EVAP Vacuum Motor

## **EVAP-VMV**

EVAP Vapor Management Valve

## **EVAP-VPS**

EVAP Vapor Pressure Sensor

## **EVAP-VPSVSV**

EVAP Vapor Pressure Sensor Vacuum Switching Valve

## **EVAP-VS**

EVAP Vacuum Sensor

## **EVAP-VSOL**

EVAP Ventilation Solenoid

## **EVAP-VSOL/LDP**

EVAP Ventilation Solenoid/Leak Detection Pump

## **EVAP-VST**

EVAP Vacuum Surge Tank

## **EVAP-VSV**

EVAP Vacuum Switching Valve

## **EVAP-VV**

EVAP Ventilation Valve

## **EVRS**

EGR Vacuum Regulator Solenoid

## **"F"**

## **FBC**

Feedback Carburetor

## **FCOV**

Fuel Change Over Valve

## **FF**

Flex Fuel

## **FF-CKV**

Fuel Fill Check Valve

## **FF-FCV**

Fuel Tank Fuel Cut-Off Valve

## **FF-FLVV**

Fuel Tank Fill Limit Vent Valve

### **FFC-PVRV**

Fuel Fill Cap Pressure Vacuum Relief Valve

### **FGOV**

Fuel Gravity/Overflow Valve

### **FGVV**

Fuel Gravity Vent Valve

### **FI**

Fuel Injected

### **FICD**

Fast Idle Control Device

### **FISR**

Fast Idle Solenoid Relay

### **FLV**

Fill Limit Valve

### **FLVV**

Fill Limiting Vent Valve

### **FP-CKV**

Fill Pipe Check Valve

### **FP-RV**

Fill Pipe Rollover Valve

### **FR**

Fill Pipe Restrictor

### **FT-FLVV**

Fuel Tank Fill Limit Vent Valve

### **FT-GVV**

Fuel Tank Grade Vent Valve

### **FT-OPRV**

Fuel Tank Over Pressure Vent Valve

### **FT-PCV**

Fuel Tank Pressure Control Valve

### **FT-VCV**

Fuel Tank Vapor Control Valve

## **FT-VRV**

Fuel Tank Vapor Recirculation Valve

## **FTCV**

Fuel Tank Check Valve

## **FTDPS**

Fuel Tank Differential Pressure Sensor

## **FTEV**

Fuel Tank EVAP Valve

## **FTPS**

Fuel Tank Pressure Sensor

## **FTT**

Fuel Tank Temperature Sensor

## **FTTS**

Fuel Tank Temperature Sensor

## **FTV/LSV**

Fuel Tank Vapor/Liquid Separation Valve

## **FTVCV**

Fuel Tank Vapor Control Valve

## **FTVPRV**

Fuel Tank Ventilation Pressure Retention Valve

## **FVPS**

Fuel Vapor Pressure Sensor

## **FTVV**

Fuel Tank Vent Valve

## **FVV**

Fuel Vapor Valve

## **"G"**

## **GVWR**

Gross Vehicle Weight Rating

## **"H"**

## **HAC**

High Altitude Compensator

## **HAFS**

Heated Air Fuel Ratio Sensor

## **HAI**

Hot Air Intake

## **HAS**

High Altitude System

## **HC**

Hydrocarbons

## **HCAC-VSV**

Hydrocarbon Absorber Catalyst Vacuum Switching Valve

## **HDC**

Heavy Duty Cooling

## **HDC-CTO**

HDC Coolant Temperature Override

## **HFM-SFI**

Hot Film Engine Management SFI

## **HIC**

Hot Idle Compensator

## **HIM**

Heated Intake Manifold

## **HO**

High Output

## **HO2S**

Heated Oxygen Sensor

## **HP**

High Performance

## **HP**

Horsepower

## **HPCA**

Housing Pressure Cold Advance

## **HSC**

High Swirl Combustion

## **"I"**

## **IAC**

Idle Air Control Valve

## **IACV-SW**

IACV Switch

## **ICOM**

Idle Compensator

## **IDI**

Indirect Diesel Injection

## **IES**

Idle Enrichment System

## **IMCO**

Improved Combustion System

## **"K"**

## **KS**

Knock Sensor

## **"L"**

## **LH-SFI**

Hot Wire Sequential Multiport Fuel Injection

## **LVFD**

Liquid/Vapor Fuel Discriminator

## **LVW**

Loaded Vehicle Weight

## **"M"**

## **MD-TICS**

Timing & Injection rate Control System

## **MDP**

Manifold Differential Pressure sensor

## **ME-SFI**

Motor Electronics Sequential Fuel Injection

## **MFI**

Multiport Fuel Injection

## **MFI-MAF**

MFI Mass Airflow Sensor

## **MFLS**

Main Fuel Level Sensor

## **MI**

Mechanical Fuel Injection

## **MIL**

Malfunction Indicator Light

## **M/T**

Manual Transmission

## **"N"**

## **NAC**

Nitrogen Oxides (NOx) Adsorbing Catalyst

## **NLV**

Non-Linear Valve

## **NOS**

NOx Sensor

## **NOx**

NOx Emission Control

## **NOxATWC**

NOx Adsorptive TWC

## **NOxC**

Nitrogen Oxide Catalyst

## **NOxS**

Nitrogen Oxide Sensor

## **NOxTWC**

NOx Adsorptive TWC

## **NSC**

Nitrogen Oxides (NOx) Storage Catalyst

## **"O"**

## **OBD**

On-Board Diagnostic System

## **PBD (F)/(P)**

Full/Partial On-Board Diagnostic

## **OC**

Oxidation Catalytic Converter

## **OHC**

Overhead Cam

## **ORVR**

On-Board Refueling Vapor Recovery

## **ORVR-COV**

ORVR Cut-Off Valve

## **ORVR-CV**

ORVR Control Valve

## **ORVR-FAV**

ORVR Fresh Air Valve

## **ORVR-FMV**

ORVR Flow Management Valve

## **ORVR-FTVCV**

ORVR Fuel Tank Vapor Control Valve

## **ORVR-FTVRV**

ORVR Fuel Tank Vapor Recirculation Valve

## **ORVR-FVRS**

ORVR Fuel Vapor Recovery System

## **ORVR-FVV**

ORVR Fuel Vent Valve

## **ORVR-LV**

ORVR Leveling Valve

## **ORVR-OCKV**

ORVR Overfill Check Valve

## **ORVR-RCV**

ORVR Refueling Control Valve

## **ORVR-VCV**

ORVR Vapor Cut Valve

## **ORVR-VRV**

ORVR Vapor Recirculating Valve

## **ORVR-VSV**

ORVR Vent Shut Valve

## **ORVR-VV**

ORVR Vent Valve

## **OVCV**

Outer Vent Control Valve

## **O2S**

Oxygen Sensor

## **"P"**

## **PAIR**

Pulsed Secondary Air Injection

## **PAIR-ABV**

PAIR Anti-Backfire Valve

## **PAIR-ACOV**

PAIR Air Cut-Off Valve

## **PAIR-ACS**

PAIR Air Control Solenoid

## **PAIR-ACV**

PAIR Air Control Valve

## **PAIR-AIV**

PAIR Air Injection Valve

## **PAIR-ASCS**

PAIR Air Suction Control Solenoid

## **PAIR-ASOV**

PAIR Air Shutoff Valve

## **PAIR-ASS**

PAIR Air Switching Solenoid

## **PAIR-ASV**

PAIR Air Switching Valve

## **PAIR-ASVL**

PAIR Air Suction Valve

## **PAIR-AVCS**

PAIR Air Valve Control Solenoid

## **PAIR-CSV**

PAIR Control Solenoid Valve

**PAIR-CKV**

PAIR Check Valve

**PAIR-DV**

PAIR Diverter Valve

**PAIR-PAF**

PAIR Pulse Air Feeder

**PAIR-PAV**

PAIR Pulse Air Valve

**PAIR-RES**

PAIR Resonator

**PAIR-RV**

PAIR Reed Valve

**PAIR-SCSV**

PAIR Swirl Control Solenoid Valve

**PAIR-SCV**

PAIR Swirl Control Valve

**PAIR-SOL**

PAIR Solenoid

**PAIR-VSV**

PAIR Vacuum Switching Valve

**PCM**

Powertrain Control Module

**PCV**

Positive Crankcase Ventilation

**PCV-DOV**

PCV Dual Orifice Valve

**PCV-HCB**

PCV Heated Crankcase Breather

**PCV-HE**

PCV Heating Element

**PCV-PRV**

PCV Pressure Regulator Valve

**PCV-SOL**

PCV Solenoid

## **PEVR**

Power Enrichment Vacuum Regulator

## **PPM**

Parts Per Million

## **PTOX**

Periodic Trap Oxidizer

## **PURCV**

Purge Crankcase Ventilation

## **PVCS**

Ported Valve Control System

## **PVCS-A**

PVCS Actuator

## **PVCS-CS**

PVCS Control Solenoid

## **PVLCS**

Power Valve Control System

## **"R"**

## **RC**

NOx Reduction Catalyst

## **ROV**

Rollover Valve

## **"S"**

## **SAI-SV**

Secondary Air Injection Shutoff Valve

## **SAIR-CV**

Secondary Air Injection Control Valve

## **SC**

Supercharged or Super Charger

## **SC MFI**

Supercharged Multiport Fuel Injection

## **SCR**

Selective Catalytic Reduction

## **SCSV**

Swirl Control Solenoid Valve

## **SCV**

Swirl Control Valve

## **SCV-A**

SCV Actuator

## **SFI**

Sequential Multiport Fuel Injection

## **SFI-MAF**

SFI Mass Airflow Sensor

## **SFLS**

Sub-Fuel Level Sensor

## **SOHC**

Single Overhead Cam

## **SPK**

Spark Controls

## **SPK-AVM**

SPK Advance Vacuum Modulator

## **SPK-BVSV**

SPK Bimetal Vacuum Switching Valve

## **SPK-CC**

SPK Computer Controlled

## **SPK-CKV**

SPK Check Valve

## **SPK-CSSA**

SPK Cold Start Spark Advance System

## **SPK-CSSH**

SPK Cold Start Spark Hold System

## **SPK-CTO**

SPK Coolant Temperature Override

## **SPK-DAVS**

SPK Distributor Vacuum Advance Solenoid

## **SPK-DCKV**

SPK Distributor Check Valve

### **SPK-DCTO**

SPK Dual Coolant Temperature Override

### **SPK-DDD**

SPK Dual Diaphragm Distributor

### **SPK-DMV**

SPK Distributor Modulator Valve

### **SPK-DPD**

SPK Dual Point Distributor

### **SPK-DPVS**

SPK Distributor Ported Vacuum Switch

### **SPK-DRCV**

SPK Distributor Retard Control Valve

### **SPK-DRS**

SPK Distributor Retard Solenoid

### **SPK-DSVMV**

SPK Distributor Spark Vacuum Modulator Valve

### **SPK-DTVS**

SPK Distributor Thermal Vacuum Switch

### **SPK-DTVV**

SPK Distributor Thermal Vacuum Valve

### **SPK-DV**

SPK Delay Valve

### **SPK-DVA**

SPK Distributor Vacuum Advance

### **SPK-DVAS**

SPK Distributor Vacuum Advance Solenoid

### **SPK-DVCS**

SPK Distributor Vacuum Control Solenoid

### **SPK-DVCSW**

SPK Distributor Vacuum Controlled Switch

### **SPK-DVCV**

SPK Distributor Vacuum Control Valve

#### **SPK-DVDV**

SPK Distributor Vacuum Delay Valve

#### **SPK-DVRS**

SPK Distributor Vacuum Retard Switch

#### **SPK-DVRV**

SPK Distributor Vacuum Regulating Valve

#### **SPK-DVVV**

SPK Distributor Vacuum Vent Valve

#### **SPK-EAVS**

SPK Electronically Actuated Vacuum Switch

#### **SPK-EDM**

SPK Electronic Distributor Modulator

#### **SPK-EI**

SPK Electronic Ignition

#### **SPK-ESA**

SPK Electronic Spark Advance

#### **SPK-ESC**

SPK Electronic Spark Control (Retard)

#### **SPK-ESS**

SPK Electronic Spark Selection

#### **SPK-EST**

SPK Electronic Spark Timing

#### **SPK-FDV**

SPK Forward Delay Valve

#### **SPK-HPCA**

SPK Housing Pressure Cold Advance

#### **SPK-ITCS**

SPK Ignition Timing Control System

#### **SPK-ITVS**

SPK Ignition Timing Vacuum Switch

#### **SPK-NLVR**

SPK Non-Linear Vacuum Regulator

#### **SPK-OSAC**

SPK Orifice Spark Advance Control

**SPK-PVA**

SPK Ported Vacuum Advance

**SPK-PVS**

SPK Ported Vacuum Switch

**SPK-RDO**

SPK Retard Delay Orifice

**SPK-RDV**

SPK Reverse Delay Valve

**SPK-RDVD**

SPK Reverse Delay Valve (Dual)

**SPK-RDVLV**

SPK Retard Delay Valve

**SPK-RDVS**

SPK Reverse Delay Valve (Single)

**SPK-RETS**

SPK Retard Switch

**SPK-SC**

SPK Speed Controlled

**SPK-SDV**

SPK Spark Delay Valve

**SPK-SOL**

SPK Solenoid

**SPK-SRRV**

SPK Spark Relay Regulator Valve

**SPK-TAVIA**

SPK Temperature Activated Vacuum Ignition Advance

**SPK-TCS**

SPK Transmission Controlled Spark

**SPK-TCSYS**

SPK Timing Control System

**SPK-TIDC**

SPK Thermostatic Ignition Distributor Control

## **SPK-TV**

SPK Thermal Valve

## **SPK-TVS**

SPK Thermal Vacuum Switch

## **SPK-VACTO**

SPK Vacuum Advance Coolant Temperature Override

## **SPK-VAS**

SPK Vacuum Advance Solenoid

## **SPK-VAV**

SPK Vacuum Advance Valve

## **SPK-VR**

SPK Vacuum Retard

## **SPK-VRSW**

SPK Vacuum Retard Switch

## **SPK-VSV**

SPK Vacuum Switching Valve

## **SPK-VTCS**

SPK Vacuum Timing Control System

## **SPL**

Smoke Puff Limiter

## **SRI**

Service Reminder Indicator

## **SSCA**

Stepped Speed Control Actuator

## **SSCS**

Stepped Speed Control Solenoid

## **STS**

Service Throttle Soon Light

## **STVS**

Secondary Throttle Valve System

## **SUB-HO2S**

Sub-Heated Oxygen Sensor (after CAT)

## **SUB-O2S**

Sub-Oxygen Sensor

## **SUB-TWC**

Sub Three-Way Catalytic Converter

## **"T"**

### **TAA**

Turbo Air-To-Air

### **TAA**

Throttle Actuator Assembly

### **TAB**

Thermactor Air By-Pass

### **TAD**

Thermactor Air Diverter

### **TAC**

Thermostatic Air Cleaner

### **TBI**

Throttle Body Injection

### **TBPCS**

Throttle By-Pass Control System

### **TC**

Turbo Charger

### **TCC**

Torque Converter Clutch

### **TCCL**

Torque Converter Control

### **TCD**

Throttle Closing Dashpot

### **TC-DV**

TC Delay Valve

### **TC-TVC**

TC Thermal Vacuum Switch

### **TC-VS**

TC Vacuum Switch

### **TD**

Thermactor Diverter

## **TFT**

Tank Fuel Temperature Sensor

## **THOS2**

Third Heated Oxygen Sensor

## **TICV**

Thermal Ignition Control Valve

## **TIV**

Thermal Idle Valve

## **TK**

Throttle Kicker

## **TLUC**

Transmission Lock-Up Converter

## **TLUC-TVS**

TLUC Thermal Vacuum Switch

## **TLUC-VS**

TLUC Vacuum Switch

## **TM**

Throttle Modulator

## **TOS**

Throttle Opener System

## **TP**

Throttle Positioner

## **TPI**

Tuned Port Fuel Injection

## **TPV**

Throttle Poppet Valve

## **TR**

Thermal Reactor

## **TRC**

Throttle Return Control

## **TRCS**

Throttle Return Control Solenoid

## **TRCTL**

Throttle Return Control Throttle Lever Actuator

## **TRSCV**

Throttle Return Solenoid Control Valve

## **TRTVV**

Temperature Regulator Thermal Vacuum Valve

## **TRVV**

Transmission Vacuum Valve

## **TSOL**

Throttle Solenoid

## **TVISD**

Throttle Vacuum Idle Speed Diaphragm

## **TVM**

Transmission Vacuum Modulator

## **TVS**

Thermal Vacuum Switch

## **TWC**

Three-Way Catalytic Converter

## **TWC+OC**

Three-Way + Oxidation Catalytic Converter

## **"V"**

## **VA**

Vacuum Advance Unit

## **VAC-AMP**

Vacuum Amplifier

## **VA-CTO**

VA Coolant Temperature Override

## **VC**

Vapor Canister

## **VCV**

Vacuum Cut Valve

## **VCV-BV**

VCV By-Pass Valve

## **VLFR**

Vent Line Flow Restrictor/Anti-Trickle Fill Valve

## **"W"**

### **WU**

Warm-Up Catalyst

### **WU-OC**

Warm-Up Oxidation Converter

### **WU-TWC**

Warm-Up Three-Way Catalytic Converter

---

mcx30.com